

**Step 5 : Unit operation test-run****First,** Remove the battery from the remote control.**Second,** Re-insert the battery into the remote control.**Third,** Press ON/OFF key with the direction of remote control for set.**• Error Mode**

- 1<sup>st</sup> If all lamps of indoor unit are flickering, Plug out, plug in power plug again and press ON/OFF key to retry.
- 2<sup>nd</sup> If the unit is not working properly or all lamps are continuously flickering after setting the option code, see if the correct option code is set up for its model.

**■ OPTION ITEMS**

| REMOCON<br>MODEL | SEG1  | SEG2  | SEG3  | SEG4  | SEG5  | SEG6  | SEG7  | SEG8  | SEG9  | SEG10 | SEG11 | SEG12 |
|------------------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| AQ09UGE          | 0     | 0     | 3     | 8     | 2     | 4     | 1     | 7     | C     | 2     | 6     | C     |
| AQ09UGF          | SEG13 | SEG14 | SEG15 | SEG16 | SEG17 | SEG18 | SEG19 | SEG20 | SEG21 | SEG22 | SEG23 | SEG24 |
| AQ09UGFSER       | 2     | 8     | 0     | 1     | 0     | 0     | 3     | 0     | 0     | 0     | 0     | 0     |

| REMOCON<br>MODEL | SEG1  | SEG2  | SEG3  | SEG4  | SEG5  | SEG6  | SEG7  | SEG8  | SEG9  | SEG10 | SEG11 | SEG12 |
|------------------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| AQ12UGE          | 0     | 0     | 3     | A     | 2     | 5     | 1     | 7     | C     | 2     | 3     | B     |
| AQ12UGF          | SEG13 | SEG14 | SEG15 | SEG16 | SEG17 | SEG18 | SEG19 | SEG20 | SEG21 | SEG22 | SEG23 | SEG24 |
| AQ12UGFSER       | 2     | 8     | 0     | 1     | 0     | 0     | 3     | 0     | 0     | 0     | 0     | 0     |

| REMOCON<br>MODEL | SEG1  | SEG2  | SEG3  | SEG4  | SEG5  | SEG6  | SEG7  | SEG8  | SEG9  | SEG10 | SEG11 | SEG12 |
|------------------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| AQ09TSA          | 0     | 0     | 3     | 8     | 2     | 4     | 1     | 7     | C     | 2     | 6     | C     |
| AQ09TSB          | SEG13 | SEG14 | SEG15 | SEG16 | SEG17 | SEG18 | SEG19 | SEG20 | SEG21 | SEG22 | SEG23 | SEG24 |
| AQ09TSBSER       | 2     | 8     | 1     | 1     | 0     | 0     | 3     | 0     | 0     | 0     | 0     | 0     |

| REMOCON<br>MODEL | SEG1  | SEG2  | SEG3  | SEG4  | SEG5  | SEG6  | SEG7  | SEG8  | SEG9  | SEG10 | SEG11 | SEG12 |
|------------------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| AQ12TSA          | 0     | 0     | 3     | A     | 2     | 5     | 1     | 7     | C     | 2     | 3     | B     |
| AQ12TSB          | SEG13 | SEG14 | SEG15 | SEG16 | SEG17 | SEG18 | SEG19 | SEG20 | SEG21 | SEG22 | SEG23 | SEG24 |
| AQ12TSBSER       | 2     | 8     | 1     | 1     | 0     | 0     | 3     | 0     | 0     | 0     | 0     | 0     |