

机型 Model	Trouble shooting of FLOOR STANDING N/M 故障代码					
	E1	E3	E4	E7	F1	F2
N (M) -1 phase N/M	室温传感器 Malfunction of room temperature sensor	室内盘管传感器 Malfunction of indoor unit coil temperature sensor	/	防干烧 To prevent the motor stops, electric heating pipe running	/	/
3相N (M) - 3phase N/M	室温传感器 Malfunction of room temperature sensor	室内盘管传感器 Malfunction of indoor unit coil temperature sensor	排气传感器 Exhaust temperature sensor fault	/	缺相或相序保护 Phase shortage protection or phase order protection for power source (3Phase:380~415V/5 0Hz)	排气保护 Gas discharging protection