# Air to Water Heat Pump Installation manual

#### AE\*\*\*RNWS\*\* / AE\*\*\*RNWM\*\*/ AE\*\*\*CNWM\*\*

- Thank you for purchasing this Samsung Product.
- Before operating this unit, please read this manual carefully and retain it for future reference.



#### **Contents**

#### **PREPARATION**

Safety precautions	3
Product specifications	8
Typical application examples	11
Main components	13
Functional diagram	17
Dimensional drawing	18
INSTALLATION	
Installing the unit	19
Pipe work	22
Wiring work	29
Self-test mode of wired remote controller	52
OTHERS	
Troubleshooting	53
DHW tank	56
Mixing Valve	61
Temperature sensor work	64
Concrete curing function	69
Installation option setting	71
Optional: Extending the power cable	73
Reference (KEYMARK Certification)	75



Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)

#### (Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

For information on Samsung's environmental commitments and product regulatory obligations, e.g. REACH, visit our sustainability page available via www.samsung.com

## Safety precautions

All materials supplied to this manual are indispensable for the safety of equipment.

Users shall establish appropriate safety and health practices and determine the applicability of regulatory limitation based on following descriptions prior to use.



- Always disconnect the air to water heat pump from the power supply before servicing it or accessing its internal components.
- · Verify that installation and testing operations are performed by qualified personnel.
- Verify that the air to water heat pump is not installed in an easily accessible area.

#### GENERAL INFORMATION

- ► Carefully read the content of this manual before installing the air to water heat pump and store the manual in a safe place in order to be able to use it as reference after installation.
- For maximum safety, installers shall always carefully read the following warnings.
- ▶ Store the user and installation manual in a safe location and remember to hand it over to the new owner if the air to water heat pump is sold or transferred.
- ► This manual explains how to install an indoor unit with a split system with two SAMSUNG units. The use of other types of units with different control systems may damage the units and invalidate the warranty. The manufacturer shall not be responsible for damages arising from the use of non compliant units.
- ▶ The manufacturer shall not be responsible for damage originating from unauthorized changes or the improper connection of electric and hydraulic lines. Failure to comply with these instructions or to comply with the requirements set forth in the "Operating limits" table, included in the manual, shall immediately invalidate the warranty.
- ▶ Do not use the units if damaged. If problems occur, switch the unit off and disconnect it from the power supply.
- ▶ In order to prevent electric shocks, fires or injuries, always stop the unit, disable the protection switch and contact SAMSUNG's technical support if the unit produces smoke, if the power cable is hot or damaged or if the unit is very noisy.
- ▶ Always remember to inspect the unit, electric connections, refrigerant tubes and protections regularly. These operations should be performed by qualified personnel only.
- ▶ The unit contains moving parts, which should always be kept out of the reach of children.
- ▶ Do not attempt to repair, move, alter or reinstall the unit. If performed by unauthorized personnel, these operations may cause electric shocks or fires.
- ▶ Do not place containers with liquids or other objects on the unit.
- ▶ All the materials used for the manufacture and packaging of the air to water heat pump are recyclable.
- ▶ The packing material and exhaust batteries of the remote control(optional) must be disposed of in accordance with current laws.
- ▶ The air to water heat pump contains a refrigerant must be disposed in authorized center or returned to retailer as special wastes.
- ▶ Do not disassemble and alter the heater at your own discretion.
- ▶ Wear protective equipment (such as safety gloves, goggles, and headgear) during installation and maintenance works. Installation/repair technicians may be injured if protective equipment is not properly equipped.
- ▶ Do not use means to accelerate the defrost operation or to clean, other than those recommended by Samsung.
- Do not pierce or burn.
- ▶ Be aware that refrigerants may not contain an odour.

## Safety precautions

#### INSTALLING THE UNIT

**IMPORTANT:** When installing the unit, always remember to connect first the refrigerant tubes, then the electrical lines. Always disassemble the electric lines before the refrigerant tubes.

- ▶ Upon receipt, inspect the product to verify that it has not been damaged during transport. If the product appears damaged, DO NOT INSTALL it and immediately report the damage to the carrier or retailer (if the installer or the authorized technician has collected the material from the retailer.)
- ► After completing the installation, always carry out a functional test and provide the instructions on how to operate the air to water heat pump to the user.
- ▶ Do not use the air to water heat pump in environments with hazardous substances or close to equipment that release free flames to avoid the occurrence of fires, explosions or injuries.
- While in installation or relocation of the product, do not mix the refrigerant with other gases including air or unspecified refrigerant. Failure to do so may cause pressure increase to result in rupture or injury.
- ▶ Do not cut or burn the refrigerant container or pipings.
- ▶ Use clean parts such as manifold gauge, vacuum pump, and charging hose for the refrigerant.
- ► Installation must be carried out by qualified personnel for handling the refrigerant. Additionally, reference the regulations and laws
- ▶ Be careful not to let foreign substances (lubricating oil, refrigerant other than R-32, water, etc.) enter the pipings.
- ▶ When mechanical ventilation is required, ventilation openings shall be kept clear of obstruction.
- ► For disposal of the product, follow the local laws and regulations.
- ▶ Do not work in a confined place.
- ► The work area shall be blocked.
- ▶ The refrigerant pipings shall be installed in the position where there are no substances that may result in corrosion.
- ► The following checks shall be performed for installation:
  - The ventilation devices and outlets are operating normally and are not obstructed.
  - Markings and signs on the equipment shall be visible and legible.
- ▶ Upon leakage of the refrigerant, ventilate the room. When the leaked refrigerant is exposed to flame, it may cause generation of toxic gases.
- ▶ Make sure that the work area is safe from flammable substances.
- ▶ To purge air in the refrigerant, be sure to use a vacuum pump.
- ▶ Note that the refrigerant has no odour.
- ▶ The units are not explosion proof so they must be installed with no risk of explosion.
- ► This product contains fluorinated gases that contribute to global greenhouse effect. Accordingly, do not vent gases into the atmosphere.
- For installation with handling the refrigerant(R-32), use dedicated tools and piping materials.
- Servicing and installation shall be performed as recommended by the manufacturer. In case other skilled persons are joined for servicing, it shall be carried out under supervision of the person who is competent in handling flammable refrigerants.
- For servicing the units containing flammable refrigerants, safety checks are required to minimise the risk of ignition.

- Servicing shall be performed following the controlled procedure to minimize the risk of flammable refrigerant or gases.
- ▶ Do not install where there is a risk of combustible gas leakage.
- ▶ Do not place heat sources.
- ▶ Be cautious not to generate a spark as follows:
  - Do not remove the fuses with power on.
  - Do not disconnect the power plug from the wall outlet with power on.
  - It is recommended to locate the outlet in a high position. Place the cords so that they are not tangled.
- ▶ If the indoor unit is not R-32 compatible, an error signal appears and the unit will not operate.
- After installation, check for leakage. Toxic gas may be generated and if it comes into contact with an ignition source such as fan heater, stove, and cooker cylinders, make sure that only the refrigerant recovery cylinders are used.
- ▶ Never directly touch any accidental leaking refrigerant.
- ▶ This could result in severe wounds caused by frostbite.

#### Preparation of fire extinguisher

- ▶ If a hot work is to be done, an appropriate fire extinguishing equipment should have been available.
- ► A dry powder or CO<sub>2</sub> fire extinguisher shall be equipped near the charging area.

#### Ignition sources free

- Make sure to store the units in a place without continuously operating ignition sources (for example, open flames, an operating gas appliance or an operating electric heater).
- ▶ The service engineers shall not use any ignition sources with the risk of fire or explosion.
- ▶ Potential ignition sources shall be kept away from the work area where the flammable refrigerant can possibly be released to the surrounding.
- ► The work area should be checked to ensure that there are no flammable hazards or ignition risks. The "No Smoking" sign shall be attached.
- ▶ Under no circumstances shall potential sources of ignition be used while in detection of leakage.
- ▶ Make sure that the seals or sealing materials have not degraded.
- Safe parts are the ones with which the worker can work in a flammable atmosphere. Other parts may result in ignition due to leakage.
- Replace components only with parts specified by Samsung. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

#### Area ventilation

- ▶ Make sure that the work area is well ventilated before performing a hot work.
- ▶ Ventilation shall be made even during the work.
- ▶ The ventilation should safely disperse any released gases and preferably expel them into the atmosphere.
- ▶ Ventilation shall be made even during the work.

## Safety precautions

#### Leakage detection methods

- ▶ The leakage detector shall be calibrated in a refrigerant-free area.
- ▶ Make sure that the detector is not a potential source of ignition.
- ▶ The leakage detector shall be set to the LFL (lower flammability limit).
- The use of detergents containing chlorine shall be avoided for cleaning because the chlorine may react with the refrigerant and corrode the pipings.
- ▶ If leakage is suspected, naked flames shall be removed.
- ▶ If a leakage is found while in brazing, the entire refrigerant shall be recovered from the product or isolated (e.g. using shut-off valves). It shall not be directly released to the environment. Oxygen free nitrogen (OFN) shall be used for purging the system before and during the brazing process.
- ▶ The work area shall be checked with an appropriate refrigerant detector before and during work.
- ▶ Ensure that the leakage detector is appropriate for use with flammable refrigerants.

#### Labelling

- ▶ The parts shall be labelled to ensure that they have been decommissioned and emptied of refrigerant.
- ► The labels shall be dated.
- Make sure that the labels are affixed on the system to notify it contains flammable refrigerant.

#### Recovery

- When removing refrigerant from the system for servicing or decommissioning, it is recommended to remove the entire refrigerant.
- ▶ When transferring refrigerant into cylinders, make sure that only the refrigerant recovery cylinders are used.
- ► All cylinders used for the recovered refrigerant shall be labelled.
- ► Cylinders shall be equipped with pressure relief valves and shut-off valves in a proper order.
- The recovery system shall operate normally according to the specified instructions and shall be suitable for refrigerant recovery.
- ▶ In addition, the calibration scales shall operate normally.
- ► Hoses shall be equipped with leak-free disconnect couplings.
- Before starting the recovery, check for the status of the recovery system and sealing state. Consult with the manufacturer
  if suspected.
- ► The recovered refrigerant shall be returned to the supplier in the correct recovery cylinders with the Waste Transfer Note attached.
- ▶ Do not mix refrigerants in the recovery units or cylinders.
- ► If compressors or compressor oils are to be removed, make sure that they have been evacuated to the acceptable level to ensure that flammable refrigerant does not remain in the lubricant.
- ▶ The evacuation process shall be performed before sending the compressor to the suppliers.
- ▶ Only the electrical heating to the compressor body is allowed to accelerate the process.
- ▶ Oil shall be drained safely from the system.
- ▶ Never install a motor-driven equipment to prevent ignition.
- ▶ Empty recovery cylinders shall be evacuated and cooled before recovery.

#### Installation location requirements

- ▶ The unit shall be installed in an open space that is always ventilated.
- ► The local gas regulations shall be observed.
- ► For installation inside a building (this applies either to indoor or outdoor units installed inside) a minimum room floor area of space conditioned is mandatory according to IEC 60335-2-40:2018 (see the reference table into either the indoor or outdoor unit installation manual).
- ► To handle, purge, and dispose the refrigerant, or break into the refrigerant circuit, the worker should have a certificate from an industry-accredited authority.
- ▶ Do not install the indoor unit in the following areas:
  - Area filled with minerals, splashed oil, or steam. It will deteriorate plastic parts, causing failure or leakage.
  - Area that is close to heat sources.
  - Area that produces substances such as sulfuric gas, chlorine gas, acid, and alkali. It may cause corrosion of the pipings and brazed joints.
  - Area that can cause leakage of combustible gas and suspension of carbon fibers, flammable dust, or volatile flammables.
  - Area where refrigerant leaks and settles.
  - Area where animals may urinate on the product. Ammonia may be generated.
- Do not use the indoor unit for preservation of food items, plants, equipment, and art works. This may cause deterioration of their quality.
- ▶ Do not install the indoor unit if it has any drainage problem.

#### POWER SUPPLY LINE, FUSE OR CIRCUIT BREAKER

- Always make sure that the power supply is compliant with current safety standards. Always install the air to water heat pump in compliance with current local safety standards.
- ▶ Always verify that a suitable grounding connection is available.
- Verify that the voltage and frequency of the power supply comply with the specifications and that the installed power is sufficient to ensure the operation of any other domestic appliance connected to the same electric lines.
- ▶ Always verify that the cut-off and protection switches are suitably dimensioned.
- ► Verify that the air to water heat pump is connected to the power supply in accordance with the instructions provided in the wiring diagram included in the manual.
- Always verify that electric connections (cable entry, section of leads, protections...) are compliant with the electric specifications and with the instructions provided in the wiring scheme. Always verify that all connections comply with the standards applicable to the installation of air to water heat pumps.



- · Make sure that you earth the cables.
- Do not connect the earth wire to the gas pipe, water pipe, lighting rod or telephone wire. If earthing is not complete, electric shock or fire may occur.
- · Install the circuit breaker.
  - If the circuit breaker is not installed, electric shock or fire may occur.
- Make sure that the condensed water dripping from the drain hose runs out properly and safely.
- Install the power cable and communication cable of the indoor and outdoor unit at least 1m away from the electric appliance.

# **Product specifications**

## Product compatibility

				Line	-up		
Heat	Chassis						
pump units		Split	AE040RXED** AE060RXED** AE060CXED**	AE090RXED** AE090CXEDE* AE090CXEDG*	-	-	-
	Model Name	Mono	AE050RXYD**	AE080RXYD**	AE120RXYD** AE160RXYD**	AE050CXYD** AE080CXYD**	AE080BXYD** AE120BXYD** AE140BXYD** AE120CXYD** AE160CXYD**
	Tank Integrated Hydro Units						
Indoor		Split	AE200RNWSEG AE260RNWSEG	AE200RNWSEG AE260RNWSEG AE260RNWSGG	-	-	-
	Model Name	Mono	AE200RNWMEG AE200CNWMEG	AE200RNWMEG AE260RNWMEG AE260RNWMGG AE200CNWMEG AE260CNWMEG AE260CNWMGG	AE200RNWMEG AE260RNWMEG AE260RNWMGG AE200CNWMEG AE260CNWMEG AE260CNWMGG	AE200RNWMEG AE260RNWMEG AE260RNWMEG AE200CNWMEG AE260CNWMEG AE260CNWMGG	AE200RNWMEG AE260RNWMEG AE260RNWMEG AE200CNWMEG AE260CNWMEG AE260CNWMGG

## Accessories

Installation Manual (2)	Zone sensor (1x15m, BLK) (2)	Temperature Sensor for Mixing Valve (1x15m, BLU) (1)
Sensor holder of zone sensor and mixing valve (3)	Sensor clip of zone sensor and mixing valve (3)	Cable-tie for zone sensor and mixing valve (6)
	<u></u>	9
Aluminum tape for zone sensor and mixing valve (3)	Rubber tape for zone sensor and mixing valve (3)	Insulator for zone sensor and mixing valve (3)
Connector wire-PV Control/Peak power control (1x2 m, RED) (1)	Tube secondary (1) (only for 260 L Tank model)	Gasket (1) (only for 260 L Tank model)
Drain-plug out (1)	Cap-drain (2)	

## **Product specifications**

## Specifications

Model Name			AE200RNWSEG	AE260RNWSEG	AE260RNWSGG		AE260RNWMEG /	
			712200111110220		7.2200	AE200CNWMEG	AE260CNWMEG	AE260CNWMGG
Туре			Split	1		Mono	1	
Power source V/Hz		V/Hz	1Ф, 220-240V~, 50Hz	1Ф, 220-240V~, 50Hz	10, 220-240V~, 50Hz 30, 380-415V~, 50Hz	1Ф, 220-240V~, 50Hz	1Ф, 220-240V~, 50Hz	10, 220-240V~, 50Hz 30, 380-415V~, 50Hz
Operation	Cooling	℃		5~25	30112		5~25	30112
Range [Water]	Heating	°€		15~65		15~65 / 15~70 / 15~75(1)		
	Cooling	dB(A)	26	30	30	26	30	30
Sound Pressure	Heating	dB(A)	26	30	30	26	30	30
Sound Power	Heating	dB(A)	40	44	44	40	44	44
Dimension	Net	mm			595 x 1	800 x 700		
(HxWxD)	Gross	mm				000 x 780		
	Net	kg	136	146	146	130 / 128	140 / 136	140 / 138
Weight	Gross	kg	148	158	158	142 / 140	152 / 148	152 / 150
Connection	Liquid	Inch	1/4"	1/4"	1/4"	-	-	-
Pipe (Regrigerant)	Gas	Inch	5/8"	5/8"	5/8"	-	-	-
Connection	Inlet	mm	28	28	28	28	28	28
Pipe (Floor Heating)	Outlet	mm	28	28	28	28	28	28
Connection	Inlet	mm	22	22	22	22	22	22
Pipe (Domestic Hot water)	Outlet	mm	22	22	22	22	22	22
Connection	Inlet	mm	-	-	-	28	28	28
Pipe (Monobloc Outdoor)	Outlet	mm	-	-	-	28	28	28
	Model Name	-			JPMM25-9.5	GPA25-9H/	/130	
Water Pump	Maker	-			Grundfos	Shinho	0	
'	Max. Vol Flow	m³/h			5.5	4.5		
Electric Heater	Input Power	W	2000	2000	6000	2000	2000	6000
Flow Sensor	Set Point	LPM	7	7	7	7 (~9kW Outdoor) 7 (AE080/120/140BXYD**) 12 (~16kW Outdoor) 7 (AE050/080/120/160CXYD**)		D**) r)
Expansion Vessel	Volume	Liter	8	8	8	8	8	8
	Size	Inch			BSPP N	Male 1/2"		
Pressure Relief Valve	Relief Pressure	bar		2.9				
Air Vent Valve	Size	Inch		BSPP Male 3/8"				
Operating	Heating			-25 ~ 35		-25^	~35 / -25~43 / -30~	-43 <sup>(2)</sup>
Outdoor Temp	Cooling	℃	10 ~ 46			10 ~ 46		
Range	DHW Water			-25 ~ 43			-25~43 / -30~43 <sup>(3</sup>	

<sup>\*</sup> Heat pump operating range of DHW:  $-25 \sim 35^{\circ}$ C (AE080/120/140BXYD\*\*  $-30 \sim 43^{\circ}$ C)

<sup>\*</sup> At the temperature -25°C (-30°C)  $\sim$  -20°C, operation is available but capacity cannot be guaranteed.


<sup>\* (1), (2), (3)</sup> The value is determined according to the type of OUTDOOR UNIT.

## **Typical application examples**




- · The application examples given below are for illustration purposes only.
- When the SAMSUNG Air-to-Water Heat Pump system is used in series with another heat source (e.g. gas boiler), ensure that the return water temperature not exceed the maximum water temperature of the outdoor unit (Max water temperature is determined according to the type of outdoor unit model 65°C/70°C/75°C).
- The unit is only to be used in a closed water system. Application in an open water circuit can lead to excessive corrosion of the water piping.
- SAMSUNG can not be responsible for incorrect or unsafe situations in the water system. Make sure that the
  boiler, radiators, convectors, UFHs, FCUs, additional pumps, pipings, and controls in the water system are in
  accordance with relevant local laws and regulations under the installer's responsibility.
- SAMSUNG shall not be held liable for any damage resulting from not observing this rule.
- SAMSUNG do not provide specific water system components such as Pressure relief valve, Air vent valve, buffer
  tank and etc. Installers and end-users shall consider how to install the above designated components in overall
  water system depending on the installation conditions. If the components are not installed in appropriate
  location, the water system can not be operated as designed.
- \* The below examples are for illustration purposes only.

#### Application 1: Space heating + water heating

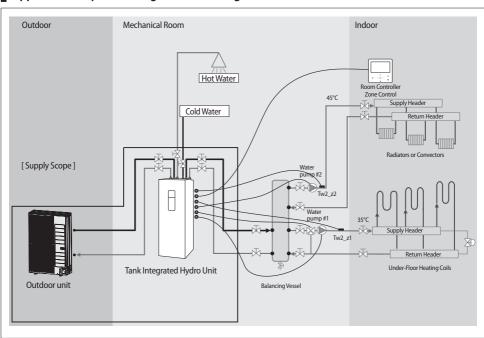

## **Typical application examples**


#### Application 2: Hybrid application(backup boiler)

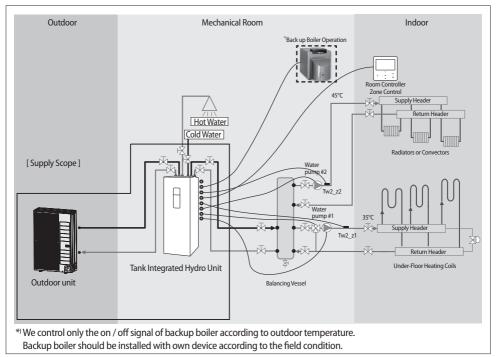

<sup>•</sup> Samsung has not responsible for performance and stability of backup boiler.

CAUTION • Water quality must be according to EN directive 98/83 EC.


# **Main components**

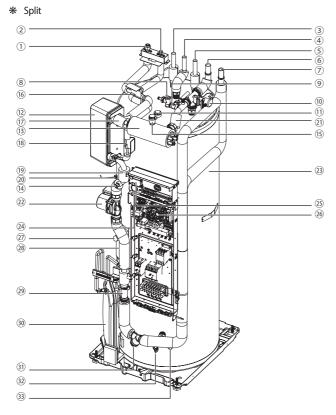

No.	Part name	Note
1)	Refrigerant pipe	ø15.88 (5/8"), Flare nut
2	Refrigerant pipe	ø6.35 (1/4"), Flare nut
3	Hot water outlet	ø22, Straight pipe
4	Secondary return	ø22, Straight pipe (260L option)
(5)	Cold water inlet	ø22, Straight pipe
6	Space heating outlet	ø28, Straight pipe
7	Space heating inlet	ø28, Straight pipe
8	T/P valve	7bar, 90 °C
9	Pressure relief valve	3bar, BSPP 1/2"
10	3way valve	

# **Main components**

No.	Part name	Note
(1)	Anode bar	BSPP 1"
12	Plate heat exchanger	
13	Back-up heater	
(14)	Drain port	
(15)	Air vent	BSPP 3/8"
16	Eva-in thermistor	
17)	Water-out thermistor	
18	Eva-out thermistor	
19	Water-in thermistor	
20	Tank thermistor	
21)	Heater thermistor	
22)	Water pump	
23)	Water tank	200L / 260L
24)	Manometer	0~4bar
25)	S/D converter	
26	Control box	
27)	Booster heater	3kW
28	Booster heater thermostat	
29	Flow sensor	
30	Expasion vessel	8L, Pre-charge gas: 0.1MPa, N2, BSPP 3/8"
31)	Strainer	
32	Tank drain valve	
33	Drain port	Primary circuit

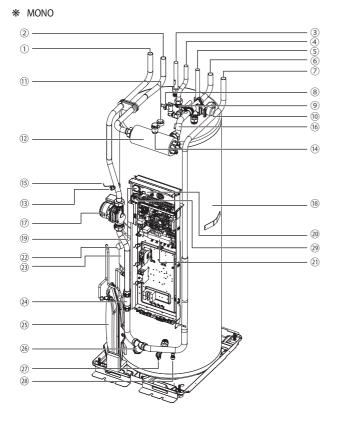


No.	Part name	Note
1)	Water pipe (Return to heat pump)	ø28, Straight pipe
2	Water pipe (Flow from heat pump)	ø28, Straight pipe
3	Hot water outlet	ø22, Straight pipe
4	Secondary return	ø22, Straight pipe (260L option)
(5)	Cold water inlet	ø22, Straight pipe
6	Space heating outlet	ø28, Straight pipe
7	Space heating inlet	ø28, Straight pipe
8	T/P valve	7bar, 90 °C
9	Pressure relief valve	3bar, BSPP 1/2"
10	3way valve	

# **Main components**


No.	Part name	Note
(1)	Anode bar	BSPP 1"
(12)	Back-up heater	
(13)	Drain port	
(14)	Air vent	BSPP 3/8"
(15)	Tank thermistor	
16	Heater thermistor	
(17)	Water pump	
(18)	Water tank	200L / 260L
19	Manometer	0~4bar
20	S/D converter	
21)	Control box	
22	Booster heater	3kW
23	Booster heater thermostat	
24)	Flow sensor	
25	Expasion vessel	8L, Pre-charge gas: 0.1MPa, N2, BSPP 3/8"
26	Strainer	
27	Tank drain valve	
28	Drain port	Primary circuit
29	W-LAN Module	Wi-Fi model only (AE***CNW***)

## **Functional diagram**


\* Split

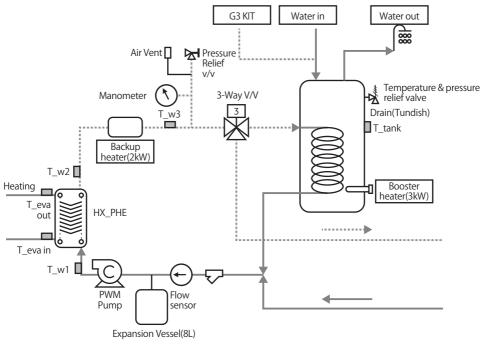

\* MONO

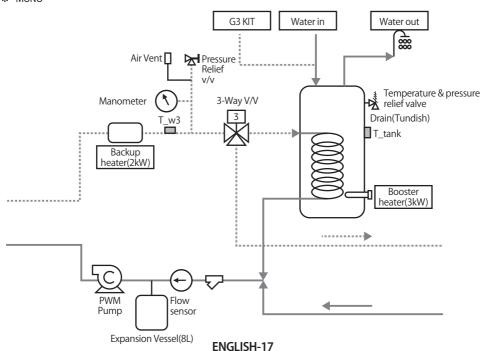

# **Dimensional drawing**

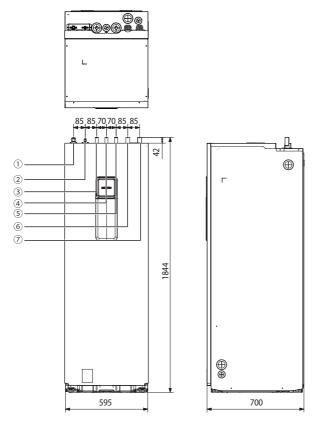

No	Split	Size	type
1)	Refrigertant (Gas)	Ø15.88	Flare nut
2	Refrigertant (Liquid)	Ø6.35	Flare nut
3	Hot water outlet	Ø22,T1.0	Straight pipe
4	Secondary return (260L option)	Ø22,T1.0	Straight pipe
(5)	Cold water inlet	Ø22,T1.0	Straight pipe
6	Space heating outlet	Ø28,T1.2	Straight pipe
7	Space heating inlet	Ø28,T1.2	Straight pipe

No	Mono	Size	type
1	Mono outdoor outlet	Ø28,T1.2	Straight pipe
2	Mono outdoor inlet	Ø28,T1.2	Straight pipe
3	Hot water outlet	Ø22,T1.0	Straight pipe
4	Secondary return (260L option)	Ø22,T1.0	Straight pipe
(5)	Cold water inlet	Ø22,T1.0	Straight pipe
6	Space heating outlet	Ø28,T1.2	Straight pipe
7	Space heating inlet	Ø28,T1.2	Straight pipe

## **Installing the unit**


#### Installation of the indoor unit

The indoor unit should be installed indoors and meet the following conditions.

- Installation site should be sheltered from frost.
- In area with suitable space for servicing.
- A place with adequate ventilation.
- ▶ Where there is no risk of leakage of flammable gases.
- ▶ There is a provision for condensate drain and pressure relief valve blow-off.
- ▶ The wall for installation is a flat, vertical and non-combustible wall, capable of supporting the operation weight of the unit.

#### Installation space

- Ensure to leave the appropriate space as indicated in the drawing.
- Installation site should be secured with adequate ventilation so that the components of hydro unit will not be damaged from overheating.

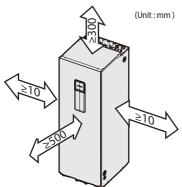


## **Installing the unit**

#### Moving the Indoor unit


- Select the moving route in advance.
- ▶ Be sure that moving route is safe from weight of the indoor unit.

#### Moving the Indoor unit with a fork lift

- ► Insert the fork into the wooden pallet at the bottom of the indoor unit carefully. Be careful that the fork does not damage the indoor unit.
- ▶ When moving the Indoor unit, be care the damage of indoor unit by impact. Do not remove the packaging until Indoor unit reach the final installation location.
- ▶ When adjusting the exact location of the Indoor unit, use the handles.
  - -> A minimum of two people should lift the unit by the handles. (Do not grasp the pipe)

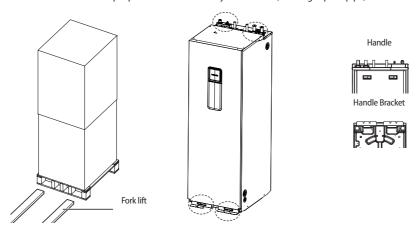


▶ Remove the handle bracket, wooden pallet the unit is in final installation location

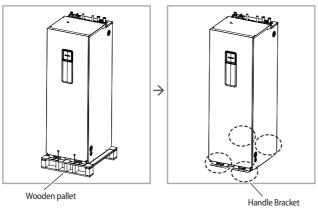

#### Base construction and installation of the Tank hydro unit


Manufacturer is not responsible for the damage occurred by not following the installation standards.

- 1. Considering the vibration and weight of the Tank hydro unit, strength of the base ground must be strong enough to prevent noise and the top part of the base ground has to be flat. Adjust the level controller to make fixed controller has to be min. 10 mm higher than level controller.
- 2. Base ground should be 1.5 times larger than the bottom of the Hydro unit.
- When concrete construction for Tank hydro unit installation is completed, install an anti-vibration pad(t=20 mm or more) or an anti-vibration frame(vibration transmissibility=5 % and below) to prevent vibration of the outdoor unit from transferring to the base ground.

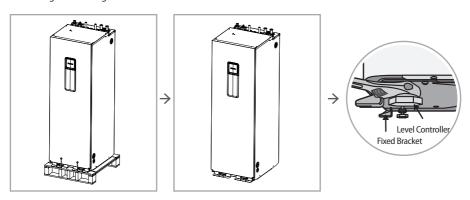

#### **Drain Work**

- ▶ In the cooling operation, defrost water may be produced from the pipes or tank.
- ▶ Produced defrost water must be drained through the drain hole.
- ▶ When the drain plug is used, make sure that it is located at a height of 100 mm or more from the floor.
- ▶ When the drain plug is used, make sure to install it at one of the positions marked in the figure below.
- ▶ When the drain plug is not used, make sure to plug it with the drain cap.

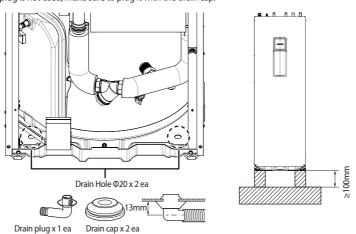


## Pipe work

#### Refrigerant pipe work

For all guide lines, specifications regarding refrigerant pipe work between the indoor unit and the outdoor unit, please follow the outdoor unit installation manual.

 
	Gas pipe (O.D.)	Liquid pipe (O.D.)
Indoor unit	15.88 mm (5/8 inch)	6.35 mm (1/4 inch)
Outdoor unit	15.88 mm (5/8 inch)	6.35 mm (1/4 inch)



Outer diameter [mm(inch)]	Torque (N•m)
ø6.35 (1/4")	14~18
ø9.52 (3/8")	34~42
ø12.70 (1/2")	49~61
ø15.88 (5/8")	68~82
ø19.05 (3/4")	100~120



 When connecting the refrigerant pipes, always use 2 wrenches/spanners for tightening or loosening nuts. If not, piping connections can be damaged.

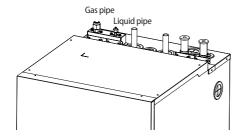


#### Water pipe work


The hydro unit is equipped with components listed on the table below.

The hot and cold water supply connections are clearly marked on the unit with labels. And service valves are provided. Whole water plumbing system including Hydro unit shall be installed by a qualified technician and must comply with all relevant European and national regulations.

- ▶ Allowable water pressure of hydro unit is maximum 3.0 bar.
- An air-vent valve is integrated on the hydro unit. Please check that air-vent valve is not overtightened so the air-vent valve can release any air out of the system during system operation.

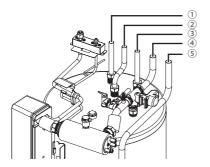

	No.	Name	Size	Conncetions
	1)	Hot water outlet	ø22, T1.0, Copper	
Culia I budua auria	2	Sencondary return	ø22, T1.0, Copper	
Split Hydro unit	3	Cold water inlet	ø22, T1.0, Copper	Crimp pipe fitting or welding
	4	Space heating outlet	ø28, T1.2, Copper	Welding
	(5)	Space heating inlet	ø28,T1.2,Copper	

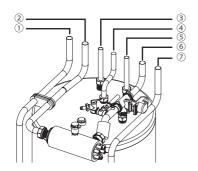

	No.	Name	Size	Conncetions
	1)	Outdoor outlet	ø28, T1.2, Copper	
	2	Outdoor inlet	ø28, T1.2, Copper	
Mono Hydro unit	3	Hot water outlet	ø22, T1.0, Copper	_
	4	Sencondary return  Cold water inlet	ø22, T1.0, Copper	Crimp pipe fitting or welding
	(5)		ø22, T1.0, Copper	Welding
	6 Space heating outlet	ø28, T1.2, Copper		
	7	Space heating inlet	ø28,T1.2,Copper	

## **Pipe work**

#### Flushing and air-purging


When filling water, the following start-up procedure should be followed.

- 1. All system components and pipes must be tested for the presence of leaks.
- 2. Make-up water assembly or Flushing unit is recommended for installation and service.
- Before connecting pipes to the hydro unit, Flush water pipes clean to remove contaminants during 1 hours using a flushing unit or tap water pressure if it is adequate (at 2 to 3 bar)
- 4. Fill water into the hydro unit by opening service valves.
- 5. Purge the air. (Fill with a flushing unit with sufficient capacity: avoid aerating the water)
- Circulate for long enough to ensure that all air has been bled from the complete water piping system.

After installations, Commissioning should be performed by qualified representatives. Unless flushing and air-purging works are performed adequately, It might result in malfunctions.



Flushing unit (or purging cart)

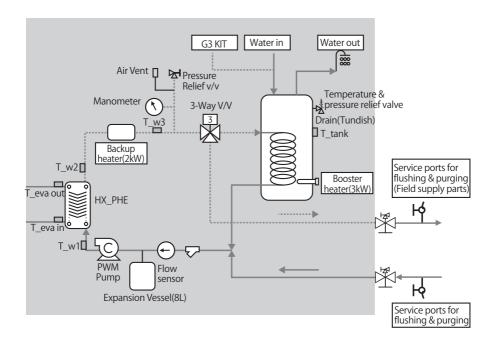


- CAUTION
- Check and clean strainer periodically.
  - · Replace strainer when necessary.
  - Its recommended that you flush the system for 4 hours minimum once a per annum.
  - Use chemical cleaning agents(Begin with acid, finish with alkali).
  - Install Air vents on the top of the system
  - Pressure of entering water(over 2.0 bar)
  - Water quality must be according to EN directive 98/83 EC.

#### ESP(External Static Pressure) Diagram

The illustration below shows the external static pressure of the unit depending on the water flow and the pump setting.


#### AE\*\*\*RNWS\*\*

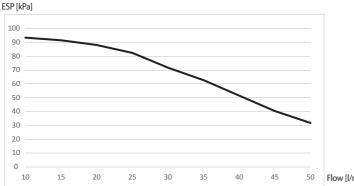

Flow [l/min]

#### AE\*\*\*RNWM\*\* / AE\*\*\*CNWM\*\*




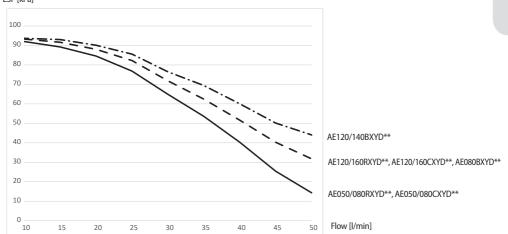

When ESP is not enough, additional pump should be installed. In this case, install the PWM control external type pump (Heating type) additionally.

## Pipe work

#### PWM characteristic curve

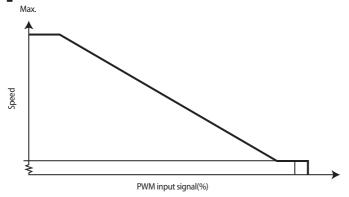

The additional pump should be the same type of product as the above graph.


Recommendation

GRUNDFOS UPMM 25-95 (Heating Type), SHINHOO GPA25-9H (Heating Type)

#### Case 2) AC pump

The maximum number of additional pump installation is one AC pumps (Input power 100W).

1. Power supply (AC Pump)

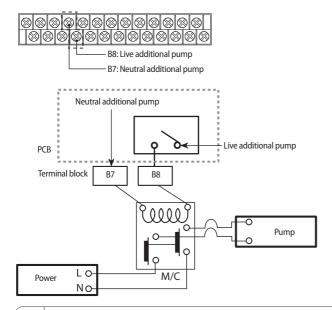

• The maximum allowable current that this terminal block can supply for the additional water pump is 0.1 A.

#### Setting the pre-pressure of the expansion vessel

When it is required to change the default pre-pressure of the expansion vessel(1 bar), keep in mind the following guidelines:

- ▶ Use only dry nitrogen to set the expansion vessel pre-pressure.
- Inappropriate setting of the expansion vessel pre-pressure will lead to malfunction of the system. Therefore, the pre-pressure should only be adjusted by a licensed installer.



 Water volume of total system (except tank hydro unit) for reliable performance is minumum 20liters (AE040/050/060/080/090RX\*\*), 30liters (AE080BX\*\*, AE050/080CX\*\*), 40liters (AE120/160RX\*\*), 50liters (AE120/140BX\*\*, AE120/160CX\*\*)

Installation height	Water volume				
difference <sup>a)</sup>	< 220 Litres	> 220 Litres			
<7 m	No pre-pressure adjustment required.	Actions required: Pre-pressure must be decreased, calculate according to "Calculating the pre-pressure of the expansion vessel". Check if the water volume is lower than maximum allowed water volume			
>7 m	Actions required: Pre-pressure must be increased, calculate the appropriate value following by "Calculating the pre-pressure of the expansion vessel". Check if the water volume is lower than maximum allowed water volume	Expansion vessel of the unit too small for the installation.			

▶ Below table applies only to combinations with exceed the max water Temperature 65°C.

Installation height	Water volume			
difference <sup>(a)</sup>	< 185 Litres	> 185 Litres		
<7m	No pre-pressure adjustment required.	Actions required: Pre-pressure must be decreased, calculate according to "Calculating the pre-pressure of the expansion vessel". Check if the water volume is lower than maximum allowed water volume.		
>7m	Actions required:  Pre-pressure must be increased, calculate the appropriate value following by "Calculating the pre-pressure of the expansion vessel".  Check if the water volume is lower than maximum allowed water volume.	Expansion vessel of the unit too small for the installation.		


a) Installation height difference: height difference(m) between the highest point of the water circuit and the indoor unit. If the indoor unit is located at the highest point of the installation, the installation height is considered 0 m.

#### Calculating the pre-pressure of the expansion vessel

The pre-pressure(Pg) to be set depends on the maximum installation height difference(H) and is calculated as below: Pg=(H/10+0.3) bar

## **Pipe work**

#### Charging water

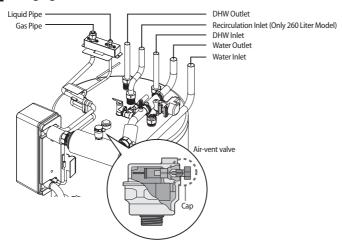

After installation is completed the following procedures shall be used to charge water into the hydro unit.

- ► Connect water lines to water connections of hydro unit.
- ► The air-vent valve shall be opened at least 2 turns and drain valves shall be closed.
- ▶ Open the service valve in the water supply connection.
- ▶ Water pressure of supply line shall be over 2.0 bar for good charging work.
- ▶ Stop water supply when the pressure gauge of hydro unit indicates 2.0 bar.



- Service space should be secured.
- Water pipe and connections must be cleaned using water.
- If internal water pump capacity is not enough, install external water pump.
- Do not connect electric wire while water charging.
- · When initial installation or re-installation required, open the cap to prevent air trap in the unit while charging water.
- The back-up heater vessel shall be full of water before heater is turned on. Confirm if the vessel is empty by opening the pressure relief valve of hydro unit. (OK if water is flowing out)
- It is recommended to install the make-up water assembly to feed small quantities of water to the system automatically, replacing the minor water losses and maintaining the system pressure. This assembly usually consists of a pressure-reducing valve, water filter, check-valve and shut-off valves. In this case, Check-valve must be installed to prevent from contaminating city water.

#### Pressure relief valve

A pressure relief valve is integrated on heater vessel of hydro unit and shall work in abnormal condition for protecting the hydro unit.



- The pressure relief valve will operate releasing the pressure by flowing out some water through the drain hose.
- Make certain that the discharged water out of drain pan can not contact any electrical parts.

#### Piping insulation

The complete water circuit, including all piping must be insulated to prevent condensation forming on the surface of the pipe and heat loss to external environment.

#### Anode Rod

An anode rod is installed to protect the Water tank from corrosion.

The lifespan of an anode bar can vary depending on the water quality on the site. To ensure optimal protection from corrosion, it is advisable to check the protective anode annually and if necessary, replace it.



It is recommended to replace if the average diameter of the anode bar is approximately less than 30% (Material remaining around 10 mm in diameter)


## Wiring work



- · Field-supplied electrical components such as power switch, circuit breakers, wires, terminal blocks, etc must be properly chosen with compliance with national legislation or regulation.
- · Switch off the power supply before making any connections.
- All field wiring and components must be installed by a licensed electrician.
- Use a dedicated power supply.
- All power connections must be protected from dew condensation by thermal insulation.
- The system shall be earthed. Do not earth the unit to a utility pipe, surge absorber or telephone earth. Incomplete earth may cause electrical problems.


#### Layout of PCB

#### AE\*\*\*RNWS\*\* / AE\*\*\*RNWM\*\*

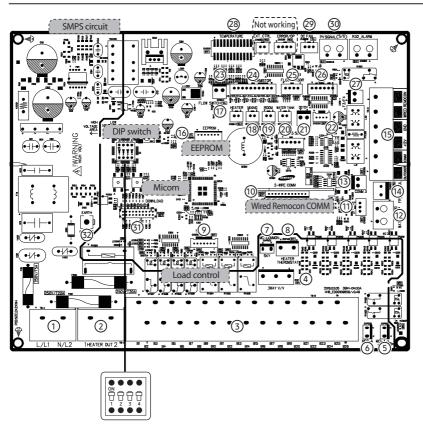

## Wiring work

#### AE\*\*\*CNWM\*\*

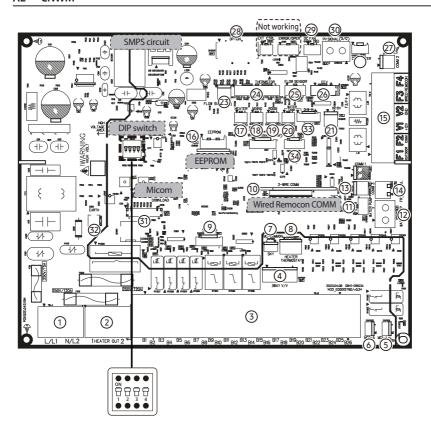

No.	Part code	Part name	Terminal	Terminal description
	① ТВ-А	AC POWER-IN	#1: L	AC INPUT
			#2: N	AC INPUT
	© TD 44	LIEATED OLIT	#1: HEATER(L)	AC OUTPUT
② TB-A1	HEATER OUT	#2: N	AC OUTPUT	

#### **ENGLISH-31**

#7:-

#6: LED CONTROL SIGNAL

DC OUTPUT

# Wiring work

No.	Part code	Part name	Terminal	Terminal description
10	CNS313	WIRED REMOCON COMM.		
			#1: WATER PUMP PWM SIGNAL	DC OUTPUT
11)	CNS001	WATER PUMP	#2: -	
			#3: GND	DIGITAL GROUND
-	CNICOOD	MATER RUMAR	#1: WATER PUMP PWM SIGNAL	DC OUTPUT
12	CNS002	WATER PUMP	#2: GND	DIGITAL GROUND
	CNICOOF	COMMUNICATIONS	#1: COM3	DC405 COMM
13	CNS305	COMMUNICATION3	#2: COM3	RS485 - COMM.
	CNICOOR	ED CONTROL	#1: FR CONTROL DC INPUT	DC INPUT
14)	CNS003	FR_CONTROL	#2: GND	DIGITAL GROUND
			#1: COM1 (F1)	DC 405 COLUM
			#2: COM1 (F2)	RS485 - COMM.
(F)	TD C	COMMUNICATION &	#3: V1 (DC 12V)	DC OUTPUT
15)	TB-C	DC 12V	#4: V2 (GND)	DIGITAL GROUND
			#5: COM2 (F3)	WIDED DEMOTE CONTROLLED
			#6: COM2 (F4)	WIRED REMOTE CONTROLLER
			#1: GND	DIGITAL GROUND
			#2: -	
			#3: DC 5V	DC OUTPUT
16	CNS900	EEPROM	#4: EEPROM_SELECT	DC SIGNAL
			#5: EEPROM_SO	DC SIGNAL
			#6: EEPROM_SI	DC SIGNAL
			#7: EEPROM_CLK	DC SIGNAL
(17)	CNS047	HEATER SENSOR	#1: HEATER TEMP. (10kΩ @ 25 °C)	DIGITAL INPUT
	CN3047	HEATER SENSOR	#2: GND	DIGITAL GROUND
(18)	CNS045	MIXING VALVE	#1: MIXING VALVE TEMP. (10kΩ @ 25 °C)	DIGITAL INPUT
(10)	CN3043	SENSOR	#2: GND	DIGITAL GROUND
(19)	CNS044	ROOM SENSOR	#1: ROOM TEMP. (10kΩ @ 25 °C)	DIGITAL INPUT
19	CN3044	ROOM SENSON	#2: GND	DIGITAL GROUND
20	CNS042	WATER TANK SENSOR	#1: WATER TANK TEMP. (200kΩ @ 25 °C)	DIGITAL INPUT
20	CN3042	WATER TAINS SENSOR	#2: GND	DIGITAL GROUND
(21)	CNS012	DC 12V	#1: DC 12V	DC OUTPUT
(2)	CNSUIZ	DC 12V	#2: GND	DIGITAL GROUND
			#1: COM1 (F1)	- RS485 - COMM.
(22)	CNS202	EHS CONVERTER	#2: COM1 (F2)	NOTO - COIVIIVI.
(2)	CN3202	EU3 CONVEKTEK	#2: GND	DIGITAL GROUND
			#4: DC 12V	DC OUTPUT
(23)	CNS041	FLOW SWITCH	#1: FLOW SWITCH	DC INPUT
	CN3041	FLOW SWIICH	#2: GND	DIGITAL GROUND

No.	Part code	Part name	Terminal	Terminal description	
			#1: HEATER TEMP. (10kΩ @ 25 °C)	DIGITAL INPUT	
			#2: GND	DIGITAL GROUND	
			#3: EVA-OUT TEMP. (10kΩ @ 25 °C)	DIGITAL INPUT	
			#4: GND	DIGITAL GROUND	
			#3: EVA-IN TEMP. (10kΩ @ 25 °C)	DIGITAL INPUT	
24)	CNS043	SENSOR	#6: GND	DIGITAL GROUND	
			#7: WATER-OUT TEMP. (10kΩ @ 25 °C)	DIGITAL INPUT	
			#8: GND	DIGITAL GROUND	
			#9: WATER-IN TEMP. (10kΩ @ 25 °C)	DIGITAL INPUT	
			#10: GND	DIGITAL GROUND	
			#1: DC 5V	DC OUTPUT	
			#2: FLOW SENSOR DC INPUT	DC INPUT	
25)	CNS057	FLOW SENSOR	#3: GND	DIGITAL GROUND	
			#4: -		
		EEV	#1~#4: EEV CONTROL PWM SIGNAL	DC OUTPUT	
26	CNS062/	(SPLIT/MONO : Not	#5: DC 12V	DC OUTPUT	
	CNS063	use)	#6: DC 12V (CNS063 ONLY)	DC OUTPUT	
		COMMUNICATION	#1: COM2 (F3)		
27)	CNS304		#2: COM2 (F4)	WIRED REMOTE CONTROLLER	
			#1: SG READY1 SIGNAL	DC INPUT	
	CN5051		#2: OPTION TEMP.(10kΩ @ 25 °C)	DIGITAL INPUT	
			#5: SG READY2 SIGNAL	DC INPUT	
			#6: ZONE2 TEMP. (10kΩ @ 25 °C)	DIGITAL INPUT	
			#9: EMERGENCY_STOP	DC INPUT	
		OPTION CONNECT	#10: ZONE1 FLOW TEMP. (10kΩ @ 25 °C)	DIGITAL INPUT	
28		(DRY CONTACT, Thermistor)	#13: DRY CONTACT_1	DC INPUT	
		memistor)	#14: ZONE2 FLOW TEMP. (10kΩ @ 25 °C)	DIGITAL INPUT	
			#17: DRY CONTACT_2	DC INPUT	
			#21: DRY CONTACT_3	DC INPUT	
			#3,4,7,8,11,12,15,16,19,23: GND	DIGITAL GROUND	
			#18,20,22,24: -		
	CNC aca /		#1~#4: EEV CONTROL PWM SIGNAL	DC OUTPUT	
29	CNS062/ CNS063	EEV	#5: DC 12V	DC OUTPUT	
	2143003		#6: DC 12V (CNS063 ONLY)	DC OUTPUT	
30	CNS046	PV/Peak power	#1: PV(Photovoltaic) Control Signal / Peak power control Signal	DC INPUT	
		control SIGNAL	#2: GND	DIGITAL GROUND	
31)	CNS301	DOWNLOAD			
32	CNP101	EARTH	#1: EARTH	EARTH	
		WATER TANK / DHW IN SENSOR	#1 : WATER TANK TEMP.(200kΩ @25°C)	DIGITAL INPUT	
			#2: GND	DIGITAL GROUND	
(33)	CNS042 1		#3 : DHW IN TEMP.(10kΩ @25°C)	DIGITAL INPUT	
33)	CNS042-1		#4: GND	DIGITAL GROUND	
			#5: -		
			#6: -		


**ENGLISH-33** 

# Wiring work


No.	Part code	Part name	Terminal	Terminal description	
		l302 WiFi	#1:WiFi_Micom_Rx	URAT	
	③ CN302		#2:WiFi_Micom_Tx	URAT	
34)			#3:WiFi_Micom_Control	DIGITAL OUTPUT	
			#4:GND	DIGITAL GROUND	
			#5 : DC12V	DC OUTPUT	

No.	Part code	Part na	me	e Term		inal Terminal description		ription
	Terminal No.	Function	Input /o	utput	Max. current	Description		Remark
	B2/B3/B5	Mixing valve	AC 230V output		50 mA	Mixing Valve operation(B2: CW, B3: CCW)		Option
	B4/B5	Backup Boiler	AC 230V	output	50 mA	Signal output for Back	up Boiler(B5: Neutral)	Option
	B7/B8	Additional AC Water Pump	AC 230V	Additional Water pump operation C 230V output 100 mA (maximum input power of pump 100 (B8 : Lived)		ver of pump 100W)	Option	
	B9/B10/B11/ B12	Water numn		output	50 mA	2 Way Valve operatio (B9 : NO, B10 : NC, B11 Zone1 Water Pump o (B10:NC, B1	: Neutral, B12: Lived) utput(FSV 4061=1)	Option
3	B13/B14/ B11/B12	2Way valve#2 Water pump (Zone2)	AC 230V	output	50 mA	2 Way Valve operatio (B13: NO, B14: NC, B17 Zone2 Water Pump o (B14:NC, B1	: Neutral, B12: Lived) utput(FSV 4061=1)	Option
	B15/B16/ B17/B18	3Way valve	AC 230V	output	50 mA	3 Way Valve ope (B17 : NO, B18 : NC, B15		Option
	B19/B20	Thermostats	AC 230V	output	50 mA	Power to external thermostat(s) (B20: Lived)		Option
	B21/B22	Thermostat 1	AC 230V	/input	22 mA	Thermostat for zone#1 Heating(B2		Option
	B23/B24	Thermostat 2	AC 230V	/input	22 mA	Thermostat for zone#2 Heating(B2		Option

#### Wiring diagram (AE\*\*\*RNW\*EG) 1-Phase

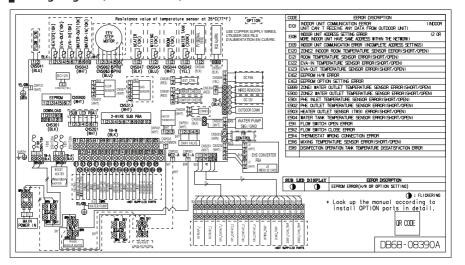


#### Wiring diagram (AE\*\*\*RNW\*GG) 3-Phase

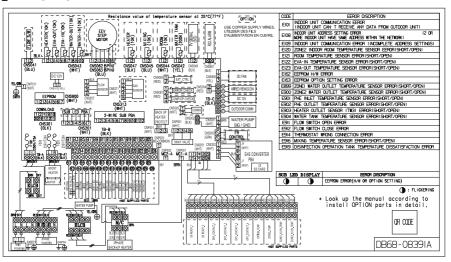


<sup>\*</sup> It does not support external input(CNS083)/output(CNS081) signal function.

## Wiring work

#### Wiring diagram (AE\*\*\*CNWMEG) 1-Phase

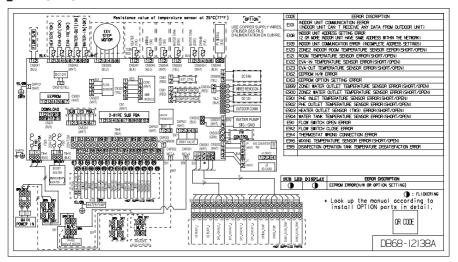


#### Wiring diagram (AE\*\*\*CNWMGG) 3-Phase

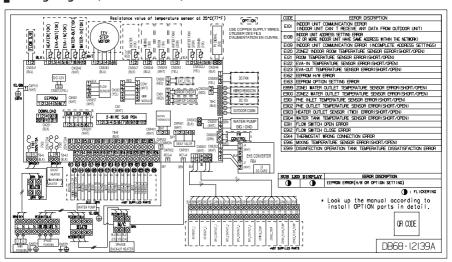

## Selecting solderless ring terminal

 - ► Select a solderless ring terminal of a connecting power cable based on a nominal dimensions for cable.
- ► Cover a solderless ring terminal and a connector part of the power cable and then connect it.






Nominal	Nominal	E	3	D		d	1	E	F	L	d	2	t
dimensions for cable (mm²)	dimensions for screw (mm)	Standard dimension (mm)	Allowance (mm)	Standard dimension (mm)	Allowance (mm)	Standard dimension (mm)	Allowance (mm)	Min.	Min.	Max.	Standard dimension (mm)	Allowance (mm)	Min.
4/6	4	9.5	±0.2	5.6	+0.3	3.4	±0.2	6	5	20	4.3	+0.2	0.9
4/0	8	15	±0.2	5.0	-0.2	3.4	±0.2	0	9	28.5	8.4	0	0.9
10	8	15	±0.2	7.1	+0.3 -0.2	4.5	±0.2	7.9	9	30	8.4	+0.4 0	1.15
16	8	16	±0.2	9	+0.3 -0.2	5.8	±0.2	9.5	13	33	8.4	+0.4	1.45
25	8	12	10.3	11.5	+0.5	7.7	.0.2	11	15	34	8.4	+0.4	1.7
25	8	16.5	±0.3	11.5	-0.2	7.7	±0.2	11	13	34	8.4	0	1.7
25	8	16	102	12.2	+0.5 -0.2	0.4	10.3	12.5	13	38	8.4	+0.4 0	1.0
35	8	22	±0.3	13.3	+0.5 -0.2	9.4	±0.2	12.5	13	43	8.4	+0.4 0	1.8
50	8	22	±0.3	13.5	+0.5 -0.2	11.4	±0.3	17.5	14	50	8.4	+0.4	1.8
70	8	24	±0.4	17.5	+0.5 -0.4	13.3	±0.4	18.5	20	51	8.4	+0.4 0	2

# Wiring work


### Torque requirements

#### **CONTROL-KIT PBA**

\* AE\*\*\*RNWS\*\* / AE\*\*\*RNWM\*\*

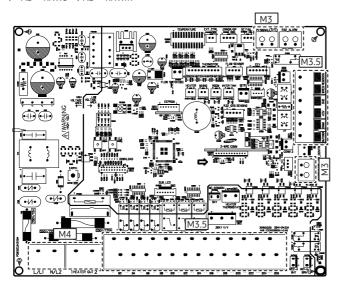

\* AE\*\*\*CNWM\*\*

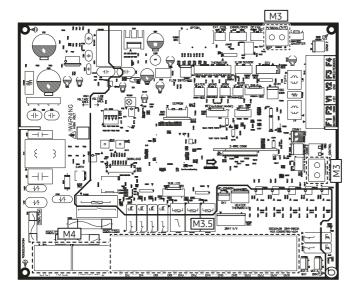



Screw size	Tightening torque (N·m)	Part	Terminal code	Remarks
		Control Kit PBA	PV/Peak power control SIGNAL	Dry contact input
M3	0.5~0.75	2P Terminal Block	R-32 ALARM	Dry contact output
			WATER PUMP	PWM signal output
Ma F	.5 0.8~1.2	Control Kit PBA 6P Terminal Block	F1, F2, V1, V2, F3, F4	DC 5V/12V output
M3.5		0.8~1.2	Control Kit PBA 26P Terminal Block	B1 ~ B26
M4	1.2~1.8	Control Kit PBA	TB-A (L/l1 N/N1)	AC 220V-240V power input
		2P Terminal Block	TB-A1 (HEATER OUT)	AC 220V-240V power output

# Wiring work
  
### **C-BOX: SINGLE PHASE**

#### C-BOX: 3 PHASE





Screw size	Tightening torque (N⋅m)	Part	Terminal code	Remarks	
M3	0.5~0.75	20P Terminal Block	1~20	Digital input/output	
		Magnetic contactor 2P Single phase		AC 220V-240V power input/output	
	M5 2.0~2.9	Magnetic contactor 3P 3phase	-	AC 380V-415V power input/output	
		ELCB 2P Single phase	-	AC 220V-240V power input/output	
M5		ELCB 4P 3 phase	-	AC 380V-415V power input/output	
			Terminal block 2P Single phase	L, N	AC 220V-240V power input/output
		Terminal block 8P	N, L	AC 220V-240V power input/output	
		3 phase	L1(R), L2(S), L3(T), N	AC 380V-415V power input/output	

## Types of allowable current

Conductors of supply cord shall have a nominal cross-sectional area not less than that shown in the table below.

#### Minimum cross-sectional area of conductors

Rated current of appliance (A)	Nominal cross-sectional area (mm2)	
≤0.2	Tinsel cord <sup>a)</sup>	
≤0.2 and ≤3	0.5 a)	Exterior connection
>3 and ≤6	0.75	
>6 and ≤10	1.0(0.75) b)	
>10 and ≤16	1.5(1.0) b)	
>16 and ≤25	2.5	DHW Power IN/OUT
>25 and ≤32	4	Main power
>32 and ≤40	6	
>40 and ≤63	10	$\neg \qquad \downarrow \downarrow \downarrow$

- a) These cords may only be used if their length does not exceed 2m between the point where the cord or cord guard enters the appliance and the entry to the plug.
- b) Cords having the cross-sectional areas indicated in the parentheses may be used for portable appliances if their length does not exceed 2 m.

### **Grounding work**

▶ Grounding must be done by a qualified installer for your safety.

#### Grounding the power cable

- ▶ The standard of grounding may vary according to the rated voltage and installation place of a heating pump.
- ► Ground the power cable according to the following.

Installation place Power condition	High humidity	Average humidity	Low humidity
Electrical potential of lower than 150V		Perform the grounding work 3. Note 1)	Perform the grounding work 3 if possible for your safety. Note 1)
Electrical potential of higher than 150V		Must perform the grounding work 3. Note 1) (In case of installing circuit breaker)	

#### \* Note 1) Grounding work 3

- · Grounding must be done by your installation specialist.
- Check if the grounding resistance is lower than 100  $\Omega$ .

 
When installing a circuit breaker that can cut the electric circuit in case of a short circuit, the allowable grounding resistance can be  $30\sim500\,\Omega$ .

 
## Wiring work

#### Checking correct grounding

If the power distribution circuit does not have a grounding or the grounding does not comply with specifications, an grounding electrode must be installed. The corresponding accessories are not supplied with the Air to Water Heat pump.

1. Select an grounding electrode that complies with the specifications given in the illustration.





- 2. Connect the flexible hose to the flexible hose port.
- ▶ In damp hard soil rather than loose sandy or gravel soil that has a higher grounding resistance.
- ▶ Away from underground structures or facilities, such as gas pipes, water pipes, telephone lines and underground cables.
- ▶ At least two metres away from a lightening conductor grounding electrode and its cable.




- The grounding wire for the telephone line cannot be used to ground the Air to Water Heat pump.
- 3. Finish wrapping insulating tape around the rest of the pipes leading to the outdoor unit.
- 4. Install a green/yellow coloured grounding wire:
- ▶ If the grounding wire is too short, connect an extension lead, in a mechanical way and wrapping it with insulating tape (do not bury the connection).
- Secure the grounding wire in position with staples.




- If the grounding electrode is installed in an area of heavy traffic, its wire must be connected securely.
- 5. Carefully check the installation, by measuring the grounding resistance with a ground resistance tester. If the resistance is above required level, drive the electrode deeper into the ground or increase the number of grounding electrodes.
- 6. Connect the grounding wire to the electrical component box inside of the outdoor unit.

### Connection of the power supply and communication cable


Model	Description	No. of wires	Max. A	Thickness	Supply Scope
AE***RNW*EG	1 Phase main power	2+ ground	22.7A	4.0mm <sup>2</sup> ↑ H05RN-F or H07RN-F	Field supply (220- 240Vac, Input)
AE***CNW*EG	Communication	2	0.1A	0.75mm² ↑ H05RN-F or H07RN-F	Field wiring (7Vdc, data)
	1 Phase main power	2+ ground	14.0A	2.5mm <sup>2</sup> ↑ H05RN-F or H07RN-F	Field supply (220- 240Vac, Input)
AE***RNW*GG AE***CNW*GG	3 Phase power	4+ ground	8.7A	2.5mm <sup>2</sup> ↑ H07RN-F	Field supply (380- 415Vac, Input)
	Communication	2	0.1A	0.75mm² ↑ H05RN-F or H07RN-F	Field wiring (7Vdc, data)

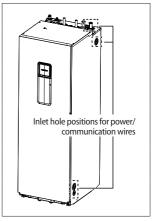


\* When you use inlet hole through the cabinet top positions for power/communication wires, please fix the wire by using mount tie of the cabinet right.

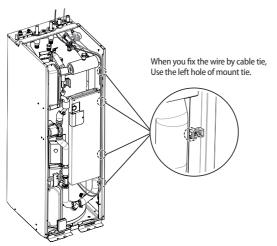

### 2 wires for communication cable

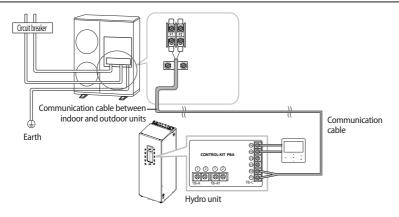


#### Communication cable connection

 


# Wiring work

#### 1. 1 phase product

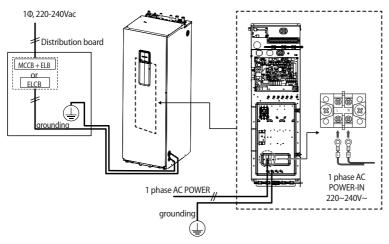

#### 2. 3 phase product

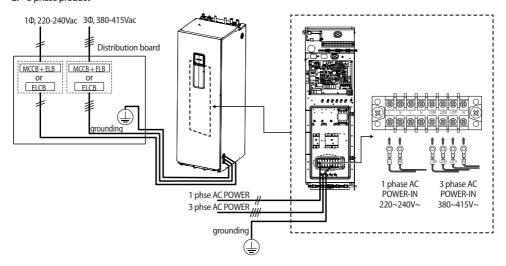

CAUTION

- If the supply cable is damaged, it must be replaced by a special cable or assembly available from the manufacturer or installer.
- Circuit Breaker (ELCB, ELB, MCCB etc.) for outdoor and indoor units shall be installed by installers because they are not sub-parts in the units. But you don't need to install for hydro unit (Built-in ELCB).
- It cause damage to chassis, PCB parts if the main power is not connected correctly. You should make certain that R, S,T is connected correctly before turning on the main power. (3 phase models only)


\* ELCB: Earth leakage circuit breaker

ELB: Earth leakage breaker

MCCB: Molded case circuit breaker

#### Connecting the power terminal

- ► Connect the cables to the terminal board using the solderless ring terminal.
- Use certified and reliable cables.
- ► Connect the cables with the torque chart as below.
- ▶ If the terminal is loose, fire may occur caused by arc. If the terminal is connected too firmly, the terminal may be damaged.
- External force should not be applied to the terminal block and wires.
- ► The cable ties to fasten the wire should be an incombustible material, V0 or above. (The cable ties should be used to fasten the power wire and they are supplied with the unit.)

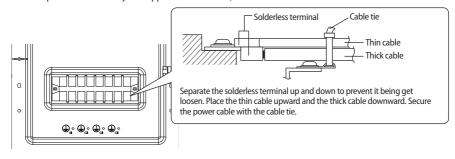

Tightening Torque (kgf • cm)				
M3	5~7.5			
M5	20 ~ 30			

### Connection of the backup heater power supply

CAUTION

• Do not use a power supply shared by other appliances. Each components for outdoor unit, indoor unit, backup heater and booster heater has the dedicated power supply.


Model	Backup Heater Capacity (kW)	Booster Heater Capacity (kW)	1 Phase ELCB (A)	3Phase ELCB (A)
AE***RNW*GG AE***CNW*GG	6	3	30A	20A
AE***RNW*EG AE***CNW*EG	2	3	30A	-


\* Circuit Breaker(ELCB, ELB, MCCB etc.)s written above are already included in the hydro unit.

ELCB: Earth leakage circuit breaker ELB: Earth leakage breaker

MCCB: Molded case circuit breaker


# Wiring work

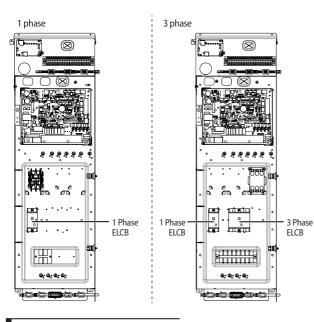

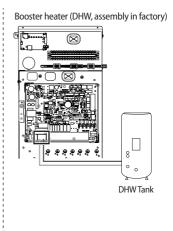


### Connection of the thermostat

Description	No. of wires	Max. current	Thickness	Supply Scope
Room Thermostat	4	50 mA (Output, Thermostats) 22 mA (Input, Thermostat 1/2)	> 0.75 mm², H05RN-F or H07RH-F	Field supply (220-240V~)

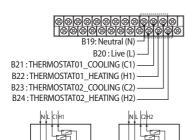


 - $1. \quad \text{Before the installation, hydro unit should be turned off.} \\$
- 2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.
- 3. Make sure what type is you use.
  - Contact signal must be " L". When you install two thermostats, thermostat2 is prior to thermostat1.



## Connection of the 2-way valve

 
Description	No. of wires	Max. current	Thickness	Supply Scope
Motorized 2-way valve to shut off UFH loops during cooling.	2+ground	50 mA	> 0.75 mm², H05RN-F or H07RH-F	Field supply (220- 240V~, Output)




\* Connection of 2 wires 2-way valve



 In case of normal closed type



#### In case of normal open type

 

#### 2-way motorized valve


- When outlet water temperature reach to lower than 16 °C in cooling mode, UFH loops will be closed.
- ▶ 220-240V~
- 2 wires(Normal Open or Normal Close)
- 1. Before the installation, hydro unit should be turned off.
- Using the appropriate equipment to correct position of terminal block as shown on the diagram.
- 3. Make sure what type is you use.
  - Normal OPEN or Normal CLOSED.




 There are 2 types of 2-way valve, normal open type and normal closed type. Make sure to connect terminals to right positions of terminal block. As detailed on the wiring diagram and illustrations above.


### Connection of the water pump for 2-zone control (FSV 4061=1)

- ► Zone1 water pump connection: B10(L1) + B11(N)
- ► Zone2 water pump connection: B14(L1) + B15(N)

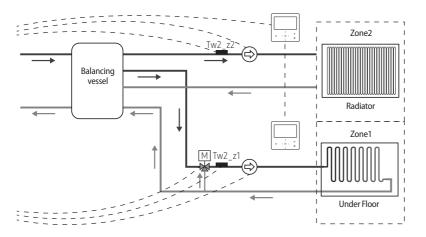



# Wiring work

 

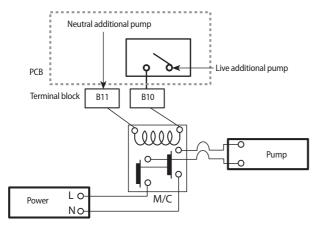

 • The maximum allowable current that this terminal block can supply for the additional water pump is 50mA.




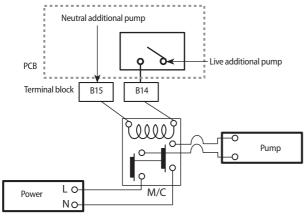

• The maximum allowable current that this terminal block can supply for the additional water pump is 50mA.

## Connection of the 3-way valve

 Description	No. of wires	Max. current	Thickness	Supply Scope
Diverting type 3way valve	4	50 mA	> 0.75 mm², H05RN-F or H07RN-F	Field supply (220-240V~, Output)



Status	L1	L2
A (Initial)	OFF	ON
В	ON	OFF

Field Setting Valve (#3071) "0" Floor heating as default	Field Setting Valve (#3071) "1" DHW tank as default
A FLOOR HEATING  HYDRO UNIT  3WAY V/V  DHW TANK	A FLOOR HEATING  HYDRO UNIT  3WAY V/V  DHW TANK
B FLOOR HEATING  HYDRO UNIT  3WAY V/V  DHW TANK	B FLOOR HEATING  HYDRO UNIT  3WAY V/V  DHW TANK


3-way diverting valve for water tank

- ► When cooling operating mode, floor heating loops will be closed.
- ▶ 220-240V~
- Before the installation, hydro unit should be turned off
- 2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.
- 3. Make sure what type of 3 way V/V you use.

# Wiring work

 
### Connection of the back-up boiler

Description	No. of wires	Max. current	Thickness	Supply Scope
Back-up Boiler	2+ground	50 mA	0.75mm <sup>2</sup> H05RN-F or H07RN-F	Field supply (220-240V~, Output)



When it set back up boiler on the hydro unit (relay off)

 When it order to back up boiler operates (relay on)




- 1. Before the installation, hydro unit should be turned off.
- 2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.
- 3. Make sure EXT-CTRL signal of back up boiler must be 230Vac.
  - Do not connect supply power of back up boiler directly.
- \* Heat pump does not work when the Back-up boiler operates.

### Connecting for external contact functions


Screw size	Tightening torque (N⋅m)	Part	Terminal code	
M3	0.5~0.75	20P Terminal block	1~20	

#### Connecting external sensors for zone control

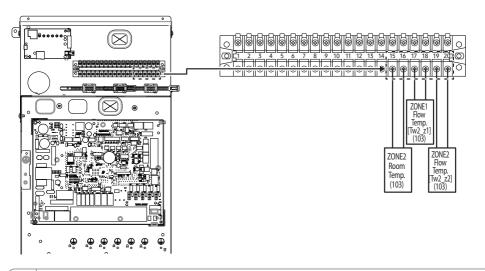

CAUTION

When connecting sensors, use the Sensor for Zone Control enclosed in accessories.
 (Thermistor with the specifications of 10kΩ at 25°C, B constant = 3435K).

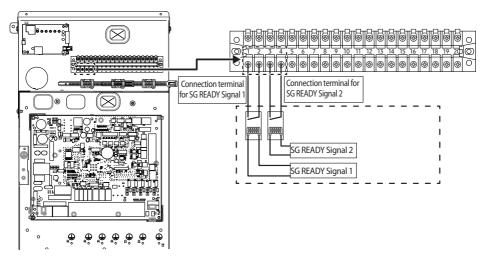

SG READY Signal 1	SG READY Signal 2	Product operation	
Short	Open	Forced thermo off operation	
Open	Open	Normal operation	
Open	Short	Heating / DHW setting temperature 1step-up operation	
Short	Short	Heating / DHW setting temperature 2step-up operation	


CAUTION

• These parts are optional and not included with the product.


• Maker sure to connect to non-power on/off contacts.

## Self-test mode of wired remote controller

#### Use of self-test mode

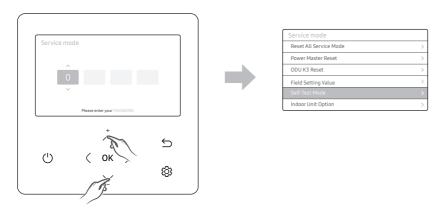

- 1. If you want to use the various additional functions for your Wired Remote Controller, press the and buttons at the same time for more than 3 seconds.
- ► The password entry screen appears.
- 2. Enter the password, "0202," and then press the **OK** button.
- ► The settings screen for installation/service mode appears.
- 3. Select Self-Test Mode in Service Mode.
- Self-Test Mode consists of Self-Test Display that shows operation value satus and menus that can turn each component on or off.

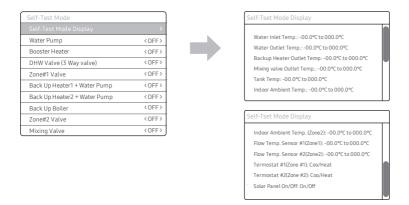

# **Troubleshooting**


If the unit has some problem to work properly, the LED on hydro unit will flash and some error codes will be displayed on the controller.

The following table described the explanation of error codes on the LCD display.

#### Thermistor

- ► Check its resistance. 10kohm@25 °C (Hydro unit), 200kohm@25 °C (DHW Tank)
- ► Check its location as shown at the diagram.
- ► Check its contact status with pipe.
- ► Final solution is to change parts

Display	Explanation
150	Short- or open-circuit error of the room temperature sensor of the Zone 2 indoor unit (detected only when the room thermostat is used)
15 1	Short- or open-circuit error of the room temperature sensor of the Zone 1 indoor unit (detected only when the room thermostat is used)
653	Wired remote controller thermistor SHORT or OPEN
897	Water TANK Inlet Thermistor SHORT or OPEN
899	Zone1 Water Outlet Themistor SHORT or OPEN
900	Zone2 Water Outlet Themistor SHORT or OPEN
90 :	Water Inlet thermistor SHORT or OPEN
902	PHE Outlet thermistor SHORT or OPEN
903	Water Outlet thermistor SHORT or OPEN
984	Water TANK thermistor SHORT or OPEN
9 (6	Mixing Valve thermistor SHORT or OPEN

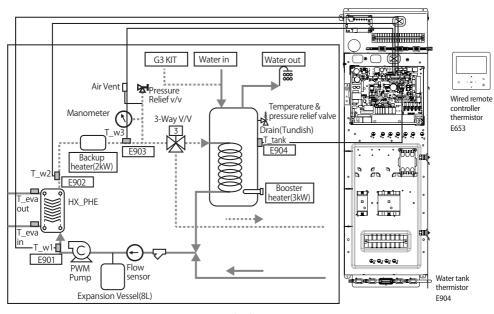


# **Troubleshooting**

## Communication


Display	Explanation	
60 :	Communication error between remote controller and the Hydro unit	
604	Tracking error between remote controller and the Hydro unit	
854	Memory(EEPROM) Read/Write Error(Wired remote controller data error)	

### E601, E604

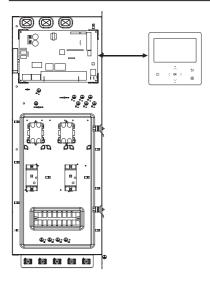

#### E654

MEMORY(EEPROM) Read/Write Error (Wired controller data error)

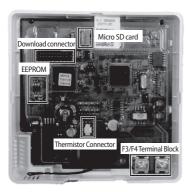


### Water pump & Flow Sensor

Display	Explanation
	Low flow rate error
9::	in case of low flow rate in 30 sec during water pump signals is ON(Starting)
	in case of low flow rate in 15 sec during water pump signals is ON(After starting)
9 12	Normal flow rate error
ם וכ	in case of normal flow rate in 10min during water pump signal is OFF


#### E911

 ▶ Water pump ON (Low flow rate): NOT enough water flow



#### E912

 ► Water pump OFF ( Normal flow rate )



### Water flow range


	Water flow rates (LPM) Min Max	
Outdoor unit capacity ≤ 9kW	7	48
Outdoor unit capacity > 9kW	12	58
AE080BXYD** / AE050CXYD** / AE080CXYD**	7	48
AE120BXYD** / AE140BXYD** / AE120CXYD** / AE160CXYD**	7	58

## **DHW** tank


#### Piping diagram



- The product must be installed without any water leakage.
- Please verify that the DHW tank and other components are properly installed and reinstall them if necessary.
  - Use certified components and the correct tools.
  - Keep adequate space for the installing.
  - The water may drip from the discharge pipe of the pressure-relief device and that this pipe must be left open to the atmosphere.
  - The pressure-relief device is to be operated regularly to remove lime deposits and to verify that it is not blocked.
  - How the water heater can be drained.
  - A discharge pipe connected to the pressure-relief device is to be installed in a continuously downward direction and in a frost-free environment.

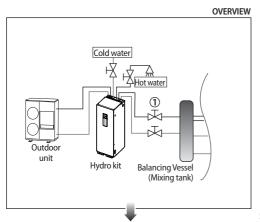

Sanitary warm water Tank Diagram(Field Scope)

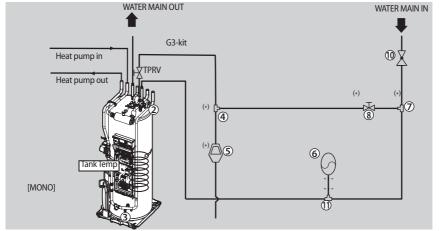

No.	Note	No.	Note
1	Service valve	7	T-Joint
2	3 way diverting valve	8	Expansion relief Valve
3	Drain Valve	9	T-Joint
4	T-Joint	10	Pressure reducing valve with integrated check valve and strainer
(5)	Tundish	Tank Temp	Temperature sensor for DHW tank
6	Expansion vessel		


<sup>\*</sup> The table above contains the different components of the functional diagrams.

## System configuration

- For the reliable performance and durability, all parts as listed below, including a relief valve, an expansion vessel, a drain valve and pressure reducing valve, should be installed according to each national or regional standards. They are not supplied by SAMSUNG.
  - Pressure relief valve
  - Expansion vessel
  - Drain valve
  - Tundish
  - Expansion relief valve
  - Pressure reducing valve

## **DHW** tank

### Switch box layout

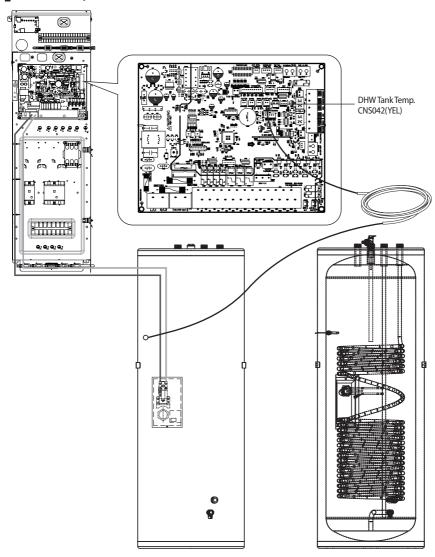



- When you set the hot water supply temperature to 55°C or less, do not use the booster heater.
  - The heatpump and the booster heater operate until the initial set temperature is reached. After that, only the booster heater may operate depending on the settings.

#### **Electrical connections**

#### **Procedure**



· Switch off the power supply before making any connections.

WARNING • Use a thermal grease in thermistor pocket after installing electric connections.

#### Connections to be made in the electrical box of DHW tank

- 1. Connect the booster heater power supply and thermal protection cable.
- 2. Make sure to ensure strain relief of the cable.

#### Connections to be made in the electrical box of indoor units

- 3. Plug the thermistor cable connector in the connector CNS042 on the pcb.
- 4. Connect the booster heater power supply and thermal protection cable (field supply) to terminal TB-A1 and earth on the terminal block.
- 5. Connector the loose ends of the TB-A1 on the terminal block and the connector CNS042 on the PCB.
- 6. Plug the thermistor cable connector in the socket X9A on the PCB.
- 7. Connect the booster heater power supply and thermal protection cable (field supply) to terminal 7, 8, 21, 22 and earth on the terminal block.
- 8. Connect the booster heater power supply cable to the circuit breaker and earthing screw.
- 9. Fix the cables to the cable tie mountings with cable ties to ensure strain relief.



· It is of great importance that the heater is filled with water before the electricity is hooked up, or else- the warranty is not valid. If the heater is installed and not used, it must be flushed with water once a week.

## **DHW** tank

### Troubleshooting

**IMPORTANT:** All maintenance or repair work must be executed by an approved installer.

Problem	Possible cause	Solution	
	No power supply to the water heater	Check if there is any power on the power supply terminal on the thermostat.	
Hot water is not coming out.	The thermostat may be set too high and cause the fuse or safety cut-off to operate.	Reduce thermostat setting by 5 °C and press the reset button.	
Heating is not working	Heating element or internal electrical wiring is out of order.	Check if there is any power on the power supply on the connector of the heating element between black and yellow/ green wires. If this is OK, press the reset button on the fuse/safety cut-off.	
	Thermostat is set too low.	Adjust the thermostat up using a standard screwdriver.	
Water is not warm enough	Heating element or the internal electrical wiring is partially out of order.	Check the resistance of the heating element on the connector of the heater bundle, and the condition of the internal wiring.	
	UX mixing valve(fitted on top) is incorrectly adjusted.	Adjust the UX mixing valve correctly to the preferred temperature.	
Safety valve(SV) is dripping.	Water expands when heated. If there is no consumption of hot water over a period of time pressure builds up, causing the safety valve to open.	If drip from the SV is severe, it might need to be replaced. Some dripping is normal. Alternatively an expansion vessel can be fitted.	
Leak warning outlet is dripping.	The heating element may not be properly tightened.	Check the heating element o-ring seal and all connections.	
	There may be a leak.	and an connections.	
Other problems, or if none of the above solves the problem.	-	Contact the installer/supplier regarding any other failure.	



Incorrect handling of thermostat, safety valve or other valves may lead to tank rupture. When servicing the unit follow instructions carefully:


- Always turn off main power supply when water supply is being shut off.
- Test the free operation of the safety valve regularly by opening the valve ensuring the water flows freely.
- Electrical connection and all servicing of the electrical components should only be carried out by an authorized electrician.
- · Fitting and all servicing of plumbing fixtures should only be carried out by an authorized installer.
- When replacing the thermostat, safety valve or any other valve or part supplied with this unit, use only approved
  parts of the same specification.



- Before resetting the safety cut-off or altering the thermostat setting, always remember to isolate the electrical supply to the unit. This must be done prior to removing the electrical box lid.
- If the electric element or thermostat is defective, contact authorized electrician.
- After adjustments are completed, ensure the lid to the electrical box is refitted correctly and that the retaining screw is properly fitted.

# **Mixing Valve**

#### Installation of mixing valve

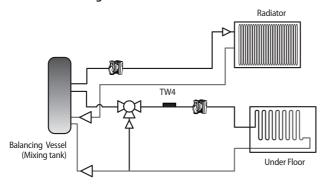

When two different zones are used with different temperature, adjust the temperature of discharge water to high temperature water and control the amount of bypass to provide low temperature water by applying the mixing valve and temperature sensor of the mixing valve (TW4).


- 1. Select a mixing valve from the manufacturers as below (recommended) and install it at the enterance of the zone.
- 2. Install the supplied temperature sensor (TW4) on the rear part of the mixing valve. Install TW4 Sensor within 1m of Mixing Valve.
- 3. Since running time varies depending on the manufacturer, set the FSV (default 90 sec.) by referring to the FSV value below.

Maker		BELIMO	SIEMENS	HONEYWELL
Model code	3 Way Valve	R3020-6P3-S2	VXP45.20-4 (kvs 4)	V5011E1213
Actuator		LR230A(-S)	SSB31	ML6420A3015
Running time		90 sec.	150 sec.	60 sec.
FSV(#4046) setting		9	15	6

- \* The table above is for your reference. It can be changed without advanced notice.
- 4. Set the FSV value by referring to the table below depending on installation environment.

Function	Details	Code	Unit	Default	Min.	Max.
Mixing valve	Use or not	4041	-	0(No)	0	2
	Target temperature difference (Heating) (TW3-TW4)	4042	°C	10	5	15
	Target temperature difference (Cooling) (TW4-TW3)	4043	°C	10	5	15
	Control factor	4044	-	2	1	5
	Interval of valve control	4045	Min.	2	1	30
	Running time (10 second unit)	4046	(x10) sec	9	6	24

- \* 4041 = 1: Controlled based on the temperature difference (4042, 4043)
- \* 4041 = 2: Controlled based on the temperature difference of the WL value

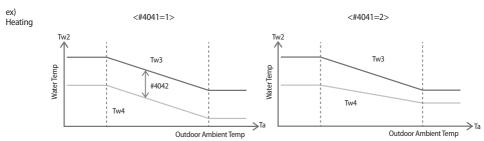

**ENGLISH-61** 


# **Mixing Valve**

- \* The mixing valve is controlled based on the FCU WL value.
- \* As the #4044 value increases and the #4045 value decreases, the control speed increases. (Temperature hunting may occur if the control speed increases depending on the load.)
- \* The additional pump and mixing valve should be purchased separately. TW4 sensor is included in the product accessories.
- \* TW3: Water temp. sensor 3



- When the thermostat control is set as 'Use', the mixing valve can be used for Zone 1 and Zone 2. (When both FSV #2091 and #2092 are set as 1/2)
- When using Zone control (FSV 4061 = 1), ignore Thermostat signal.


### 2-zone control using Thermostat

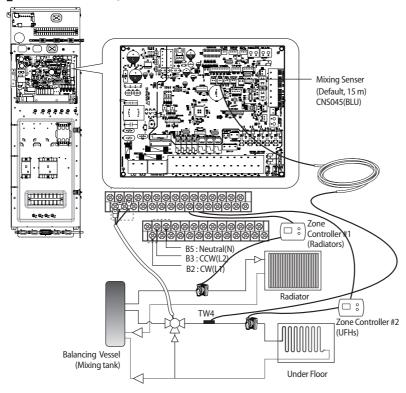

De	escription	No. of wires	Max. current	Thickness	Supply Scope
Mi	ixing valve	4	22 mA	> 0.75 mm², H05RN-F or H07RH-F	Field supply (230 V~, Input)

- 1. Before the installation, hydro unit should be turned off.
- 2. Using the appropriate equipment to correct position of terminal block as shown on the diagram.

#### 2-Zone Control Using Remote Controller

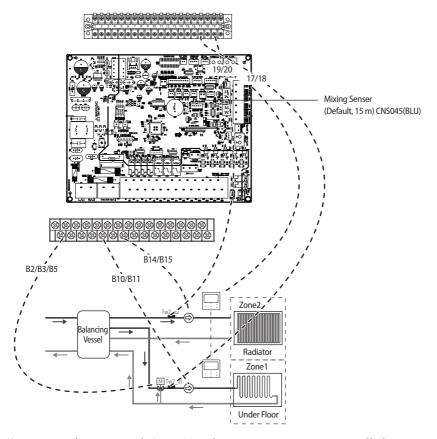

You can operate the 2-zone control using a mixing value, water-out temperature sensors, and built-in or external room temperature sensors installed in a wired remote controller.

When both zones are simultaneously Thermo on, the operation is performed based on Zone 2. Therefore, set the zone that you want to have the higher set temperature to Zone 2.

(The mixing valve must be installed in the zone that you want to have the lower set temperature.)


- 1. Install the mixing valve. (See "Installation of mixing valve.")
- 2. Install the water-out temperature sensors (Tw2\_z1, Tw2\_z2) for all zones.
- 3. Unlike the zone control with a thermostat, connect the water pump signal lines to the product.
- ► Zone1 water pump connection: B10 (L1) + B11 (N)
- ► Zone2 water pump connection: B14 (L1) + B15 (N)
- 4. FSV 4061 = 1: Enable the 2-zone control using the wired remote controller.
- \* If you want to operate the 2-zone control by using water-out temperatures, you have only to complete steps 1 to 4 above.
- \* If you want to operate the 2-zone control by using room temperatures and built-in temperature sensors in wired remote controllers, you must install two wired remote controllers in each room.

  (If you use external room temperature sensors, you can control each room temperature with only one wired remote
  - (If you use external room temperature sensors, you can control each room temperature with only one wired remote controller.)

## **Temperature sensor work**

### Example of sensor installation


Weld the sensor holder on the selected location of the pipe and then insulate it.

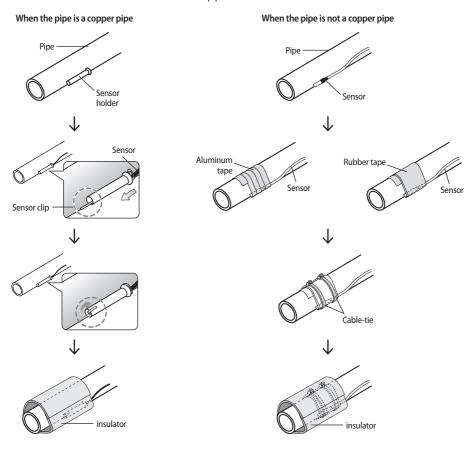

NOTE

• When the holder sensor cannot be welded on the pipe, fix the senor with aluminum tape and insulate it.

## Setting the EHS converter

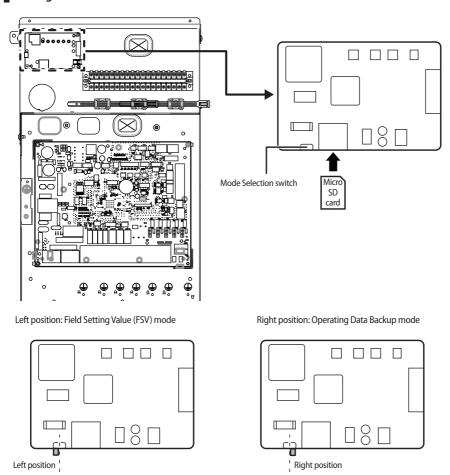


▶ Micro SD card is a separate purchase, using 8 ~ 32GB It's possible.


## Temperature sensor work

### **Reading and writing FSV**

#### How to upload or download field settings (example)

1. Insert an SD card into the Sub PBA SD Card slot on the Hydro unit.

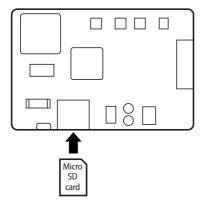

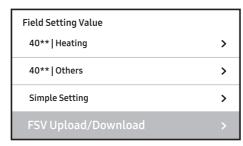

- 2. Select Field Setting Value in Service mode.
- 3. Press Up/Down button to select FSV Upload or Download.



- Upload: Uploads the FSV data of the Hydro unit to the SD card.
- Download: Downloads the FSV data of the SD card to the Hydro unit.
- The upper-level controllers excluding Wi-Fi kit (2.0) and MWR-WW10\*\* wired remote controller cannot use the 2-zone control and energy monitoring.
- When connecting between the MWR-WW10\*\* wired remote controller and an upper-level controller, the settings for FSV (4061) must be changed not to use the 2-zone control.

8





- 1. Download the wired remote controller image, change the file name to "IMAGE.BIN," and then download to microSD Card.
- 2. Download the wired remote controller program, change the file name to "MICOM.BIN," and then download to microSD Card.
- 3. Insert the microSD Card with the Wired Remote Controller active, and then reset the system. For system reset, press the (and (3) buttons at the same time for more than 5 seconds.
- 4. The download to microSD Card is performed as follows:
- ▶ Download proceeds in the order of IMAGE and MICOM.
- ▶ When the update fails, the Wired Remote Controller is reset automatically and the update proceeds again.
- 5. When the download is finished, tracking starts automatically. When tracking is completed, remove the microSD Card.

 $\bigcirc$ 

- Be sure to use the microSD Card after formatting in FAT16 or FAT32.
- The microSD Card supports the SD or SDHC with the capacity of 1 GB to 32 GB.
  - The update is performed only when the file version in the microSD Card differs from the one of the Wired Remote Controller.
  - When the screen is frozen for more than 3 minutes after completing the microSD card update by 100%, product inspection is required.
  - Delete the files except for the ones for download. (Only IMAGE.BIN and MICOM.BIN are required.)

## Temperature sensor work

#### When the microSD Card is removed during download



- When you remove the microSD Card during download, the "INSERT MICROSD CARD AND SYSTEM RESET" screen appears
  and the download is stopped.
- 2. When you insert the microSD Card and press the  $\langle$  and  $\bigcirc$ 3 buttons for system reset, download starts again after finishing the reset.




- When you reset the Wired Remote Controller while the microSD Card is removed, the above message appears on the screen in standby mode.
- When you reset the Wired Remote Controller while the microSD Card is removed and then inserted, the following actions are performed.
  - If the reinserted microSD Card contains all the files for update, update proceeds regardless of the version of the file.
  - If the reinserted microSD Card contains any missing files for update, the above message appears in standby mode.

## **Concrete curing function**

When pipes of floor heating are installed, operation for reinforcing concrete curing is applied. (Period of operation: 23 days)


#### **Entering procedure**

- 1. After turning off the DIP switch K3 of indoor unit (Default ON), power off and on the indoor unit. The operation for concrete curing starts automatically. (If blackout occurs and communication restarts later, operation will continue.)
- 2. Temperature of discharge water is controlled as time goes on like below.

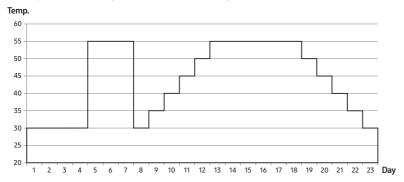

Classification Initial Heating			Step raise			Heating	Step down			Total (Hour)				
Time	96	72	24	24	24	24	24	144	24	24	24	24	24	552
Temperature	30	55	30	35	40	45	50	55	50	45	40	35	30	-

3. Remaining days are displayed on the wired remote controller during operation but key operation is unavailable.

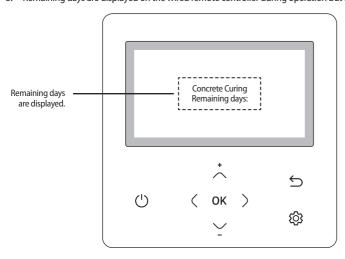


\* If an error is displayed, concrete curing function does not work.

# **Concrete curing function**



• Definition of Dip switch function

Dip S/W	S/W #1	S/W #2	S/W #3	S/W #4
ON (default)	• None	• None	• None	Turn off when an E101 error occurs
OFF	Emergency heating	Emergency hot water supply	Concrete curing	E101 error does not turn off
reference item	Please refer to the	user manual	Please refer to the previous page	Please refer to below

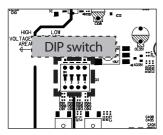

• When outdoor unit only power supply change by local condition, it is an option to auto restart system.


Classificati	on	When the outdoor unit is power off	When the outdoor unit is power on	
Hydro Unit operation	ON (default)	Hydro Unit E101 error occurs.	<ul><li> Hydro Unit E101 error disappears.</li><li> Hydro Unit operation turns off.</li></ul>	
according to the DIP S/W #4 setting	OFF	Hydro Unit E101 error occurs.	Hydro Unit E101 error disappears.     Hydro Unit keeps its previous operation.	

- The outdoor unit on/off control is not available with the A2A indoor unit.
- Although the outdoor unit is turned on after the E101 error occurred, the A2A indoor unit operation keeps turned off.

# **Installation option setting**

► Set the indoor unit installation option with remote controller option.

### The procedure of option setting

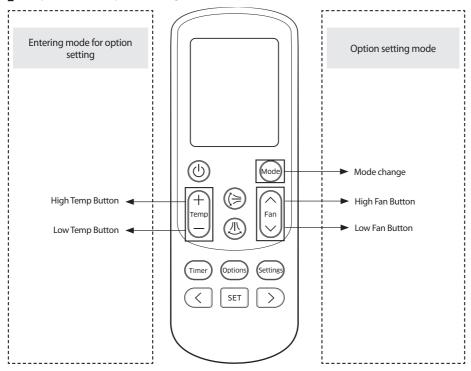

#### Entering mode to set option

- 1. Remove batteries from the remote controller.
- 2. Insert batteries and enter the option setting mode while pressing High Temp button and Low Temp button.



3. On Auto

Check if you have entered the option setting status.

# **Installation option setting**

### Changing a particular option

You can change each digit of set option.

Option	SEG1		SEG	i2	SEG	i3	SEC	54	SEG	5	SEG	5
Explanation	tion PAGE		MOE	DE	, , , , , , , , , , , , , , , , , , , ,		,   1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		, ,		The changed	d value
Remote Controller Display	oller		on Auto		on Auto	}	On Cool		On Cool		On D	Dry
1 12 41	Indication	Details	Indication	Details	Indication	Details	Indication	Details	Indication	Details	Indication	Details
Indication and Details	0		D		Option mode	1~6	Tens' digit of SEG	0~9	Unit digit of SEG	0~9	The changed value	0~F

## ■ NOTE

- When changing a digit of an control kit address setting option, set the SEG3 as 'A'.
- When changing a digit of control kit installation option, set the SEG3 as '2'. Ex) When setting the 'central controller' into disuse status.

Option	SEG1	SEG2	SEG3	SEG4	SEG5	SEG6
Explanation	PAGE	MODE	The option mode you want to change	The tens' digit of an option SEG you will change	The unit digit of an option SEG you will change	The changed value
Indication	0	D	2	0	5	0

<sup>\* 02</sup> Series installation option

Classification	SEG1~24		
Use central controller (Default)	020010 100000 200000 300000		
Disuse central controller	020000 100000 200000 300000		

<sup>\* 01</sup> Series Productin Option(Factory default)

 
Model	SEG1~24
AE200RNWSEG AE260RNWSEG AE200RNWMEG AE260RNWMEG AE200CNWMEG	012300 100000 200000 300002
AE260CNWMEG	012300 100000 200000 300012
AE260RNWSGG AE260RNWMGG	012300 110000 200000 300002
AE260CNWMGG	012300 110000 200000 300012

# Optional: Extending the power cable

1. Prepare the following tools.


Tools	Spec	Shape
Crimping pliers	MH-14	
Connection sleeve (mm)	20xØ6.5 (HxOD)	
Insulation tape	Width 19 mm	
Contraction tube (mm)	70xØ8.0 (LxOD)	

- 2. As shown in the figure, peel off the shields from the rubber and wire of the power cable.
  - Peel off 20 mm of cable shields from the pre-installed tube.






- For information about the power cable specifications for indoor and outdoor units, refer to the installation manual.
- After peeling off cable wires from the pre-installed tube, insert a contraction tube.
- 3. Insert both sides of core wire of the power cable into the connection sleeve.
  - Method 1: Push the core wire into the sleeve from both sides.
  - Method 2: Twist the wire cores together and push it into the sleeve.

 




- If cable wires are connected without using connecting sleeves, their contact area becomes reduced, or corrosion develops on the outer surfaces of the wires (copper wires) over a long time. This may cause an increase of resistance (reduction of passing current) and consequently may result in a fire.
- 4. Using a crimping tool, compress the two points and flip it over and compress another two points in the same location.
  - The compression dimension should be 8.0 mm<sup>2</sup>.

 


# Optional: Extending the power cable

 
• After compressing it, pull both sides of the wire to make sure it is firmly pressed.



 
5. Apply heat to the contraction tube to contract it.



 6. Wrap it with the insulation tape twice or more and position your contraction tube in the middle of the insulation tape.



 After tube contraction work is completed, wrap it with the insulation tape to finish. Three or more layers of insulation are required.




Ŵ

- Make sure that the connection parts are not exposed to outside.
- Be sure to use insulation tape and a contraction tube made of approved reinforced insulating materials that have the same level of withstand voltage with the power cable. (Comply with the local regulations on extensions.)

<u>İ</u> WARNING

 - In case of extending the electric wire, please DO NOT use a round-shaped Pressing socket.
  - Incomplete wire connections can cause electric shock or a fire.



# Reference (KEYMARK Certification)

Model code Outdoor	Model code Indoor	Registration number	Accessory* Mono Control Kit
AE050RXYDEG/EU	AE200RNWMEG/EU	011-1W0448	
AE050RXYDEG/EU	(space heating only)	011-1000440	MIM-E03CN
AE080RXYDEG/EU	AE200RNWMEG/EU	011-1W0449	
AE080RXYDEG/EU	(space heating only)	011-1000449	MIM-E03CN
AE080RXYDEG/EU	AE260RNWMEG/EU		
AE080RXYDGG/EU	AE260RNWMGG/EU	011-1W0450	
AE080RXYDGG/EU	(space heating only)		MIM-E03CN
AE120RXYDEG/EU	AE200RNWMEG/EU		
AE120RXYDEG/EU	(space heating only)	011-1W0446	MIM-E03CN
AE160RXYDEG/EU	AE200RNWMEG/EU	011-1000440	
AE160RXYDEG/EU	(space heating only)		MIM-E03CN
AE120RXYDEG/EU	AE260RNWMEG/EU		
AE120RXYDGG/EU	AE260RNWMGG/EU		
AE120RXYDGG/EU	(space heating only)	011-1W0447	MIM-E03CN
AE160RXYDEG/EU	AE260RNWMEG/EU	011-1000447	
AE160RXYDGG/EU	AE260RNWMGG/EU		
AE160RXYDGG/EU	(space heating only)		MIM-E03CN

Model code Outdoor	Model code Indoor	Registration number	
AE040RXEDEG/EU	AE200RNWSEG/EU	011-1W0451	
AE060RXEDEG/EU	AE200RNWSEG/EU	011-1100431	
AE040RXEDEG/EU	AE090RNYDEG/EU	011-1W0453	
AE060RXEDEG/EU	AE090RNYDEG/EU	011-100433	
AE040RXEDEG/EU	AE260RNWSEG/EU	011-1W0452	
AE060RXEDEG/EU	AE260RNWSEG/EU	011-100432	
AE090RXEDEG/EU	AE200RNWSEG/EU	011-1W0454	
AE090RXEDEG/EU	AE090RNYDEG/EU	011-1W0456	
AE090RXEDGG/EU	AE090RNYDGG/EU	011-100430	
AE090RXEDEG/EU	AE260RNWSEG/EU	011-1W0455	
AE090RXEDGG/EU	AE260RNWSGG/EU	011-100433	

Model code Outdoor	Model code Indoor	Registration number	Accessory* Mono Control Kit
AE080BXYDEG/EU	AE200RNWMEG/EU	011-1W0549	
AE080BXYDEG/EU	AE260RNWMEG/EU	011-1W0548	
AE080BXYDEG/EU	(space heating only)	011-1W0547	MIM-E03EN
AE080BXYDEG/EU	(space heating only)	011-1W0547	MIM-E03CN
AE080BXYDGG/EU	AE260RNWMGG/EU	011-1W0548	
AE080BXYDGG/EU	(space heating only)	011-1W0547	MIM-E03EN
AE080BXYDGG/EU	(space heating only)	011-1W0547	MIM-E03CN
AE120BXYDEG/EU	AE200RNWMEG/EU	011-1W0552	
AE120BXYDEG/EU	AE260RNWMEG/EU	011-1W0551	
AE120BXYDEG/EU	(space heating only)	011-1W0550	MIM-E03EN
AE120BXYDEG/EU	(space heating only)	011-1W0550	MIM-E03CN
AE120BXYDGG/EU	AE260RNWMGG/EU	011-1W0551	
AE120BXYDGG/EU	(space heating only)	011-1W0550	MIM-E03EN
AE120BXYDGG/EU	(space heating only)	011-1W0550	MIM-E03CN
AE140BXYDEG/EU	AE200RNWMEG/EU	011-1W0552	
AE140BXYDEG/EU	AE260RNWMEG/EU	011-1W0551	
AE140BXYDEG/EU	(space heating only)	011-1W0550	MIM-E03EN
AE140BXYDEG/EU	(space heating only)	011-1W0550	MIM-E03CN
AE140BXYDGG/EU	AE260RNWMGG/EU	011-1W0551	
AE140BXYDGG/EU	(space heating only)	011-1W0550	MIM-E03EN
AE140BXYDGG/EU	(space heating only)	011-1W0550	MIM-E03CN

# **SAMSUNG**

