History

Version	Modify	Date	Etc.			
Ver.1.0	Ver.1.0 Release "System Air-conditioner Control System Guide" TDB					
Ver. 1.1	Modify DMS 2.5 key function page (P.110)	17.03.23				
Ver.2.0	Ver.2.0 Release the first half of 2017 version.					
Ver.2.1	Released the SAC Control System Guide 2018 Version	18.02.28				

Contents

Individual Control System

Wireless Remote Controller	10
AR-EH03E AR-KH00U	
Wired Remote Controller	19
MWR-WE13N	
Simple Type MWR-SH00N	41
Touch Simple Type MWR-SH10N	51
ReceiverKIT	63
MRK-A10N	
Centralized Control System	
OnOff controller	65
MCM-A202DN	
Touch centralized controller	72
MCM-A300N	
Wi-Fi kit	85
MIM-H03UN	
Module Controller	98
MCM_AOON	

Integrated management System

DMS2.5 115
MIM-D01AUN
S-NET3 165
MST-P3P

Gateway
BACnet Gateway 182
MIM-B17BUN
LonWorks Gateway 204
MIM-B18BUN

External Contact Interface Module 223

MIM-B14

PIM (Pulse Interface Module) 228

MIM-B16UN

Interface module 240

MIM-N01

FCU interface module 249

MIM-F10N

Installation / Test run Solution

S-Converter 255 MIM-C02N

Others

External Room Sensor	260
MRW-TA	
Operation mode selection switch	262
MCM-C200	
MTFC (Multi Tenant Function Controller)	264
MCM-C210N	


Controller Line up & Comaptibility Table


			Product Image	Compatibility Table												
Classification	Product	Model Name		DVM	CAC	DVM Chiller	Water FCU	FCU Kit	ERV	ERV Kit	ERV Plus	EHS (Commercial)	EHS (Residential)	EHS Kit	PAC	AHU Kit
	Wireless Remote Controller	AR-EH03E	121 610 F	0	0	Х	0	0	Х	Х	Х	X	X	X	Х	0
	Wireless Remote Controller (360 Only)	AR-KH00U		0	0	Х	0	Х	Х	Х	Х	Х	Х	Х	Х	Х
	Wired Remote Controller	MWR-WE13N		0	0	X	0	0	0	X	0	Х	Х	Χ	X	0
Individual Control System	Wired Remote Controller - Simple Type	MWR-SH00N		0	0	Х	0	0	Х	Х	Х	Х	Х	X	Х	Х
	Wired Remote Controller - Touch Simple Type	MWR-SH10N	5.4. (1.0)	0	0	Х	0	0	Х	Х	Х	X	Х	Х	Х	x
	Receiver Kit (Duct Only)	MRK-A10N	***************************************	0	0	X	X	Х	X	Х	X	Х	X	X	X	X
	Touch Centralized Controller	MCM-A300N	**************************************	0	0	0	0	0	0	0	0	0	0	0	0	0
Centralized	Onoff Controller	MCM-A202DN		0	0	0	0	0	0	X	0	Х	X	Χ	0	0
Control System	Wi-Fi Kit	MIM-H03UN	001	0	0	Х	0	X	0	0	0	0	0	0	0	0
	Module Controller	MCM-A00N		Х	X	0	Х	X	X	X	X	Х	X	X	X	X
Integrated	DMS2.5	MIM-D01AUN		0	0	0	0	0	0	0	0	0	0	0	0	0
management System	S-NET3	MST-P3P		0	0	Х	Х	Х	0	Х	0	0	X	Х	0	0


Controller Line up & Comaptibility Table

			Product	Compatibility Table												
Classification	Product	Model Name	Image	DVM	CAC	DVM Chiller	Water FCU	FCU Kit	ERV	ERV Kit	ERV Plus	EHS (Commercial)	EHS (Residential)	EHS Kit	PAC	AHU Kit
	BACnet Gateway	MIM-B17BUN	The state of the s	0	0	0	0	0	0	0	0	0	X	X	0	0
	Lonworks Gateway	MIM-B18BUN	and the second	0	0	0	0	0	0	0	х	Х	Х	X	0	0
Interface &	PIM (Pulse Interface Module)	MIM-B16UN	-	0	0	0	0	0	0	0	0	0	0	0	0	0
Gateway	External Contact Interface Module	MIM-B14		0	0	0	0	0	0	Х	0	0	0	Х	0	0
	Interface Module	MIM-N01		0	0	Х	Х	X	X	Х	0	0	X	X	0	0
	FCU Interface Module	MIM-F10N		Х	X	Х	0	0	X	Х	X	Х	X	X	Х	Х
Installation /Test run Solution	S-Converter	MIM-C02N	S.A. A.	0	0	0	0	0	0	0	0	0	0	0	0	0
Others	External Room Sensor	MRW-TA	Name of the last o	0	0	Х	0	0	х	х	х	0	Х	X	х	Х
	Operation Mode Selection Switch	MCM- C200		0	Х	Х	Х	Х	Х	х	Х	Х	Х	Х	х	Х
	MTFC (Multi Tenant Function Controller)	MCM-C210N		0	Х	Х	Х	Х	Х	Х	Х	Х	X	Х	Х	Х

Overview of DVM S New communication system diargram

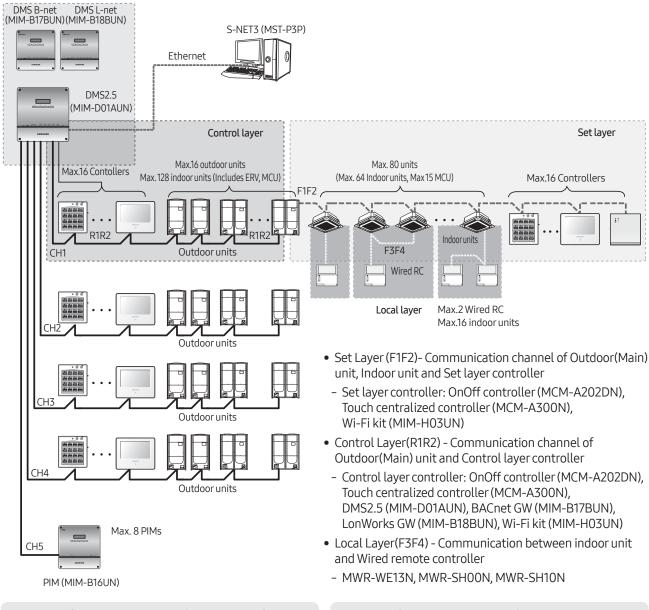

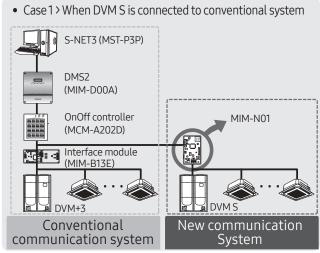

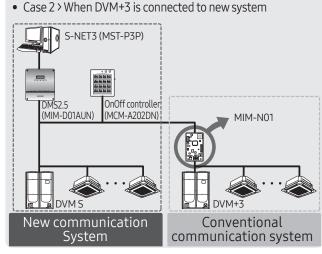

Chapter 01


Individual Control System

Wireless Remote Controller	
AR-EH03E	10
AR-KH00U	16
Wired Remote Controller	
MWR-WE13N	19
Simple Type	
MWR-SH00N	42
Touch Simple Type	
MWR-SH10N	52
ReceiverKIT	
MRK-A10N	63

Wireless Remote Controller

AR-EH03E

Features

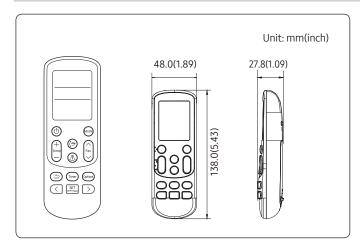


Easy and convenient operation control

- Operation ON/OFF control
- Fan speed control
- Operation temperature setting
- Filter replacement alarm reset
- Air swing control
- Simple ON/OFF timer
- Indoor unit option code setting
- Option/Setting selection

	AR-EH03E
Heating Operating Temperature range	8°C ~30 °C

Description of parts

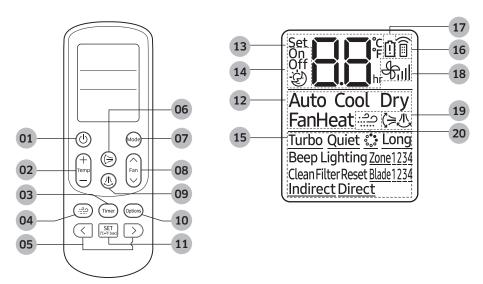

No	Name	Description
01	On/Off button	Press this button to turn On/Off the indoor unit.
02	Temperature button	Press this button to increase/decrease the set temperature by 1°C(1°F).

No	Name	Description
03	Timer button	Sets timer option.
04	Wind-Free button	Sets Wind-Free mode.
05	Direction button	Moves to select and set an option.
06	Air flow direction (Up and down) button	Press this button to activate/deactivate vertical air flow movement. (Not applicable to Duct type model)
07	Operation mode button	Press this button to select one of the 5 operation modes. (Auto, Cool, Dry, Fan, Heat)
08	Fan speed button	Press this button to select one of the fan speeds. (Auto, Low, Medium and High.)
09	Airflow direction (Left and right) button	Press this button to activate/deactivate horizontal air flow movement.
10	Options button	Selects options during operation.
11	Set/Cancel button	Selects or cancels an option. And sets Temperature type (°C → °F)
12	Operation mode indicator	Indicates the operation mode.
13	Set temperature & On/Off set time	Basic – Indicates the set temperature.
	indicator	Timer setting – Indicates the On/Off set time.
14	On/Off timer indicator	Indicates the On/Off timer setting.
15	Options indicator	Indicates the selected [Option] - Turbo, Quiet, SPI, Long, Filter reset, Beep, Blade selection
16	Transmission indicator	Indicates when wireless signal is received (by pressing any buttons).
17	Low battery indicator	Indicates the battery life.
18	Fan speed indicator	Indicates the fan speed settings.
19	Air swing indicator	Indicates when vertical or horizontal air flow movement.
20	Wind-Free indicator	Indicates the Wind-Free setting.

Key operation function

■ Wind-Free Cooling function

Use the Wind-Free Cooling function to enjoy mild cool breeze exuding from fine holes on the Wind-Free panel with the air flow blade closed, instead of getting cool wind directly. The automated control of the temperature and fan speed according to the indoor temperatures keeps your room cool and pleasant.

In the Cool, Dry, or Fan mode ▶ :::::



- To cancel this function, press the button again.
- If the Wind-Free Cooling function is cancelled, the air conditioner returns to the original fan speed.
- You can adjust the set temperature during the Wind-Free Cooling function, and recommended set temperatures are 24 to 26 °C (75 to 79 °F).
 - However, you cannot change the set temperature in the Fan mode.
- You can use the Wind-Free Cooling function when the Cool, Dry, or Fan mode is running.
- If the room temperature goes high because of rise of external temperature, heat from cooking, or other reason, operate the Wind-Free Cooling function after operating in the Cool mode.
- If you select the Wind-free Cooling function in the Fan mode, the compressor stops working so that cool air does not come out. However, mild breeze comes out and starts to clean the air in the room.
- During the Wind-Free Cooling operation, the cold air may be intermittently weakened depending on the temperature and humidity in the room. But the Wind-Free air currents are maintained and the weakened cold air is immediately recovered, consequently keeping the room comfortable. (During the Wind-Free Cooling operation, the air flow blades may open to control the indoor air currents smoothly, depending on the installation settings. In this case, as soon as the indoor temperature and humidity change, the air flow blades are closed and the Wind-Free Cooling operation restarts. For more information on the installation settings, see "Setting the indoor unit addresses and the installation options" in the installation manual of the indoor unit.)


	Change of the air flow blade by temperature and humidity							
Indoor temperature and humidity	Low	High						
	Breeze is blown via the micro holes on the air flow blades	Breeze is blown via the micro holes on the air flow blades	Breeze comes from the air flow blade depending on the setting					
Airflow blade	Closed	Closed (default)	Opened (according to setting)					

- When the Wind-Free Cooling function runs while sleeping, you may feel cold air if the air conditioner is installed over the bed. In this case, set the desired temperature higher than the normal setting temperature.
- If you select the Wind-Free Cooling function while such functions as Turbo, Quiet, Long reach, an Air flow direction ((a), (b)) or good'sleep are running, these functions are cancelled.

Key operation function

Long reach function

 Use the Long reach function to deliver strong air flow that quickly reaches a far distance.





- You cannot change the fan speed.
- If you select the Long reach function while such functions as Wind-Free Cooling, Turbo, Quiet or good'sleep are running, these functions are cancelled.

Clean function

Use the Clean function to remove moisture from the inside of the air conditioner for preventing propagation of fungi, bacteria, etc.



Note

- Depending on the condition of the indoor unit, the Clean operation stops after running for 30 seconds to 20 minutes.
- When the Clean function is set, the Timer LED on the indoor unit blinks 3 times for 3 seconds (OFF → ON → OFF → ON → OFF → ON → OFF → returns to the previous state). When the Clean function is cancelled, the Timer LED on the indoor unit blinks once for 1 second (OFF → ON → OFF → returns to the previous state).
- You cannot use the Clean function after starting the Timed Off or good'sleep function.
- If you turn on the air conditioner and then turn it off within 20 seconds, the Clean function does not operate.
- When the air conditioner is turned off, the Clean function operates immediately. When it is turned on, the Clean function operates after it is stopped.
- Once the Clean function is started, it automatically continues to operate until it is cancelled.

■ Motion Detection Feature

Indirect function with Motion detection feature

Use the Indirect function to get an indirect wind so that you can feel comfortable. When this function is turned on, the air conditioner detects people and blows air indirectly around them.





When the Indirect function is set simultaneously with the Auto, Dry, Fan, Wind-Free Cooling, Turbo, Quiet, Long reach, air flow direction (﴿), (A) or good'sleep function, Indirect is displayed on the remote control display but this function does not operate.

Direct function with the Motion detection feature

Use the Direct function to get a direct wind so that you can feel comfortable. When this function is turned on, the air conditioner detects people and blows air directly toward them.





- When the Direct function is set simultaneously with the Auto, Dry, Fan, Wind-Free Cooling, Turbo, Quiet, Long reach, air flow direction (﴿), (A) or good'sleep function, Direct is displayed on the remote control display but this function does not operate.
- The Direct function is not supported by MCR-SMA model.

To use the Motion detection feature, the air conditioner must be equipped with a Motion Detection Kit, which is sold separately. If the Motion Detection Kit is already installed, the motion detection feature must be enabled so that it can operate normally. (For more information, refer to the Motion Detection Kit manual.) When **Direct** or **Indirect** is displayed on the remote control display, the Motion detection feature changes the air conditioner to energy-saving mode if there are no people in the room.

 
Additional function


Option code setting

- 1 Remove the batteries from the remote controller.
- 2 Press the Temp [+] and [-] button at the same time and insert the batteries.
- **3** Set the 2 digits of option code. If you press the Fan $[\land]$ button, you can change the right digit. If you press the Fan [\(\)] button, you can change the left digit.
- Press the [Mode] button to set the next 2 digits of option code. Input 20 digits in total.
- **5** Press the 🛈 button more than twice to set the indoor unit option code. (When indoor unit option code is set, a beep will sound. When the setting is incorrect, all the LED on the indoor unit panel will




• Option code is composed with total of 24 digits including page number. From the wireless remote controller, enter the option code without page number.



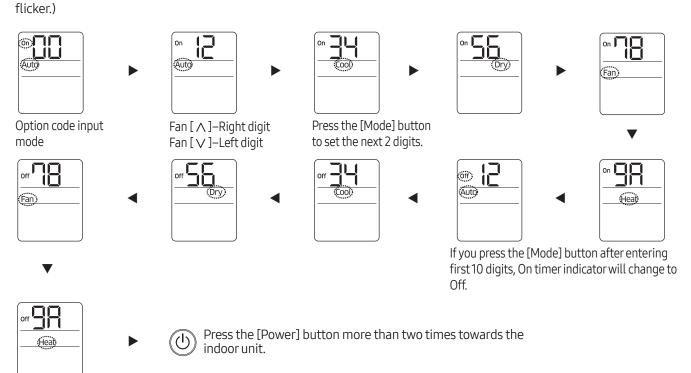

AR-KH00U

Features

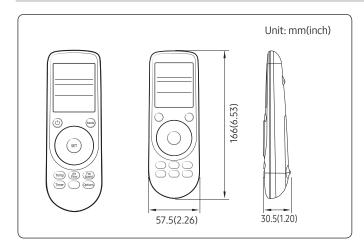


Easy controlling with the wheel

- 360 cassette air flow direction control
- Operation ON/OFF control
- Fan speed control
- Operation temperature setting
- Filter replacement alarm reset
- Simple ON/OFF timer
- Indoor unit option code setting

		AR-KH00U
Heating Operating Temperature range	Cooling (°F [°C])	65 ~ 86 [18 ~ 30]
	Heating (°F [°C])	61 ~ 86 [16 ~ 30]

Description of parts

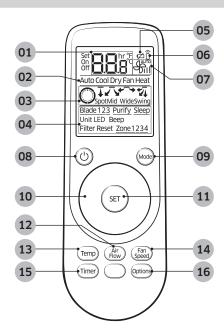


No	Name	Description
01	Set temperature/	Basic – Indicates the set temperature.
01	Timer indicator	Timer setting – Indicates the ON/OFF set time.
02	Operation mode indicator	Indicates the operation mode.


No	Name	Description
03	Air flow direction indicator	Indicates the air flow direction (Spot, mid, wide, swing)
04	Options indicator	Indicates the option function setting. (Filter reset, Beep, Zone, etc)
05	Low battery indicator	Indicates the battery life.
06	Signal transmission indicator	Indicates when wireless signal is received. (by pressing any buttons)
07	Fan speed indicator	Indicates the fan speed setting.
08	Power button	Press the button to turn On/Off the indoor unit.
09	Mode button	Press the button to select operation mode. (Auto, Cool, Dry, Fan, Heat)
10	Wheel	You can control the set temperature, fan speed, and air flow direction by rotating the Wheel.
11	SET button	Press the button to confirm the selection.
12	Temperature button	If you press the button then the set temperature will be increased by 0.5°C(0.5°F)
13	Air flow direction button	Press the button to select air flow direction.
14	Fan speed button	Press the button to select fan speed.
15	Timer button	Press the button to set timer option.
16	Options button	Press the button to select option function.

Additional function

■ Option code setting

- 1 Remove the batteries from the remote control.
- **2** While holding down the mand man buttons simultaneously, insert the batteries into the remote control.
- **3** Set the 2digits of option code
 - If you rotate the wheel counterclockwise, you can change the left digit.
 - If you rotate the wheel clockwise, you can change the right digit.
- 4 Press the button to set the next 2 digits of option code. Input 20 digits in total
- Press the button more than twice to set the indoor unit option code.
 (When indoor unit option code is set, a beep will sound. When the setting is incorrect, indoor unit will display error.)

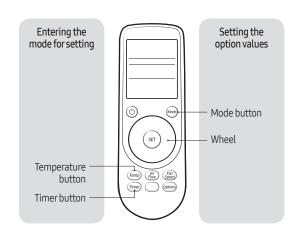


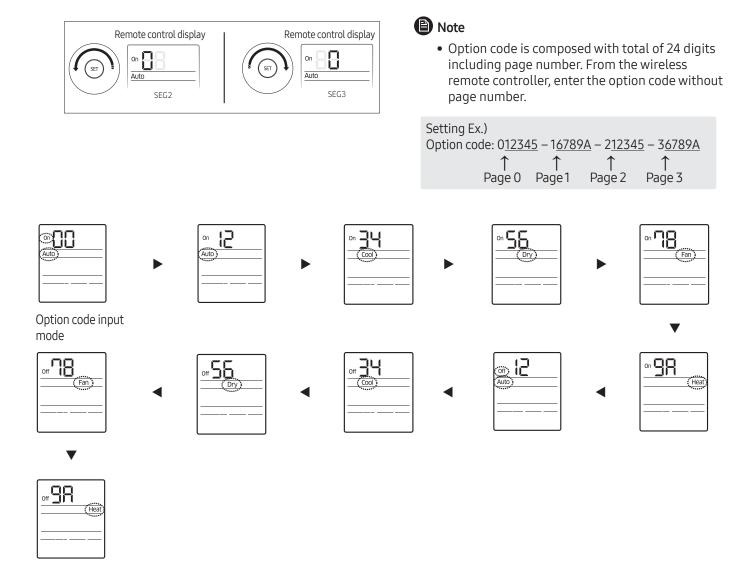

Wired Remote Controller

MWR-WE13N

Features

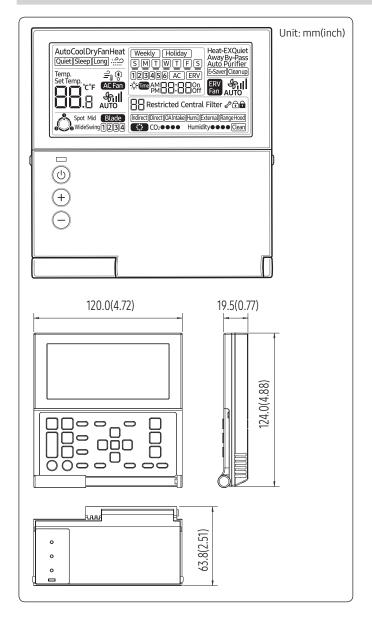

Air conditioner/ERV control

- AC operation ON/OFF control
- AC operation mode, setting temperature, fan speed, air flow direction setting
- AC individual blade control (Function is available when indoor units support any of above functions)
- ERV operation ON/OFF control
- ERV operation mode, fan speed setting
- AC/ERV error monitoring
- Filter cleaning alert and reset alert time
- Individual/group control, indoor unit/ERV interlocking control
- Energy saving control
- Control maximum 16 "Indoor unit + ERV" in group with single wired remote controller

Energy saving operation

- Upper/Lower temperature limit setting
- Automatic operation stop: Automatically stops the operation, when it is not used for certain period of time set by user

Weekly operation schedule setting

- Weekly operating schedule (A/C only, ERV only, A/C+ERV)
- Able to set desired AC operation mode, setting temperature and fan speed to operate based on weekly reservation
- Able to apply schedule exception day

User convenience function

- Child lock
- Different button permission levels (Operation mode, temperature setting, ON/OFF, fan speed)
- Real-time clock: Displays current time, day (Summer time support)
- Built-in room temperature sensor
- Service mode support
 - Indoor unit cycle data monitoring
 - Indoor unit option code setting and monitoring
 - Indoor unit address setting and monitoring

Product specification


Power Supply Power Consumption		Operating Temperature range	Operating Humidity range	Communication	
DC12V	2W	0°C~40°C (32°F~104°F)	30%RH~90%RH	2-wire PLC	

Compatible product

Indoorunit
AM****N****Model

Description of parts


Display

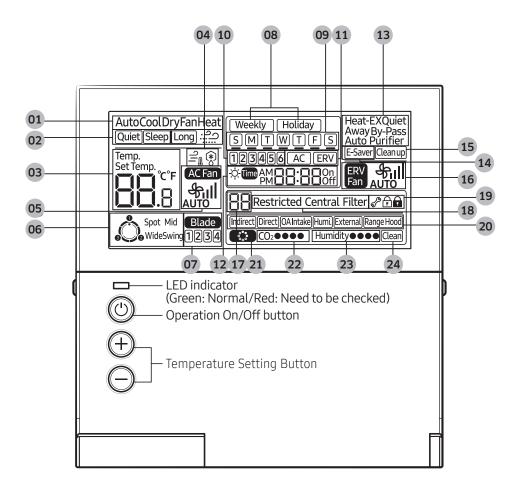

01 Individual control systems Wired Remote Controller > MWR-WE13N

Classification		Indication	Function			
	01	AutoCoolDryFanHeat	Displays air conditioner operation			
	02	Quiet Sleep Long :: 2	Displays Quiet/Sleep/Long/Wind-Free Cooling operation			
Air Conditioner	03	Temp. Set Temp. °C°F	Displays indoor temperature/ set temperature			
Related Information	04	<u> </u>	Displays discharge temperature control/defrosting operation			
	05	AC Fan Gill AUTO	Displays AC fan speed			
	06	Spot Mid WideSwing	Displays air flow directions			
	07	Blade 1234	Displays blade selection			
	08	Weekly Holiday	Weekly schedule/Holiday setting displays			
	09	SMTWTFS	Displays current day(□) or scheduled day(_)			
Schedule related information	10	123456	Displays scheduled number			
	11	AC ERV	Displays scheduled device selection			
	12	On PM OF BOTT	Displays current time/summer time/scheduled time			
	13	Heat-EXQuiet Away By-Pass Auto Purifier	Displays ventilator (ERV) operation			
Ventilator (ERV) related	14	E-Saver	Displays Energy Saving Operation			
information	15	Cleanup	Displays Clean up			
	16	ERV SIII	Displays ventilator (ERV) fan speed			
			Displays remaining time of the auto stop time/ERV delay time — Solid: Hour unit, Blinking: Minute unit			
	17	88	Displays Demand Response Mode during a Demand Response Event : 급 , 급급, 급급 (It is applicable to some models for Australia only.)			
	18	Restricted Central Filter	Displays invalid operation/central control/filter cleaning (filter cleaning period)			
Common function related	19	₽ •••	Displays check/partial locking/full locking			
information	20	[Indirect] [Direct] [OA Intake] [Humi] [External] [Range Hood]	Displays Indirect/Direct/Outdoor air supply intake/Humidifying/ External interconnection control/Range hood			
	21		Displays S-Plasma Ion operation/Air purity level			
	22	CO₂●●●●	Displays indoor CO₂ density			
	23	Humidity●●●	Displays indoor humidity			
	24	Clean	Displays Clean operation			

Buttons

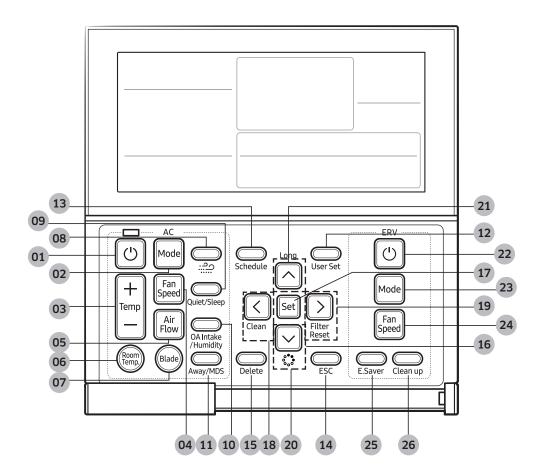

01 Individual control systems Wired Remote Controller > MWR-WE13N


Classification		Button		Function			
	01	(G)	Operation On/Off button	Turns the air conditioner power On/Off			
	02	Mode	Mode button	Selects the desired air conditioner operation			
	03	+ Temp	Temperature setting button	Sets the desired temperature			
Λ:	04	Fan Speed	Fan speed button	Changes the air conditioner's fan speed			
Air conditioner	05	Air Flow	Air Flow button	Changes the air flow direction			
related information	06	Room Temp	Room temperature button	Checks the indoor temperature			
	07	Blade	Blade button	Selects a blade for individual control			
	08		Wind-Free button	Selects Wind-Free Cooling operation			
	09	Quiet/Sleep	Quiet/Sleep button	Selects Quiet or Sleep operation for the air conditioner			
	10	OA Intake /Humidity	Outdoor air intake/ Humidity button	Selects the MINI AHU indoor unit Outdoor intake function/ turns MINI AHU indoor unit humidifying function On/Off			
	11	Away/MDS	Away / Motion detect sensor button	Selects when you want the Indirect/Direct function to operate by detecting people in the room, or the air conditioner to turn on or off automatically.			
	12	User Set	User Set button	Selects the detailed setting function			
	13	Schedule	Schedule Button	Selects the schedule setting function			
	14	ESC	ESC button	Returns to general mode from schedule and detailed setting screens			
C	15	Delete	Delete button	Cancels the schedule setting			
Common function related information	16		Directional buttons	Moves between items or change the item value			
	17	Set	Set button	Saves your new settings			
	18	Clean	Clean button	Selects Clean operation			
	19	Filter Reset	Filter Reset button	Turns off the filter cleaning displays (filter using time reset)			
Common function	20	, ••••	S-Plasma Ion button	Selects S-Plasma Ion function			
related information	21	Long	Long button	Selects Long reach function			

Classificatio	Classification			Function		
	22	U	Operation On/Off button	Turns the Ventilator(ERV) On/Off		
Ventilator	23	Mode	Mode button	Selects the desired operation for the Ventilator (ERV)		
(ERV) related buttons	24	Fan Speed	Fan Speed button	Changes the fan speed for your Ventilator (ERV)		
	25	E.Saver button		Starts Energy-Saving Operation		
	26	Clean up	Clean up button	Selects air purification through the in/out load controls		



- Some functions may not be available, depending on the indoor unit specifications.
- After cleaning the filter, please press the D button. The Filter indicator will turn off, and it will be turned on again upon the next cleaning period.
- If you press a functional button not supported by the indoor unit, then the Restricted indicator will turn on.
- If the temperature display setting is set to indoor temperature and you press the button, the Restricted indicator appears. (When you install the wired remote controller, the setting is available.)
- If you press the (b) when your Ventilator (ERV) is connected to a wired remote controller, then the air conditioner and the Ventilator(ERV) might operate or stop at the same time or only the air conditioner might operate or stop. The factory setting is set to simultaneous operation/stop. (When you install the wired remote controller, the setting is available.)
- Although the air conditioner and the Ventilator (ERV) are set to simultaneous operation/stop, you can individually control the air conditioner and the Ventilator (ERV) by using another controller (e.g. wireless remote controller, central controller) except for a wired remote controller.

Description of parts (PCB)

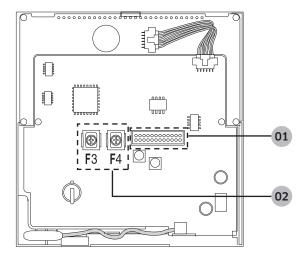

No.	Name	Description
01	Software upgrade connector	It is used to upgrade the software
02	Communication and power wiring terminal	Connection with indoor unit (F3/F4)



• MWR-WE13N uses 2-wire power line communication.


Option function

■ User setting mode

Main menu	Sub menu	Function		SEG Used	Default	Range	Unit
1		Autos	top time setting/ checking	1,2	0	0~12 hours	1 hour
2		Temp limits	Lower Limit	1,2	8 (47)	8~30°C (47~86°F)1)*	1°C (1°F)
		[°C (°F)]	UpperLimit	3, 4	30 (86)	8~30°C (47~86°F)1)*	1°C (1°F)
			All locking	1	0	0-Unlock,1-Lock	-
		Lock of partial button	Lock of Operation On/Off button	2	0	0-Unlock,1-Lock	-
_			Lock of Mode button	3	0	0-Unlock, 1-Lock	-
3			Lock of temperature setting button	4	0	0-Unlock,1-Lock	-
			Lock of fan speed button	5	0	0-Unlock,1-Lock	-
			Lock of schedule setting button	6	0	0-Unlock,1-Lock	-
4	1		Current Time Setting (Year, Month, Date)	1, 2/3, 4/5, 6	13/01/01	00~99/1~12/1~31	YY, MM, DD
4	2		Current Time Setting	Day/ AM, PM/	Tuesday/	Sun~Sat/ AM~PM/	Day, hour,
	2		(Day, Hour, Minute)	1, 2/3, 4	PM/12/00	0~12/0~59	minute

Main menu	Sub menu	Function			Default	Range	Unit
	1	Summer Time Use and	Use of summer time (Y/N)	1	0	0-No use, 1-Use	-
	1	Setting Methods	Summer Time Application Method	2	0	0- Weekly, 1- Daily	-
	2		use (Weekly) Start , ? th Sunday)	1, 2/ 4	03/F	1~12th month/ 1~4, F (last week)th week	-
5	3	Summertime	use (Weekly) End , ? th Sunday)	1, 2/	10/F	1~12th month/ 1~4, F (last week)th week	-
	4	Summer time use (Daily) Start (? Month, ? Date)			03/22	Jan~Dec/1~31st day	Month, date
	5	Summertime use (Daily) End (? Month, ? Date)			09/22	Jan~Dec/1~31st day	Month, date
		Backlight Time Setting/ Checking			5	0~30 sec	1 sec
		Use of LED (Green) (Y/N)			1	0-No use, 1-Use	-
6		Use of LED (Red) (Y/N)			1	0-No use, 1-Use	-
		Turning on or off the Air purity level lighting function of the indoor unit			1	0-Off,1-On	-
7		Ventilator (ERV) delay time setting/checking	Ventilator (ERV) Delay Application (Y/N)	1	0	0-No use, 1-Use	-
,		[When using Ventilator (ERV) interlocking control]	Delay Time	3, 4	30	30~60 minutes	1 minute
8		Easy Tuning			0	-2~+2	1
0	1		er mode defaults e current time)	1	0	0-No use, 1-Reset	-


• How to set the user mode

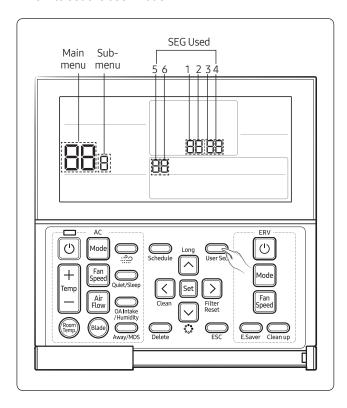

- 1 If you want to set the detailed settings, press the [User Set] button.
 - You will enter the User Set mode, and the [Main Menu] will be displayed.
- 2 Refer to the Wired Remote Controller's user setting mode table on the previous page to select the desired menu.
 - a Using the $[\Lambda]/[V]$ buttons, select a main menu number and press the [>] button to enter the submenu setting screen.
 - **b** Using the $[\land]/[\lor]$ buttons, select a sub-menu number and press the [>] button to enter the data setting screen.
 - **c** Once you have entered the setting screen, the current setting will be displayed.
 - **d** Refer to the chart for data setting.
 - **e** Using the $[\land]/[\lor]$ buttons, change the settings and press the [>] button to move to the next setting.
 - **f** Press the Set button to save the setting and exit to the sub-menu setting screen.
 - **q** Press the Esc button to exit to general mode.

Note

 
- While setting the data, you can use the $[\Lambda]/[V]$ buttons to set the range of SEG used.
- While configuring the setting, press the [Esc] button to exit to the sub-menu setting screen without saving the setting.
- Current time setting (Example)



1 Press the [User Set] button. (Main Menu) will be displayed, and you can press the [\land]/[\lor] buttons to select No.4, which will set the current time.



 
2 Press the [>] button to select 'Year, Month, Date' in the [Sub-menu]. Press the $[\Lambda]/[V]$ buttons to select No. 1. You can modify the year/month/ date setting.




3 Press the [>] button to select the 'Year'. Press the $[\Lambda]/[V]$ buttons to select the year ('00~'99).



 4 Press the [>] button to select the 'Month'. Press the $[\Lambda]/[V]$ buttons to select month (01~12).



 5 Press the [>] button to select the 'Day'. Press the $[\Lambda]/[V]$ buttons to select day(01~31).



6 Press the [Set] button to complete your setting of 'Year, Month, Day'. The setting changes will be applied and you can exit to the sub-menu.



7 In the sub-menu, select 'day, AM/PM, hour, minute'. Press the $[\Lambda]/[V]$ buttons to select no.2. You can set the 'day, AM/PM, hour, minute'.



 
8 Press the [>] button to select the 'Day'. Press the $[\Lambda]/[V]$ buttons to select day (Sun~Sat).



9 Press the [>] button to select 'AM or PM'. Press the $[\Lambda]/[V]$ buttons to toggle between AM and PM.



10 Press the [>] button to select the 'Hour'. Press the $[\Lambda]/[V]$ buttons to select the hour (01~12).



11 Press the [>] button to select the 'Minute'. Press the $[\Lambda]/[V]$ buttons to select minute (00~59).

12 Press the [Set] button to complete the current time setting. The setting changes are applied and you can exit to general mode.

13 Press the [Esc] button to exit to general mode.

01 Individual control systems Wired Remote Controller > MWR-WE13N

Service mode

Main menu	Sub menu		Function	Data bit	Factory setting	Description	Unit
			Cooling/Heating selection	1	0	0 – Cooling/Heating, 1 – Cooling only	-
	1	Wired remote	Use of wireless remote controller	2	1	0 – No use,1 - Use	-
	1	controller Option setting/checking (1)	MAIN/SUB wired remote controller	3	0	0 –MAIN, 1- SUB	-
			Temperature unit	4	0	0 – Celcius(°C), 1 – Fahrenheit(°F)	-
			Temperature sensor selection	1	0	0 – Indoor unit, 1 – Wired remote controller	-
			Use of average temperature	2	0	0 – No use, 1 - Use	-
		Wired remote	Use of Auto mode	3	1	0 – No use, 1 - Use	-
	2	controller Option setting/checking (2)	Temperature display	4	0	0 – Set temperature, 1 - Room temperature	-
			AC On/Off button function	5	1	0 – Indoor unit + ERV, 1 – Indoor unit only, 2 – ERV only	-
	3	Blade setting/checking	Lock of Blade1	1	0	0 – Unlock,1 – lock	-
1			Lock of Blade2	2	0	0 – Unlock,1 – lock	-
1			Lock of Blade3	3	0	0 – Unlock,1 – lock	-
			Lock of Blade4	4	0	0 – Unlock,1 – lock	-
	4	ERV option Setting/checking	Use of By-Pass mode	1	0	0 – No use, 1 - Use	-
			Use of Auto mode	2	0	0 – No use, 1 - Use	-
	4		Use of air purification mode	3	0	0 – No use, 1 - Use	-
			Use of external control	4	0	0 – No use, 1 - Use	-
	5	Room Temperature	Temperature control reference	1,2,3	0	-9 ~ 40 °C(15~104 °F)	0.1 °C
		compensation	Temperature compensation value	4,5,6	0	-9.9 ~ 9.9 °C	0.1 °C
	6	Number of connected	Number of indoor units	1,2	-	0~16	-
		units Number of ERVs		3,4	-	0~16	-
	7	Desired temperature i	ncrement/decrement (°C only)	1	0	0-1 °C,1-0.5 °C, 2-0.1 °C	-
	8	Set/Check ERV Energy saving	Select individual Energy saving operation	1	0	0-ON/OFF alternating operation, 1-Outdoor air cooling operation for different temperature setting	-
		operation	Minimum temperature of outdoor air cooling	3,4	15	5 ~ 15 °C (41~59 °F)	°C
	0	Factory option setting			0	0 – Unchanged 1 – Factory setting	-
2	1	Sot	ftware code	1~6	-	Software code	-
	2	Soft	ware version	1~6	-	Software version	-

01 Individual control systems Wired Remote Controller > MWR-WE13N


Main menu	Sub menu		Function	Data bit	Factory setting	Description	Unit
	1	Indoor unit	t room temperature	1,2,3	-	Room temperature	°C
	2	Indoor unit	EVA IN temperature	1,2,3	-	EVA IN temperature	°C
	3	Indoor unit E	EVA OUT temperature	1,2,3	-	EVA OUT temperature	°C
	4	Indoo	r unit EEV step	1,2,3	-	EEV step	-
			Use of central control	1	-	0 – No use, 1 - Use	-
	5	Indoor unit option	Use of drain pump	2	-	0 – No use, 1 - Use	-
3		checking (1)	Use of electric heater	3	-	0 – No use, 1 - Use	-
			Use of hot water coil	4	-	0 – No use, 1 - Use	-
			Use of external control	1	-	0 – No use, 1 - Use	-
			Use of RPM compensation	2	-	0 – No use, 1 - Use	-
	6	Indoor unit option	Filter time	3	-	0 – 2000 hours, 1 – 1000 hours	-
		checking (2)	Heating temperature compensation	4	-	0-2 °C,1-5 °C	-
			EEV stop step in heating	5	-	0 – 1/80 steps, 1 – 80	-
	1			12	-	MAIN address (00H~4FH)	-
			Setting/Checking the address	34	-	MAIN address (00H~4FH)	-
				56	-	Group address (00H~FEH)	-
	2	Indoor unit/	Setting/Checking the product option	1)*	-		-
4	3	Ventilator (ERV) option setting ^{2)*}	Setting/Checking the installation option 1	1)*	-	Refer to the installation manual of the connected indoor unit/ventilator (ERV)	-
	4		Setting/Checking the installation option 2	1)*	_		-
	7		MCU/Port address setting	1,2,4	-	MCU address (00 to 15) Port address (A to F)	-
	1	Mini AHU setting/	RPM setting/checking	3,4	-	0~31 steps	1 step
	'	checking	Humidity setting/checking	6	-	0 – 30,1 - 40,2 - 50	-
		Setting/Checking the discharge	Use of discharge temperature control	1	_	0 – No use, 1 - Use	-
5	2	temperature of the	Cooling discharge temperature	3,4	-	8~25 °C (46~77 °F)	1°C
		indoor unit	Heating discharge temperature	5,6	-	18~43 °C (64~109 °F)	1°C
		Fresh Duct discharge	Cooling discharge temperature	1,2	-	13~25 °C (55.4~77 °F)	1°C
	3	temperature checking	Heating discharge temperature	3,4	-	18~30 °C (64~86 °F)	1°C

Main menu	Sub menu	Function			Factory setting	Description	Unit
			Use of cold air prevention	1	1	0 – No use, 1 - Use	-
	1	ERV Plus setting/	Use of humidification when Heating thermo off	2	-	0 – No use, 1 - Use	-
	'	checking	Use of fan operation in Defrost	3	-	0 – No use, 1 - Use	-
			Use of humidification when Heating	4	-	0 – No use, 1 - Use	-
		ERV Plus	Cooling	1,2	-	15~30 °C (59~86 °F)	1°C
	2	temperature setting/checking	Heating	3,4	-	15~30 °C (59~86 °F)	1°C
6	_	ERV Plus Auto mode	Set temperature	1,2	-	15~30 °C (59~86 °F)	1°C
	3	temperature setting/ checking	Set temperature difference	3,4	-	5~15 °C (41~59 °F)	1°C
			compensating temperature A g EEV control for ERV Plus	1,2	-	0~10 °C	1°C
	4	Checking the compe the Heating E	3	-	0 – Non use of humidifier (0°C/32°F) 1 – Use humidifier(10°C/50°F)	-	
	5	ERV Plus fan RPM setting/checking	Air supply RPM	1,2	-	10~27 steps	1 step
			Air exhaustion RPM	3,4	-	10~27 steps	1 step
	1	View master setting/ checking	Indoor unit View master setting/checking	123456	-	address	-
7	2	(F3F4 line Indoor unit master)	ERV unit View master setting/ checking	123456	ı	address	-
,	3	Mode master indoor unit setting/checking	Mode master indoor unit checking	123456	-	address	-
	4	(F1F2 line Indoor unit master) ^{3)*}	Mode master indoor unit setting	1	-	0-No use, 1-Use, 2-Release	-
	1	Status of Autor	natic Air-Volume setting	1	0	0 – OFF (Disabled or Cancelled) 1 – Completion 2 – Running Automatic Air-Volume	-
8	2	Automatic A	Air-Volume Operation	1	0	0 – Disable, 1 – Enable	-
	3	Automatic Air-Volume Voltage Setting			2	1~3 steps (2 - Default) For the specific voltage of model, please refer to the installation manual of each product.	-
	1		Factory setting	1	0	0-No use, 1-Reset	-
0	2	Reset	Power Master Reset ^{4)*}	1	0	0-No use, 1-Reset	-
	3		Addressing Reset	1	0	0-No use, 1-Reset	-

Note

- 'NONE' will be displayed if the indoor unit does not support the function. In some cases, the setting may not possible or it may be not applied though it is set on the unit.
- If communication initialization is needed after the setting, the system will reset automatically and communication will be initialized.

1)* The total option codes are 24 digits. You can set six digits at a time and it is distinguished by page number. Press [>] button to go to the next page.

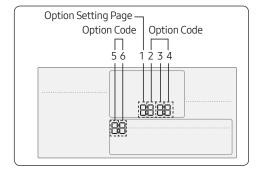

• To set 24 digit option

SEG1	SEG2	SEG3	SEG4	SEG5	SEG6			
0	*	*	*	*	*			
Page numb	Page number							
SEG7	SEG8	SEG9	SEG10	SEG11	SEG12			
1	*	*	*	*	*			
Page number								
SEG13	SEG14	SEG15	SEG16	SEG17	SEG18			
2	*	*	*	*	*			
Page number								
SEG19	SEG20	SEG21	SEG22	SEG23	SEG24			
3	*	*	*	*	*			

Page number


- * Regardless of Celsius and Fahrenheit setting, service mode setting is available only with Celsius.
- 2)* If you enter Main menu #4, you must select the targeted indoor unit/ventilator (ERV) address and then select the sub menu.
- 3)* Setting is available when there is only 1 indoor unit connection and while the indoor unit operation is not operating.
- 4)* Power Master Reset is a setting needed to supply optimized power to wired remote controller when multiple indoor units are connected to wired remote controller in a group.

Note

• Address is displayed in hexadecimal. Please refer to the following table.

Hexadecimal	Decimal								
00	0	10	16	20	32	30	48	40	64
01	1	11	17	21	33	31	49	41	65
02	2	12	18	22	34	32	50	42	66
03	3	13	19	23	35	33	51	43	67
04	4	14	20	24	36	34	52	44	68
05	5	15	21	25	37	35	53	45	69
06	6	16	22	26	38	36	54	46	70
07	7	17	23	27	39	37	55	47	71
08	8	18	24	28	40	38	56	48	72
09	9	19	25	29	41	39	57	49	73
0A	10	1A	26	2A	42	3A	58	4A	74
0B	11	1B	27	2B	43	3B	59	4B	75
0C	12	1C	28	2C	44	3C	60	4C	76
0D	13	1D	29	2D	45	3D	61	4D	77
0E	14	1E	30	2E	46	3E	62	4E	78
0F	15	1F	31	2F	47	3F	63	4F	79

How to set the service mode

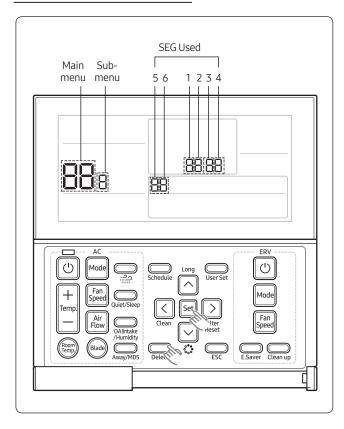


- 1 If you want to use the various additional functions for your Wired Remote Controller, press the [Set] and [Esc] buttons at the same time for more than three seconds. You will enter the additional function settings, and the [main menu] will be displayed.
- **2** Refer to the list of additional functions for your Wired Remote Controller on the next page, and select the desired menu.
 - a Using the [∧]/[∨] buttons, select a main menu number and press the [>] button to enter the submenu setting screen.
 - **b** Using the [∧]/[∨] buttons, select a sub-menu number and press the [>] button to enter the data setting screen.
 - **c** When you enter the setting stage, the current setting will be displayed.
 - **d** Refer to the chart for data setting.
 - e Using the [∧]/[∨] buttons, select the settings. Press the [>] button to move to the next setting.
 - **f** Press the [Set] button to save the settings and exit to the sub-menu setting screen.
 - **g** Press the [Esc] button to exit to normal mode.


Note

- While setting the data, you can use the [∧]/[∨] buttons to set the range of SEG.
- While configuring the setting, press the [Esc] button to exit to the setting sub-menu without saving your changes.

 
Example method of setting wired remote controller option



 
1 Press the [Set] and [ESC] buttons at the same time for more than 3 seconds. When (Main menu) is displayed press the $[\Lambda]/[V]$ button to select no.1.



 2 Press the [>] button to select the number you will set. Press the $[\Lambda]/[V]$ button and select no.1



 
3 Press the [>] button to enter the data setting stage. When you enter the setting stage, the current setting value will be displayed.



SEG1: Heat pump indoor unit SEG2: Use wireless remote controller

SEG3: Master wired remote controller SEG4: Temperature display – Celsius (°C)

 
<Example of data setting stage display>



- 4 Press the [<]/[>] button to select the desired Data1.
 - Press the [∧]/[∨] button to select no.1.
 - The wired remote controller option is set from both cooling and heating to cooling only.
- **5** Press [Set] button to complete the option setting. Save the setting value and exit to sub menu.
- **6** Press [Esc] button to exit to normal mode.

■ Built-in temperature sensor of wired remote controller

Temperature control with built-in temperature sensor

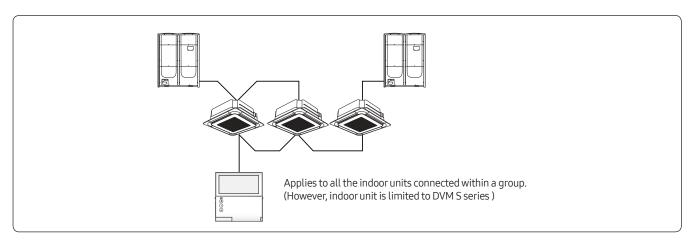


Note

• Check the setting of the wired remote controller built-in sensor from the service menu.

Main menu	Sub menu	Function			Factory setting	Description	Unit
	1	Wireless remote controller Option setting/ checking (1)	Cooling/Heating selection	1	0	0-Cooling/Heating, 1-Cooling only	-
			Use of wireless remote controller	2	1	0-No use, 1-Use	-
			MAIN/SUB wired remote controller	3	0	0-MAIN, 1-SUB	-
			Temperature unit	4	0	0-Celsius(°C), 1-Fahrenheit(°F)	-
1	2	Wireless remote controller Option setting/ checking (2)	Temperature sensor selection	1	0	0-Indoor unit, 1-Wired remote controller	-
			Use of average temperature	2	0	0-No use, 1-Use	-
			Use of Auto mode	3	1	0-No use, 1-Use	-
			Temperature display	4	0	0-Set temperature, 1-Room temperature	-
			AC On/Off button function	5	0	0-Indoor unit+ERV, 1-Indoor unit only, 2-ERV only	-

Heating mode temperature compensation

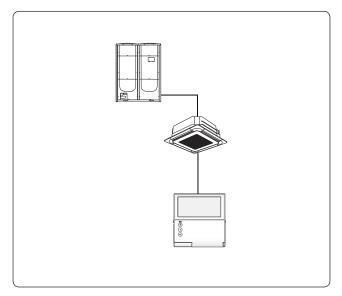

Indoor unit INSTALL option setting (Refer to indoor unit intallation manual)

SEG	Function	Value
21	Heating setting temperature compensation	1 – 2°C(°F) 2 - 5°C(°F)




• When built-in sensor of the wired remote controller is used, heating mode temperature compensation (+2°C or +5°C) will be reset to 0°C.

Note

• If there is no option switch on the indoor unit PCB, check the setting of the heating temperature compensation from the service menu.

Main menu	Sub menu	Function		Used SEG	Factory setting	Description	Unit
3	6	Indoor unit option checking(2)	Use of external control	1	-	0-No use, 1-Use	-
			Use RPM compensation	2	-	0-No use, 1-Use	-
			Filter time	3	-	0-2000 hours, 1-1000 hours	-
			Heating temperature compensation	4	-	0-2°C(°F),1-5°C(°F)	-
			EEV stop step in heating	5	-	0-0/80 step,1-80 step	-

When communication error or power failure occurs while using built-in temperature sensor

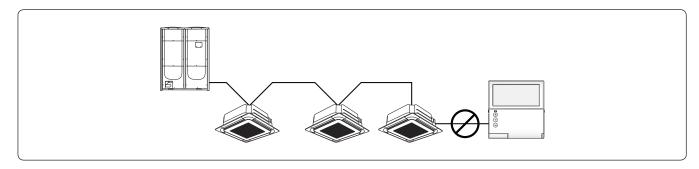


When communication error occurs over 3 minutes,

- Indoor unit ignores the built-in temperature sensor and use indoor unit temperature sensor.
- Indoor unit applies the heating setting temperature compensation.(+2°C,+5°C)

When communication resumes,

- Built-in temperature use is recovered.
- Setting must be done again to use the temperature compensation.

■ Energy saving operation mode

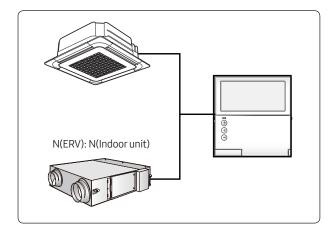


Note

• Energy saving operation mode is available only when there is at least one indoor unit and ERV is connected.


- By comparing indoor room temperature, setting temperature and outdoor temperature, wired remote controller changes ERV operation mode and fan speed to minimize unnecessary outdoor unit operation.
- Energy saving operation is not available when ERV is not connected.
- Energy saving operation is not available when 'Centralized control' is set.
- Energy saving operation will not be executed when ERV is set to Outing mode or set in external interlocking mode.
- Temperature measurement is set as indoor unit temperature sensor as default, and it can be changed depending on the wired remote controller option setting.
- Basically room temperature value means indoor unit's sensor. But it can be changed depending on option setting. (External room sensor or Built-in sensor of wired remote controller)

Display

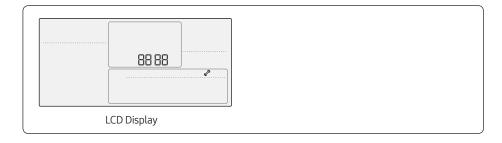

Error display


Error codes for the Wired Remote Controller and the product connected to your Wired Remote Controller will be displayed in the LCD display.

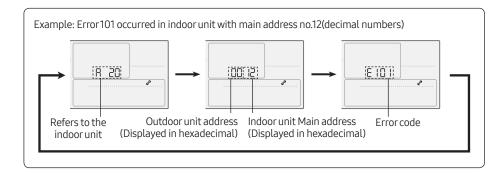

• When an Error Occurs in Your Indoor/Outdoor Units (Product Group Display: A)

The product address for the error will be displayed, followed by the error code.

Example: Error101 occurs for Indoor Unit No. 200012.

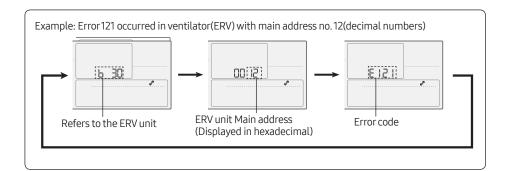

• When an Error Occurs in Your Ventilator(ERV) (Product Group Display: B)

The product address for the error will be displayed, followed by the error code.

Example: Error121 has occurred at ventilator(ERV) No. 300012.

Example: Error 601 has occurred at your Wired Remote Controller.



• When an Error Occurs in Your Wired Remote Controller

Only an error code will be displayed. (No address will be displayed.) Example: Error 601 has occurred at your Wired Remote Controller.

■ Wired remote controller error codes

Display	Description
50 :	Communication error between wired remote controller and indoor/ERV units after successful communication.
582	No communication between Master(Main) and Slave(Sub) wired remote controllers.
804	When tracking between wired remote controller and indoor unit/ventilator (ERV) is not complete for more than 3 minutes
	(Including communication error between indoor units and outdoor units)
5 18	Over16 indoor/ERV indoor units installed.
627	Two or more wired remote controllers set as Slave(SUB).
853	Temperature sensor Open/Short error.
654	EEPROM error


! Caution

• For the error codes for your indoor/outdoor units and ventilator(ERV), refer to the installation manual of each device.



Setting/Cancelling the Mode master indoor unit


- Mode master indoor unit setting is simply selecting an indoor unit that will become standard among many indoor units to prevent mixed operation (which one or more indoor units operating in different operation mode).
 - Setting: Connect just 1 indoor unit and stop the operation. Then press and hold the Mode button for 5 seconds to set the indoor unit as 'Mode master indoor unit'
 - Cancelling: Connect just 1 indoor unit and stop the operation. Then press and hold the Fan speed button for 5 seconds to cancel the 'Mode master indoor unit' setting.

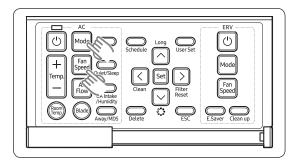

Communication diagram

Individual control (1)

Control 1 indoor unit with 1 wired remote controller

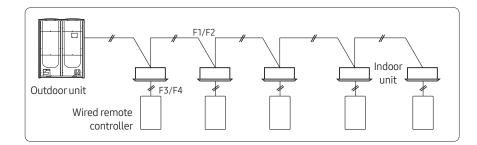

Control


• All connected indoor units

Display

• Operation status of the connected indoor unit

■ Group control (1)

Control multiple indoor units with 1 wired remote controller

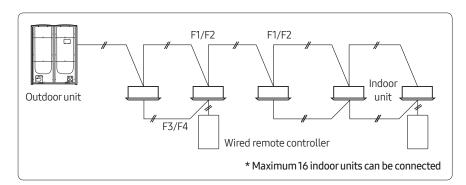

Control


• All connected indoor units

Display

- Priority 1. Display the status of View Master indoor unit
- Priority 2. Display the status of indoor unit which has the earliest Main address

Group control (2)

Control multiple indoor units connected to different outdoor units with 1 wired remote controller

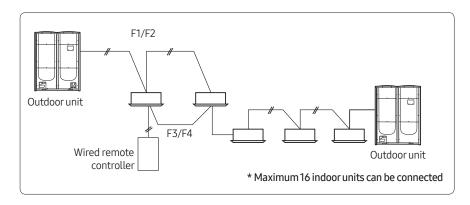

Control

All connected indoor units

Display

- Priority 1. Display the status of View Master indoor unit
- Priority 2. Display the status of indoor unit which has the earliest Main address

⚠ Caution


When controlling group of indoor units connected to different outdoor unit, address of the each outdoor unit
 must be set differently.

Technical Data Book 40

Wired Remote Controller

Group control (3)

Control 1 or multiple indoor units with 2 wired remote controllers

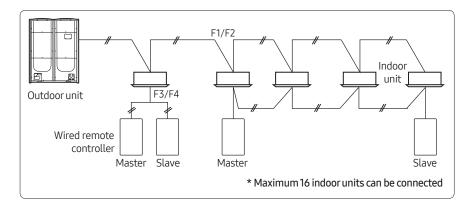

Control


All connected indoor units

Display

- Priority 1. Display the status of View Master indoor unit
- Priority 2. Display the status of indoor unit which has the earliest Main address
 - Two wired remote controllers identically display the operation status of the indoor unit according to above priority.


Group control (4)

Control multiple indoor units connected to different outdoor units with 2 wired remote controller

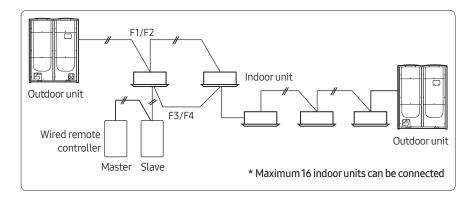

⚠ Caution

• When controlling group of indoor units connected to different outdoor unit, address of the each outdoor unit must be set differently.

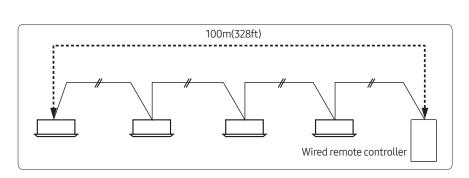


Control

• All connected indoor units

Display

- Priority 1. Display the status of View Master indoor unit
- Priority 2. Display the status of indoor unit which has the earliest Main address
 - Two wired remote controllers identically display the operation status of the indoor unit according to above priority.
- Max. distance between the farthest indoor unit and wired remote controller: 100m(328ft)

MWR-SHOON

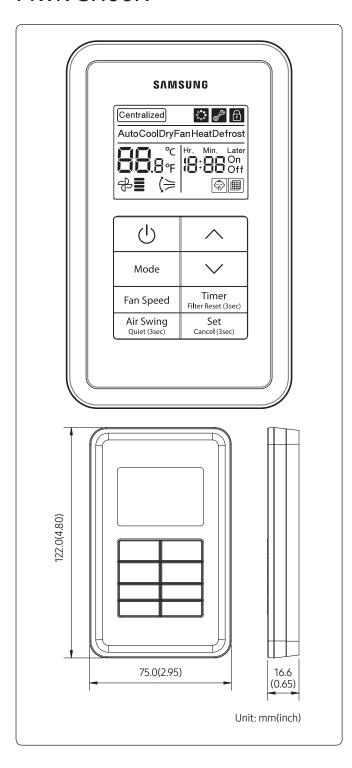

Features

- Simplified wired remote controller
- AC operation ON/OFF control
- Fan speed control
- Setting operation mode and temperature
- Reset filter cleaning alert indicator
- Adjust air flow direction
- Operation on/off timer function


Product specification

Powersupply	DC12V
Power consumption	1.5 W
Operating temperature range	0°C~40°C (32°F~104°F)
Operating humidity range	30 % RH~90 % RH
Communication	2-wire PLC
Maximum length of connection	100 m (328ft)
Maximum number of controllable devices	16 indoor units

Compatible product

Indoor unit	AM****N****Model
muoor umt	AC****N***Model


Description of parts

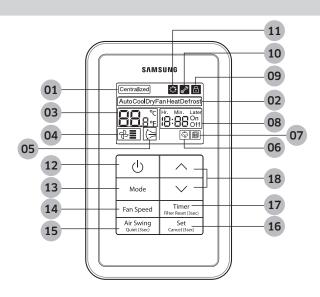

No.	Name	Description		
	Cantualizad cantual	Indicator will be on when remote controller usage restriction is set.		
01	Centralized control indicator	(Devices that support centralized control: OnOff controller, DMS2.5, Touch centralized controller etc.)		
02	Operation mode Indicates current operation mode when the indoor unit is operating indicator (Cool/Auto/Dry/Fan/Heat)			
03	Set temperature indicator	Indicates the set temperature when the indoor unit turns on.		
04	Fan speed indicator Indicates the fan speed settings.			
05	Air swing indicator	Indicates when vertical air swing is on.		
06	Quiet mode indicator Indicates when quiet mode is on.			
07	Filter cleaning indicator Indicates when preset filter cleaning period is passed.			
		On: Indicates when On timer is set		
		Off: Indicates when Off timer is set		
08	Timer indicator	Hr. Min. Later:		
		 Timer mode: Displays the set time for On/Off timer (Min. 30 minutes ~ Max. 18 hours) General mode: Displays remaining time before Timer function will execute 		
		This icon will be displayed when button is locked or when unavailable function (function which indoor unit does not support) is selected		
09	Lock/Restricted	• Icon On: All buttons are locked		
03	indicator	 Icon blinks for 3 seconds: When partially locked button is pressed or unavailable function (function which indoor unit does not support) is selected 		
10	Inspection indicator	Indicates that inspection is required.		

No.	Name	Description					
11	SPi indicator	Indicates that SPi or other cleaning function of the indoor unit is on.					
12	On/Off button Press this button to turn on/off the indoor unit.						
13	Mode button Press this button to select the desired operation mode. (Auto \rightarrow Cool \rightarrow Dry \rightarrow Fan \rightarrow Heat)						
14	Fan speed button	Press this button to select one of the fan speeds from Auto, Low, Medium, High, Turbo. Available Fan Speed may differ depending on the operation mode of the indoor unit. • Low 용 → Medium 용 → High 용 → Turbo 용 → Auto 용 → 용 → 용 → 용 → 용 → 용 → 용 → 용 → 용 → 용					
15	Press this button to turn on/off the vertical air swing when the indoor unit supplied air swing movement.						
16	Set/Cancel button	This button can be used only for Timer, User mode, Service mode.Short press: Set (Save)Press and hold for 3 seconds: Cancel					
17	Timer button/ Filter reset button	 Short press: You can set the On/Off timer. Press and hold for 3 seconds: Resets the filter cleaning alert indicator. 					
18	Temperature adjustment/ Time adjustment button	 General mode: Press this button to increase/decrease the set temperature by preset unit. Short press: adjust the temperature by 1°C(°F) or 0.5°C(°F) or 0.1°C(°F) depending on the setting. Press and hold: adjust the temperature by 1°C(°F) every 0.5 second Timer mode: Press this button to increase/decrease the set time. Up to 3 hours: Increase/decrease by 30 minute unit Over 3 hours: Increase/decrease by 1 hour unit 					

PCB

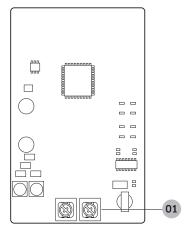


No.	Name	Description
01	Power/communication connection terminal	Connect to indoor unit (F3/F4)

Option function

User setting mode


How to set

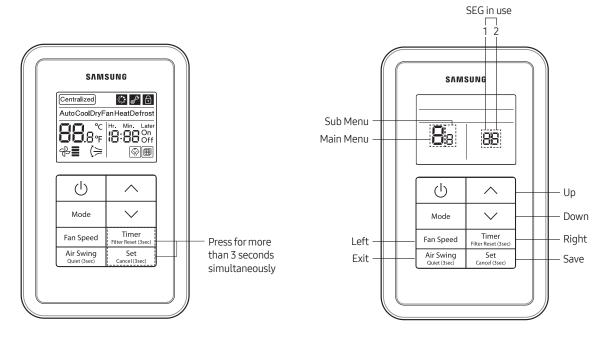


Main menu	Sub menu		Function	Default	Page in use	Range	Save
0	1	Reset U	Jser mode to default value	0	1	0 - Disabled,1 - Reset	none
	1		Lock all	0	1	0 - Unlock, 1 - Lock	0
	2		Lock On/Off button	0	1	0 - Unlock, 1 - Lock	0
	3	Partially lock buttons	Lock Mode button	0	1	0 - Unlock, 1 - Lock	0
1	4		Lock Temperature adjustment button	0	1	0 - Unlock, 1 - Lock	0
	5		Lock Fan speed button	0	1	0 - Unlock, 1 - Lock	0
	6		Lock Timer button	0	1	0 - Unlock, 1 - Lock	0
2	1	Temperature	Lower temperature	16	1	16~30	0
2	2	restriction	Upper temperature	30	1	16~30	0

Service mode

How to set

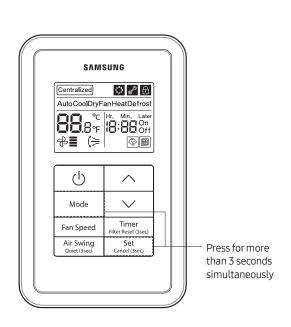

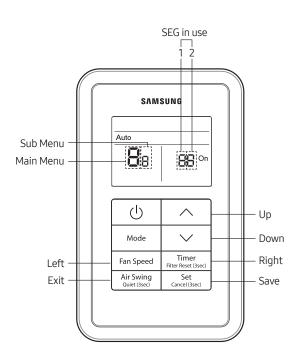

• Page display

On	Page1	Page2	Page3	Page4	Page5	Off	Page6	Page7	Page8	Page9	Page10
OII	Auto	Cool	Dry	Fan	Heat	OII	Auto	Cool	Dry	Fan	Heat


Main menu	Sub menu		Function	Default	Page in use	Range
	1		Reset the option setting of the wired remote controller to dafault value	0	1	0 - Disabled,1 - Reset
0	2	Reset	Reset wired remote controller to factory default	0	1	0 - Disabled,1 - Reset
	3		Power Master Reset	0	1	0 - Disabled,1 - Reset
	4		Addressing Reset	0	1	0 - Disabled,1 - Reset
	1		Check the number of connected indoor units	0	1	0~16
	2	Wired remote	Check the number of connected ERV	0	1	0~16
1	3	controller	Check the MICOM code of wired remote controller	none	1~3	MICOM code
	4		Check the software version of the wired remote controller	none	1~3	Updated date

Main menu	Sub menu		Function	Default	Page in use	Range
	1		Target indoor unit address setting	View Master indoor unit	1~3	Select address from one of the connected indoor unit Display example) Page 1: 20 (Refers to indoor unit) Page 2: 00 (Outdoor unit address) Page 3: 04 (Main address)
2	2	Address/ option setting	Check/Set main address	Main address of Target indoor unit	1	Main address (00H~4FH, Hexadecimal digits)
	3		Check/Set RMC address	Main address of Target indoor unit	1	RMC(1): 0~F/ RMC(2): 0~F (Hexadecimal number) ^{1)*}
	4		Check/set the product option	Product option of target indoor unit	1~10	Option code
	5		Check/Set installation option (1)	Installation option of target indoor unit	1~10	Option code
	6		Check/Set installation option (2)	Installation option of target indoor unit (2)	1~10	Option code
3	1	Check/Set view master	Check/Set indoor unit view master	View Master indoor unit	1~3	Select address from one of the connected indoor unit (hexadecimal number)
	2		No function	-	1~3	-
4	1	Check/Set Mode master	Check the address of the mode Master indoor unit	none	1~3	Address of the mode Master indoor units
	2	indoorunit	Setting the mode Master indoor unit ^{2)*}	none	1	0- Not set, 1-Set, 2-Cancel
	1		Set indoor unit for 'coolilng and heating'/'cooling only'	0	1	0- Cooling and heating, 1-Cooling only
	2	Check/Set	Setting wireless remote controller usage restriction	1	1	0 - Disable, 1 - Enable
	3	option	Setting Master/Slave wired remote controller	0	1	0-Master, 1-Slave
5	4	function of the wired remote controller	Setting auto operation usage	1	1	0 - Disable, 1 - Enable
	5		Temperature display Celsius(°C)/ Fahrenheit(°F)	0	1	0- Celsius (°C),1-Fahrenheit (°F)
	6		Set unit for desired temperature (0,1,2) (Only available when temperature is displayed in Celsius (°C)	0	1	0-1°C,1-0.5°C, 2-0.1°C


^{1)*} When RMC(1) is set as F, RCM(2) can be set up to E only.

^{2)*} Mode master indoor unit: The indoor unit which can decide the operation mode. Other indoor unit will follow mode master indoor unit's operation mode.

Setting mode master indoor unit

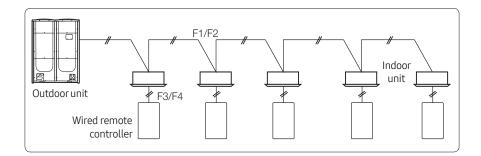


 Only when the wired remote controller is connected to an indoor unit directly (1:1 connection), you can set the mode master indoor unit that sets the operation mode of the outdoor unit.

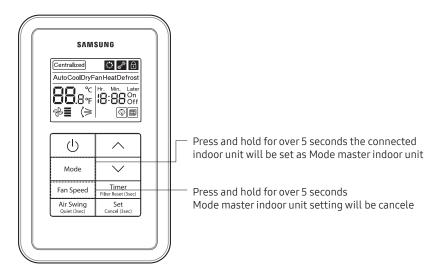

System reset


Reset the power of the simplified wired remote controller

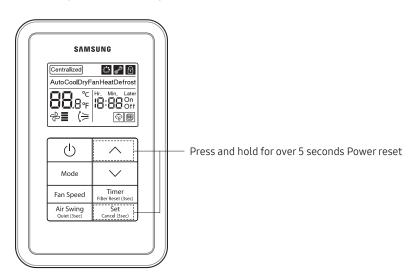

Display


■ Error display

Error codes of for the simplified wired remote controller and the product connected to it will be displayed on the LCD display.

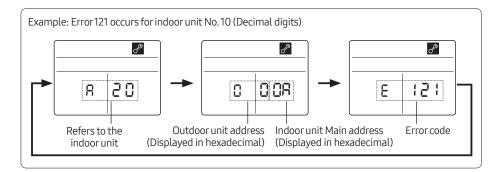

• When an error occurs in your indoor/outdoor units (Product group display: A20)

Address of the product with error code and address will be displayed alternately.

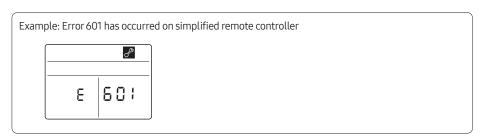

• When an error occurs in your simplified wired remote controller


Only an error code will be displayed. (No address will be displayed)

No.	Error code	Description of the error						
1	50 t	Communication error between wired remote controller ↔ Indoor unit						
2	602	Communication error between Master ↔ Slave wired remote controller • Error is only detected on slave wired remote controller						
3	604	Communication tracking error between wired remote controller ↔ Indoor unit						
4	S :8	Exceeded maximum number of units (16 units)						
5	827	Two or more wired remote controllers are set as Slave	-					
6	654	 Memory (external ROM) read/write error This error is detected only during power reset. If error occurs on memory after power has turned on, it will not effect on operation of the wire remote controller display and therefore error code will not be displayed. 	-					

Communication diagram

Individual control (1)

Control 1 indoor unit with 1 wired remote controller

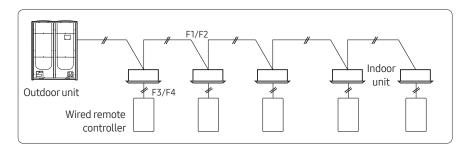

Control


• All connected indoor units

Display

• Operation status of the connected indoor unit

Group control (1)

Control multiple indoor units with 1 wired remote controller

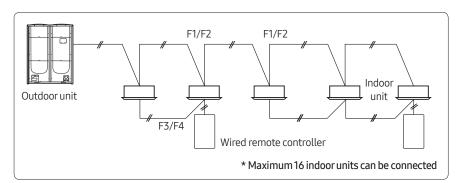

Control


All connected indoor units

Display

- Priority 1. Display the status of view master indoor unit
- Priority 2. Display the status of indoor unit which has the earliest Main address

Group control (2)

Control multiple indoor units connected to different outdoor units with 1 wired remote controller

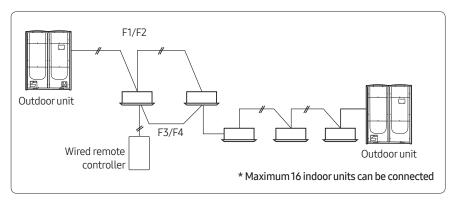

Control

• All connected indoor units

Display

- Priority 1. Display the status of view master indoor unit
- Priority 2. Display the status of indoor unit which has the earliest Main address


/ Caution

 When controlling group of indoor units connected to different outdoor unit, address of the each outdoor unit must be set differently.

Wired Remote Controller

Group control (3)

Control 1 or multiple indoor units with 2 wired remote controllers

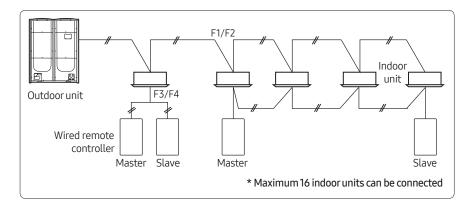

Control


All connected indoor units

Display

- Priority 1. Display the status of View Master indoor unit
- Priority 2. Display the status of indoor unit which has the earliest Main address
 - Two wired remote controllers identically display the operation status of the indoor unit according to above priority.


Group control (4)

Control multiple indoor units connected to different outdoor units with 2 wired remote controller

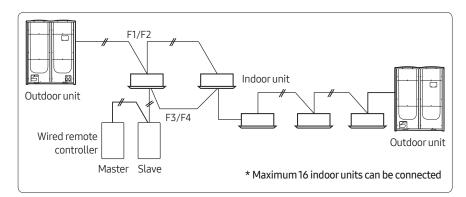

∴ Caution

• When controlling group of indoor units connected to different outdoor unit, address of the each outdoor unit must be set differently.

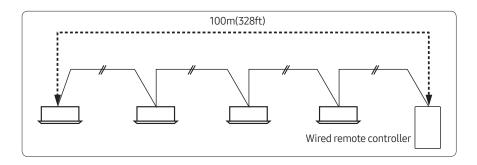


Control

• All connected indoor units

Display

- Priority 1. Display the status of View Master indoor unit
- Priority 2. Display the status of indoor unit which has the earliest Main address
 - Two wired remote controllers identically display the operation status of the indoor unit according to above priority.
- Max. distance between the farthest indoor unit and wired remote controller: 100m(328ft)

MWR-SH10N

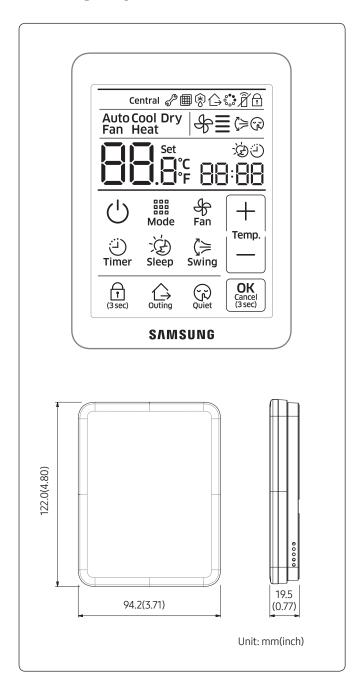


Features

- Touch screen wired remote controller
- IR wireless signal receiver is included
- Quiet, Sleep, Outing mode
- AC operation ON/OFF control
- Fan speed control
- Setting operation mode and temperature
- Reset filter cleaning alert indicator
- Operation on/off timer function


Product specification					
Powersupply	DC12V				
Power consumption	1.5 W				
Operating temperature range	0°C~40°C (32°F~104°F)				
Operating humidity range	30 % RH~90 % RH				
Communication	2-wire PLC				
Maximum length of connection	100 m (328ft)				
Maximum number of controllable devices	16 indoor units				


Compatible product		
Indoorunit	AM****N*****Model	
Indoor unit	$\Lambda C \times $	

Description of parts

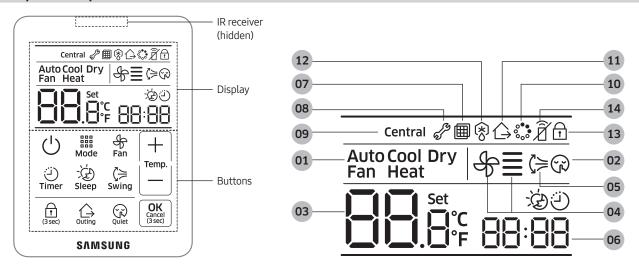

No.	Name	Description
01	Operation mode indicator	Indicates current operation mode when the indoor unit is operating (Cool/Auto/Fan/Dry/Heat)
02	Quiet mode indicator	Indicates when Sleep mode is ON.
03	Temperature indicator	Indicates Indoor temperature/Set temperature
04	Fan speed indicator	Displays fan speed
05	Air swing direction indicator	Displays airswing (Up/Down)
06	Timer indicator	Displays ON/OFF time (scheduled time)
07	Filter cleaning indicator	Displays filter cleaning (filter cleaning period)
08	Inspection indicator	Displays check
09	Centralized control indicator	Indicator will be on when remote controller usage restriction is set. (Devices that support centralized control: OnOff controller, DMS, Touch centralized controller, etc.)
10	Virus doctor indicator	Displays when virus doctor is ON.
11	Outing mode indicator	Displays when outing mode is ON.
12	Defrost operation indicator	Displays defrost operation.
13	Locking/invalid operation indicator	Displays partial locking/all locking/invalid operation
14	IR receiver indicator	Displays IR receiver for wireless remote controller (Default: disuse, indication on)

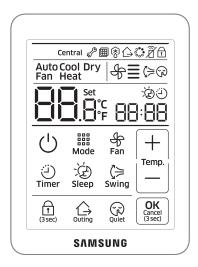

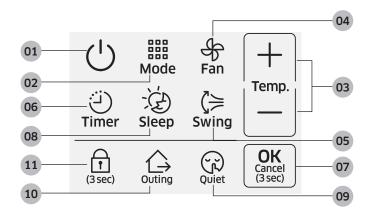


No.	Name	Description
01	ON/OFF button	Turn the air conditioner power on/off
02	Mode button	Select a desired air conditioner operation
03	Temperature setting button Set a desired temperature and adjust the time	
04	Fan speed button	Change the air conditioner's fan speed
05	Air swing button	Select the air flow direction of the air conditioner
06	Timer button	Select the timer function
07	OK/Cancel button	Confirm or cancel (by pressing and holding the button for 3 seconds)
08	Sleep button	Select sleep operation for the air conditioner
09	Quiet button	Select quiet operation for the air conditioner
10	Outing button	Select outing operation for the air conditioner
11	Lock button	Lock the wired remote controller

Option function

User setting mode

How to set

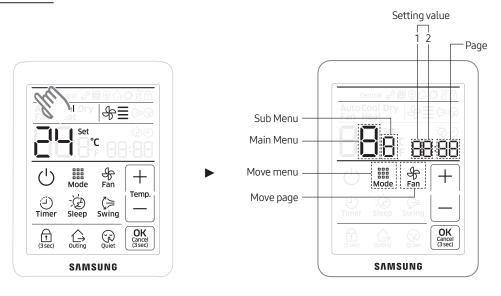


- 7 If you want to use the various additional user functions for your wired remote controller, press the top left corner (hidden button) of the display for more than 3 seconds
 - You will enter the additional function settings, and the main menu will be displayed
- 8 Refer to the list of additional user functions for your wired remote controller on the next page, and select the desired menu
 - Using the [+]/[-] buttons, select a main menu number and press the [Mode] button to enter the sub menu setting screen
 - Using the [+]/[] buttons, select a sub menu number and press the [Mode] button to enter data setting screen
 - Using the [+]/[] buttons, select the settings
 - Press the [Fan] button to select page
 - Press the [OK] button to save the current settings The [OK] button is invalid on the main menu or sub menu setting screen
 - Press the [Cancel] button for more than 3 seconds to exit to normal mode without saving settings

Main Sub		iuh		Setting value			
menu	menu	Function description		Value	Factory default	Page	Save location
	1	Temperature	Lowerlimit	8 ~ 30 °C (47 ~ 86 °F)	8(47)	01	Wired remote controller
2	2	Limit	Upper limit	8 ~ 30 °C (47 ~ 86 °F)	30(86)	01	Wired remote controller
2	3	Set Outing	Cooling desire temperature on outing function	25 ~ 30 °C (77 ~ 86 °F)	27(81)	01	Wired remote controller
	4	Temperature	Heating desire temperature on outing function	16 ~ 22 °C (61 ~ 72 °F)	16(61)	01	Wired remote controller

Main	Ch			Setting v	alue								
Main menu	Sub menu		Function description	Value	Factory default	Page	Save location						
	1		Lock of all buttons	0-Unlock, 1-Lock	0	1	Wired remote controller						
			Lock of operation ON/OFF button	0-Unlock, 1-Lock	0	1	Wired remote controller						
	2	Partial Button Lock1	Lock of temperature setting buttons	0-Unlock, 1-Lock	0	2	Wired remote controller						
			Lock of fan speed button	0-Unlock, 1-Lock	0	3	Wired remote controller						
			Lock of ON/OFF timer function button	0-Unlock, 1-Lock	0	1	Wired remote controller						
			Lock of Swing function button	0-Unlock, 1-Lock	0	2	Wired remote controller						
	3	Partial Button Lock 2	Lock of Sleep function button	0-Unlock, 1-Lock	0	3	Wired remote controller						
3			Lock of Quiet function button	0-Unlock, 1-Lock	0	4	Wired remote controller						
			Lock of Outing function button	0-Unlock, 1-Lock	0	5	Wired remote controller						
		Operation Mode 4 Partial Button Lock	Lock of operation mode button	0-Unlock, 1-Lock	0	1	Wired remote controller						
	4		Hide of auto mode	0-Unlock, 1-Lock	0	2	Wired remote controller						
			Hide of cool mode	0-Unlock, 1-Lock	0	3	Wired remote controller						
			Hide of dry mode	0-Unlock, 1-Lock	0	4	Wired remote controller						
			Hide of fan mode	0-Unlock, 1-Lock	0	5	Wired remote controller						
									Hide of heat mode	0-Unlock, 1-Lock	0	6	Wired remote controller
6	1	Chec	king/setting of backlight time out	0~30 (Disuse in 0)	5	1	Wired remote controller (1 time use)						
	1		Resetting filter cleaning alarm	0-No reset, 1-Reset	0	1	Wired remote controller						
	2		Use of virus doctor	0-Disuse, 1-Use	0	1	Wired remote controller						
7	3	User Setting Function	Use display of current temperature	0-Disuse, 1-Use	1	1	Wired remote controller						
	4		Use of button melody	0-Disuse, 1-Use	1	1	Wired remote controller						
	5		Use of IR receiver for wireless remote controller1)*	0-Disuse, 1-Use	0	1	Wired remote controller						
8	1	S	Setting/Checking Easy Tuning	-2~+2	0	1	Wired remote controller (1 time use)						
0	1	Reset to	o default value of user setting mode (except current time)	0-No reset, 1-Reset	0	1	Wired remote controller (1 time use)						

^{1)*} In case of duct type indoor unit, you can use wireless remote controller using IR receiver of this wired remote controller without "Display and receiver kit"

Service mode Technical Data Book 56

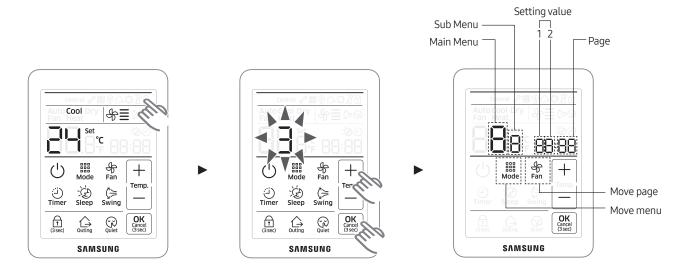

- 1 If you want to use the various additional functions for your wired remote controller, press the top right corner (hidden button) of the display for more than 3 seconds and drop it. Then you can press [+]/[-] buttons and select No.3 and press [OK] button.
 - You will enter the additional function settings, and the main menu will be displayed.
 - If you select the other number and press [OK] button, then you can go back to the normal display.
- 2 Refer to the list of additional functions for your wired remote controller on the next page, and select the desired menu.
 - Using the [+]/[-] buttons, select a main menu number and press the [Mode] button to enter the sub-menu setting screen.
 - Using the [+]/[-] buttons, select a sub menu number and press the [Mode] button to enter data setting screen.
 - Using the [+]/[] buttons, select the settings.
 - Press the [Fan] button to select page.
 - Press the [OK] button to save the current settings. the [OK] button is invalid on the main menu or sub menu setting screen.
 - Press the [Cancel] button for more than 3 seconds to exit to normal mode without saving settings.

Main	Main Sub		Sub	Sub		Setting va	alue		
menu	menu	Function description		Value	Factory default	Page	Save location		
	1 1 CC		Cooling/Heating selection	0 - Cooling/ Heating, 1 - Cooling only	0	01	Wired remote controller		
1		1	Wired remote controller		Use of wireless remote controller for indoor unit	0 - No use, 1 - Use	1	02	Wired remote controller
		checking (1)	Master/Slave wired remote controller	0 - Master, 1 - Slave	0	03	Wired remote controller		
			Temperature unit	0 - Celsius(°C), 1 - Fahrenheit(°F)	0	04	Wired remote controller		

Main	Sub	h	Setting va	alue			
Main menu	menu	Fu	nction description	Value	Factory default	Page	Save location
			Temperature sensor selection	0 - Indoor unit, 1-Wired remote controller	0	01	Wired remote controller
		Wired remote	Use of average temperature	0 - No use, 1 - Use	0	02	Wired remote controller
	2	controller setting/	Use of Auto mode	0 - No use, 1 - Use	1	03	Wired remote controller
1		checking (2)	Temperature display	0 - Set temperature 1 - Room temperature 2 - Relative temperature ¹⁾ *	0	04	Wired remote controller
	5	Room temperature compensation	Temperature control reference	-9 ~ 40 °C (15.8 ~104 °F)	Current sensor temperature	01	Wired remote controller
		2)*	Temperature compensation value	-9.9 ~ 9.9 °C (14.2 ~49.8 °F)	0	02, 03	Wired remote controller
	6 Number of connected units	Number of connected units	Number of indoor units	0~16	0	01	None
	7	Tem _l decr	perature increment/ ement unit (°C only)	0 -1 °C,1 - 0.5 °C, 2 - 0.1 °C	0	01	Wired remote controller
	0	Fac	tory option setting	0 - Unchanged, 1 - Factory setting	0	01	None
2	1		Software code	Software code	None	01~03	None
	2		Software version	Software version	None	01~03	None
	1		Target address setting	Target address of indoor unit (Example: 20 021F)	View master	01~03	None
	2		Main address setting/ checking	0~4F (in hexadecimal digits)	Main address of target	1	None
4	3	Indoor unit address/option setting/	RMC address setting/ checking	0x00~0xFE 4)*	RMC address of target	1	None
	4	checking 3)*	Basic option setting/ checking	Option code	Basic option of target	01~20 5)*	None
	5		Install option setting/ checking	Option code	Install option of target	01~20	None
	6		Install(2) option setting/ checking	Option code	Install(2) option of target	01~20	None

^{1)*} Relative temperature means that the wired remote controller only displays the temperature increase or decrease (± 3) compared to the reference temperature. Reference temperature is determined by other controller's desired temperature setting.

⁽Example: DMS set 24 °C (75 °F) → 24 °C (75 °F) is reference temperature. Wired remote controller displays it as '0')


^{2)*}Only the Celsius temperature unit is allowed when this function setting and checking in the service mode. For the Fahrenheit temperature, you need temperature conversion before this function setting and checking by the Celsius temperature unit.

^{3)*} When setting the address/option, you can set the target indoor unit by selecting sub menu 1.

System reset

Press the top right corner (hidden button) of the display for more than 7 seconds.


Your wired remote controller will be initialized, and the device will search for the indoor units connected to your wired remote controller again.

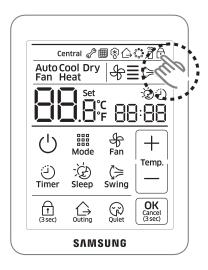

Outing operation

Outing function keeps minimum cooling/ heating temperature of indoor on your absence.


- Press the [Outing] button. Outing indicator will be displayed.
- When an air conditioner is turned off,
 - a If indoor temperature has 5°C(9°F) difference with desired outing temperature, the air conditioner will be turned on automatically.
 - **b** If indoor temperature is same as desired outing temperature, the air conditioner will be turned off automatically.
 - c it is repeated depending on indoor temperature within 12 hours, and then outing function is canceled.
- You can use outing function in only cool/heat mode.
- The outing function will be active when indoor unit is turned off.
- The outing function operates with low fan speed.
- If there is any input button on your wired remote controller, outing function will be canceled.
- If your indoor unit's status is changed, outing function will be canceled.
- You can set the desired outing temperature on the user setting mode. Outing temperature setting range>
 - Cool mode: 25~30°C (77~86°F), default: 27 °C (81°F)
 - Heat mode: 16~22°C (61~72°F), default: 16 °C (61°F)
- You can use the outing function in the master wired remote controller. The slave wired remote controller just displays it for a outing function status of the master wired remote controller.
 - Press the [Outing] button on the slave wired remote controller, then the nwill blink.
- The outing function operation will be canceled if you change the master/slave setting on your wired remote controller.

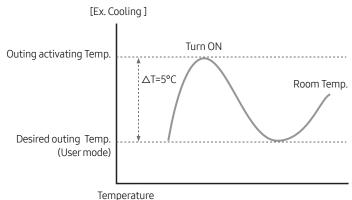

■ Error display


Error codes for the wired remote controller and the indoor units connected to your wired remote controller will be displayed in the LCD display.



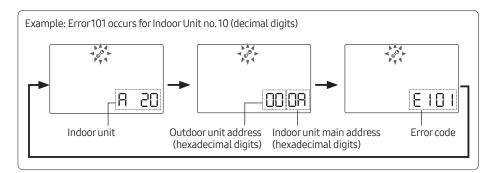

 When an error occurs in your indoor/outdoor units (product group display: A)

 The product address for the error will be displayed, followed by the error code.



• When an error occurs in your wired remote controller


Only an error code will be displayed. (No address will be displayed.)

No.	Error code	Description of the error		
1	60 i	Communication error between wired remote controller and indoor units (When communication is lost for over 3 minutes after detecting the indoor unit and the wired remote controller)	-	
2	502	No communication between Master(Main) and Slave(Sub) wired remote controllers	-	
3	60 4	No communication between wired remote controller and indoor units (Including communication error between indoor units and outdoor units)	-	
4	6 i8	 Exceeded maximum number of indoor unit connection (16 indoor units) Reset is required after checking the number of indoor units 		
5	627	Two or more wired remote controllers set as slave(sub)		
6	853	Temperature sensor open/short error		
7	854	EEPROM error	-	

Communication diagram

Individual control (1)

Control 1 indoor unit with 1 wired remote controller

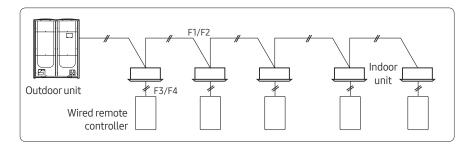

Control


· All connected indoor units

Display

• Operation status of the connected indoor unit

Group control (1)

Control multiple indoor units with 1 wired remote controller

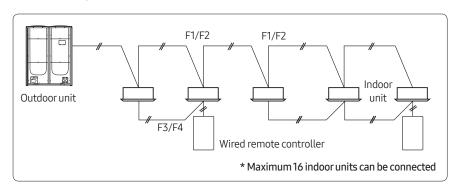

Control


• All connected indoor units

Display

- Priority 1. Display the status of view master indoor unit
- Priority 2. Display the status of indoor unit which has the earliest Main address

Group control (2)

Control multiple indoor units connected to different outdoor units with 1 wired remote controller

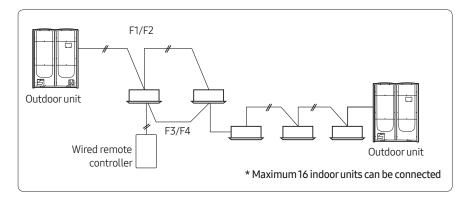

Control

• All connected indoor units

Display


- Priority 1. Display the status of view master indoor unit
- Priority 2. Display the status of indoor unit which has the earliest Main address

! Caution

• When controlling group of indoor units connected to different outdoor unit, address of the each outdoor unit must be set differently.

Group control (3)

Control 1 or multiple indoor units with 2 wired remote controllers

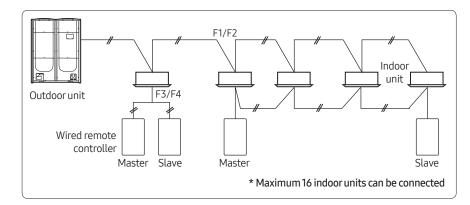

Control


All connected indoor units

Display

- Priority 1. Display the status of View Master indoor unit
- Priority 2. Display the status of indoor unit which has the earliest Main address
 - Two wired remote controllers identically display the operation status of the indoor unit according to above priority.


Group control (4)

Control multiple indoor units connected to different outdoor units with 2 wired remote controller

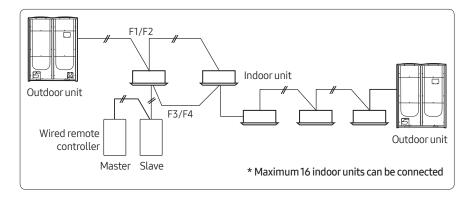

∴ Caution

• When controlling group of indoor units connected to different outdoor unit, address of the each outdoor unit must be set differently.

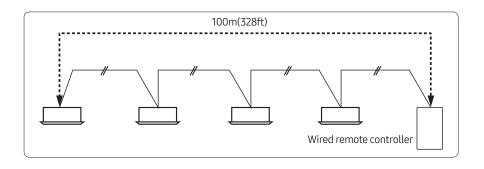

Control

• All connected indoor units


Display

- Priority 1. Display the status of View Master indoor unit
- Priority 2. Display the status of indoor unit which has the earliest Main address
 - Two wired remote controllers identically display the operation status of the indoor unit according to above priority.
- Max. distance between the farthest indoor unit and wired remote controller: 100m(328ft)

Receiver KIT


MRK-A10N

Features

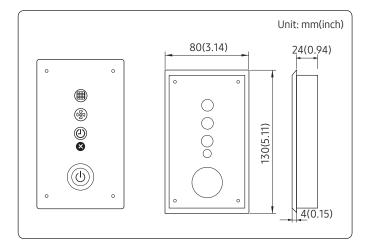


Receiver & Display Unit

- Concealed wireless signal receiver
- Filter replacement sign
- Fan operation display
- Operation Timer setting display
- Operation On/Off button
- Operation On display LED (blue)
- Defrost operation display LED (red)

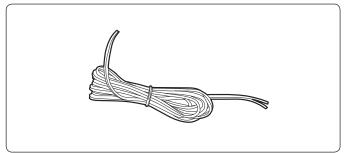

Receiver wire

Wiring

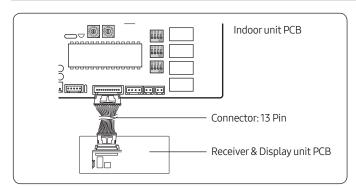

- Connect one end of the receiver wire with the Receiver & Display unit PCB.
- Connect the other end of the receiver wire with the duct type indoor unit PCB.



- Wire length: 10m (32.80ft)
- Receiver & Display unit is only available for a duct type indoor unit.

Chapter **02**


Centralized Control System

OnOff controller MCM-A202DN	65
Touch centralized controller MCM-A300N	72
Wi-Fi kit MIM-H03UN	85
Module Controller	98

OnOff controller

MCM-A202DN

Features

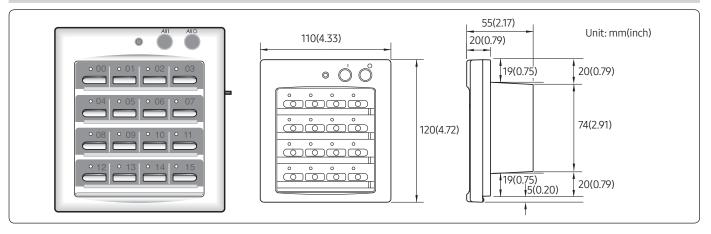

- Maximum 16-group controller (Max. 128 units)
- Whole/Group/Individual indoor unit control (On/Off)
- Restriction on the use of wireless/wired remote controllers and external contact control
- Cooling and heating mode control
- Indoor unit error display

Product specification


Power supply		AC100~240V, 50/60Hz			
Power consump	otion	8W			
Operating Temp	perature range	0°C~40°C (32°F~104°F)			
Operating Hum	idity range	30%RH~90%RH			
Communication	า	RS485 x1 (R1/R2)			
Max. Communio	cation length	1000M (3280ft)			
		Device	Number		
	Set layer	Indoor units (including ERV, MCU)	80 (Maximum 64 indoor units, 16 ERVs and 15 MCUs)		
		Outdoor unit	1		
Max.		OnOff controller/Touch centralized controller/Wi-Fi kit	Total 16		
connectable					
number of		Device	Number		
device		Indoor units (including ERV, MCU)	128		
	Control layer	Outdoor unit (including compatible interface module MIM-N01)	16		
		OnOff controller/ Touch centralized controller	16 (15 when DMS2.5, BACnet gateway, LonWorks gateway is connected)		
		DMS2.5/BACnet GW/LonWorks GW	Total 1		

■ Compatible product

Outdoor unit	AM****X****	
	OnOff controller (MCM-A202DN)	
	Touch centralized controller (MCM-A300N)	
Controller	DMS2.5 (MIM-D01AUN)	
	BACnet GW (MIM-B17BUN)	
	LonWorks GW (MIM-B18BUN)	

- Conventional communication outdoor unit requires interface module (MIM-N01) to establish connection
- MIM-B13D, MIM-B13E, MIM-B04A Interface modules cannot be connected.
- To connect ERV, MIM-N10 interface module is required.

Description of parts

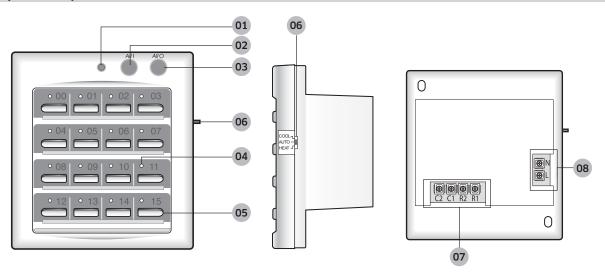


No.	Name	Description
01	Indoor unit operation LED	It lights on when more than one indoor unit operates.It flickers during indoor unit tracking process after power reset.
02	All ON button	Press All ON button to turn on all the indoor units.
03	All OFF button	Press All OFF button to turn off all the indoor units.
04	Group indoor unit operation LED	 It lights on when one indoor unit of the group is operating. It also flickers when indoor unit has an error. During tracking indoor units, LED whose number is equivalent to indoor unit RMC(2) address flickers.
05	Indoor unit control button	Press indoor unit of the group button to control the equivalent unit operation.

No.	Name	Description
06	Operation mode selection switch	Set operation mode selection switch to a certain mode and press indoor unit control button to control operation mode. Whenever pressing any button on the controller, set operation mode is delivered to the indoor unit.
07	Communication terminal	 C1 C2: No function R1 R2: Connect to Outdoor unit, DMS2.5, OnOff controller
08	Powerterminal	AC200V~240V connection


Note

 • Press button 11 and button 15 together for 5 seconds to reset the OnOff controller.



Different Levels of the OnOff Controller

• Adjust the DIP switch in the OnOff controller PCB and set a level. This will enable the user to control the indoor units connected to the OnOff controller according to the set level.

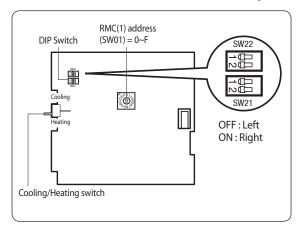

Switch	SW22		Mooning
No.	1	2	Meaning
LEVEL 0	OFF	OFF	Among the various controllers, such as the OnOff controller, wired/wireless controller and the indoor unit button, the air conditioner will only be able to operate with the most recently used controller
LEVEL1	ON	OFF	The wired/wireless controller can only be used when the OnOff controller is powered on.
LEVEL 2	OFF	ON	The air conditioner can only be operated with the OnOff controller.

Note

- The LEVEL of the OnOff controller is '0' when all the switches are in the 'OFF' position.
- Changed LEVEL will be applied immediately when you turn on or off the operation with an OnOff controller.
- Level application and authorization for controlling from OnOff controller can be restricted depending on the Level setting from the upper controller with priority.
 - Ex) OnOff controller cannot control the indoor units if the control level set from the DMS is higher than the level of OnOff controller.

Setting the option for OnOff controller

1 You can adjust the DIP switch (SW21) on PCB of the OnOff controller to set the option and control the OnOff controller according to the selected option.

SW21		Contents
1	2	Contents
ON	-	Disable OnOff controller usage
OFF	-	Enable OnOff controller usage


- All the DIP switches of the OnOff controller is set to OFF as factory default setting.
- SW21 setting of the DIP switch will be applied instantly.
- Option setting for communication can be executed regardless of the Level setting.

Connection diagram

Set layer connection (F1/F2)

- When OnOff controller only controls indoor units of 1 outdoor unit, then it can be connected to F1/F2 line of outdoor unit or indoor unit.
- Max. 16 Controllers can be connected to same communication line.

 Connectable controller: OnOff controller (MCM-A202DN), Touch centralized controller (MCM-A300N), Wi-Fi kit (MIM-H03UN)

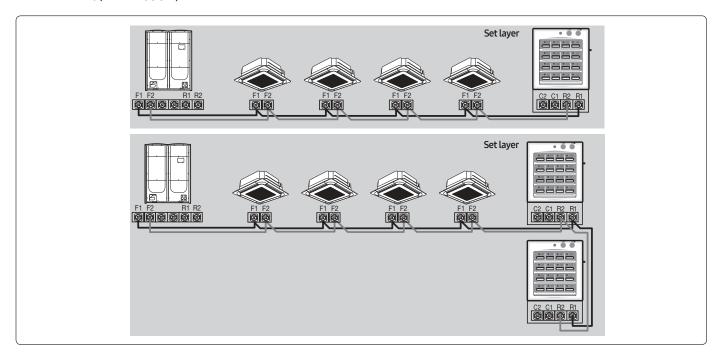


Control layer connection (R1/R2)

- New communication upper level controller
- Max. 16 Controllers can be connected to same communication line (In case of DMS2.5/BACnet gateway/LonWorks gateway connection, Max.15)
- Max. 16 outdoor units can be connected to same communication line (Includes interface module MIM-N01).

- Connectable controller
 - Touch centralized controller (MCM-A300N).
 - OnOff controller (MCM-A202DN).
 - DMS2.5(MIM-D01AUN), BACnet gateway (MIM-B17BUN), LonWorks gateway (MIM-B18BUN): Only one of the three models.


Connection with outdoor unit

When OnOff controller controls indoor units of multiple outdoor units, then it should be connected to R1/R2 line of outdoor units.

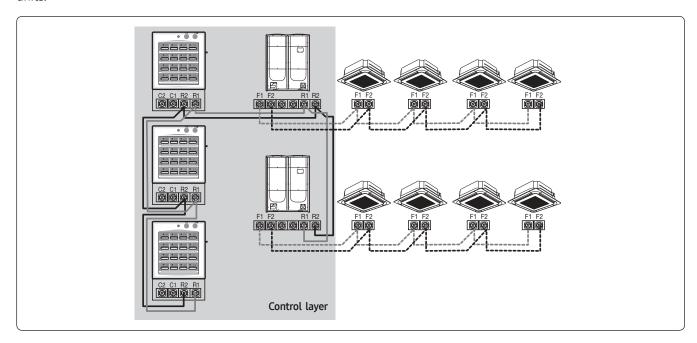


Connection with DMS2.5/BACnet GW/LonWorks GW


• Case1

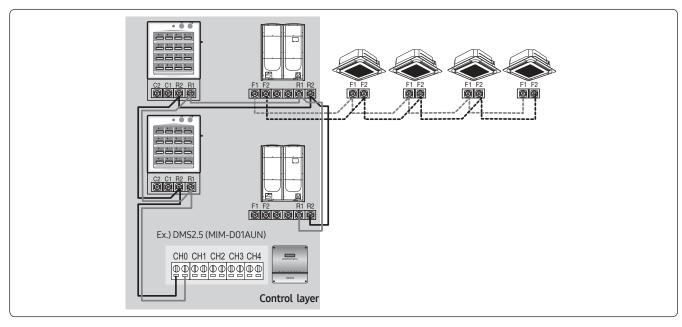

• Case2

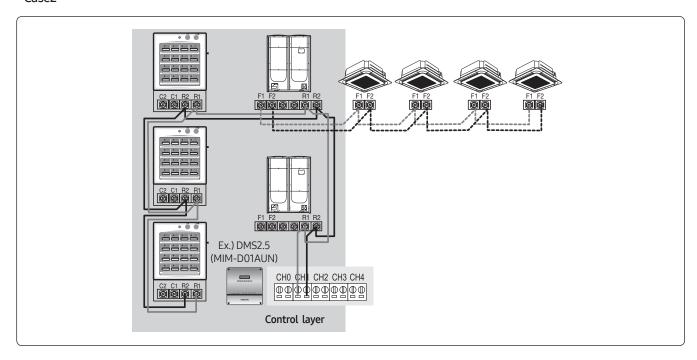


• When OnOff controller is connected to Outdoor unit's F1/F2 line, you cannot connect DMS2.5 to OnOff controller's R1/R2 line.

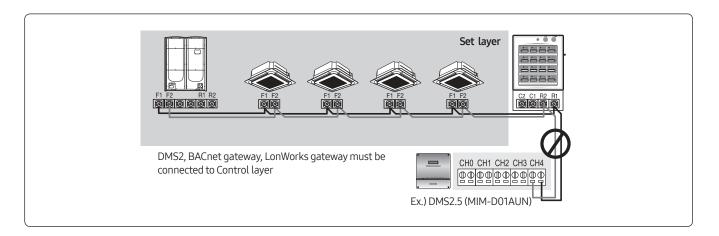

Display

■ Various LED display

After power reset to the OnOff controller, it carries out indoor unit tracking process.

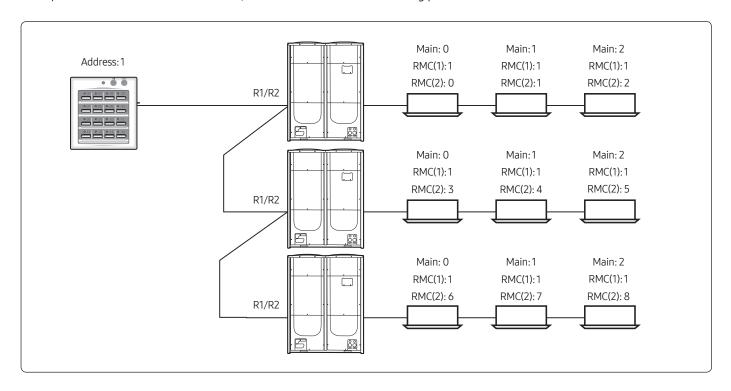


- OnOff controller only communicate with indoor units which has same RMC(1) address with OnOff controller's address.
- During tracking indoor units, LED whose number is equivalent to indoor unit RMC(2) address flickers.
 - In LED 00 \rightarrow LED 01 \rightarrow LED 02 \rightarrow LED 03 \rightarrow LED 04 \rightarrow LED 05 order

Touch centralized controller

MCM-A300N

Features

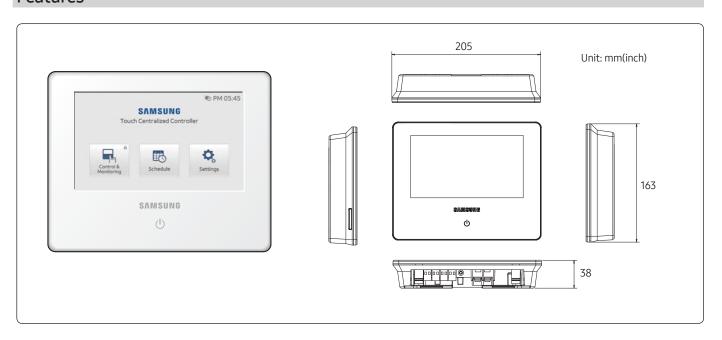

- 7 inch touch LCD controller
- Controls maximum 128 indoor units

- Controls maximum 12 zones
- Schedule control, Indoor unit usage restriction, View indoor unit error history

Product specification


Power supply		AC100~240V, 50/60Hz		
Power consumption Power consumption		110W		
Operating temperature range		0°C~40°C (14°F~104°F)		
Operating humidity rar	nge	30%RH~90%RH		
Communication		RS485 x1 (F1/F2 or R1/R2)		
External	Digital Output	1		
communication port	Digital Input	2		
	RS485	1000m(3280ft)		
Maximum connection length	Digital Output	100m(328ft)		
terigui	Digital Input	100m(328ft)		
		Device	Number	
	Set layer	Indoor units (including ERV, MCU)	80 (Maximum 64 indoor units, 16 ERVs and 15 MCUs)	
		Outdoor unit	1	
		OnOff controller		
		Touch centralized controller	Total 16	
		Wi-Fi kit		
	Control layer	Device	Number	
Max. connectable number of device		Indoor units (including ERV, MCU, FCU KIT)	128	
number of device		Outdoor unit (including MIM-N01, MIM-N10, MIM-F10N, DVM CHILLER unit)	16	
		OnOff controller	16 (15 when DMS2.5, BACnet gateway,	
		Touch centralized controller	LonWorks gateway is connected)	
		DMS2.5		
		BACnet GW	Total1	
		LonWorks GW		
		Wi-Fi kit (MIM-H03UN)	Total 1 (Maximum 16 indoor units, 16 outdoor units)	

■ Compatible product

Outdoorunit	AM***X*****
Controller	OnOff controller (MCM-A202DN)
	Touch centralized controller (MCM-A300N)
	DMS2.5 (MIM-D01AUN)
	BACnet gateway (MIM-B17BUN)
	LonWorks gateway (MIM-B18BUN)
	Wi-Fi kit (MIM-H03UN)

- Conventional communication outdoor unit requires interface module (MIM-N01) to establish connection
- MIM-B13D, MIM-B13E, MIM-B04A Interface modules cannot be connected.
- To connect ERV, MIM-N10 is required.
- To connect FCU KIT, MIM-F10N is required.


Description of parts

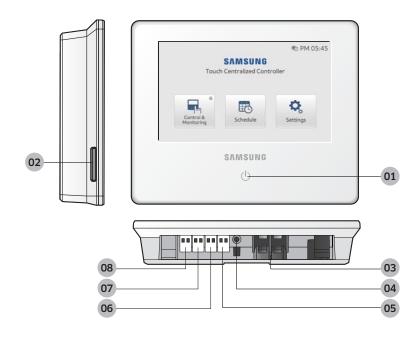

No.	Name	Description
01	LCD On/Off button and Indoor unit operation indicator	 Button: Turn on/off the LCD screen Indicator Blue: Turns on if any one of the indoor unit is in operation. Red: Turns on if any one of the indoor unit has an error
02	SD card slot	Use to back-up data on SD card or updating S/W
03	Powerterminal	Connect AC 100~240 V, 50/60 Hz power
04	Reset button	Use to reset Touch centralized controller

No.	Name	Description	
05	DI-1 terminal	Terminal block for connecting digital input signal from 3rd party device.	
06	DI-2 terminal	Terminal block for connecting digital input signal from 3rd party device.	
07	DO Terminal	Terminal block for digital output signal. • Short: When any one of indoor units turns On • Open: When all indoor units are off	
08	485 communication terminal	 When connecting to set layer: Connect to outdoor unit or indoor unit (F1/F2) When connecting to control layer: Connect to outdoor unit, OnOff controller, Touch centralized controller or DMS2.5 (R1/R2) 	

Connection diagram

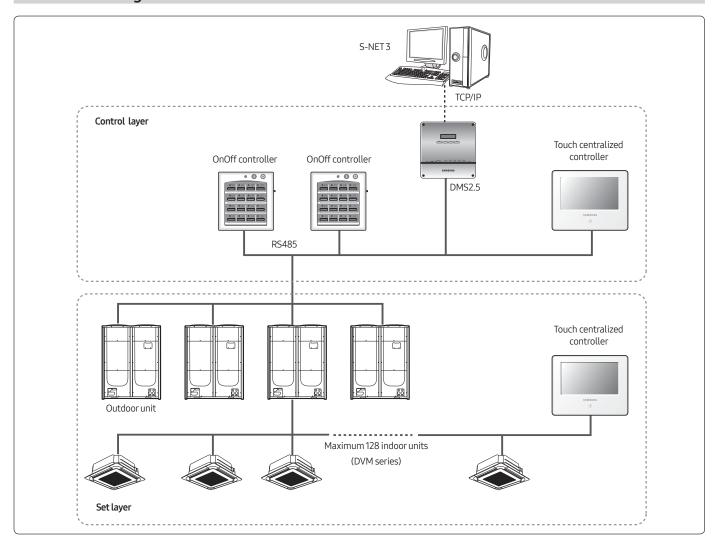


Connection

Set layer connection (F1/F2)

- When Touch centralized controller only controls indoor units of 1 outdoor unit, then it can be connected to F1/F2 line of outdoor unit or indoor unit.
- Max. 16 Controllers can be connected to same communication line.

 Connectable controller: OnOff controller (MCM-A202DN), Touch centralized controller (MCM-A300N), Wi-Fi kit (MIM-H03UN)

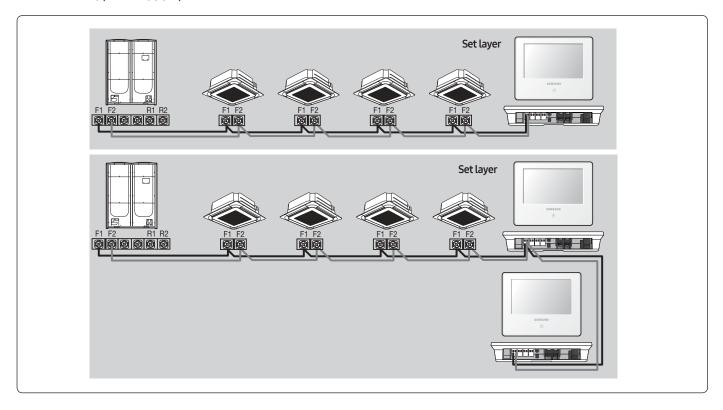

Control layer connection (R1/R2)


- Max. 16 Controllers can be connected to same communication line (In case of DMS2/BACnet gateway/LonWorks gateway connection, Max.15)
- Max. 16 outdoor units can be connected to same communication line (Includes interface module MIM-N01).

⚠ Caution

- Connectable controller
 - Touch centralized controller (MCM-A300N).
 - OnOff controller (MCM-A202DN).
 - DMS2.5(MIM-D01AUN), BACnet gateway (MIM-B17BUN), LonWorks gateway (MIM-B18BUN): Only one of the three models.


Connection with outdoor unit

When Touch centralized controller controls indoor units of multiple outdoor units, then it should be connected to R1/R2 line of outdoor units.

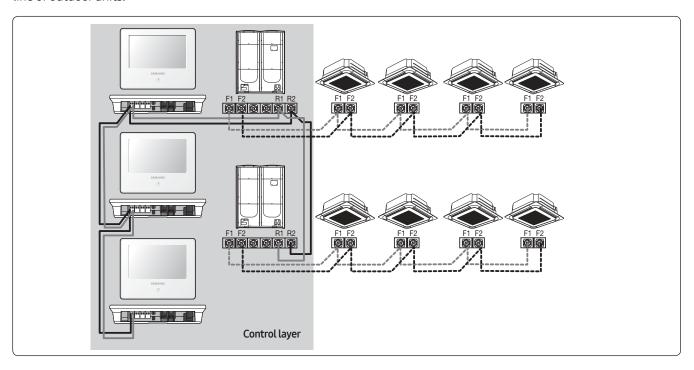


Connection with DMS2.5/BACnet GW/LonWorks GW

• Case1

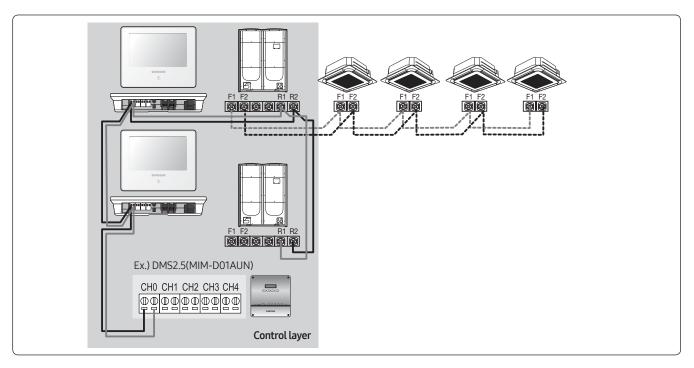


• Case2

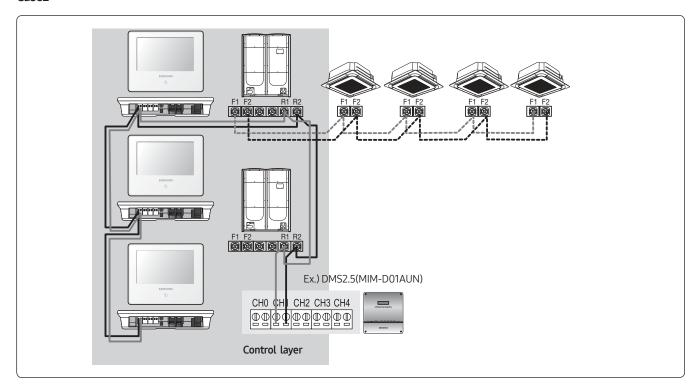

⚠ Caution

• DMS2.5, BACnet GW, and LonWorks GW cannot be connected to F1/F2.

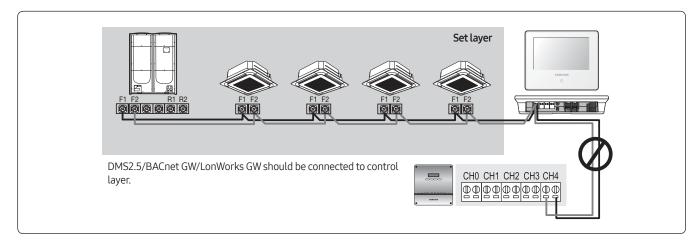

Main function

■ Zone control




- You can create a zone by grouping multiple indoor units
- Maximum 12 zones can be created (Total up to 128 indoor units)




- You can set the name of Zone/indoor unit
- You can set the zone icon for purpose of each zone.

Grouping indoor units

Function to control and monitor multiple indoor units that are grouped and expressed as single indoor unit

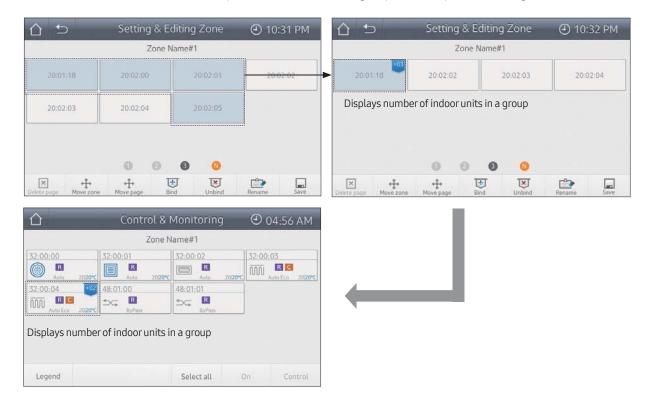

Schedule control

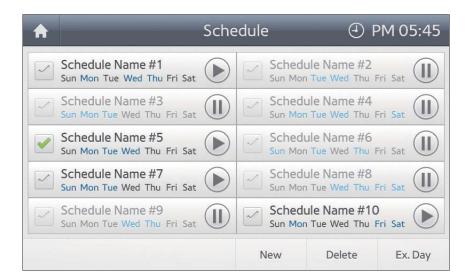

- Maximum 10 schedules can be created
- Excluded day setting is possible

Setting indoor unit usage restriction

Cool lower limit/Heat upper limit





- It can set the temperature limit in Cool mode & Heat mode.
- This setting can be changed by other touch centralized controller and DMS2.5.

Operation mode limit



- To prevent the wrong operation mode setting, it can limit the operation mode of indoor unit.
 - Cool only: Heat, Auto (Heat) operation mode is restricted
 - Heat only: Cool, Dry, Auto (Cool) operation mode is restricted
- This setting can be changed by other touch centralized controller and DMS2.5.

Lock function

You can lock the functions of Touch centralized controller.

Screen lock



• You can lock the screen.
Password is required when you try to use it.

Operating panel lock



• You can set the access lock of each item of operating panel. The locked item will be deactivated.

Menu lock



• You can set the access lock of each menu. Password is required when you try to use it.

Remote controller usage restriction

Indoor unit operating panel





- You can set the controller restriction.
- You can set the type of controller which will be restricted when "Disable RC" is applied from operating panel. [Settings] → [Device settings] → [Control level]

Device settings



- You can set the type of controller which will be restricted when "Disable RC" is applied from operating panel.
 - Remote controller: Restrict wired/wireless remote controller usage, OnOff controller usage is possible
 - OnOff controller: Restricts wired/wireless remote controller and OnOff controller usage

Tracking



- Detects all the indoor and outdoor units that are connected to communication line of Touch centralized controller
- When multiple number of Touch centralized controller is connected together, you can use check box of S/H (Show/Hide) to select indoor units that will be controlled from each Touch centralized controller.

Hiding indoor unit




• Indoor unit with no check mark on S/H (Show/Hide) check box, will not be controlled and monitored from the Touch centralized controller.

Wi-Fi kit

MIM-H03UN

Features

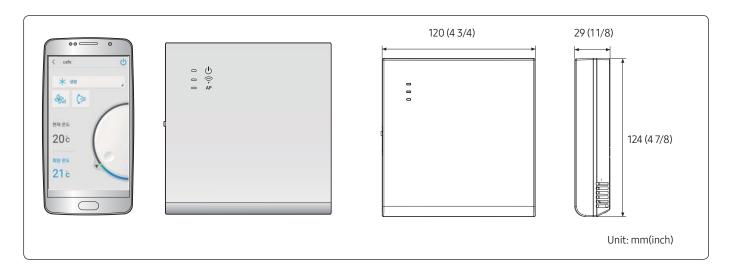

- Control and monitoring system air conditioner by mobile phone. (Max. 16 units)
- Weekly schedule setting

- Group control and monitoring (ON/OFF)
- Current/daily/weekly/monthly energy usage data of outdoor unit. (This function is available in certain outdoor unit model)

Product specification

Power supply		DC12V			
Power consumption		6W			
Operating temperature range		0°C~40°C (32°F~104°F)			
Operating humidity	range	30%RH~90%RH			
Camana i antina	Wired	RS485 (Communication with outdoor unit)		
Communication	Wireless	Wi-Fi 802.11b, g, n, 2.4 GHz (Communicatio	Wi-Fi 802.11b, g, n, 2.4 GHz (Communication with AP)		
Maximum	RS485	1000m (3280ft)			
connection length	Wi-Fi	20m(66ft) (It depends on AP specification))		
		Device	Nu	mber	
	Set layer	Indoor units (including ERV, MCU kit)	16 units. (In case of more than 16 units connection, it displays only 16 units in ascending order of main address.)		
		Outdoor units	1 unit		
		OnOff controller	47	•	
		Touch centralized controller	16 units (Including Wi-Fi kit Max.4)		
		Wi-Fi kit			
Max. connectable	Control Layer	Device	Number		
number of device		Indoor units (including ERV)	16	units.	
		Outdoor units (Interface module, ERV interface module)	16 units.		
		OnOff controller	16 units.		
		Touch centralized controller	io units.		
		DMS2.5	Total 16 u	Total 16 units	
		BACnet GW			
		Wi-Fi kit	4 unit		


- Max.5 mobile app users per1 Wi-Fi kit.
- Max.4 Wi-Fi kit registration per1 user account.
- Controller: Controllers which can connect to Set layer (F1/F2) including Wi-Fi kit.

■ Compatible product

Outdoor unit	AM****X****	
ERV	AM****S*****	
	OnOff controller (MCM-A202DN)	
Controller	Touch centralized controller (MCM-A300N)	
	Wi-Fi kit (MIM-H03UN)	


• ERV should connect MIM-N10 interface module to connect Wi-Fi kit.

Description of parts

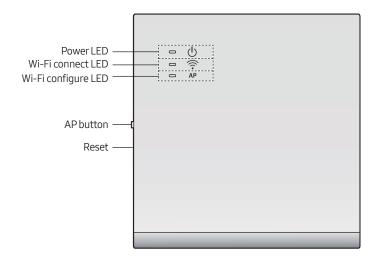

LED display information

No	LED information	Power	Wi-Fi Connect	Wi-Fi Configure
01	Initialized	ON	ON	ON
02	Normal	ON	ON	OFF
03	AP connection OK. but, internet is not connected	ON	Blinking	OFF
04	Air conditioner searching OK. but AP connection is not completed.	ON	OFF	OFF
05	Wi-Fi modem is in malfunction	Blinking	Blinking	Blinking
06	Searching AP (AP mode)	ON	OFF	ON
07	Searching air conditioner	Blinking	Blinking	OFF
08	No air conditioner information	Blinking	OFF	OFF
09	Inspecting network PBA	ON	Blinking	Blinking
10	Requesting a token (AP mode)	ON	OFF	Blinking

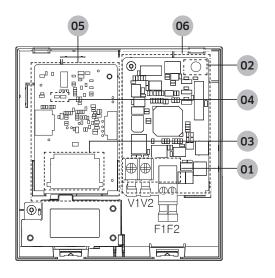


No.	Contents
01	Power/communication connection terminal
02	Tracking/Initializing button *
03	SD card slot
04	LED
05	Network PBA
06	Interface module PBA

^{*} Tracking: Press button for 1 or more second. Initializing: Press button for more than 5 seconds

Connection diagram


■ Wi-Fi kit connection

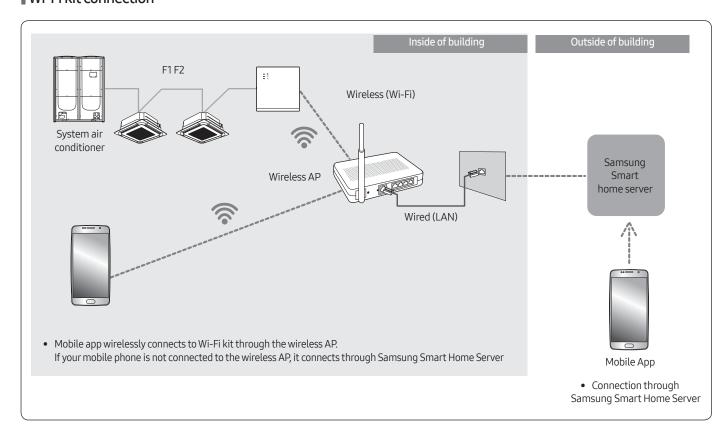

■ Connection with controllers

Case A (Set layer): Indoor units of outdoor unit 1 will be controlled.

- Wi-Fi kit is connected to Set layer only.
- If Wi-Fi kit uses "Multi tenant" fuction, then OnOff controller can not be use together.

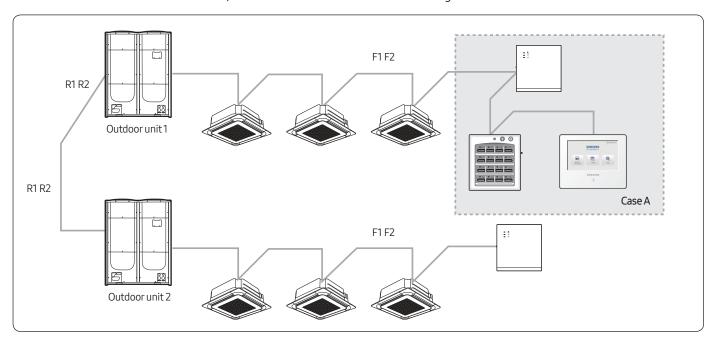


Note


• If controllers set "Remote controller restriction", then Wi-Fi kit is also restricted.

Connection


- 1) When connected to a single outdoor unit (F1-F2)
- * Connection diagram of Wi-Fi kit

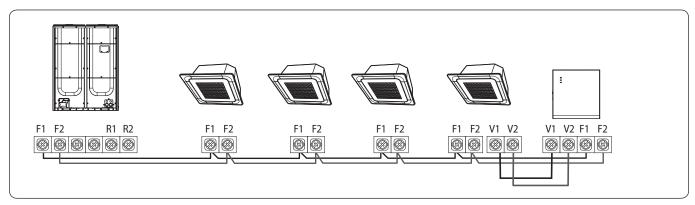

Connecting the Wi-Fi kit to a multi type product >

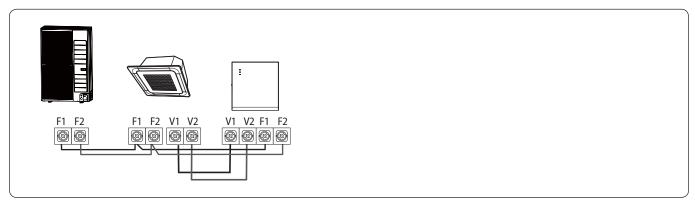

Connecting the Wi-Fi kit to a single type product >

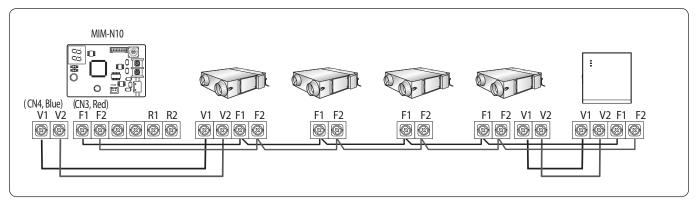


Connecting the Wi-Fi kit to a ERV product >

⚠ Caution


New communication applied unit only

2) When connected to two or more outdoor units (R1-R2)

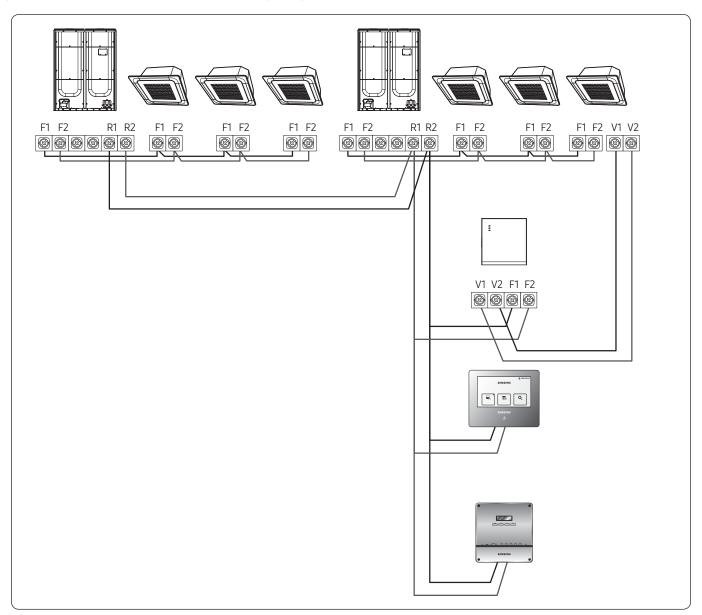

- Connect F1 and F2 of the Wi-Fi kit to R1 and R2 of the outdoor unit.
- Connect the power supply to V1 and V2 of the indoor unit.
- Can install together with other controllers such as touch centralized controller and DMS 2.5.

3) When installing with ERV (R1-R2)

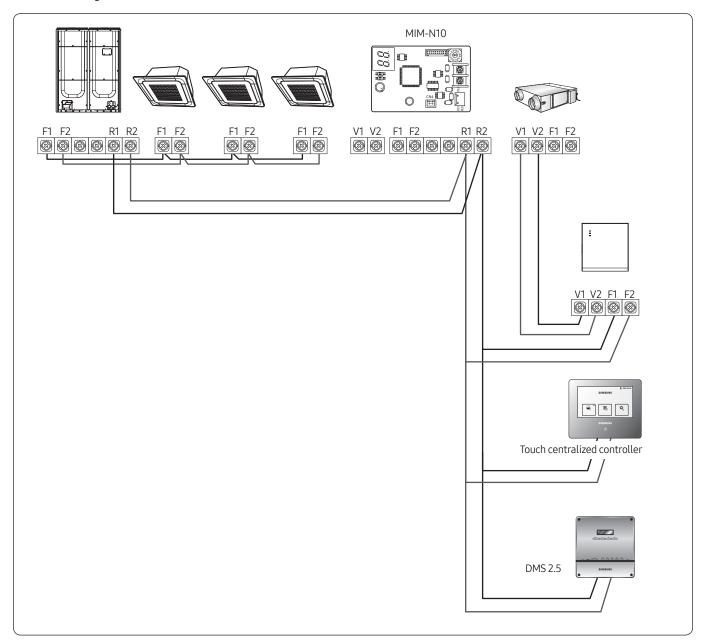

- Connect F1 and F2 of the Wi-Fi kit to R1 and R2 of the outdoor unit.
- Connect the power supply to V1 and V2 of the indoor unit or ERV.
- Can install together with other controllers such as Touch centralized controller and DMS 2.5.

⚠ Caution

- Up to 16 indoor and outdoor units can be connected.
- When it is connected to two or more outdoor units, some functions including energy monitor can be restricted.

Main function

Control and monitoring by mobile phone





- You can control all connected indoor units of Wi-Fi kit (Max.16 units)
- You can turn ON/OFF all indoor units together.
- You can control individual indoor unit in detail. (Detailed settings: Operation ON/OFF, operation mode, temperature setting, fan

speed, air flow direction, Wind-Free)


• You can rename indoor units.

Note

• In case of more than 16 units are connected, Wi-Fi kit displays only 16 units in ascending order of main address.

Group control



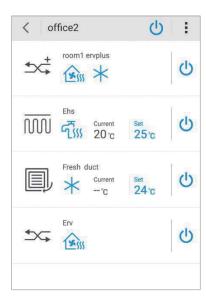

- You can create group. (Max.16 groups)
- You can turn ON/OFF all indoor units of group at once.
- If you select individual indoor unit of group, then you can control it in detail. (Detail setting: Operation ON/OFF, operation mode, temperature setting,

fan speed, air flow direction, Wind-Free)

Schedule control



- You can set weekly schedule. (Max. 10 schedules. Possible to repeat it within the period)
- You can apply the schedule setting to multiple indoor units.
- You can set detailed operation if you set "On" schedule. (Operation mode, temperature setting)


Energy monitor

• You can check the current/daily/weekly/monthly energy usage data of outdoor unit. (This function is available in certain outdoor unit model)







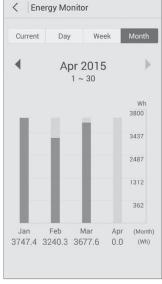


Note

- Energy Monitor displays power consumption which is different from power consumption shown on electricity bills.
 - This function is only available for the products that provides energy usage data.
 - When a Wi-Fi kit is connected to two or more outdoor units, the Energy Monitor does not appear.

Setting individual usage of indoor unit

For individual usage of indoor units connected to outdoor unit, installing multiple number of Wi-Fi kit allows classifying indoor units by group channel address (RMC1).

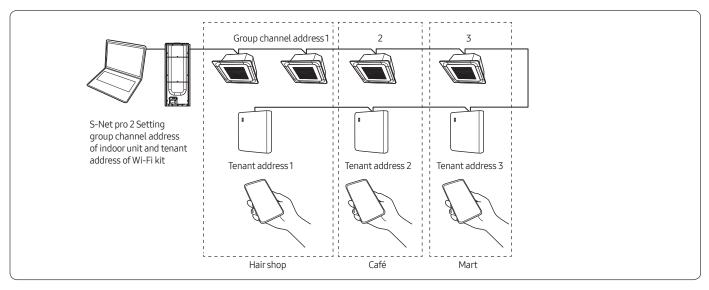

Note

 
- Multi tenant function is to set controlling and monitoring of indoor units assigned to one group channel address (RMC1) by identical tenant address of Wi-Fi kit.
- Install Wi-Fi kits as number of groups to use.
 - Maximum number of Wi-Fi kit that can be connected to outdoor unit module is 4.
 - Maximum number of indoor unit that can be connected to Wi-Fi kit is 16.

Note

- You can change names of each Wi-Fi kit on your smartphone. You cannot change names of other connected smartphones.
- Set tenant address to each Wi-Fi kit by Wi-Fi kit setting function on installing program (S-Net pro 2).



- 1 Click Search to find connected Wi-Fi kits.
- Select one MAC address among searched Wi-Fi kits.
 - MAC address can be found on the label inside of Wi-Fi kit.



- **3** Set tenant address. (Not support, 0 ~ F)
 - Enter tenant address to S-NET pro 2, and it will be applied as below.

Tenant address	Group channel address of indoor unit controlled by W-Fi kit	
Not Support	Control all indoor units connected to outdoor unit	
0	Control indoor units assigned to group channel address 0	
1	Control indoor units assigned to group channel address 1	
2	Control indoor units assigned to group channel address 2	
3	Control indoor units assigned to group channel address 3	
4	Control indoor units assigned to group channel address 4	
5	Control indoor units assigned to group channel address 5	
6	Control indoor units assigned to group channel address 6	
7	Control indoor units assigned to group channel address 7	
8	Control indoor units assigned to group channel address 8	
9	Control indoor units assigned to group channel address 9	
А	Control indoor units assigned to group channel address A	
В	Control indoor units assigned to group channel address B	
С	Control indoor units assigned to group channel address C	
D	Control indoor units assigned to group channel address D	
E	Control indoor units assigned to group channel address E	
F	Control indoor units assigned to group channel address F	

- Ex.) If tenant address 2 is entered to Wi-Fi kit by S-NET pro 2, only indoor units assigned to 2 for RMC1 will be the target of controlling and monitoring.
- 4 Click Apply and the tenant address will be saved on Wi-Fi kit.

Note

- Refer to "Setting an indoor unit address and installation option" in installation guide of indoor unit to set indoor unit group address. (SEG9: 1, SEG 11: RMC1)
- If you want to reset the tenant address, please contact Samsung service center.
- To control all indoor units classified by tenant address with one smart phone, each Wi-Fi kit should be registered on the smartphone.
- When using multi tenant function by Wi-Fi kit, upper controllers other than OnOff controller (such as Touch centralized controller, DMS, etc.) can be installed at the same time.

Note

• Data storage

Data	Location		
Data	Wi-Fi kit	Mobile phone	
Group information	-	0	
Indoor unit name	0	-	
Schedule setting	0	-	
Settings	Δ	Δ	
Settings	(Set temp. unit/Set temp. scale)	(Heat temp. range)	
Device installation information	0	_	
(Number of indoor unit, Address, etc)	O O		
Energy usage of outdoor unit	0	_	
(6 months)			
Connection information	0	0	

• Initialization

- Initializing button: Reset to factory default state.
- Mobile app deletion: Deletes every data relating Wi-Fi kit in mobile phone.


⚠ Caution

• After initialization, you must register Wi-Fi kit to Mobile app again.

Module Controller

MCM-A00N

Features

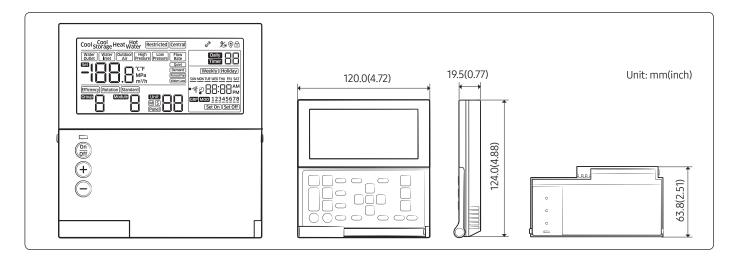


- DVM CHILLER On/Off control (Module/Group)
- Operation mode, water outlet temperature setting
- Optional operation setting
- Module/Group setting
- Weekly operation schedule setting

Product specification

Power Supply	DC12V
Power Consumption	2W
Operating Temperature range	0°C~40°C (32°F~104°F)
Operating Humidity range	30%RH~90%RH
Communication	2-wire PLC
Max. Communication length	200m (656ft)
Max. Number of connection	16 DVM CHILLER units

Description of parts

Display

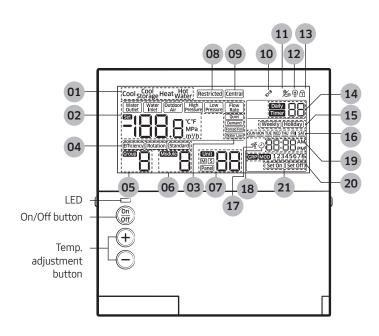

No.	Display	Function
01	Cool Storage Heat Water	Displays the operation mode.
		Displays the set or current water temperature (°C, °F).
		■ NOTE
		• Press button to display the set water temperature for 3 seconds.
02	Water Water Outdoor Fight Low From Mark Picts MPa myth	 The default is the current water temperature, and it can be changed into the set water temperature in the service setting mode.
02		 The display will show Lo when the value can be displayed (-199 ~ 199) or show HI when it cannot be displayed.
		Displays the current temperature (°C, °F) of water inlet or outdoor air.
		Displays the current high or low pressure (MPa) of refrigerant.
		Displays the current water flow rate (m3/h).
03	Quiet Demand Forced Fan Water Law	Displays the selected applied operation.
04	Efficiency (Rotation) (Standard)	Displays the operation pattern by each module and group.
05	Group	Displays the group from 1 to 4.
06	Module	Displays the module from 1 to 8.

02 Centralized control systems Module Controller > MCM-A00N


No.	Display	Function
		Displays the unit from 0 to 15 (maximum 16).
	Unit	Displays Master or Slave.
07	M S Panel	Displayed when setting the Panel control function from a certain unit.
		 Panel control function is to set the unit to control the operation itself, so the operation cannot be controlled from the module control if this function is set.
		Displayed when button input is restricted.
		Restricted display will appear when the buttons are restricted due to central control or when a combined operation cannot be performed.
08	Restricted	■ NOTE
		 The module control will be restricted in the following cases. Example1) Displayed when pressing button in the central control. Example2) Displayed when setting the button lock function and then button in the service mode.
		Displayed when setting the central control.
09	Central	 Central display will appear when the module control is controlled by the central control room of the building or by the upper level control such as a central control or a DMS etc. In this case, timer and all functions will be operated by the upper level control.
		Displayed when an error occurs in a product or a module control.
		NOTE
10	S	Blinked when an error occurs in a product or a module control, followed by the
	*	error code.
		 It will disappear when all errors is solved.
11	₺ ®	Displayed when a pump operates automatically to keep the pipes from freezing.
		Displayed when the defrost function operates.
12	☆	NOTE
12)	6	 Defrost function is to remove frost on the outdoor unit during operating the heat mode.
		Displayed when selecting the button lock function.
13	A	NOTE
	<u> </u>	 To lock the buttons of the module control, press settings button.
14	Daily Timer Timer	Displays the number of daily or entire timers.

No.	Display	Function
15	(Weekly) (Holiday)	Displays weekly timer or holiday setting.
16	SUN MON TUE WED THU FRI SAT	Displayed days of week while setting weekly or daily timer or displaying the set timer.
17	W.	Displayed when the summer time function is set.
18	رت	Displayed when setting the off timer for the entire DVM CHILLER in the additional function. Time for the off timer function can be set to maximum 23 hours. NOTE
10	O	• The current time will be displayed if there is more than an hour until the set time.
		 The remaining time will be displayed and the off timer display will appear if there is less than an hour until the set time.
19	AM DI-DI-PM	Displays the current time or the set time.
20	GRP MOD 12345678	Displayed when selecting a group or a module while setting the weekly timer. (Group: $1 \sim 4$, Module: $1 \sim 8$)
21	Set On Set Off	Displayed Set on or Set off while setting or displaying timer.

NOTE

- If you set the input method as external contract control in the option setting of DVM CHILLER, the module control cannot control the units.
 - When pressing ∰, , or + button on the module control, the displays will appear on the display but the DVM CHILLER will not operate.
- The module control cannot sense the indoor temperature.
- The module control does not control the midnight electricity's time or the cool storage tank.

Buttons

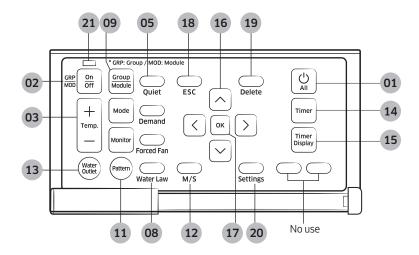

Classificat	ion	on Indication		Function		
	01		All start/ stop button	Turns on or off all the DVM CHILLERs. You can turn on or off all the connected modules and groups.		
	01	All		NOTE		
				 When turning off all units and turn them back on, the units will operate in a previously selected mode. 		
Start/Stop			On/Off button	Turns on or off a group or a module individually.		
	02	GRP On Off		When a module or a group is turned off, temperature or mode displays will not appear.		
	02			■ NOTE		
				 When turning off a module or a group and turn it back on, each module or group will operate in a previously selected mode. 		
	03		Temp. adjustment button	Adjusts the desired water temperature.		
				NOTE NOTE		
Basic operation		+ Temp. —		 For celsius, the set water temperature can be adjusted by 1, 0.5, or 0.1 °C depending on the set value in the service mode. For fahrenheit, it can be depending on the set value in the service mode. For fahrenheit, it can be adjusted by 1 °F. 		
				• If you press and hold the button, it will be adjusted by 1 °C/1 °F.		
	04	Mode	Operation mode button	Selects the desired operation mode.		
	05	Quiet	Quiet button	Selects the quiet function.		
Applied	06	Demand	Demand button	Selects the demand function.		
operation	07	Forced Fan	Snow prevention button	Selects the snow prevention function.		
	08	Water Law	Water law button	Selects the water law function.		


Classification		n Indication		Function			
	09	Group/Module button		Selects a group or module control.			
	10	Monitor Monitor button		Shows the result of monitoring water outlet, water inlet, outdoor air, high and low pressure of refrigerant, and water flow rate.			
Option change function	11	Pattern	Pattern button	Sets the operation pattern when controlling the DVM CHILLER by groups or modules.			
	12	M/S button		Sets Master or Slave units.			
	13	Water Outlet	Water outlet button	When pressing the water outlet button while the display shows the pressure of refrigerant or the water inlet temperature, the water outlet temperature will be displayed.			
				Sets the weekly On/Off timer.			
Timer function -	14	Timer	Timer button	NOTEThe timer can be set up to maximum 40 timers.			
Timerfunction	15	Timer Display	Timer display button	Checks the timer already set. NOTE You can check the timer by numbers or days of the week.			
	16	() ()	Up, down, left, right button	Moves from stage to stage or changes the set value.			
	17	ОК	OK button	Selects the stage or saves the setting.			
Common	18	ESC button		Exits to normal mode without saving your changes while setting the timer or the additional function.			
function			Delete button	Deletes the timer.			
	19	Delete		NOTE			
				 Press button for 3 seconds to delete all the timers while the display shows the timers. 			
	20	Settings	Settings button	Enters the additional function setting screen.			
				Displays the on/off status of the module or the group on the display. On: green LED is turned on Off: green LED is turned off Error: red LED is blinking			
LED	21		LAMP	■ NOTE			
				 When one of the modules or groups are operating, the green LED is turned on. 			
				 When a certain module or group needs to be inspected, the led LED is blinked. 			

NOTE


- Mode, temperature, or etc. can be set when only the module control is turned on.
- @@ D (A) [COLD) | COLD | COL

Connection diagram

1:1 connection

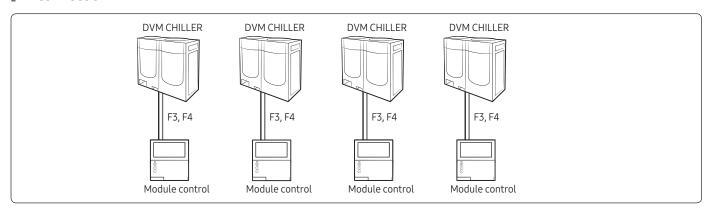


1:N connection

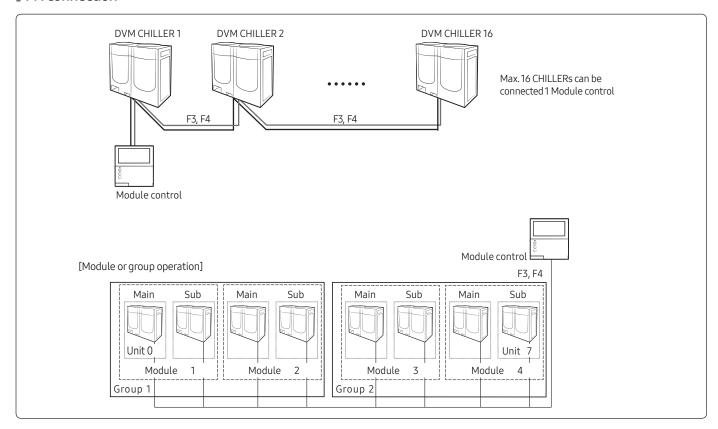

- Module/group operation is to combine multiple CHILLERs in modules or groups of a single water pipe system and to operate them depending on the working condition.
- A single module control can control a maximum of 16 DVM CHILLERs (0 ~ 15). DVM CHILLER can have a maximum of 8 modules (1 ~ 8) and 4 groups (1 ~ 4). A maximum of 8 units can be connected to a module, and a maximum of 8 modules can be connected to a group.

Optional function

Additional setting mode

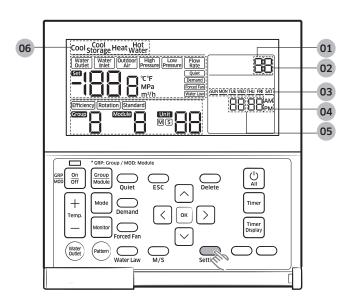

• How to set "Additional setting mode"

Press "Settings" to enter "Additional setting mode"

No.	Name	Description
01	Main menu	Displays main menu value of the service mode table.
02	Sub menu	Displays sub menu value of the service mode table.
03	Page	Displays Page value of the service mode table.
04	Data Segment	Displays Data value of the service mode table.
05	Synchronized segment for setting the current time	Displays the data value of the Page on the left side of the LCD at the same time.
06	The status of each unit	Displays the status of each unit when selecting the monitoring function by each unit in the user mode.


Main menu	Sub menu	Function		Initial value	Page	Range	Save
1	1	Off timer		0	1	00 ~ 12 hour(s) (by an hour)	Save
7	1	Lock all		0	1	0 - Unlock, 1 - Lock	Save
3	2	Lock timer	_ock timer		1	0 - Unlock, 1 - Lock	Save
			(yy) year	-	1	00 ~ 99	Save
4	1	Set today's date	(mm) month	-	2	01 ~ 12	Save
4			(dd) day	-	3	01~31	Save
			week) day of week	-	4	Sun. ~ Sat. (0 ~ 6)	Save

Main menu	Sub menu	Function		Initial value	Page	Range	Save
4	2	Set the current time	Hour: Minute	-	-	Setting range of hour 12-hours: (AM/PM) 01 ~ 12 24-hours: (AM+PM) 00 ~ 23 Setting range of minute: 0 ~ 59	Save
	1	Use and set the summer	Use the summer time function or not	0	1	0 - No use, 1 - Use	Save
	1	time function	Set the summer time type	0	2	0 - by a week, 1 - by a day	Save
		Start the	Month	3	1	01 ~ 12 (Jan. ~ Dec.)	Save
	2	summertime function (by a week)	Sunday on the selected week	F	2	1 ~ 4 (week) or F - the last week	Save
		Start the	Month	10	1	01 ~ 12 (Jan. ~ Dec.)	Save
5	3	summer time function (by a week)	Sunday on the selected week	F	2	1 ~ 4 (week) or F - the last week	Save
		Start the summer time function (by a day)	(mm) month	3	1	01 ~ 12 (Jan. ~ Dec.)	Save
	4		(dd) day	22	2	01 ~ 31 (day)	Save
		End the summer time function (by a day)	(mm) month	9	1	01 ~ 12 (Jan. ~ Dec.)	Save
	5		(dd) day	22	2	01 ~ 31 (day)	Save
	1	Set/check the	time for backlight	5	1	00 ~ 30 (second) (Disuse when it is 00)	Save
6	2	Use LED (greer	n) or not	1	1	0 - No use, 1 - Use	Save
	3	Use LED (red) or not		1	1	0 - No use, 1 - Use	Save
	1		Display the operating status by units 1)*	The smallest unit number	1	00~15	-
9	2	User setting functions	Display the number of temperature control devices/thermostats	The number of the temperature control devices/ thermostats	1	00~16	-
0	1	Reset to the default value of user mode (except the current time)		0	1	0 - No use, 1 - Reset	-

^{1*)} You can check the status of units connected to the module control.

When pressing button after selecting the unit number, you can change the status of the selected unit. (Water Outlet \rightarrow Water Inlet \rightarrow Outdoor Air \rightarrow High Pressure \rightarrow Low Pressure \rightarrow Flow Rate \rightarrow).

Press , button to change the unit number.

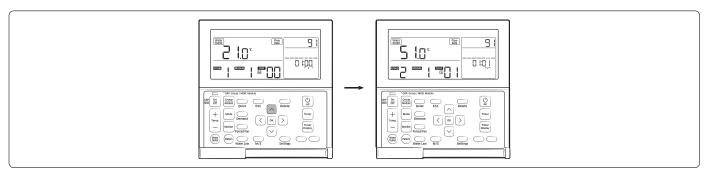

NOTE

• The summer time is to put the clock ahead an hour earlier than standard time in summer.

Service mode

How to set the service mode

- 1 Start the service mode.
 - \bigcirc + \bigcirc Press for over 3 seconds

! Caution

- To make it work correctly, you have to press the center of the buttons at the same time.
- 2 Select a main menu number.
- 3 Select a sub menu number.
 - > ► △/ ✓ ► Select a sub menu number
- 4 Select a Page number.

When changing a Page number, the display will show the set data value of the Page.

- > ► △ / ✓ ► Select a Page number
- **5** Set Data value.

Refer to the table in "Service setting mode" for setting each data.

- > ► △ / ✓ ► Adjust the data value
- **6** Save the data setting value.


ОК

7 Complete the service mode.



NOTE

• If the current setting stage is in the main menu when pressing button, the service mode will be completed. If not, the stage will move to the main menu.

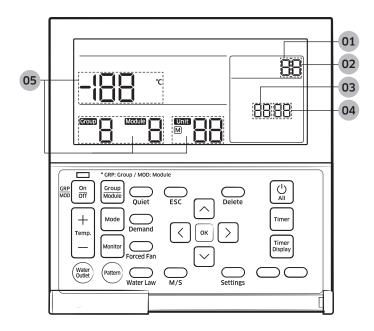

No.	Name	Description
01	Main menu	Displays main menu value of the service mode table.
02	Sub menu	Displays sub menu value of the service mode table.
03	Page	Displays Page value of the service mode table.
04	Data Segment	Displays Data value of the service mode table.
05	Synchronized segment for setting the current time	Displays the data value of the Page on the left side of the LCD at the same time.

Module Controller > MCM-A00N

Service setting mode

- After saving the setting, the DVM CHILLERs and the module control may be initialized if it is necessary.
- When entering the service mode during the tracking, you can enter the Data stage on the Main menu 4,5,6,9 (Save at DVM CHILLER) but you cannot change the setting.
 - The display will show Restricted if you press → button.
 - The display shows only the collected data during the tracking.

Main menu	Sub menu	F	unction	Initial value	Page	Range	Save
	1	Option setting/	DVM CHILLER cooling and heating/only cooling	0	1	0 - Cooling and heating, 1 - Only cooling	Save at Module control
		checking	Temperature unit display (°C)/(°F)	0	2	0 - Celsius (°C), 1 - Fahrenheit (°F)	Save at Module control
1	2	Option setting/ checking 2	Temperature display set temperature/water temperature (Setting the module control's temperature display value)	1	1	0 - Set temperature 1 - current water outlet temperature (Default value)	Save at Module control
	6	Number of connected units	Number of DVM CHILLERs	0	1	00~16	-
	7	temperature (A	Setting the unit of the desired temperature (Available only when the temperature display is °C.)		1	0 - 1 1 - 0.5 2 - 0.1	Save at Module control
	8	Setting type of time		0	1	0 - 12-hours, 1 - 24-hours	Save at Module control
	9	Check for timer IC error		0	1	0 - Normal, 1 - Error	-
	0	Initializing serv	ice mode setting value	0	1	0 - Disuse,1 - Reset	-
2	1	Checking micom codes of the module control		-	1~3	Micom code	-
2	2	Checking the version information of the module control program		-	1~3	Modified date	-
	1		Setting a targeted DVM CHILLER	View Master	1	A registered unit number	-
4	4	Setting DVM	Setting/checking basic options	Basic options of the target	1~20	Option code	Save at DVM CHILLER
	5	CHILLE number/ option 1)*	Setting/Checking installation options	Installation options of the target	1~20	Option code	Save at DVM CHILLER
	6		Setting/Checking installation options 2	Installation options 2 of the target	1~20	Option code	Save at DVM CHILLER

02 Centralized control systems Module Controller > MCM-A00N

Main menu	Sub menu	F	unction	Initial value	Page	Range	Save
	1		Demand level ^{2)*}	-	Module number	0 - Default value (100 %) 1 - 95 % 2 - 90 % 3 - 85 % 4 - 80 % 5 - 75 % 6 - 70 % 7 - 65 % 8 - 60 % 9 - 55 % 10 - 50 %	Save at DVM CHILLER
	2	2 3 Setting DVM CHILLER	Quiet operation level 3)*	-	Module number	0 - Default value (100 %) 1 - Level1 2 - Level2 3 - Level3	Save at DVM CHILLER
5	3		Standard for Water law	-	Main unit number 5)*	Standard for Water Law temperature 0: Based on outdoor temperature/ 1: Based on room temperature	Save at DVM CHILLER
	detailed 4	detailed setting	AirCool1 (for Water law)	-	Main unit number 5)*	Outdoor temperature standard 1 [0 ~ 20°C(32 ~ 68°F)] in cooling mode	Save at DVM CHILLER
	5		AirCool2 (for Water law)	-	Main unit number 5)*	Outdoor temperature standard 2 [30 ~ 40 °C(86 ~ 104°F)] in cooling mode	Save at DVM CHILLER
	6		RoomCool1 (for Water law)	-	Main unit number 5)*	Room temperature standard 1 [15 ~ 24 °C(59 ~ 75°F)] in cooling mode	Save at DVM CHILLER
	7		RoomCool2 (for Water law)	-	Main unit number 5)*	Room temperature standard 2 [25 ~ 35 °C(77 ~ 95°F)] in cooling mode	Save at DVM CHILLER
	8		Tcool1 (for Water law)	-	Main unit number 5)*	Cooling set temperature standard 1 [-10 ~ 25 °C(14 ~ 77°F)] in cooling mode	Save at DVM CHILLER
	9		Tcool2 (for Water law)	-	Main number 5)*	Cooling set temperature standard 2 [-10 ~ 25 °C(14 ~ 77°F)] in cooling mode	Save at DVM CHILLER

02 Centralized control systems Module Controller > MCM-A00N


Main menu	Sub menu	F	unction	Initial value	Page	Range	Save
	1		AirHeat1 (for Water law)	-	Main unit number 5)*	Outdoor temperature standard 1 [-20 ~ 5°C(-4 ~ 41°F)] in heating mode	Save at DVM CHILLER
	2		AirHeat2 (for Water law)	-	Main unit number 5)*	Outdoor temperature standard 2 [10 ~ 20°C(50 ~ 68°F)] in heating mode	Save at DVM CHILLER
	3		RoomHeat1 (for Water law)	-	Main unit number 5)*	Room temperature standard 1 [15 ~ 24°C(59 ~ 75°F)] in heating mode	Save at DVM CHILLER
6	4	DVM CHILLER detailed setting 2	RoomHeat2 (for Water law)	-	Main unit number 5)*	Room temperature standard 2 [25 ~ 35°C(77 ~ 95°F)] in heating mode	Save at DVM CHILLER
	5		Theat1 (for Water law)	-	Main unit number 5)*	Heating set temperature standard 1 [35 ~ 55°C(95 ~ 131°F)] in heating mode	Save at DVM CHILLER
	6		Theat2 (for Water law)	-	Main unit number 5)*	Heating set temperature standard 2 [35 ~ 55°C(95 ~ 131°F)] in heating mode	Save at DVM CHILLER
	9		Operation pattern for modules (When operating standard pattern by a group) ^{6)*}	-	Module number	0 - Standard 1 - Rotation 2 - Efficiency	Save at DVM CHILLER
	1	Set groups/ modules ^{7)*}	Assign modules/groups to units	-	Unit number	Group(1 ~ 4)/ module (1 ~ 8)/ not set '-'	Save at DVM CHILLER
	2	Set a main unit	Set a main unit for modules	-/-/unit	Module number	Unit number of the selected module	Save at DVM CHILLER
9	3		Set a main unit for groups	-	Group number	Unit number of the selected group	Save at DVM CHILLER
7	4	D. ivereline	Use Cool storage mode	-	1	0 - Disable, 1 - Enable	Save at DVM CHILLER
	5	Device option	Use Hot water mode	-	1	0 - Disable, 1 - Enable	Save at DVM CHILLER
	6	Set a backup module ^{8)*}	Set a backup module	-	Group number	0 – Disable, 1 ~ 8 – The unit number of the selected module	Save at DVM CHILLER

Module Controller > MCM-A00N

Main menu	Sub menu	Function		Initial value	Page	Range	Save
	1	D	Initialize factory setting of the module control (Initialize user/service mode setting value)	0	1	0 - No use, 1 - Reset	-
0	2	Reset	Initialize power master 9)*	0	1	0 - No use, 1 - Reset	-
	3		Initialize DVM CHILLER and module control's addressing	0	1	0 - No use, 1 - Reset	-

^{1)*} In 4-1 menu, the units connected to the module control will be displayed. Select the unit that you want to set and then move to 4-4, 5, 6 menu.

According to outdoor temperature

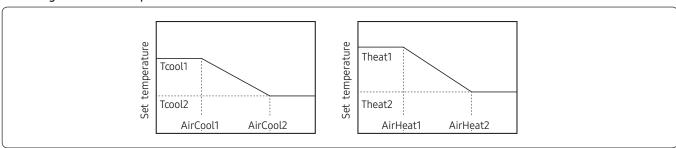

NOTE

• If the unit is not a low temperature water model, the set temperature decided by the Water law control will not decease below 5°C(41°F).


^{2)*} Set a current limit rate. If you set the value less than 100 %, performance may decrease.

^{3)*} Set a level of the Quiet mode. Level 3 is the lowest, performance and efficiency may decrease if the Quiet mode operates.

^{4)*} Select a standard for Water law when operating cooling or heating. Water law is to change the water outlet temperature, considering demand load changes according to outdoor or indoor temperature.

Module Controller > MCM-A00N

According to indoor temperatrue (when using an external temperature sensor)

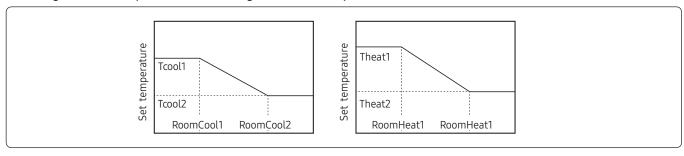

NOTE

- If the unit is not a low temperature water model, the set temperature decided by the Water law control will not decease below 5°C(41°F).
- ^{5)*} A main unit of a group or a module will be displayed. When setting a group, the value for a main unit of the group must be set.
- ^{6)*} When setting "Standard pattern" for a group, you must set an operation pattern for each module in the group.
- ^{7)*} Only when completing setting a group or a module and their main units, the module control will operate properly. When completing the a group or a module setting and then exiting from service mode, the module control will be initialized and the tracking will be performed again.
- $^{8)^*}$ If a backup unit is selected, the unit will operate depending on the standards for DVM CHILLER. A backup module does not operate in the normal operation condition. If performance by operating the normal modules is not enough, the backup module will operate.
- ^{9)*} Power Master Reset is a setting needed to supply optimized power to the module control when multiple DVM CHILLERs are connected to the module control.


Chapter **03**


Integrated Management System

DMS2.5	
MIM-D01AUN	115
S-NET3	
MST-P3P	165

MIM-D01AUN

Features

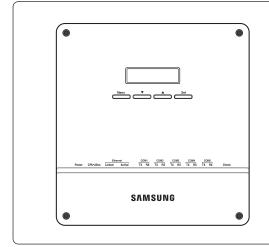

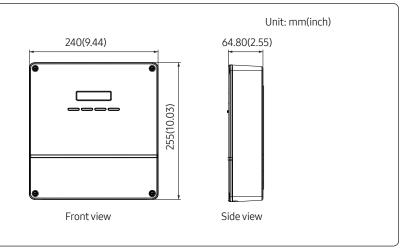

- Built-in web server for PC-independent management and remote access control
- Multiple upper-layer control access (S-NET 3, Web-client)
- Weekly/Daily schedule control
- Power distribution function
- Current time management even during power failure (for 24 hours)

- Emergency stop function with simple contact interface
- Individual/Group control of up to 256 indoor units and ERV, AHU, DVM CHILLER, FCU kit
- User editable control logic
- Accessible level management
- Dynamic security management
- Operation & error history management
- Data storage in non-volatile memory & SD memory

!\ Caution

• You cannot upgrade DMS 2.0 to DMS2.5 by software upgrade.

Product specification

	Source	DC Adaptor					
Power	Input	100~240VAC (±10%), 50/60Hz					
	Output	12V 3A					
Operating tem	perature range	-10°C ~ 50°C (14°F~122°F)					
Operating hu	midity range	0%RH ~ 90%RH					
Communicat	ion method	Lower level: RS485 x 5 Upper level: Ethernet 100 Base-T x 1					
External	Digital Output	8					
connection port	Digital Input	10	0				
	RS485	1000 m (3280ft)					
Maximum length	Digital Output	100 m (328ft)					
of connection	Digital Input	100 m (328ft)					
	Ethernet	100 m (328ft): When there is no repeater					
		Device	Numbers per each channel	Total number for 5 channels			
		Indoor units (including ERV, MCU, FCU KIT)	128	256			
Max. connectable number of device	Control layer	Outdoor units (including MIM-N01, MIM-N10, MIM-F10N,DVM CHILLER unit)	16	80			
		OnOff controller Touch centralized controller	Total 15 (Including Wi-Fi	Total 75 (Including Wi-Fi			
		Wi-Fi kit (MIM-H03UN) PIM interface module (MIM-B16UN)	kit Max.4) 8	kit Max.20) 8			


■ Compatible product

Outdoor unit	AM****X****** AC****X*****	
	OnOff controller (MCM-A202DN)	
Controller	Touch centralized controller (MCM-A300N)	
Controller	PIM interface module (MIM-B16UN)	
	Wi-Fi kit (MIM-H03UN)	

- Conventional communication outdoor unit requires interface module(MIM-N01).
- MIM-B13D, MIM-B13E, MIM-B04A Interface modules cannot be connected.
- To connect ERV, MIM-N10 is required.
- To connect FCU KIT, MIM-F10N is required.
- Conventional PIM must connect to CH4(COM5) of DMS 2.5.


Description of parts

Front

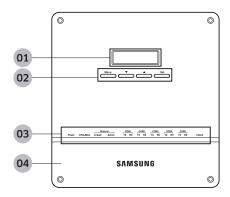


No.	Name	Function
01	LCD display	Shows current time and IP address. Various messages will be displayed depending on button input.
02	LCD operation button	There are 4 buttons (Menu, ▼(Down), ▲(Up), Set) and you can access to menu and move, check the menu.
03	LED Indicator	Check 15 LED status such as Power, CPU-Alive, Ethernet-Linked/Active, COM1~5-TX/RX and Check
04	DMS2.5 Bottom cover	Unfasten 2 screws on the bottom and separate the bottom cover from DMS2.5. Then check cable connection part.

 LED indicator




Item	Name	Status
Power	Power indicator	Turns blue when the power is supplied
CPU Alive	CPU operation indicator	Blinks in orange with 1 second intervals during normal operation
Ethernet - Linked	Internet connection indicator	Turns green during normal connection
Ethernet - Active	Internet data transmission/ reception indicator	Blinks in orange during normal transmission/reception
COM1~5 - TX	OnOff controller/ Outdoor unit data transmission indicator	Blinks in green during normal transmission
COM1~5 - RX	OnOff controller/ Outdoor unit data reception indicator	Blinks in green during normal reception
Check	Indoor/outdoor unit/error check indicator	Turns green when there is an error on more than one indoor/outdoor unit or in communication

Bottom

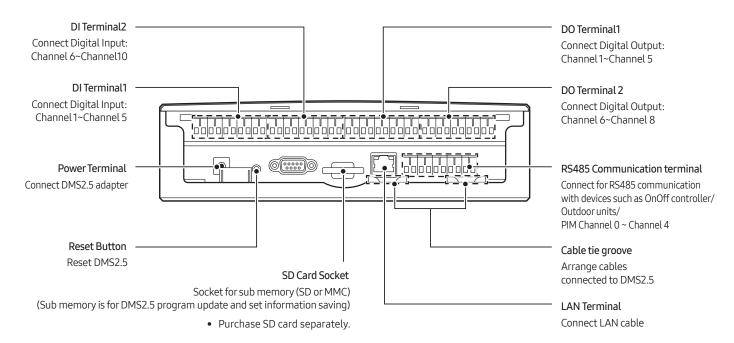


■ Menu and display

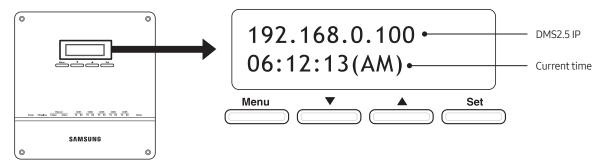


Button	Detail description
LCD display	 General display: Displays IP address of the DMS2.5 and current time In Menu: Displays menu information and set value
Menu	Access menu and select main menuCancel menu setting
•	Move between menuChange the menu settings
	Move between menuChange the menu settings
Set	Access sub menu Save the change of menu settings

Connection diagram

MIM-B16UN(PIM) can be connected with outdoor units or controllers to same channel of DMS2.5.

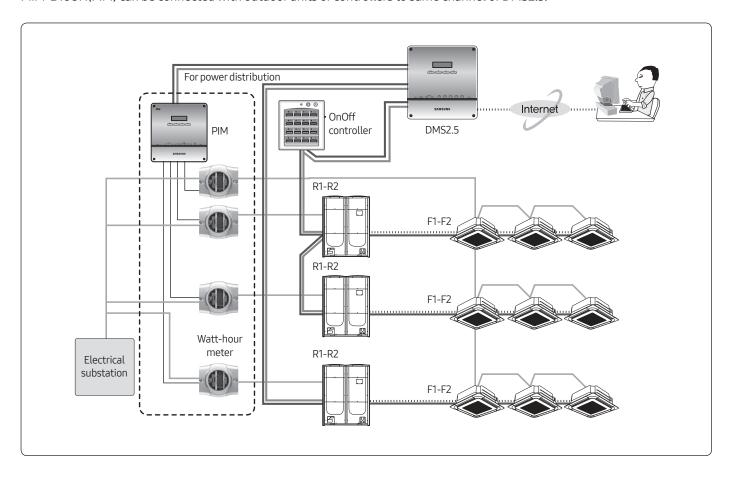

Wiring

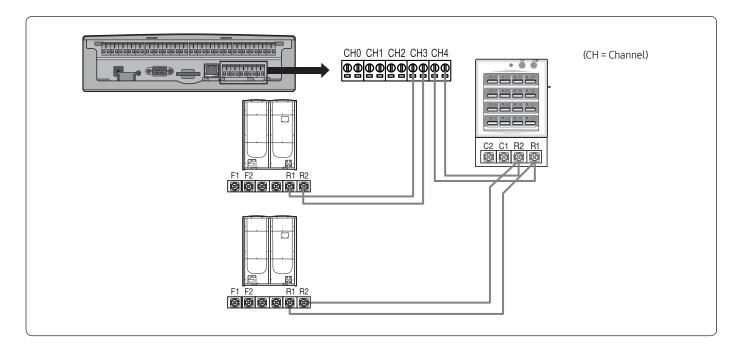

Connecting outdoor unit directly

- Maximum 16 outdoor units can be connected to each channel
- Total 80 outdoor units can be connected


■ Connecting OnOff controller/Touch centralized controller

Maximum 15 OnOff controller/Touch centralized controller can be connected to each channel


Note

- DMS2.5 can connect outdoor unit and OnOff controller/Touch centralized controller at the same time.
- Outdoor unit and OnOff controller/Touch centralized controller can be connected to 1 communication channel at the same time.


■ Connecting with outdoor unit

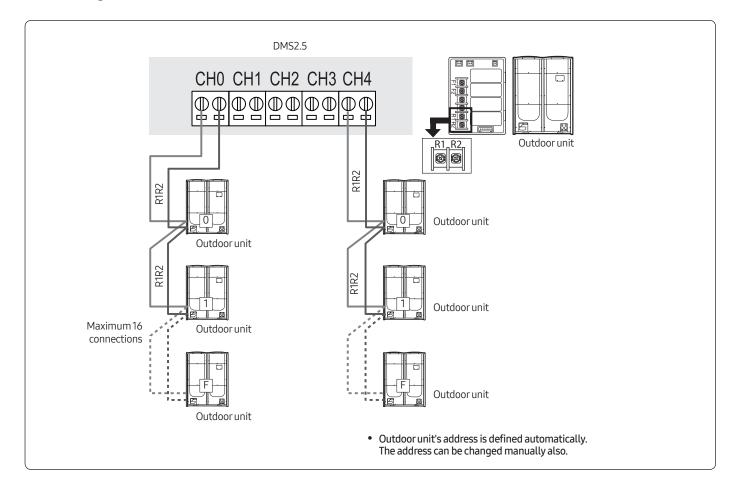


■ Connecting with OnOff controller/Touch centralized controller

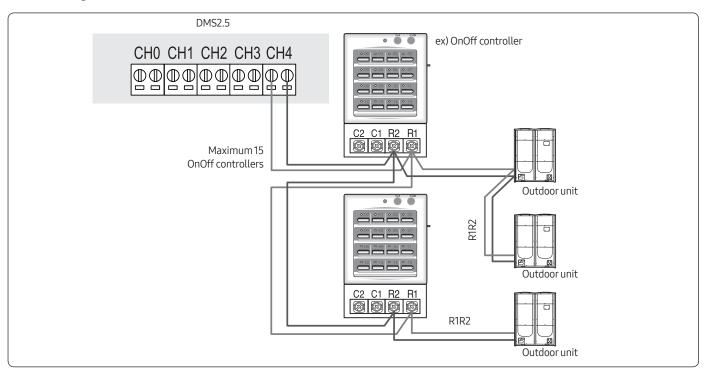


Connecting with outdoor unit and OnOff controller/Touch centralized controller

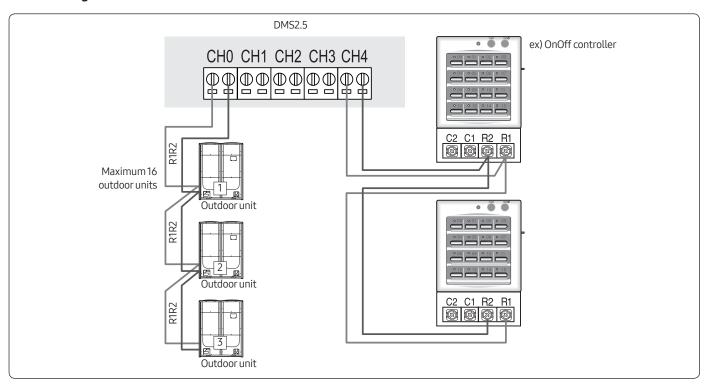

Wiring distance

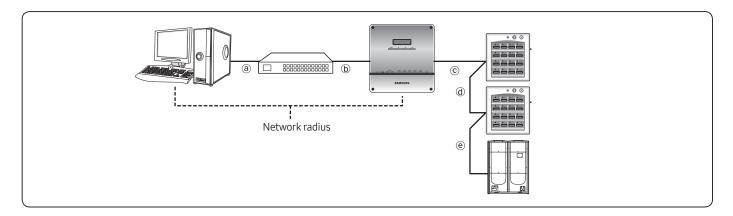

- Distance between DMS2.5 and OnOff controller/Touch centralized controller/outdoor unit
 - Distance from the DMS2.5 to the furthest device cannot exceed 1000m(3280ft).
 - ©+@+@≤1000m
- Distance between DMS2.5 and upper level controller
 - Since DMS2.5 supports 100 Base-T Ethernet, first repeater or upper level controller from the DMS2.5 cannot be further than 100m(328ft) (IEEE 802.3). Therefore, maximum network radius is restricted to 500m(1640ft).

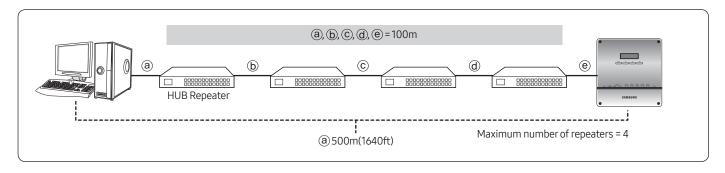


Function

Tracking


Tracking is an operation that finds devices which are connected to DMS2.5.

Through tracking operation, devices which are connected to DMS2.5 can recognize if they are connecting to DMS2.5. To supervise and control system air conditioner using DMS2.5, tracking should be done first.

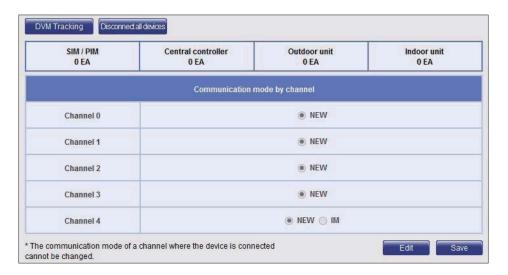


- When outdoor unit or controller is connected to channel, set as "NEW"
- IM mode cannot be set, but it can be used for function change or new function with an updated version.

You can check the number of installed devices, address of the devices or rename the indoor unit after tracking is completed.

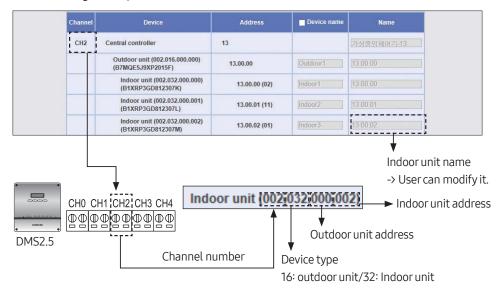


Control & monitoring

DMS2.5 can control and monitor Max 256 devices. (Indoor unit, ERV, AHU, DVM CHILLER, FCU KIT) And it also controls and monitors external contact point (8 Digital input, 6 Digital output.)

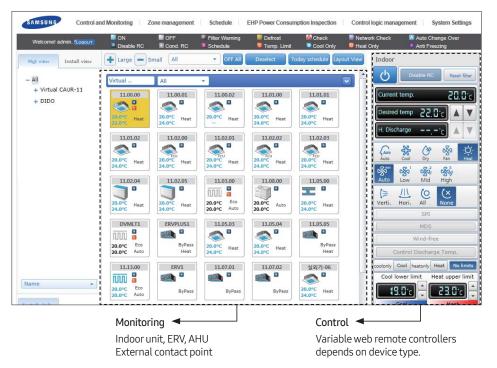

■ Multiple language support

DMS2.5 (MIM-D01AUN) supports 15 languages

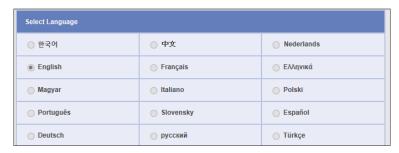

Set silent contol


DMS2.5(MIM-D01AUN) can contol indoor unit without operation beeping sound using below setting option.



- Control and Monitoring: Select this if you want to control silently in 'Control and Monitoring' screen of DMS2.5.
- Schedule: Select this if you want to perform 'Schedule' silently.
- Control logic: Select this if you want to perform 'Control logic' silently.

■ OnOff controller restriction

 DMS2.5 (MIM-D01AUN) can restrict OnOff controller, Touch centralized controller usage.



• Select this if you want to restrict controlling from OnOff controller and Touch centralized controller when you disable RC from the DMS2.5.

Contact point control

You can select emergency operation pattern



Pattern 2



Short external contact: Emergency stop

- Turns off all the indoor units when there is an ON signal input
- All the remote control use is disabled
- Control from S-NET3 is unavailable
- Disable schedule control

Open external contact: Resume operation

- After Emergency stop, the indoor units stay in the current OFF states.
- All the remote control use is restored to the previous state.
- Schedule control is enabled again.

Pattern 3

Schedule control is not interrupted in Pattern 3.



External contact input to DI-1


- Short contact: Starts all indoor unit operation.
- Open contact: Stops all indoor unit operation.

External contact input to DI-2

- Short contact: Disables the use of all wired/ wireless remote controllers.
- Open contact: Enables the use of all wired/ wireless remote controllers.

Pattern 4

 Schedule control is not interrupted in Pattern 4.



External contact pulse input to DI-1


• Short pulse-triggered: Starts all indoor unit operation.

External contact pulse input to DI-2

• Short pulse-triggered: Stops all indoor unit operation.

■ General external contact point control

DMS2.5 has Digital input/output ports to check the external device status or turn them On/Off through contact point.

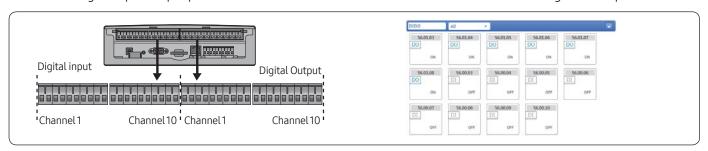

DI: Voltage free contact signal input (Open/Short)

- Channel 1, Channel 2 is occupied with [Emergency stop] function.
- Channel 3~Channel 10: DMS2.5 can monitor the contact signal input state of each channel

DO: Contact signal output (DC12V)

- Channel 1, Channel 2, Channel 9 and Channel 10 is occupied with other functions.
- Channel 3~Channel 8: DMS2.5 can control contact signal output.

Note

• DI1, 2/DO1, 2, 9, 10 will be excluded from control and monitoring since it is being used by internal function of DMS2.5.

Time sync with the wired remote control



- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] on [Time settings on the wired remote control] in [Time sync with the wired remote control] menu.
 - Set the time to use.
- 3 Click [Edit] on [Time sync with the wired remote control using RMS] in [Time sync with the wired remote control] menu and click [Apply].
 - Be sure to click [Apply] to start auto sync through RMS service.
- 4 Click [Save].

Daylight Saving Time Setting


- 1 Click [System Settings] -> [System environment setting] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] on [Daylight Saving Time Setting].
- 3 If the DMS2.5 can be connected to the Internet, select 'Apply (Internet)'. Not only the Daylight Saving Time function runs automatically, but also the time synchronization of DMS2.5 runs through communication with an external time server.
- 4 If the DMS2.5 is not connected to the Internet, set the Start date and End date after selecting Apply (Manual).
- 5 Click [Save].

Note


- Time setting is available only in some wired remote controllers that can support time setting function through the DMS.
- You can use the auto time sync function of the wired remote controller through the RMS only while using the RMS service. The time for the wired remote controller is automatically set based on the RMS time once a day.

Indoor unit usage restriction

- Operation limit: To prevent the wrong operation mode setting, it can limit the operation mode of indoor unit.
- Temperature limit: It can set the upper and lower temperature limit in Cool/Heat mode.

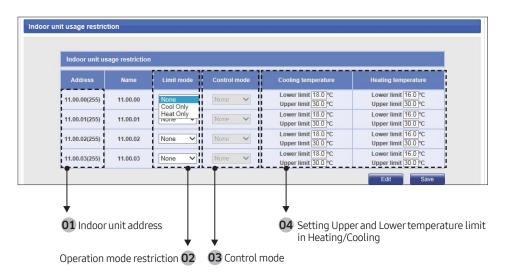

Check the indoor unit address.

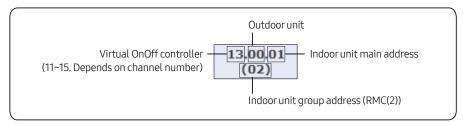

- 2 Select the Limit mode
 - Indoor units within same outdoor unit must be set in same limit mode.
 - All indoor units of one outdoor unit set same operation mode restriction automatically.
- 3 Control mode will be set automatically depends on the seleceted restricted mode
 - Ex) When the restricted mode is set to [Cool-only] and then [Control mode] is set to [Cool] automatically If user set [Heating mode] using remote controller → Indoor unit ignores the command.
- 4 Set the Upper and Lower temperature limit in Heating/Cooling.
 - Upper and Lower temperature limit in Heating/Cooling can be set differently for each indoor unit. [Cooling:18°C~30 °C (64°F~86°F), Heating:16 °C~30 °C (61°F~86°F)]

Logic control

What is logic control?

User can control the air conditioner, ERV, AHU and digital output depending on the conditions, such as room temperature and outdoor temperature, set by the user. Input condition can be used with parameter and it will be calculated with arithmetic equation. Schedule function executes operation by time but logic control executes operation according to the conditions that set by the user.

Examples of utilizing the logic control

- Case 1) Government regulates the lowest room temperature to be 26°C (78°F) in public places. When the room temperature is lower than 26°C (78°F), administrator must turn off all the air conditioners in the area. Is there any way for the air conditioner to turn off automatically depending on the certain room temperature?
- Case2) During spring and fall, it is cold in the morning and warm in the afternoon. Therefore, I'm using the air conditioner in heating mode in the morning and depending on the outdoor temperature?
- Case 3) I'm using air conditioner with ERV. In the days with the outdoor temperature relatively lower than the indoor, I want to use ERV instead of the air conditioner to ventilate and minimize the air conditioner use. Is there any way to set the air conditioner or ERV to operate appropriately and automatically depending on the temperature?



Input

- 1 Select the factor to input condition
 - · Device, factor
- **2** Edit the condition
 - Compound factor/Comparison operator
 - Standard value/Duration

Compound factor AND OR

Compariso operator
=
=>
=<

< \neq

Command
Power
Desired temp.
Mode
Fan speed
Airswing
Enable/Disable RC
Limit mode

EUILIACIOI		
Single factor	Power Current temp. Desired temp. Outdoor temp. Mode Fan speed Air flow Enable/Disable RC Trouble, Limit mode	
Arithmetic factor	+ -	Current temp. Desired temp. Outdoor temp.
Function factor	Average	Current temp. Desired temp. Outdoor temp.

Edit factor

Output	
Select output factor	

- · Device, factor
- Edit output
 - Create control

Туре	Item	Value	Remarks
	Current electric control option	50%, 55%, 60%, 65%, 70%, 75%, 80%, 85%, 90%, 95%, 100%	Control impossible
	Current heating capacity calibration	25kg/cm², 26kg/cm², 27kg/cm², 28kg/cm², 29kg/cm², 30kg/cm², 31kg/cm², 32kg/cm², 33kg/cm²	Control impossible
	Current cooling capacity calibration	5~7°C(41~45°F), 7~9°C(45~48°F), 9~11°C(48~52°F), 10~12°C(50~54°F), 11~13°C(52~55°F), 12~14°C(54~57°F), 13~15°C(55~59°F)	Control impossible
Outdoor unit	Electric control option	50%, 55%, 60%, 65%, 70%, 75%, 80%, 85%, 90%, 95%, 100%	
	Heating capacity calibration	25kg/cm², 26kg/cm², 27kg/cm², 28kg/cm², 29kg/cm², 30kg/cm², 31kg/cm², 32kg/cm², 33kg/cm²	
	Cooling capacity calibration	5~7°C(41~45°F), 7~9°C(45~48°F), 9~11°C(48~52°F), 10~12°C(50~54°F), 11~13°C(52~55°F), 12~14°C(54~57°F), 13~15°C(55~59°F)	
	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-
	Power	On, Off	-
	Current temp.	Number	Control impossible
	Desired temp.	Number	-
	Outdoor temp.	Number	Control impossible
Indoor unit	Operation mode	Auto, Cool, Dry, Fan, Heat	-
	Fan speed	Auto, Low, Mid, High	Turbo is available when the device supports the Turbo fan speed.
	Air direction	Vertical, Horizontal, All, None	-


Туре	Item	Value	Remarks
	RC usage	Enable RC, Disable RC, Cond. RC	-
	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-
	Power	On, Off	-
	Operation mode	Auto, HeatEx, Bypass, Sleep	-
	Fan speed	Low, High, Turbo	-
ERV	RC usage	Enable RC, Disable RC, Cond. RC	-
	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-
	Power	On, Off	-
	Outdoor temp.	Number	Control impossible
	ERV mode	Auto, HeatEX, Bypass, Sleep	-
	ERV fan speed	Low, High, Turbo	-
ERV PLUS	Operation mode	Auto, Cool, Heat, Off	-
	RC usage	Enable RC, Disable RC, Cond. RC	-
	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-
	Power	On, Off	-
	Operation mode	Auto, Cool, Fan, Heat	-
	OA intake temp.	Number	Control impossible
	Outdoor temperature	Number	Control impossible
Fresh	Cool discharge temp.	Number	-
duct	Heat discharge temp	Number	-
	RC usage	Enable RC, Disable RC, Cond. RC	-
	Power	On, Off	_
	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-

03 Integrated Management System DMS2.5 > MIM-D01AUN

Туре	Item	Value	Remarks
	Current temp.	Number	Control impossible
	Desired temp.	Number	-
	Outdoor temp.	Number	Control impossible
AHU	Operation mode	Auto, Cool, Dry, Fan, Heat	-
АПО	RC usage	Enable RC, Disable RC, Cond. RC	-
	Power	On, Off	-
	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-
	Status	On, Off	Control impossible
DI	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-
	Status	On, Off	-
DO	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-
	Status	On, Off	Control impossible
	Status	On, Off	-
	Power	On, Off	-
Hydro Unit,	Current temp.	Number	Control impossible
Hydro Unit HT,	Desired temp.	Number	-
Single EHS	Current water out temp.	Number	Control impossible
	Desired water out temp.	Number	-
	Outdoor temp.	Number	Control impossible

Туре	Item	Value	Remarks
туре	iteiii	value	Hydro unit HT
	Operation mode	Auto, Cool, Heat	cannot set Cool mode
	DHW power	On, Off	-
Hydro	Current DHW temp.	Number	Control impossible
Unit, Hydro	Desired water out temp.	Number	-
Unit HT, Single	DHW mode	Eco, Standard, Power, Force	'Force' is only for Single EHS
EHS	RC usage	Enable RC, Disable RC, Cond. RC	-
	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-
	Power	On, Off	-
	Current temp.	Number	Control impossible
	Desired temp.	Number	-
DVM	Outdoor temp.	Number	Control impossible
CHILLER	Operation mode	Cool, Cool Storage, Heat, Hot Water	-
	RC usage	Enable RC, Disable RC, Cond. RC	-
	Error detection True, False	True, False	Control impossible
	Power	On, Off	-
	Current temp.	Number	Control impossible
	Desired temp.	Number	-
	Operation mode	Auto, Cool, Fan, Heat	-
FCU Kit	Fan speed	Auto, Low, Mid, High	-
	RC usage	Enable RC, Disable RC, Cond. RC	-
	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-


Editing input factor

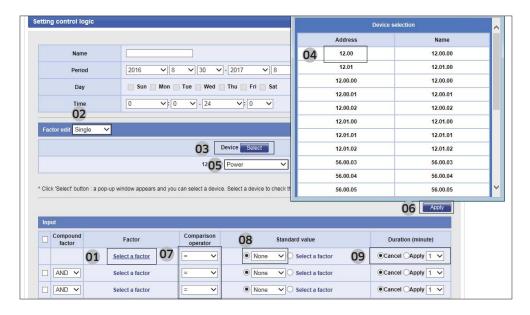

- 01 Click "Select a factor". ▶ 02 Select type of the factor ▶ 03 Click "Select a device" ▶
- 04 Select the device from the list. ▶ 05 Select a detail item ▶ 06 Click "Apply". ▶
- 07 Select the comparison operator ▶ 08 Select a standard value ▶ 09 Select the duration
- Single factor: 1 device and 1 factor.




 • Arithmetic: It means 2 devices are connected by arithmetic operator.



 Function: Use average value of various conditions from the device and create it as a factor.






- Compound factor: AND, OR, No selection
 Ex) Apply 'AND' or 'OR' to 3 factors → (input 1) AND (input 2) OR (input 3)
- Comparison operator: =, =>, =<, <, >, ≠
- Standard value: Standard value of the factor
 Ex) When the factor is "Outdoor temperature of the indoor unit number 00", then standard value is value of the "Outdoor temperature". → "Outdoor temperature of the indoor unit number 00" > 20
- Duration: Duration can be set between 1~60 min.

Item	Comparison operator	Standard value
Power	=, ≠	On, Off
Current temp	=, =>, =<, <, >, ≠	Temperature value (number)
Desired temp	=, =>, =<, <, >, ≠	Temperature value (number)
Outside temp	=, =>, =<, <, >, ≠	Temperature value (number)
Mode	=, ≠	Auto, Cool, Dry, Fan, Heat
Fan speed	=, ≠	Auto, Low, Med, High
Airflow	=,≠	Vertical, Horizontal, All, None
Enable RC	=, ≠	ON, OFF, Level 1
Trouble	=,≠	True, False
Limit mode	=,≠	None, Cool Only, Heat Only

Editing output factor

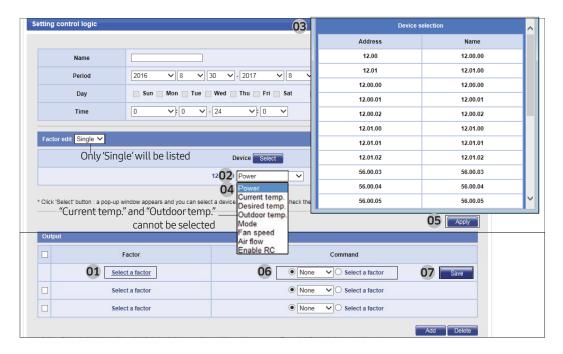

- 01 Click "Select a factor". ▶ 02 Click "Select a device". ▶ 03 Select the device from the list. ▶
- 04 Select a detail item to control. ▶ 05 Click "Apply". ▶ 06 Select "Command". ▶ 07 Click "Save".

Control example - Setting

Ex) Set the ERV to turn off together when the indoor unit turns off


1 Click [Control logic management] → [Setting control logic] from DMS2.5 menu. Click [Register] to create new control logic.




2 Enter Name, period/day and time for new control logic.




Create input condition: Click [Select a factor] from the 'Input' window.

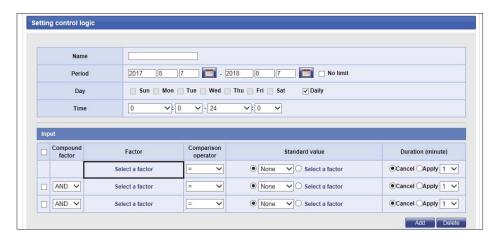


Click [Select], then [Device selection] window will pop up. Select a indoor unit to apply the new control logic.

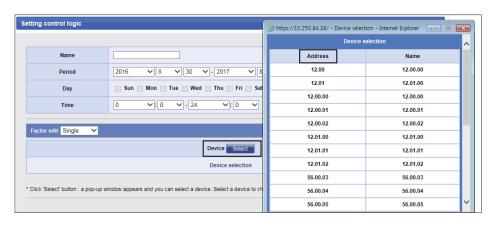


- **5** Create input condition: When the device is selected, click [Power] and click [Apply].
 - [Power] means the operation state (On/Off).

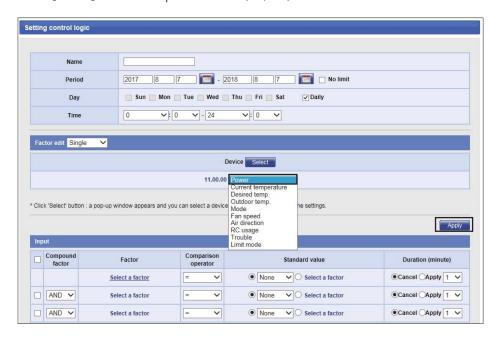

 - **6** Create input condition: Select '=' as a comparison operator and select "Off" as a standard value.
 - Meaning: Execute output control when 12.00.00 device is off.




7 Create output: From the output window, select the device to apply the control when input condition is satisfied. Click [Apply] when selection is completed.

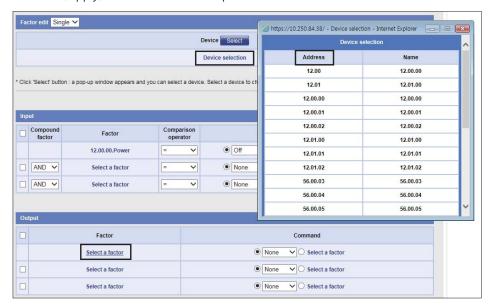

8 Create output: Select "Power" as a factor of the selected device and click [Apply].



- **9** Create output: From the output window, select the control to be executed when input condition is satisfied.
 - Turn off the ERV no. 0

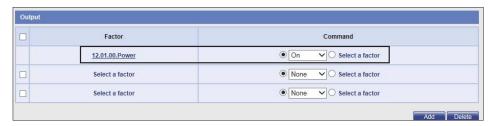


- **10** Click [Save] when the setting is completed.
- 11 To apply the new logic control, select the created logic and click [Apply].



Control example – Control logic


- Ex) Control logic 1: Turn on 4 indoor units when outdoor temperature is 30°C or higher. Control logic 2: Turn off 4 indoor units when outdoor temperature is 26°C.
- Control logic 1




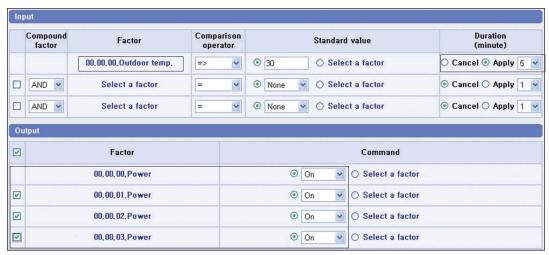

- 1. Input: When outdoor temperature is 30°C (86°F) or higher.
- 2. When condition 1 lasted for 5 miniute.
- 3. Output: Turn on 4 indoor units.

• Control logic 2

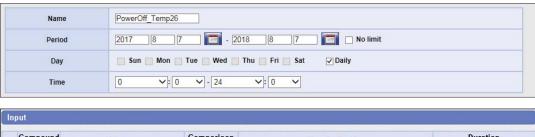

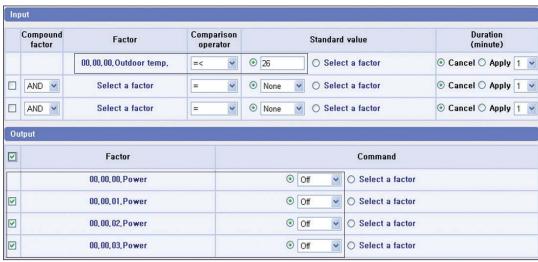

- 1. Input: When outdoor temperature is 26°C(78°F) or lower.
- 2. Output: Turn off 4 indoor units.

• Register control logic




· Control logic applied



Application completed


■ Power distribution

Where does power consumption occurs?

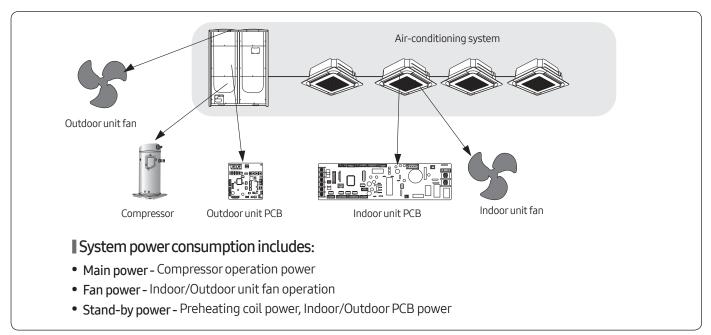

DMS2.5 power distribution theory

All the system information of power and indoor/outdoor operation is always monitored by the DMS2.5 for power distribution calculation.

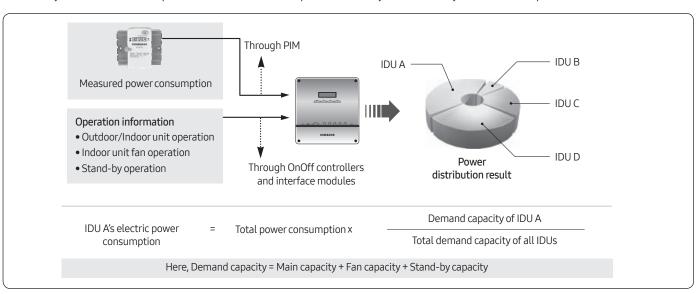

Note

- Demand capacity means the value that parameters of different units like required power and refrigerant amount are transformed into as a common number to make easy algebraic calculation.
- Power distribution is not supported to ERV, DVM CHILLER, FCU KIT.
- You can check DVM CHILLER's power consumption in the meter history menu. (PIM and watt-hour meter must be connected)

Main capacity

This is determined dynamically with the combination of various refrigerating parameters such as difference between room and set temperature or evaporator input/output temperature.

These parameters, as a result, determine the refrigerant amount flowing into the indoor unit by controlling EEV steps.

Fan capacity

This is constant value for indoor unit models. It differs depending on indoor units of different capacity.

When the indoor unit starts Cooling, Heating, Auto and Fan modes, fan capacity values of the indoor units are always monitored by the DMS2.5. DMS2.5 gathers capacity of zero value when they stop operating.

Stand-by capacity

Stand-by capacity is constant for all indoor units regardless of their operations. Since stand-by power is consumed all the time by PCBs and preheating coils in the outdoor unit, whose value is monitored with the same fraction which is relatively small compared to main capacity or fan capacity.

What if the room temperature begins to reach the set temperature?


If the room temperature begins to reach the set temperature, the indoor unit does not have to extract the full refrigerant amount to keep the set condition. Capacity from the indoor unit goes down to indicate the outdoor unit that it does not need refrigerant at the full capacity state.

When the room temperature has reached the set temperature, there is no need to pump the refrigerant into the indoor unit. Indoor unit goes into the thermally OFF state and sends capacity of zero value to the outdoor unit and the DMS2.5, which results in fan or stand-by power distribution only.

Capacity accumulation and power distribution


DMS2.5 gathers power consumption and capacity values during one-day.

At midnight, 1-day power consumption is distributed to the indoor units using the gathered information.

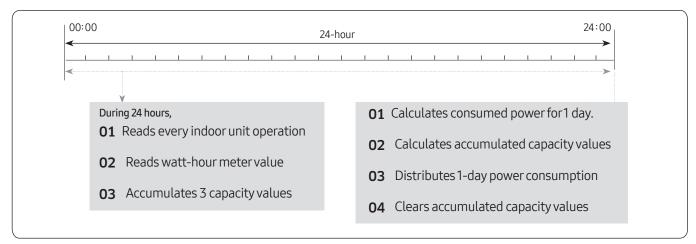


Not equal stand-by power distribution (In case all the indoor units are stopped)

Since there always exists error in each power consumption amount, distributed stand-by power may not be equal for different air-conditioning system. But the difference is so small that it is negligible.

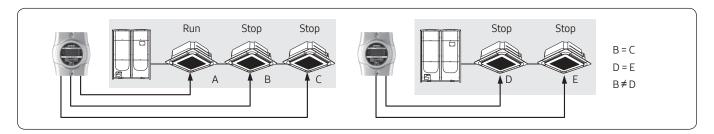


• Power distribution equation

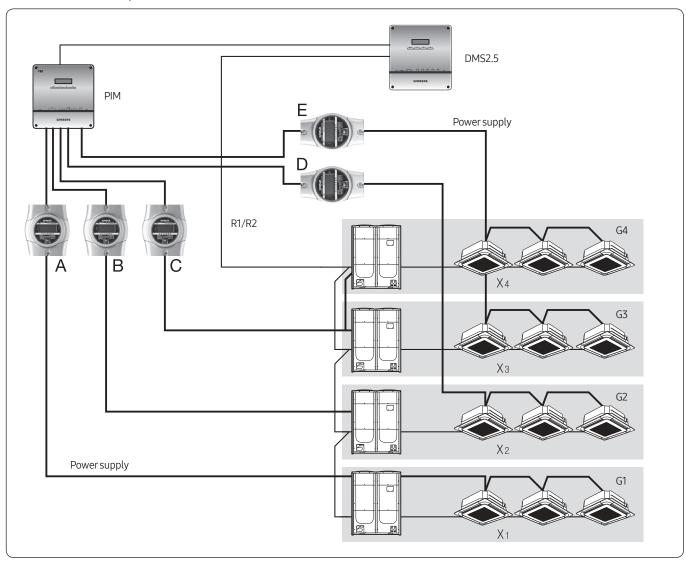

• When configuring the DMS2.5 and the whole system, mapping of watt-hour meters for indoor/outdoor units must be precisely assigned for correct power distribution.


Indoor unit power X in G1 = Watt-hour A x —	Main + Fan + Stand-by capacity of indoor unit X
indoor drift power X in Gr – waterloai AX —	Total capacity of G1
Indoor unit power X in G2 = Watt-hour B x —	Main + Fan + Stand-by capacity of indoor unit X
ilidool dilit powel XIII dz – watt-flodi BX —	Total capacity of G2
+ Watt-hour D x –	Main + Fan + Stand-by capacity of indoor unit X
	Total capacity of G2
Indoor unit power X in G3+G4 = Watt-hour C x —	Main + Fan + Stand-by capacity of indoor unit X
ilidool dilit powel XIII 93+94 – Watt-flodi CX —	Total capacity of G3 + G4
+ Watt-hour E x —	Main + Fan + Stand-by capacity of indoor unit X
· Watt-floui L X —	Total capacity of G3+G4

• Example Suppose capacity values accumulated at 24:00 during one whole day is as follows.

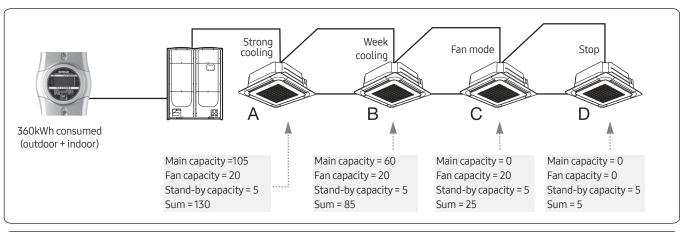

$$\begin{array}{c} \text{Pd of Indoor unit A} = \cfrac{\text{Indoor unit capacity}}{\text{Total capacity}} & x \text{ Total kWh} = \cfrac{130 \times 360}{130 + 85 + 25 + 5} = 192.020 \, \text{kWh} \\ \hline \\ Pd of Indoor unit B = \cfrac{85 \times 360}{130 + 85 + 25 + 5} = 124.900 \, \text{kWh} \\ \hline \\ Pd of Indoor unit C = \cfrac{25 \times 360}{130 + 85 + 25 + 5} = 36.735 \, \text{kWh} \\ \hline \\ Pd of Indoor unit D = \cfrac{5 \times 360}{130 + 85 + 25 + 5} = 7.347 \, \text{kWh} \\ \hline \end{array}$$

Installation example (Allowed)

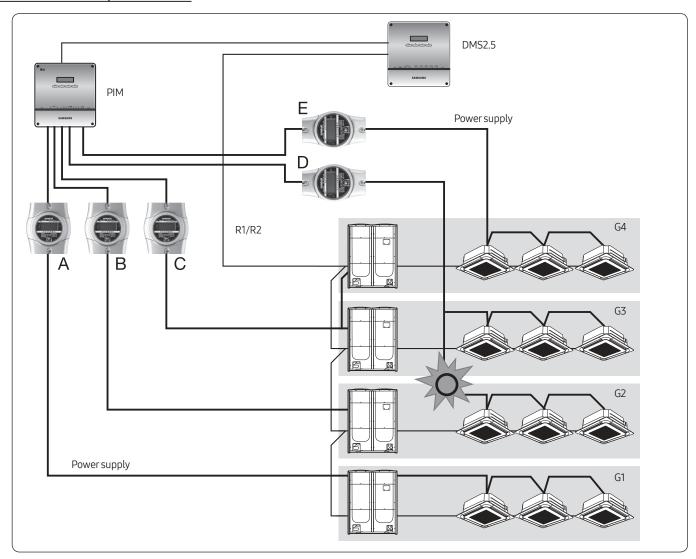


■ Mapping watt-hour meters to indoor/outdoor units

- Watt-hour meter A is mapped to all indoor/outdoor units in G1.
- Watt-hour meter B is mapped to the outdoor unit in G2.
- Watt-hour meter C is mapped to the outdoor units in G3 and G4.
- Watt-hour meter D is mapped to the indoor units in G2 + G3.
- Watt-hour meter E is mapped to the indoor units in G4.
- Installation above is allowed with proper mapping configuration.

Note

• Watt-hour meter can be shared to the multiple indoor/outdoor systems.

Installation example (Not allowed)

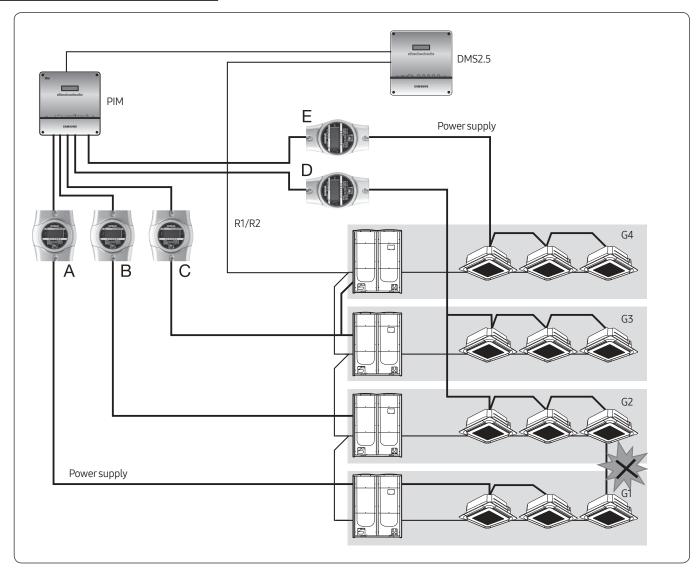


All indoor units in one outdoor unit must have the same power source.

• Installation above cannot be available for the reason that one indoor unit in G1 has different power source from the other indoor units. In this case, fractional power of D consumed by the separate-powered indoor unit in G1 is distributed to the indoor units in G2 and G3.

Setting the inspection section


If you want to check the distribution result by time period, set the time section. You must use S-NET3 to check the distribution result by time period.

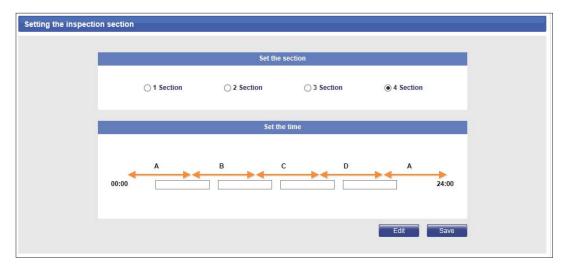


Setting the power distribution environment

This is important task for checking precise energy consumption of the outdoor/indoor unit. Each watt-hour meter connected to outdoor unit must be checked for which channel of the PIM interface module it is connected. Then PIM channel must be set according to the outdoor unit.

Indoor units must be checked which watt-hour meter it is connected to and then PIM channel of the corresponding watt-hour meter must be set according to indoor unit PIM channel as shown below.

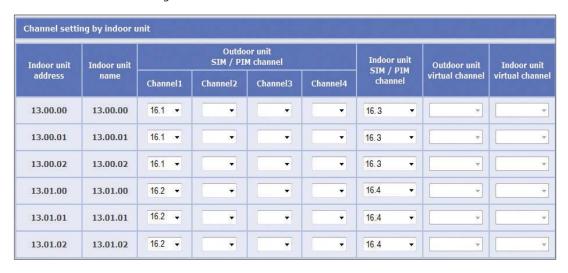

• Example of watt hour meter installation 1 Installing watt-hour meter to outdoor/indoor unit

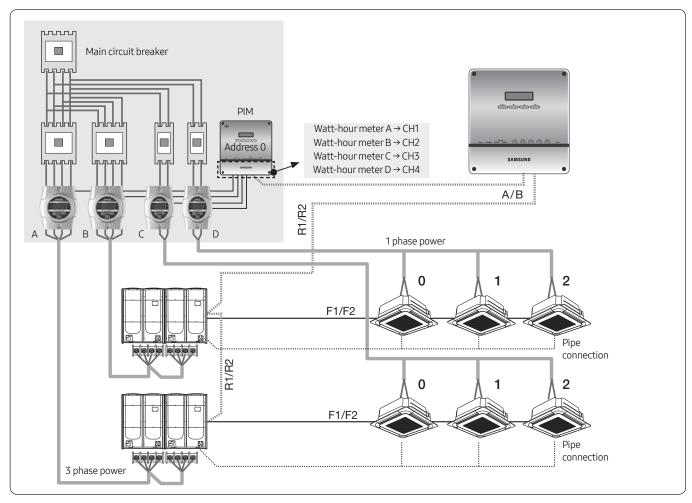


Indoor unit Indoor unit address name	Outdoor unit SIM / PIM channel			Indoor unit	Outdoor unit	Indoor unit		
	Channel1	Channel2	Channel3	Channel4	SIM / PIM channel	virtual channel	virtual channel	
13.00.00	13.00.00	16.1 ▼			-	16.3	_	_
13.00.01	13.00.01	16.1 ▼	-	-		16.3 ▼	-	-
13.00.02	13.00.02	16.1 ▼			-	16.3 🔻	-	-
13.01.00	13.01.00	16.2 ▼		•		16.4 →	-	-
13.01.01	13.01.01	16.2 🔻		-	•	16.4 →	-	
13.01.02	13.01.02	16.2 →	-	-	•	16.4	-	_

! Caution


• Connect appropriate watt-hour meter to outdoor/indoor unit.


• Example of watt hour meter installation 2 Installing 1 watt-hour meter to all indoor units

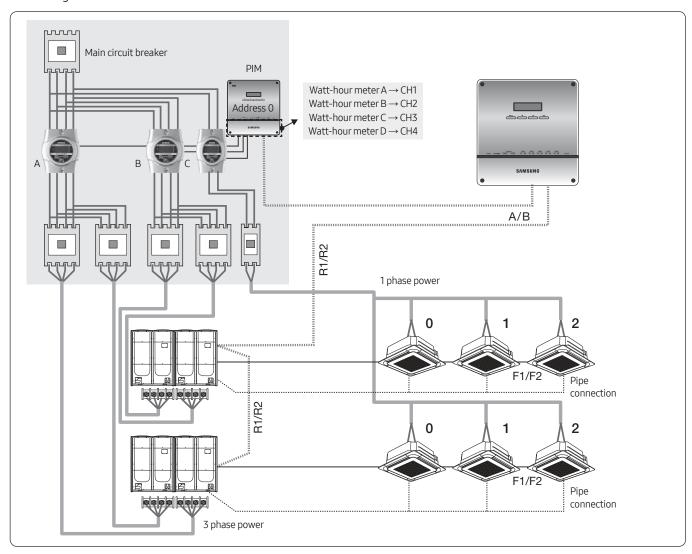

Indoor unit Indoor unit address name	Indoor unit		Outdoor unit SIM / PIM channel				nit	Outdoor unit	Indoor unit	
	Channel1	Channel2	Channel3	Channel4	SIM / PI channe		virtual channel	virtual channel		
13.00.00	13.00.00	16.1 ▼	-	•		16.3	Ţ	-		 Since all indoor units are connected to 1 watt-hour meter, PIN channel address of a indoor units is same.
13.00.01	13.00.01	16.1 🕶	-			16.3	-			
13.00.02	13.00.02	16.1 ▼		-		16.3	٠	_	•	
13.01.00	13.01.00	16.2 ▼				16.3	¥	·	-	
13.01.01	13.01.01	16.2 🔻	7	-	÷	16.3	¥	-	-	
13.01.02	13.01.02	16.2 →		-	-	16.3	+	-	-	indoor dilits is sail

• Example of watt hour meter installation 3 Using CT watt-hour meter to and outdoor unit

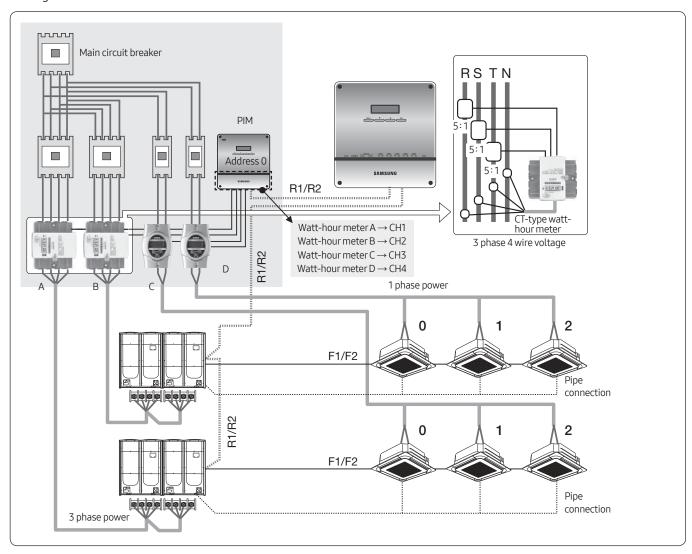

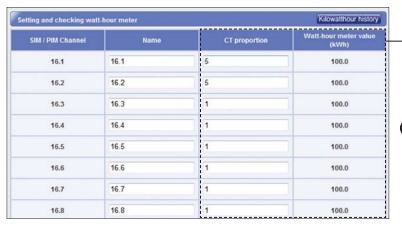

[Setting and checking watt-hour meter] From the menu, CT proportion of the CT watt-hour meter must be entered.

Note


• After entering CT proportion of the CT watt-hour meter, watt-hour meter must be set to correct outdoor/ indoor units from the [Channel setting by indoor unit] window.

• Checking the watt-hour meter connection Kilowatthour history of the watt-hour meter, connected to each PIM interface module, can be checked. Maximum 365 days worth of Kilowatthour history can be checked.






• Setting virtual watt-hour meter When watt-hour meter or PIM interface module is not installed to a watt-hour meter channel, virtual channel can be used to manually distribute the power distribution

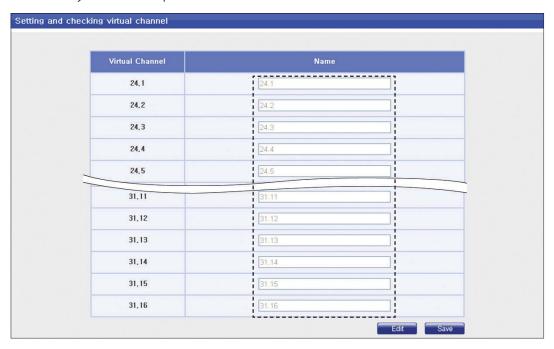


- Maximum 128 virtual channel can be used.
- Address of the virtual channel will be displayed as following. (24~31).(1~16)

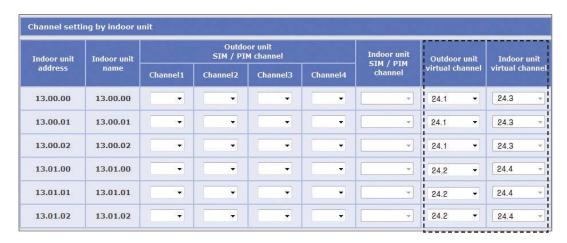

Note

• When PIM interface module is not installed, PIM channel of the outdoor/indoor unit will be inactive.

• Caution Power distribution function is only supported to air conditioners and AHU. ERV is not supported.

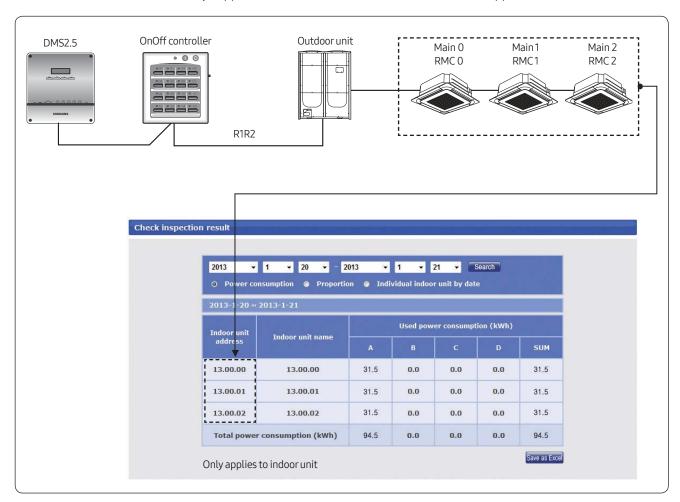

User authorization management



- Admin (Administrator): Can access all menus, accessible menu cannot be changed
- Manager: Default setting Can access all menus, accessible menu can be changed.
- Regular user: Default setting Can access [Control and monitoring] menu only.

■ Editing user authorization



• Accessible menu authorization of manager is editable. Select/deselect the checkbox of the function and save the setting to change the authorization.

■ User management



• You can add or delete the user who access DMS2.5 through web.




• Authorization of the added user can be set from [Admin], [Manager], [Regular user].


Zone management

- Zone edit: User can arrange the indoor units for convenient management.
- Setting the user authorization: Can restrict accessible indoor units depending on the user ID.

Zone edit

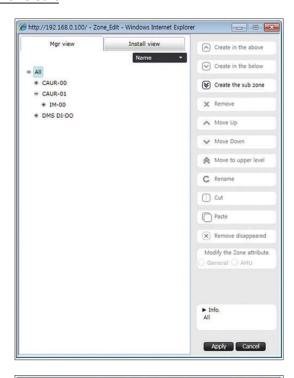

Initial setting

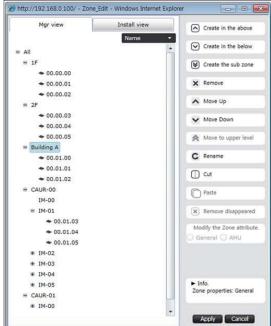


Zone edit:

- Add, delete zone
- Change name
- Move indoor unit

Setting the user authorization



- Authorization to control and monitor a zone of indoor units can be assigned according to User ID
- 1 Select the zone and select a user ID who can access the zone.
 - Access authorization can be set by zone.
- **2** After setting, click [Save] to complete the authorization setting.

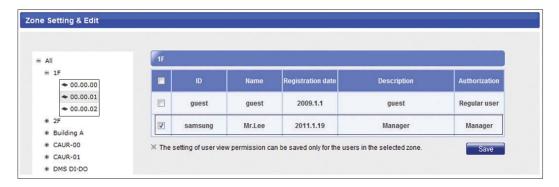

• User access authorization applies to all indoor units of the zone in same manager.


■ Control for unoccupied room

- It is the function to keep the room temperature when user goes out for a while.
- User can set the detail operation of [Unoccupied room control] using DMS2.5 or S-NET pro2.

Note

 Applicable indoor unit and controller Indoor unit: New communication applied DVM indoor unit. (Software version check is required) FCU KIT: MIM-F00N

Diagram

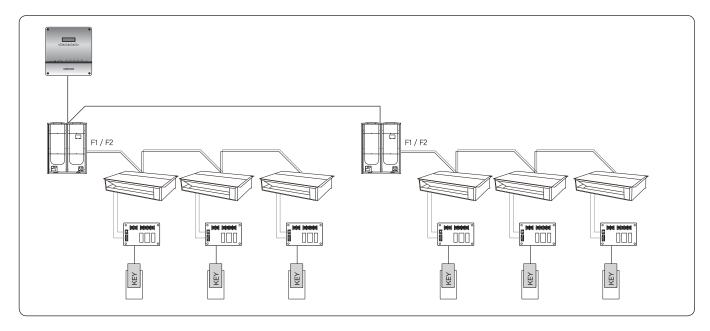


Requirement

- To use this function, external contact interface module (MIM-B14) should be installed to indoor unit.
- Installation option code of indoor unit [SEG14] should be set

[Installation option code SEG14]

SEG14 Contact		Operation of [Unoccupied room mode]				
		Indoorunit	Use of R/C	Use of upper controller		
1	Close	ON	0	0		
'	Open Operates as [Unoccupied roor		0	0		
2	Close	Stay OFF	0	0		
	Open	Operates as [Unoccupied room mode]	X	Х		
7	Close Operates as last status before [Contact = Open]		0	0		
)	Open	Operates as [Unoccupied room mode]	X	Х		

Setting

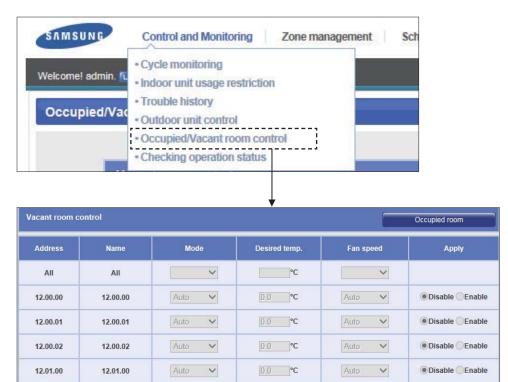

- Control and Monitoring] > [Occupied/Vacant room control] menu: You can see indoor units which can support [Vacant room control]
- Set [Apply]
 - Enable: Indoor unit operates as [Vacant room control] when contact status is open.
 - Disable: Indoor unit stops when contact status is open.
- Set detail operation
 - Mode, Desired temperature, fan speed
 - Setting value is saved in indoor unit memory. (The setting value will be maintained in case of power failure or DMS2.5 removal)


■ Pre-heating/Pre-cooing control for occupied room

- This is a function to detect a user entrance (via an external contact) and to automatically perform the pre-heating, precooling.
- It applies when the contact state of MIM-B14 which is connected to the indoor unit is Close.
- Detailed pre-operation settings is set by DMS2.5 or S-NET Pro2.
- Occupied and unoccupied control can be used at the same time.

Note

• Applicable indoor unit and controller Indoor unit: New communication SINGLE indoor unit Controller: DMS 2.5, S-NET pro2

Diagram

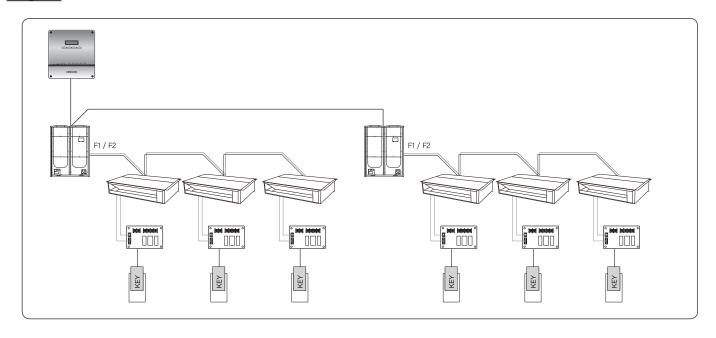


Requirement

Casa	Indoorunit	DMS2.5/ S-NET PRO2	Description	
Case	External contact control (Installation option SEG14)	Vacant room control	In open contact (=Vacant room)	Use of R/C in open contact
1	On/Off Control (1)	Enable	On as [setting of Vacant room control]	0
2	On/On Control (1)	Disable	Off	0
3	Off only Control (2)	Enable	On as [setting of Vacant room control]	X
4	Off offly Control (2)	Disable	Off	X
5	Window Control (3)	Enable	On as [setting of Vacant room control]	X
6	willidow Collifol (3)	Disable	Off	X

Case	Indoorunit	DMS2.5/ S-NET PRO2	I Description		
Case	External contact control (Installation option SEG14)	Occupied room control	In close contact (=Occupied room)	Use of R/C in close contact	
1	On/Off Control (1)	Enable On as [setting of Occupied room control]		0	
2	On/On Control (1)	Disable	On as [last On operation mode]	0	
3	Off only Control (2)	Enable	On as [setting of Occupied room control]	0	
4	On only control (2)	Disable	Off	0	
5	Window Control (3)	Enable	Case1) If Indoor unit was Off at last open contact → Off Case2) If Indoor unit was On at last open contact → On as [setting of Occupied room control]	0	
6		Disable	On as [last operation mode]	0	

Setting Auto Change Over

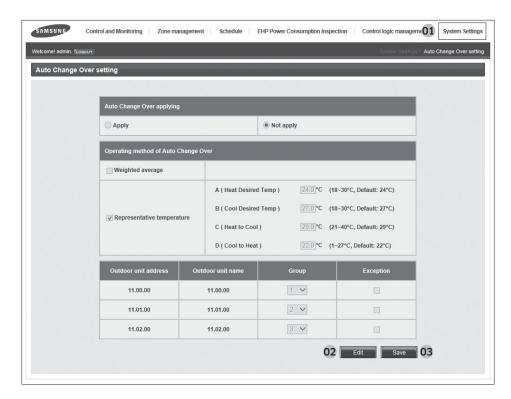

- 1 Click [System Settings] \rightarrow [Auto Change Over setting] when DMS2.5 web page menu screen appears.
- Using the 'Auto Change Over' function, DMS2.5 can control indoor units to start auto cooling or auto heating.
- When using auto cooling or heating, DMS2.5 operates the Fan → Cool or Heat → Auto modes in order. For ERV PLUS, it operates the Fan → Cool or Heat modes in order.
- 2 Click [Edit] to configure the Auto Chang Over settings.
 - ▲ [Apply] / [Not apply]
 - When using the Auto Change Over function, 'A' appears in the [Control and Monitoring] screen on the indoor unit, and the indoor unit cannot control its operation mode separately.



- **B** [Weighted average]: Configure the settings so that indoor units automatically switch between cooling and heating modes according to the set temperature, current temperature, and cooling/heating capacity of the indoor units that are turned on.
 - Let's assume, for example, indoor units of the same capacity have been installed. If a larger number of the units have desired temperature lower than the current temperature, all of the units automatically switch to cooling mode. If a larger number of the units have the set temperature higher than the current number, all of the units automatically switch to heating mode.

- [Representative temperature]: Sets to run auto cooling or heating operation, according to the average temperature of the turned-on indoor units.
- DMS 2.5 sets the indoor units to the auto cooling mode and keeps the temperature according to 'B (Heat Desired Temp)' when the average temperature of the units currently running is higher than 'C (Heat to Cool)'. DMS 2.5 also sets the indoor units to the auto heating mode and keeps the temperature according to 'A (Cool Desired Temp)' when the average temperature of the units currently running is lower than 'D (Cool to Heat)'.

D Outdoor unit setting

- Only Heat Pump outdoor units that support new communication mode appear in the list. However, not listed in the list are the Heat Pump outdoor units that are connected to the Fresh Duct, Hydro Unit, Hydro Unit HT, Single EHS, DVM CHILLER, or cooling only indoor unit, as these units are not applicable for Auto Change Over.
- The following outdoor units are not displayed in the list: the outdoor units designed solely for cooling and the outdoor units connected to the heating/cooling change-over switch if the switch is set to the cooling only mode or to the heating only mode.
- The conventional indoor and outdoor units connected to ERV interface module, FCU interface module, Heat Recovery, and compatible interface module—those units do not appear in the list, as these units are not applicable for Auto Change Over.
- Auto Change Over works for each group.
- All indoor units in a single group become the targets for weighted average or representative temperature, and are controlled to equally run auto cooling or auto heating.
- If you select [Exception], the outdoor unit cannot use the Auto Change Over function despite being grouped, and indoor units connected to the outdoor unit are excluded from the targets of weighted average or representative temperature.
- If the outdoor unit is set to cooling or heating only mode, the Auto Change Over function is not available.
- **3** Click [Save] after finishing the setup.


Note

• When the DMS2.5 is installed in the S-Net3, Touch Centralized controller, Wi-Fi Kit product, or wired/wireless remote controllers simultaneously, the indoor unit with the Auto Change Over function cannot control operation modes through S-Net3, Touch Centralized controller, Wi-Fi Kit product, or the wired/wireless remote controller.

S-NET3

MST-P3P

Features

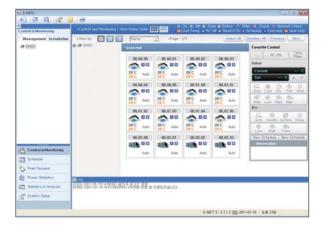

PC program designed to manage system air conditioners in a large site.

- Max. 16 DMS2.5 connection
- Max. 4,096 indoor unit controlling and monitoring
- Integrated management of indoor units, ventilators and AHU(Excluding DVM CHILLER, FCU KIT)
- Manages operation and error history
- Check indoor/outdoor unit cycle data
- Integrated management of peak control in single program

PC specifications

Item	Model	Model Details			
	CPU	Pentium 4 or above			
PC	Memory	More than 512MB			
PC	HDD	More than 1Gbyte space available			
	Network	10/100M			
OS	-	Windows NT, Windows 2000, Windows XP, Windows VISTA, Windows 7			


Compatible product

DMS	DMS(MIM-D00AN), DMS(MIM-D01AUN)
-----	------------------------------------



Model	MST-P3P
Number of connection	Max.16 DMSs

System connection

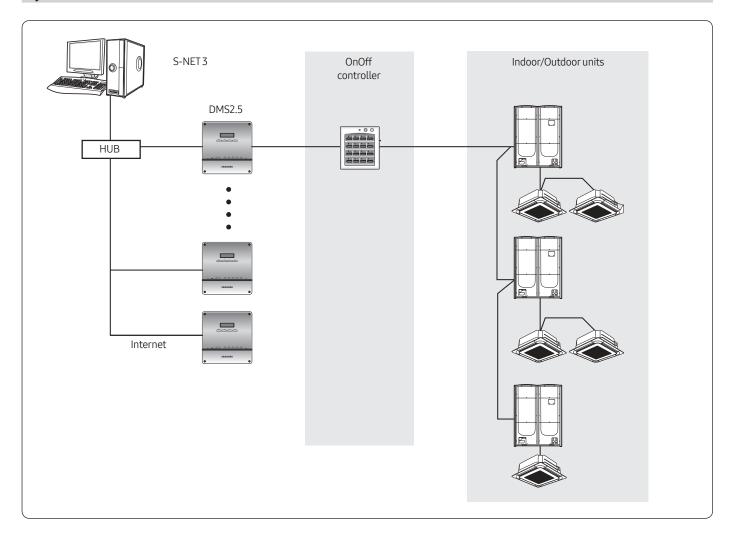

Function

S-NET3 function description

	View the management structure	Control and monitor the indoor units (max. 4,096 units).		
	View the installation structure	Check and refer the state of various devices such as indoor/outdoor units, OnOff controller, and I/M.		
Control & Monitoring	Indoor unit/ERV control	Set the operation mode, temperature, fan speed, and fan Control & Monitoring direction of indoor unit/ERV.		
	Indoor unit/ERV monitoring	Monitor the status of indoor unit/ERV.		
	View outdoor unit	Check the outdoor unit's cycle data and the cycle data of the linked indoor units.		
	View DMS2.5	Check the status data of the control unit linked to DMS2.5.		
	Create new schedule	Set new schedule.		
	View schedule	Check the schedule of the selected indoor unit.		
	Start/Stop schedule	Start/Stop schedule application.		
Schedule	Store/Call schedule	Store/Call a prepared schedule.		
	View daily schedule	Confirm each schedule by date.		
	Set common exception date	Set the date which schedule operation is not applied on.		
	Usage time and power	Check the usage time and power for total, group, and individual indoor units.		
Usage time and power	Power consumption report	For preparing the report on the power consumption by each indoor unit for the period set.		
	Power distribution management group edition	Edit an indoor unit's power management structure		
	Set the electricity rate section	Set up to 3 sections for electricity billing management.		
	Indoor unit status	Check the status of indoor unit operation/temperature setting per period.		
Statistics and analysis	Usage time and power	Check the usage time and power for total, group, and individual indoor units.		
	Indoor unit usage	The usage ratio of all indoor units for a specific period.		
	Set environment	Set the environment related to S-NET3 (password, language, temperature unit).		
	Set DMS2.5	Set the DMS2.5 to connect with S-NET3.		
Cuetamana	Refer event log	Refer the warning, error, data of indoor units.		
System management	Renew installed device information	Modify S-NET3 data if installation data has been changed.		
	DMS2.5 backup/restore	Backup the data of DMS2.5 connected to S-NET3.		
	S-NET3 backup/restore	Backup the data of S-NET3.		

■ Userfunctions


Manage a range of functions accessible to different types of users such as regular user, administrator and installer.

	User	Administrator	Installer
View the total indoor unit	0	0	0
Structure editing	X	0	0
The list of installed devices	X	0	0
Whole indoor unit stop	0	0	0
Indoor unit/ERV control/Monitoring	0	0	0
View the management structure	0	0	0
View the installation structure	X	0	0
View outdoor units, DMS2.5	X	0	0
Schedule	X	0	0
Indoor unit operation setting	X	0	0
Usage time and power	X	0	0
Power consumption report	X	0	0
Power distribution management group edit	X	0	0
Power distribution section setting	X	0	0
Statistics/Analysis	X	0	0
S-NET3 setting	X	0	0
DMS2.5 setting	X	0	0
Event log reference	X	0	0
Tracking	X	0	0
DMS2.5 restoration	X	0	0
DMS2.5 backup	X	0	0
S-NET3 restoration/backup	X	0	0


Detail function description

IS-NET3 display

Log-in

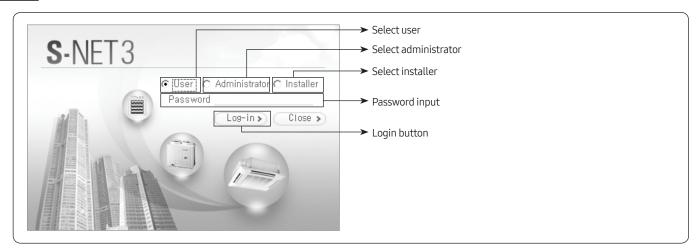

Control and monitoring

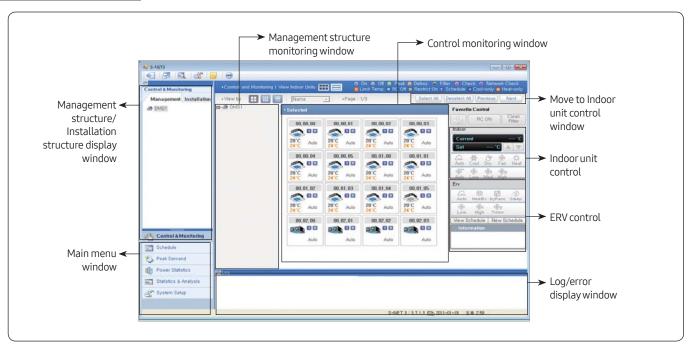


Installation structure window

selected device.

Select the installation structure tab then select DMS2.5 connected to S-NET3; it is possible to see the program version, status of the selected DMS2.5, the program version and communication status of OnOff controller. If indoor or outdoor unit is selected at the installation structure, it is possible to check the hardware information of the




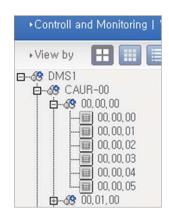

Selecting management structure

Selecting installation structure

▲ When DMS2.5 & OnOff controller are selected.

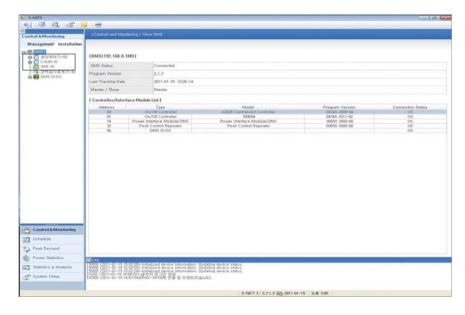


- DMS2.5 status, DMS2.5 program version, last tracking date and Master/Slave setting state.
- Displays model name, software version, communication state of centralized controller, PIM.

B When outdoor unit is selected



- Outdoor unit cycle data, outdoor unit model, interface module model and interface module program version is displayed.
- **C** When indoor unit is selected

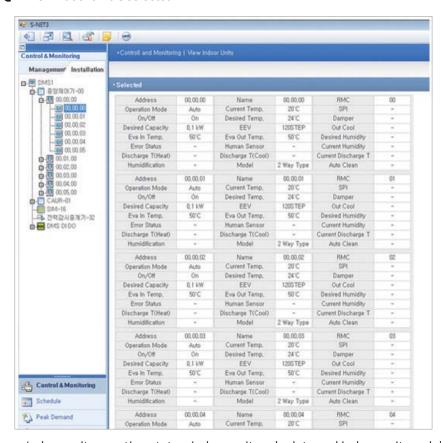

• Indoor unit operation status, indoor unit cycle data and indoor unit model code is displayed.

Control

- Control indoor unit/ERV through the control window that appears on the screen.
- Control total indoor units, the operation mode of indoor units, multiple selection, temperature, fan speed, and fan direction.
- Set Upper/Lower temperature limit so that temperature cannot be set outside of the limited temperature range.
- Enable/disable remote control usage.
- Check the schedule of the selected indoor unit.
 - A Deselect device



c Selecting indoor unit





B Selecting indoor unit and ERV together





D Selecting ERV






Schedule control


A Schedule setting


- Able to set a schedule to control indoor units and ERVs. (creating, modifying, deleting).
- Able to set weekly, daily, one day schedule.
- Able to control the operation mode, temperature setting, fan speed, fan direction during the schedule control.

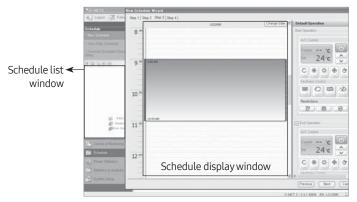


• Easy schedule control for user with the wizard method (step-by-step setting).

The 1st step (select a schedule mode)

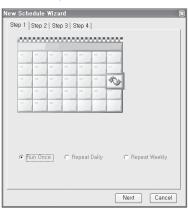

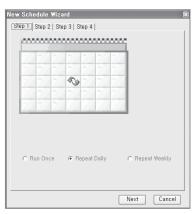

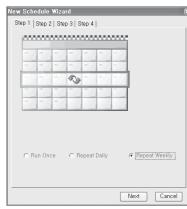


One day only


Repeat daily

Repeat weekly

- 2nd step (select the indoor units to apply a schedule to)
 - Display the total indoor units in S-NET3.
 - Able to select individual indoor units, OnOff controller, DMS2.5.

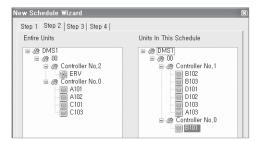


- **3** The 3rd step (schedule operation setting)
 - Set up time by dragging on the time table.
 - Set the schedule with the control panel on the right. (Operation mode. temperature setting, fan speed, fan direction and remote control use).
 - Click the schedule time setup window to display a schedule modification window (able to modify a schedule time, operation mode and temperature setting).

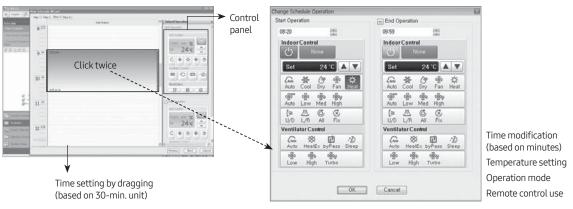

Schedule modification panel

- 4 The 4th step (Schedule period and exception date setting)
 - Click the date on the calendar to set the date (once selected, the designated date is displayed in red).

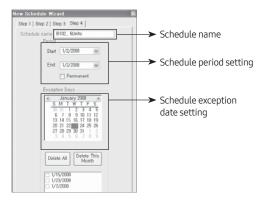

- **5** Schedule setting completion
 - Displays a schedule list to be automatically applied to the schedule



B Schedule control


- Click the set schedule display window twice to display the modification panel. Then it is possible to modify various functions such as schedule time, operation mode and temperature setting.
- Able to carry out various functions such as a schedule name change, schedule delete, indoor unit addition and deletion with the icons on the left menu window.




Usage time and power consumption

A Usage time and power

• Able to search for the power consumption and usage time by different conditions including the total indoor units applied to S-NET3, OnOff controller, individual indoor unit. OnOff controller, individual indoor unit.

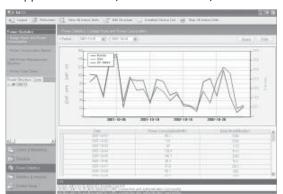

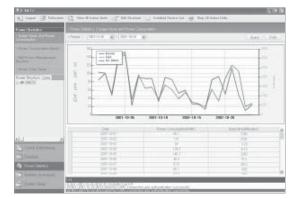


Total indoor unit usage reference

Individual indoor unit usage reference


B Power consumption report

- Able to print out the amount of power consumed for a specific period of time in the form of report.
- The applicable formats include PDF, TXT, HTML, CSV, MHT, EXCEL, graphic documents.

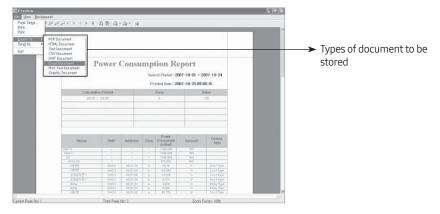


C Power management structure editing

- Just as the structural editing at the monitoring, power management can be restructured to ensure greater convenience for administrators.
- Once the power management structure is edited, power consumption report and usage can be referred in the edited formats.

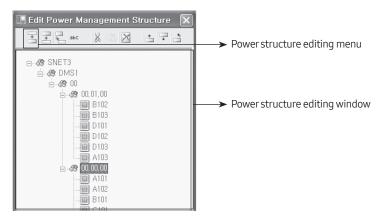

D Power section setting

 - It can be referred and divided into max. 3 sections for power consumption reference.
- It is possible to refer or prepare reports for usage time and power consumption by dividing section by each hour.




Able to adjust the sections by inputting relevant time.

Statistics and analysis


A Indoor unit status

- Able to see the operation status of selected indoor units and room temperature for the present and the past.
- Able to refer to the operation status for the last two days. If the reference day is out of range, an error message window will appear.

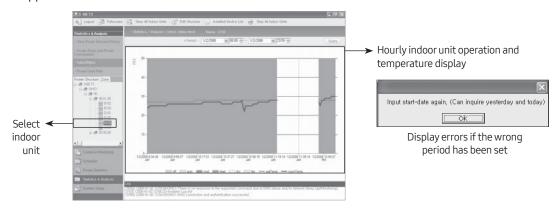

B Power consumption of indoor units


• Displays the use time and power consumption ratios for the indoor units connected to each DMS2.5.

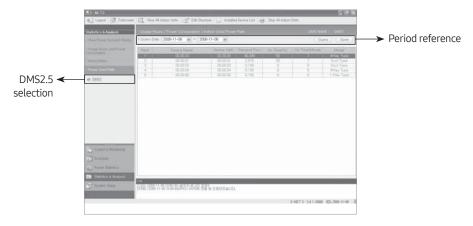

System management


A Environment setting


- Set the environment of S-NET3.
- Set administrator password, language, temperature unit, default value for indoor unit, etc.
- Determine if peak power will be displayed or not in the menu setting (Korean market only).

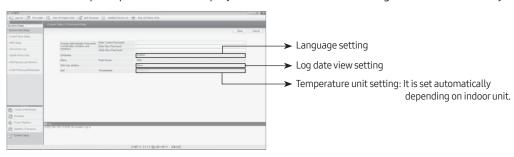

B DMS2.5 setting

- Set the DMS2.5 to connect with S-NET3.
- Click Save after inputting IP and passwords (1) and it will attempt to make communication with S-NET3 and DMS2.5 then display normal when communication is made.

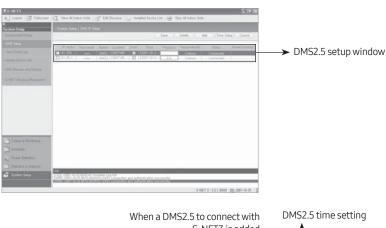

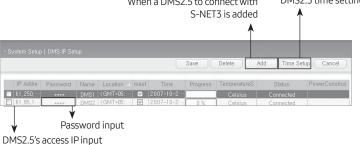


Note

- DMS2.5 has two passwords. One is a password needed to connect to a DMS2.5 web client (set at the user management), the other is necessary to make access to S-NET3 (set at the system environment).
- When the wrong password for S-NET3 is input, a message indicating DMS2.5 account recognition failure appears.


C View event log

 Able to check various information such as indoor/outdoor units connected to S-NET3, control device error/warning, information details by date.

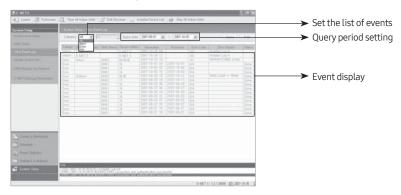


D Information update of the installed device

- Able to carry out information update or tracking for the installed device.
- Tracking involves receiving data from DMS2.5 after tracking it so as to renew data, whereas data renewal involves correcting data from DMS2.5 after receiving data without DMS2.5 tracking.

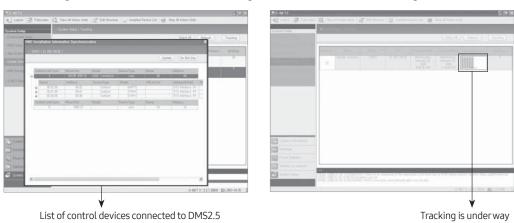

E S-NET3 backup and restoration

- Able to backup and restore data of S-NET3.
- Backup involves in backing up all data in S-NET3. Thus, if backup data is restored in a PC where S-NET3 is installed, it will produce the same environment that is previously used.

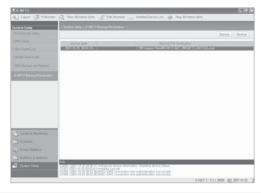

S-NET3 log information

Log	Contents
E9000	Connection impossible
E9001	Connection denied
E9002	Connection finished
E9010	WINK denied
E9011	DMS2.5 password authentication failure
E9012	Serial exchange failure
E9100	General error on instruction transmission
E9150	Attempt to transmit to a DMS2.5 not in connection
E9151	Attempt to transmit to a DMS2.5 not registered
E9200	General error on response acceptance
E9250	There is no response to the requested command due to DMS2.5 failure and/or network delay
E9300	XML generating
E9400	XML parsing
E9401	Installation information on S-NET3 and DMS2.5 does not match, check tracking information
E9999	Initialized device information updating device status
l101	Common user log in
l102	Administrator user log in
l103	Installer log in
1104	Log in
l105	Log out
1201	Tracking
1202	Request to tracking
1301	Request to schedule change
1801	Insert DMS2.5
1802	Delete DMS2.5
1803	DMS2.5 time setting
19700	DMS2.5 connection and authorization successful
19701	Reconnection
19801	Emergency stop

Chapter 04


Gateway

BACnet Gateway	
MIM-B17BUN	182
LonWorks Gateway MIM-B18BUN	.204
External Contact Interface Module MIM-B14	. 223
PIM (Pulse Interface Module) MIM-B16UN	. 228
Interface module MIM-N01	.240
FCU interface module MIM-F10N	. 249

BACnet Gateway

MIM-B17BUN

Features

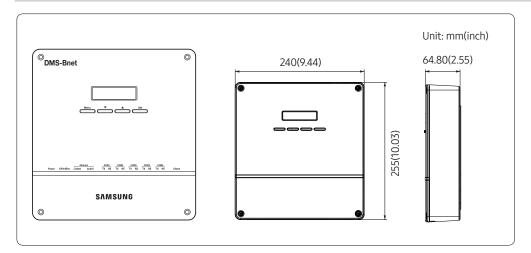

• For BACnet protocol system Support DMS2.5 control function at the same time.

Product specification

	Source	DC Adaptor							
Powersupply	Input	100~240VAC (±10%), 50/60Hz)0~240VAC (±10%), 50/60Hz						
	Output	12V 3A							
Operating temp	perature range	-10°C ~ 50°C (14°F~122°F)							
Operating hu	midity range	10%RH ~ 90%RH							
Communication connection		Lowerlayer: RS485 x 5Upperlayer: Ethernet100Base-T x1							
External	Digital Output	8							
connection port	Digital Input	10							
	RS485	1000m (3280ft)							
Maximum	Digital Output	100m (328ft)							
length of connection	Digital Input	100m (328ft)							
	Ethernet	100m (328ft): When there is no repeater							
		Device	Numbers per each channel	Total numberfor 5 channels					
		Indoor units (including ERV, MCU, FCU KIT)	128	256					
Max. connectable	Control layer	Outdoor unit (including MIM-N01, MIM-N10, MIM-F10N, DVM CHILLER unit)	16	80					
number of device	·	OnOff controller Touch centralized controller	Total 15	Total 75					
		PIM interface module (MIM-B16UN)	8	8					
		Wi-Fi kit (MIM-H03UN)	1	5					


■ Compatible product

Outdoor unit	AM****X***
	OnOff controller (MCM-A202DN)
Controller	Touch centralized controller (MCM-A300N)
Controller	PIM interface module (MIM-B16UN)
	Wi-Fi kit (MIM-H03UN)

- Conventional communication outdoor unit requires compatible interface module (MIM-N01) to establish connection
- MIM-B13D, MIM-B13E, MIM-B04A Interface modules cannot be connected.
- To connect ERV, MIM-N10 is required.
- To connect FCU KIT, MIM-F10N is required.
- Conventional PIM must connect to CH4(COM5) of DMS2.5.


Description of parts

Front

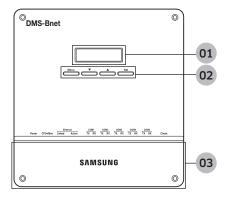


No.	Item	Function
01	LCD display	Displays current time or menu.
	Menu button	Access the setting menu.
02	▼ / ▲ button	Select function or setting item in the setting menu.
_	Set button	Enter or check setting item in the setting menu.
03	Bottom cover	Unscrew 2 screws on the bottom to remove the cover and check the cable connections.

 LED indicator



No.	ltem	Name	Status
01	Power	Power indicator	Turns blue when the power is supplied
02	CPU Alive	CPU operation indicator	Blinks in orange with 1 second intervals during normal operation
03	Ethernet-Linked	Internet connection indicator	Turns green during normal connection
04	Ethernet–Active	Internet data transmission/reception indicator	Blinks in orange during normal transmission/reception
05	COM1~5 – TX	Channel 1~5 OnOff controller/Interface module Data transmission indicator	Blinks in green during normal transmission
06	COM1~5 – RX	Channel 1~5 OnOff controller/interface module Data reception indicator	Blinks in green during normal reception
07	Check	Indoor/Outdoor unit Communication status indicator	Turns green when communication error occurs


Bottom

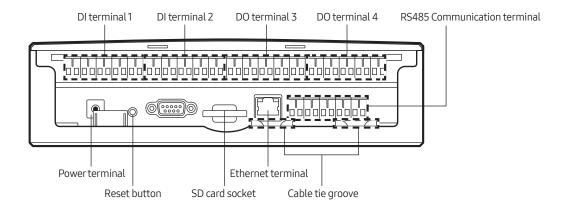


Name	Description
DI terminal 1	Digital Input connection terminal, Channel 1~Channel 5
DI terminal 2	Digital Input connection terminal, Channel6~Channel10
DO terminal 3	Digital Output connection terminal, Channel 1~Channel 5
DO terminal 4	Digital Output connection terminal, Channel 6~Channel 8
Reset button	Reset BACnet Gateway
SD card socket	Sub memory (for program update and set information saving) socket
RS485 communication terminal	RS485 port for communication with OnOff controller/interface module
Ethernet Terminal	Connect LAN cable
Cable tie groove	Groove for arranging cables

Connection diagram

MIM-B16UN(PIM) can be connected with outdoor units or controllers to same channel of DMS2.5.

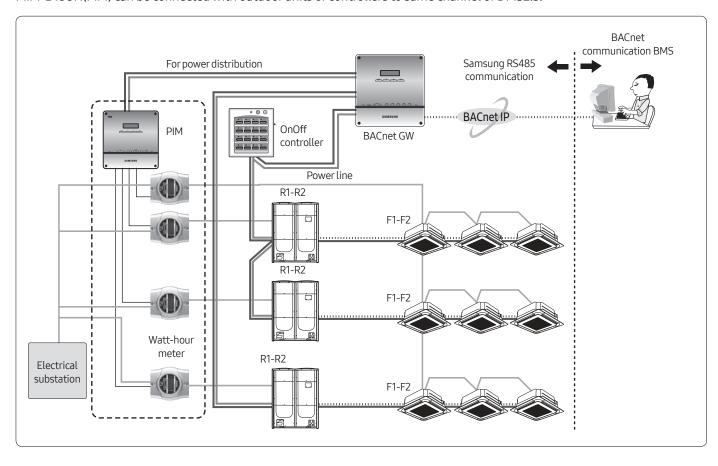

Wiring

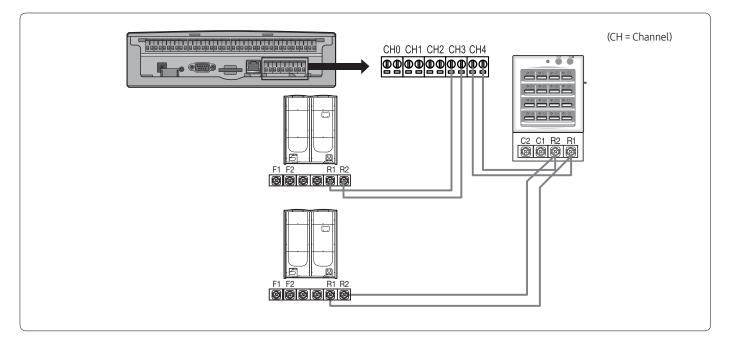


- Connecting outdoor unit directly
 - Maximum 16 outdoor units can be connected to each channel
 - Total 80 outdoor units can be connected
- Connecting OnOff controller/Touch centralized controller
 - Maximum 15 OnOff controller/Touch centralized controller can be connected to each channel


Note

- BACnet gateway can connect outdoor unit and OnOff controller/Touch centralized controller at the same time.
- Outdoor unit and OnOff controller/Touch centralized controller can be connected to 1 communication channel at the same time.


■ Connecting with outdoor unit

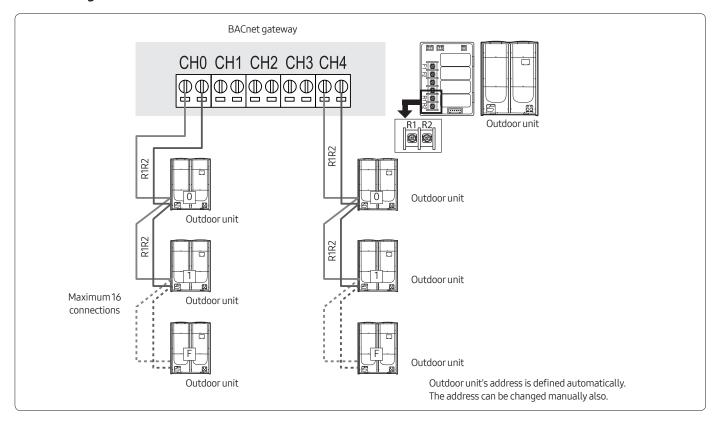


■ Connecting with OnOff controller

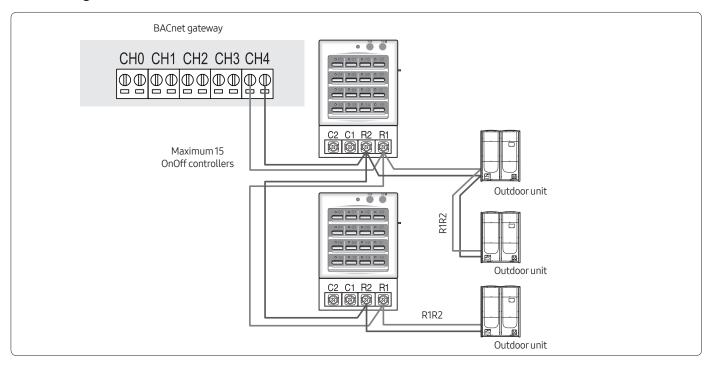

■ Connecting with outdoor unit and OnOff controller

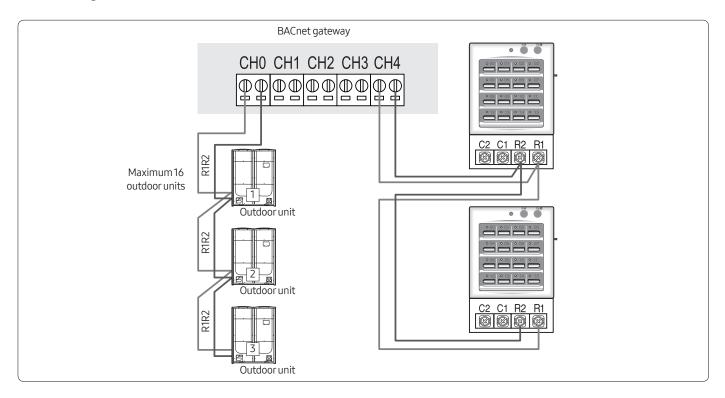

Wiring distance

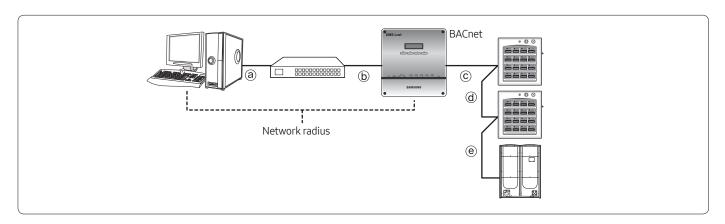


Distance between BACnet gateway and OnOff controller/outdoor unit

- Distance from the BACnet gateway to the furthest device cannot exceed 1000m(3280ft).
- ©+ @+ @≤1000m(3280ft)

Distance between BACnet gateway and upper level controller

• Since BACnet gateway supports 100 Base-T Ethernet, first repeater or upper level controller from the BACnet gateway cannot be further than 100m (328ft) (IEEE 802.3). Therefore, maximum network radius is restricted to 500m (1640ft).

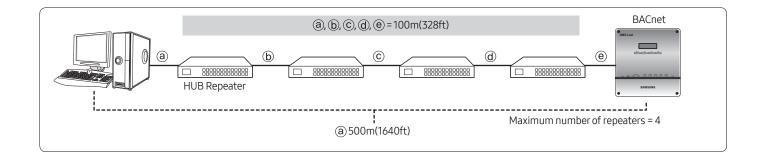


Description of device ID

Item	DNET – Range [Digit 2]	CPP – Range [Digit 3]	INDOOR – Range [Digit 2]
OnOff Controller	1~40	000~015	64
PIM	1~40	100~115	64
DMS DI/DO	1~40	300~315	64
Interface Module	1~40	400~655 (16 x16)	64
Indoor Unit, ERV AHU kit, EHS	1~40	400~655	0~63
Gateway	1~40	900	64


Ex) • Indoor Unit

- DNET (Gateway number): 9
- Indoor Unit Address: 01.01.32
- Device ID: 941732

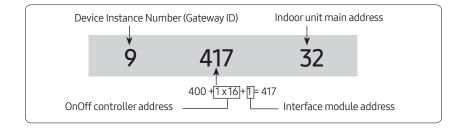

■ Checking device ID from BACnet Gateway

• Click 'Object ID' from the 'Object ID' column. Detail information window will appear and detail information will be displayed.

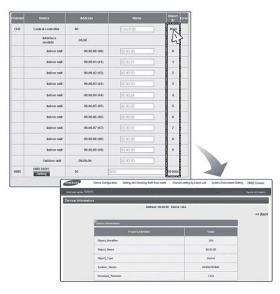

Object List

Indoorunit

Single indoor unit has following point list.

la abo :: -		Object				Status value		
Instance Number	Object	Object Type	Object Name	Inactive	Active			
Nullibei		Type		Text-1	Text-2	Text-3	Text-4	Text-5
1	Indoor Temperature	Al	AC_RoomTemp_xx_xxxxxx	°C(°F)				
2	Set temperature	AV	AC_Temp_Set_xx_xxxxxx	°C(°F)				
3	Setting lower temperature limit	AV	AC_Cool_LimitTemp_xx_xxxxxx	°C(°F)				
4	Setting upper temperature limit	AV	AC_Heat_LimitTemp_xx_xxxxxx	°C(°F)				
5	The power value of an indoor unit after the basic date	AI	AC_Baseline_kWh_xx_xxxxxx	kWh				
6	The number of hours usage of an indoor unit after the basic date	AI	AC_Baseline_Minute_xx_xxxxxx	Minute				
7	Power value within period	Al	AC_Period_kWh_xx_xxxxxx	kWh				
8	The number of hours usage of an indoor unit within period	Al	AC_Period_Minute_xx_xxxxxx	Minute				
9(**)	Power On/Off	BV	AC_Power_xx_xxxxxx	Off	On			
10	Applying lower temperature limit setting	BV	AC_Cool_Limit_set_xx_xxxxxx	False	True			
11	Applying upper temperature limit setting	BV	AC_Heat_Limit_set_xx_xxxxxx	False	True			
12(**)	Filter sign status	BI	AC_FilterSign_xx_xxxxxx	False	True			
13(**)	Filter sign reset	ВО	AC_FilterSign_Reset_xx_xxxxxx	False	True			
14(**)	Operation mode status	MV	AC_Operation_Mode_xx_xxxxxx	Auto	Cool	Heat	Fan	Dry
15(*)	Fan speed status	MV	AC_FanSpeed_xx_xxxxxx	Auto	Low	Mid	High	Turbo
16(*)	Air flow direction status	MV	AC_FanFlow_xx_xxxxxx		1: None, 2: Vertical, 3: Horizon, 4: All, 5: Spot, 6: Mid, 7: Wide, 8: Swing			
17(**)	Operation mode limit status	MV	AC_Mode_Limit_xx_xxxxxx	No Limit	Cool Only	Heat Only		
18(**)	Remote controller limit status	MV	AC_Remocon_Limit_xx_xxxxxx	Enable RC	Disable RC	Conditional RC		
19(**)	Integrated error code of both indoor unit and outdoor unit	Al	AC_Error_Code_xx_xxxxxx	Referto	o Samsun	g integrated	d error co	de list

la sta a sa		01-1		Unit		Status va	alue	
Instance Number	()hiact	Object Type	Object Name	Inactive	Active			
Number		Турс		Text-1	Text-2	Text-3	Text-4	Text-5
20(*)	SPI setting	BV	AC_SPI_xx_xxxxxx	False	True			
21(*)	HumanSensor setting	BV	AC_MDS_xx_xxxxxx	False	True			
22(*)	Discharge cooling set temperature	AV	AC_DisCoolTemp_Set_xx_xxxxxx	°C(°F)				
23(*)	Discharge heating set temperatrue	AV	AC_DisHeatTemp_Set_xx_xxxxxx	°C(°F)				
24(*)	Discharge current temperature	Al	AC_DisCurrentTemp_xx_xxxxxx	°C(°F)				
25(**)	AC Indoor Notify	NC	AC_Notify_xx_xxxxxx	When the error occurred, send event to list of destination in the recipient_list. (Max: 8)				

Note

- Temperature setting range can be different depending on the model and the common range is as follows:
 - Auto: 18~30°C(64~86°F)
 - Cool: 18~30°C(64~86°F)
 - Heat: 16~30°C(60~86°F)
 - Fan: Temperature cannot be adjusted
 - Dry:18~30°C(64~86°F)
- (*) Mark is optionally supported.
- For a fresh duct, (**) mark is supported.

■ AHU kit

Single AHU unit has following point list.

				Unit		Status va	lue	
Instance	Object	Object	Object Name	Inactive	Active			
Number	Object	Туре	Object Name	Text-1	Text-2	Text-3	Text- 4	Text-5
1	Indoor Temperature	Al	AHU_RoomTemp_xx_xxxxxx	°C(°F)				
2	Set temperature	AV	AHU_Temp_Set_xx_xxxxxx	°C(°F)				
3	Setting lower temperature limit	AV	AHU_Cool_LimitTemp_xx_xxxxxx	°C(°F)				
4	Setting upper temperature limit	AV	AHU_Heat_LimitTemp_xx_xxxxxx	°C(°F)				
5	The power value of an indoor unit after the basic date	Al	AHU_Baseline_kWh_xx_xxxxxx	kWh				
6	The number of hours usage of an indoor unit after the basic date	AI	AHU_Baseline_Minute_xx_xxxxxx	Minute				

				Unit		Status va	lue	
Instance	Object	Object	Object Name	Inactive	Active			
Number	Object	Туре	Objectivanie	Text-1	Text-2	Text-3	Text-	Text-5
7	Power value within period	Al	AHU_Period_kWh_xx_xxxxxx	kWh				
8	The number of hours usage of an indoor unit within period	Al	AHU_Period_Minute_xx_xxxxxx	Minute				
9	Power On/Off	BV	AHU_Power_xx_xxxxxx	Off	On			
10	Applying lower temperature limit setting	BV	AHU_Cool_Limit_set_xx_xxxxxx	False	True			
11	Applying upper temperature limit setting	BV	AHU_Heat_Limit_set_xx_xxxxxx	False	True			
12	Filter sign status	BI	AHU_FilterSign_xx_xxxxxx	False	True			
13	Filter sign reset	ВО	AHU_FilterSign_Reset_xx_xxxxxx	False	True			
14	Operation mode status	MV	AHU_Operation_Mode_xx_xxxxxx	Auto	Cool	Heat	Fan	Dry
15	Operation mode limit status	MV	AHU_Mode_Limit_xx_xxxxxx	No Limit	Cool Only	Heat Only		
16	Remote controller limit status	MV	AHU_Remocon_Limit_xx_xxxxxx	Enable RC	Disable RC	Conditional RC		
17	Integrated error code of both indoor unit and outdoor unit	Al	AHU_Error_Code_xx_xxxxxx	Referto	Samsun	g integrated	error	ode list
18(*)	Discharge cooling set temperature	AV	AHU_DisCoolSetTemp_xx_xxxxxx	°C(°F)				
19(*)	Discharge heating set temperature	AV	AHU_DisHeatSetTemp_xx_xxxxxx	°C(°F)				
20(*)	Discharge current temperature	Al	AHU_Dis_CurrentTemp_xx_xxxxxx	°C(°F)				
21(*)	Humidification setting	BV	AHU_Humidification_xx_xxxxxx	Off	On			
22(*)	Outdoor air intake setting	BV	AHU_OAIntake_xx_xxxxxx	Off	On			
23(*)	Outdoor cooling setting	BV	AHU_OutdoorCool_xx_xxxxxx	Off	On			
24(*)	Fan speed status	MV	AHU_FanSpeed_xx_xxxxxx	Low	Mid	High		
25(*)	Set humidity status	MV	AHU_SetHumidity_xx_xxxxxx	Low	Mid	High		
26(*)	Current humidity status	MI	AHU_CurrentHumidity_xx_xxxxxx	Low	Mid	High		
27	AHU Notify	NC	AHU_Notify_xx_xxxxxx			ccurred, ser the recipien		

Note

• (*) Mark is optionally supported.

■ ERV, ERV Plus

Single ERV or ERV Plus unit has following point list.

			21.1		Unit		Status va	alue	
Instance Number	Object	Object Type	Object Name	Inactive	Active				
Number		турс		Text-1	Text-2	Text-3	Text-4	Text-5	
1	Power On/Off operation	BV	ERV_Power_xx_xxxxxx	Off	On				
2	Filter sign status	BI	ERV_FilterSign_xx_xxxxxx	False	True				
3	Filter sign reset	ВО	ERV_FilterSign_Reset_xx_xxxxxx	False	True				
4	Operation mode status	MV	ERV_Operation_Mode_xx_xxxxxx	Auto	HeatEx	Bypass	Sleep		
5	Fan speed status	MV	ERV_FanSpeed_xx_xxxxxx	Low	High	Turbo			
6	Remote controller limit status	MV	ERV_Remocon_Limit_xx_xxxxxx	Enable RC	Disable RC	Conditional RC			
7	Integrated error code of ERV unit	Al	ERV_Error_Code_xx_xxxxxx						
8(*)	The power value of an ERV Plus unit after the basic date	Al	ERV_Plus_Baseline_kWh_xx_ xxxxxx	kWh					
9(*)	The number of hours usage of an ERV Plus unit after the basic date	Al	ERV_Plus_Baseline_Minute_xx_xxxxxx	Minute					
10(*)	Power value within period	Al	ERV_Plus_Period_kWh_xx_xxxxxx	kWh					
11(*)	The number of hours usage of an ERV Plus unit within period	Al	ERV_Plus_Period_Minute_xx_xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx	Minute					
12(*)	ERV Plus operation mode status	MV	ERV_Plus_Operation_Mode_xx_xxx xxx	Auto	Cool	Heat	Off		
13(*)	ERV Plus operation mode limit status	MV	ERV_Plus_Mode_Limit_xx_xxxxxx	No Limit	Cool Only	Heat Only			
14(*)	ERV Notify	NC	ERV_Notify_xx_xxxxxx		When the error occurred, send event to list of destination in the recipient_list. (Max: 8)			I	



• (*) Mark is optionally supported.

DVM CHILLER

Single DVM CHILLER Unit has following point list.

Lastana		01:1		Unit		Status va	alue	
Instance Number	Object	Object Type	Object Name	Inactive	Active			
Nullibel		Type		Text-1	Text-2	Text-3	Text-4	Text-5
1	Chilled Water Temperature	Al	MC_WaterTemp_xx_xxxxxx	°C(°F)				
2	Set temperature	AV	MC_WaterTemp_Set_xx_xxxxxx	°C(°F)				
3	Demand limit setting	AV	MC_Demand_Set_xx_xxxxxx	%				
4	The number of hours usage of an indoor unit after the basic date	Al	MC_Baseline_Minute_xx_xxxxxx	Minute				
5	The number of hours usage of an indoor unit within peirod	Al	MC_Period_Minute_xx_xxxxxx	Minute				
6	Power On/Off operation	BV	MC_Power_xx_xxxxxx	Off	On			
7	WaterLaw	ВО	MC_Water_Law_xx_xxxxx	False	True			
8(*)	Quiet	BV	MC_Quiet_xx_xxxxxx	Off	On			
9(*)	Forced Fan	BV	MC_Forced_Fan_xx_xxxxxx	Off	On			
10(*)	Operation mode status	MV	MC_Operation_Mode_xx_xxxxxx	Cool	Heat	Cool Storage	Hot Water	
11(*)	Remote controller limit status	MV	MC_Remocon_Limit_xx_xxxxxx	Enable RC	Disable RC	Conditional RC		
12(*)	Integrated error code	Al	MC_Error_Code_xx_xxxxxx					
13(*)	DVM CHILLER Notify	NC	MC_Notify_xx_xxxxxx			ccurred, send he recipient		

BACnet Device Object does not support master function of DVM CHILLER.

Demand control setting range is as follows:

50,55,60,65,70,75,80,85,90,95,100(%)

▮Object list

<u>EHS</u>

Instance		01: 1		Unit		Status value	
Instance Number	Object	Object Type	Object Name	Inactive	Active		
Nullibel		Турс		Text-1	Text-2	Text-3	Text-4
1	Room temperature	Al	EHS_RoomTemp_xx_xxxxxx	°C(°F)			
2	Set temperature	AV	EHS_Temp_Set_xx_xxxxxx	°C(°F)	Use when displayed temperature type is set t 'Room'.		
3	Set temperature of water out	AV	EHS_WaterOutTemp_Set_xx_xxxxxx	°C(°F)	Use when displayed temperature type is set to 'WaterOut'.		
4	Set temperature of hot water	AV	EHS_HotWaterTemp_Set_xx_xxxxxx	°C(°F)			
5	Setting lower temperature limit	AV	EHS_Cool_LimitTemp_xx_xxxxxx	°C(°F)			
6	Setting upper temperature limit	AV	EHS_Heat_LimitTemp_xx_xxxxxx	°C(°F)			
7	Lower temperature limit for water out	AV	EHS_WOCoolLimitTemp_xx_xxxxxx	°C(°F)			
8	Upper temperature limit for water out	AV	EHS_WOHeatLimitTemp_xx_xxxxxx	°C(°F)			
9	Upper temperature limit for hot water	AV	EHS_WTHeatlLimitTemp_xx_xxxxxx	°C(°F)			
10	The power value after the basic date	Al	EHS_Baseline_kWh_xx_xxxxxx	kWh			
11	The number of hours usage of an in- door unit after the basic date	Al	EHS_Baseline_Minute_xx_xxxxxx	Minute			
12	Power value within period	Al	EHS_Period_kWh_xx_xxxxxx	kWh			
13	The number of hours usage of an in- door unit within period	Al	EHS_Period_Minute_xx_xxxxxx	Minute			
14	Current temperature of water out	Al	EHS_WOCurrentTemp_xx_xxxxxx	°C(°F)			
15	Current temperature of hot water	Al	EHS_HotWaterTemp_xx_xxxxxx	°C(°F)			
16	Displayed temperature type	BI	EHS_ControlTempType_xx_xxxxxx	Room	WaterOut		
17	Thermostat usage	BI	EHS_Thermostat_xx_xxxxxx	False	True		
18	Outing	BI	EHS_GoOut_xx_xxxxxx	Off	On		
19	Power On/Off	BV		Off	On		
20	Setting lower temperature limit	BV	EHS_Cool_LimitTemp_Set_xx_xxxxxx	False	True	Use when di tempera- tu is set to 'R	ire type

lu atau aa				Unit		Status value		
Instance	Object	Object Type	Object Name	Inactive	Active			
Number		туре		Text-1	Text-2	Text-3	Text-4	
21	Setting upper temperature limit	BV	EHS_Heat_LimitTemp_Set_xx_xxxxxx	False	True	Use when displayed tempera-ture type is set to 'Room'.		
22	Apply lower temperature limit for water out	BV	EHS_WOCoolLimitFlag_xx_xxxxxx	False	True	Use when displayed tempera- ture type is set to 'WaterOut'.		
23	Apply upper temperature limit for water out	BV	EHS_WOHeatLimitFlag_xx_xxxxxx	False	True	Use when displayed tempera- ture type is set to 'WaterOut'.		
24	Apply upper temperature limit for hot water	BV	EHS_WTHeatLimitFlag_xx_xxxxxx	False	True			
25	On/Off status of hot water mode	BV	EHS_HotWater_Power_xx_xxxxxx	Off	On			
26	Status of quiet operation	BV	EHS_Sleep_xx_xxxxxx	Off	On			
27	Operation mode status	MV	EHS_Operation_Mode_xx_xxxxxx	Auto	Cool	Heat		
28	Operation mode limit status	MV	EHS_Mode_Limit_xx_xxxxxx	No Limit	Cool Only	Heat Only		
29	Remote controller limit status	MV	EHS_Remocon_Limit_xx_xxxxxx	Enable RC	Disable RC	Conditional RC		
30	Status of hot water operation mode	MV	EHS_HotWater_Mode_xx_xxxxxx	* Force	Eco	Standard	1PXFS	
31	Integrated error code of both indoor unit and outdoor unit	Al	EHS_Error_Code_xx_xxxxxx					
32	EHS notifiy	NC	EHS_Notify_xx_xxxxxx		When the error occurred, send event to list of destination in the recipient_list. (Max: 8)			

Note

• Force hot water mode (* marked) will be supported later. It is the point list of Hydro Unit and Hydro Unit HT.

SIM (PIM)

Single SIM (PIM) has following point list.

Instance Number	Object	Object Type	Object Name	Status value
1	SIM (PIM) error code	Al	SIM_Error_Code_xx_xx	Refer to list of error code
2	SIM (PIM) Notify	NC	SIM_Notify_xx_xx	When the error occurred, send event to list of destination in the recipient_list. (Max: 8)

OnOff Controller

Single OnOff Controller has following point list.

Instance Number	Object	Object Type	Object Name	Status value
1	OnOff Controller error code	Al	Central_Error_Code_xx_xx	Refer to the list of the integrated error code
2	OnOff Controller notify	NC	Central_Notify_xx_xx	When the error occurred, send event to list of destination in the recipient_list. (Max: 8)

Interface module (Outdoor unit)

Single Interface(Outdoor unit) module has following point list.

Instance		Object		Unit		Statu	ıs value	
Instance Number	Object	Object	Object Name	Inactive	Active			
Nullibei		Type		Text-1	Text-2	Text-3	Text-4	Text-5
1	Outside temperature	Al	ODU_Outside_Temp_xx_xxxx	°C(°F)				
2(*)	Cool capacity compensation	AV	ODU_Cool_Compensation_xx_ xxxx	2: 9~11 4:11~1	1°C(48~5; 3°C(52~5	2°F)/3:10 55°F)/5:12	~9°C(41~. 1~12°C(5C 2~14°C(54 Auto cont)~54°F)/
3(*)	Heat capacity compensation	AV	ODU_Heat_Compensation_xx_ xxxx	0: 25kg/cm²/1: 26kg/cm²/ 2: 27kg/cm²/3: 28kg/cm²/ 4: 29kg/cm²/5: 30kg/cm²/ 6: 31kg/cm²/7: 32kg/cm²/ 8: 33kg/cm²/14: Auto control (from ODU)				
4	Compressor status	BI	ODU_Comp_Status_xx_xxxx	False	True			
5	Interface module error code	Al	Repeater_Error_Code_xx_xxxx	Refer to t	the list of	the integ	grated eri	or code
6	Interface module notify	NC	IM_Notify_xx_xxxx	When the destinati				t to list of ax: 8)

^(*) Mark is optionally supported.

■ BACnet Gateway

BACnet Gateway has following point list.

Instance Number	Control and Monitoring	Object Type	Object Name	Status value
1	All device OFF	ВО	ALL_OFF_xx	Inactive: All devices Off
2	DMS2.5 Status	Al	DMS2_Status_xx	0: Normal, 8: Emergency stop, 105: Tracking in progress, 108: Tracking failed 109: DMS2.5 <-> BACnet Communication failed
3	BACnet error code	Al	BACnetApp_Error_ Code_xx	BACnet error code
4	Gateway Notify	NC	GW_Notify_xx	When the error occurred, send event to list of destination in the recipient_list. (Max: 8)

■ Digital input/output

Digital input/output Gateway has following point list.

	OL:		Ohioat	Unit		Status	value	
Instance Number	Object	Object Type	Object Name	Inactive	Active			
Number		Туре		Text-1	Text-2	Text-3	Text-4	Text-5
1	Digital Input1	BI	DI_01_xx_xx (BACnet Gateway Reserved)	Off	On			
2	Digital Input 2	BI	DI_02_xx_xx (BACnet Gateway Reserved)	Off	On			
3	Digital Input 3	BI	DI_03_xx_xx	Off	On			
4	Digital Input 4	BI	DI_04_xx_xx	Off	On			
5	Digital Input 5	BI	DI_05_xx_xx	Off	On			
6	Digital Input 6	BI	DI_06_xx_xx	Off	On			
7	Digital Input 7	BI	DI_07_xx_xx	Off	On			
8	Digital Input 8	BI	DI_08_xx_xx	Off	On			
9	Digital Input 9	BI	DI_09_xx_xx	Off	On			
10	Digital Input 10	BI	DI_10_xx_xx	Off	On			
11	Digital Output1	ВО	DO_01_xx_xx (BACnet Gateway Reserved)	Off	On			
12	Digital Output 2	ВО	DO_02_xx_xx (BACnet Gateway Reserved)	Off	On			
13	Digital Output 3	ВО	DO_03_xx_xx	Off	On			
14	Digital Output 4	ВО	DO_04_xx_xx	Off	On			
15	Digital Output 5	ВО	DO_05_xx_xx	Off	On			
16	Digital Output 6	ВО	DO_06_xx_xx	Off	On			
17	Digital Output 7	ВО	DO_07_xx_xx	Off	On			
18	Digital Output 8	ВО	DO_08_xx_xx	Off	On			


⚠ Caution

- You may use ALL_OFF command to turn on all the indoor units but it is not recommended.
- If communication error occurs on devices such as SIM/OnOff Controller/Interface Module etc, other functions such as power distribution may also create a problem. You must have BMS system to check the errors and you must take action immediately.

Checking BACnet communication through Wireshark


Who-is (I-Am)

• After device instance numbers have been automatically assigned, Who-is command which is requested in the Wireshark will be replied by i-am from the devices.

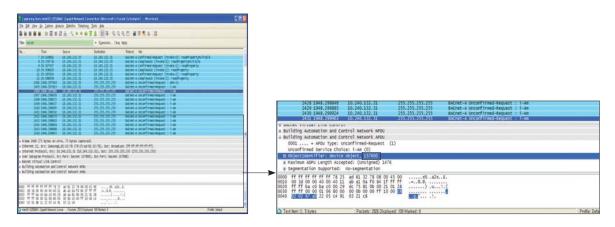


■ ReadPropertyMultiple


- Request all status datas.
- Device description, BACnet network number device node ID, status, BACnet MAC address version, Max APDU length accepted, APDU retries, timeout, supported services, supported object types and so on.

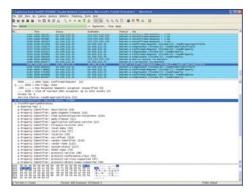

ReadPropertyMultiple Request

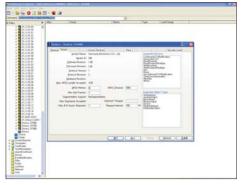


Continuum CyberStation

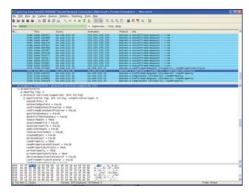



ReadPropertyMultiple Response

ReadPropertyMultiple

Object MultiStateInput

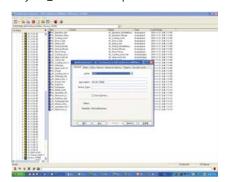

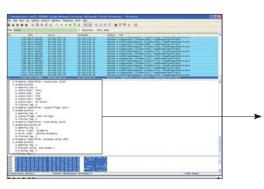

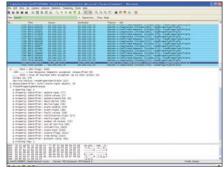


Request

```
Reque

# Property Identifier: state-text (110)
# opening Tag: 4
# state-text: "Auto"
# state-text: "Auto"
# state-text: "Auto"
# state-text: "Auto"
# state-text: "No State"
# closing Tag: 4
# closing Tag: 4
# state-tags: (8it String)
# closing Tag: 4
# state-tags: (8it String)
# closing Tag: 4
# property Jdentifier: time-delay (113)
# property Jdentifier: time-delay (113)
# closing Tag: 5
# error class: property
# closing Tag: 5
# error class: property
# closing Tag: 5
# error class: property
# closing Tag: 5
# opening Tag: 5
# property Jdentifier: present-value (85)
# property Jdentifier: present-value (85)
# opening Tag: 6
# closing Tag: 1
# closing Tag: 1
```

WriteProperty

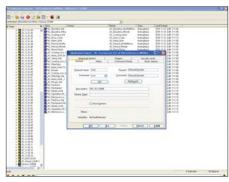




Change the FanSpeed from Auto to Low

BACHET-A CONFIRMED-Request [invoke:179]: writeProperty
BACHET-A SimpleACK [invoke:1879]: writeProperty
BACHET-A CONFIRMED-Request [invoke:180]: readPropertyMultiple
BACHET-A COMPLEXACK [invoke:180]: readPropertyMultiple


- 1. Request WriteProperty (FanSpeed 'Auto' → 'Low')
- 2. Response SimpleACK
- 3. Request ReadPropertyMultiple (FanSpeed)
- 4. Response ReadPropertyMultiple (FanSpeed 'Low')

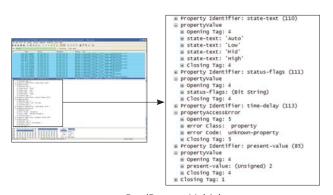

WriteProperty


ReadPropertyMultiple

Subscribe COV

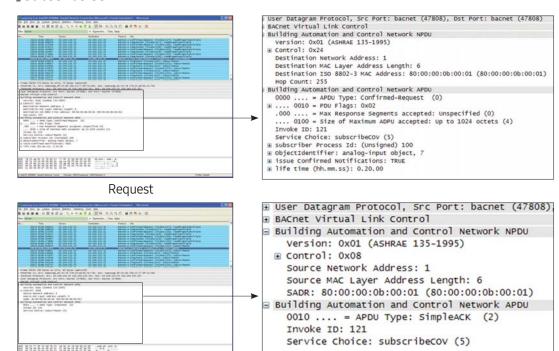


Response

COV Notification

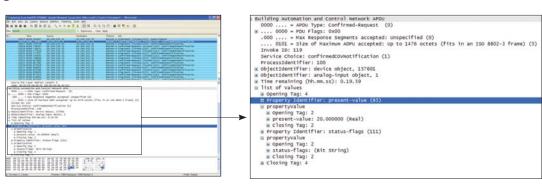

Notification

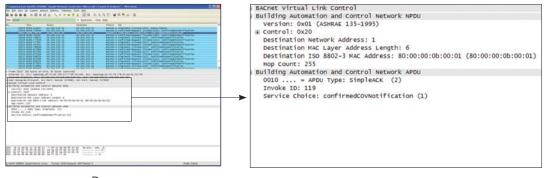

Response


Standard Object Types Supported

Object Type	Supported	Dynamically Creatable	Dynamically Deletable	Writeable Properties
Analog Input	V			
Analog Output				
Analog Value	✓			Present value
Binary Input	✓			
Binary Output	\checkmark			Present value
Binary Value	✓			Present value
Calendar				
Command				
Device	Yes	n/a	n/a	n/a
Event Enrollment				
File				
Group				
Loop				
Multi-state Input	✓			Present value
Multi-state Output				
Multi-state Value	V			Present value
Notification Class	 ✓			Recipient_List
Program				
Schedule				

LonWorks Gateway

MIM-B18BUN

Features

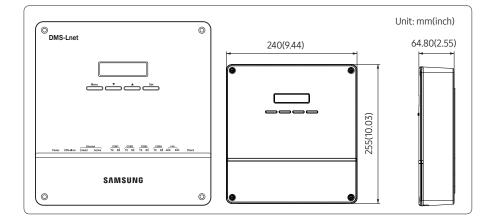

- For LonWorks protocol system.
- Support DMS2.5 control function at the same time.

Product specification

Source		DC Adaptor							
Powersupply	Input	100~240VAC (±10%), 50/60Hz	00~240VAC (±10%), 50/60Hz						
	Output	12V 3A							
Operating temp	perature range	-10°C ~ 50°C (14°F~122°F)							
Operating hu	midity range	10%RH~90%RH							
		• Lower layer: RS485 x 5							
Communication	on connection	Upper layer: Ethernet 100Base-T x 1							
		LonWorks layer: TP/FT-10A(Free topology 7)	8kbps)						
External	Digital Output	8							
connection port	Digital Input	10							
RS485		1000m (3280ft)							
Maximum	Digital Output	100m (328ft)							
length of	Digital Input	100m (328ft)							
connection	Ethernet	100m (328ft): When there is no repeater							
	LonWorks	500m (1640ft): When connecting with Bus type: 2700m (8858ft)							
		Device	Numbers per each channel	Total number for 5 channels					
Max.		Indoor units (including ERV, MCU, FCU KIT)	128	128					
connectable number of	Control layer	Outdoor unit (including MIM-N01, MIM-N10, MIM-F10N, DVM CHILLER unit)	16	80					
device		OnOff controller	Total 15	Total 75					
		Touch centralized controller	וטנמנוט	Ισιαι / Σ					
		PIM interface module (MIM-B16UN)	8	8					


■ Compatible product

Outdoor unit	AM****X****AC****X****					
	OnOff controller (MCM-A202DN)					
Controller	Touch centralized controller (MCM-A300N)					
	PIM interface module (MIM-B16UN)					

- Conventional communication outdoor unit requires compatible interface module (MIM-N01) to establish connection
- MIM-B13D, MIM-B13E, MIM-B04A Interface modules cannot be connected.
- To connect ERV, MIM-N10 is required.
- To connect FCU KIT, MIM-F10N is required.
- Conventional PIM must connect to CH4(COM5) of DMS 2.5.


Description of parts

Front

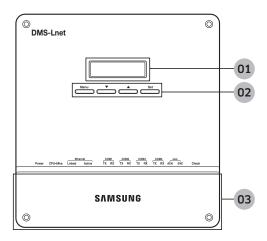


No.	Item	Function
01	LCD display	Displays current time or menu.
	Menu button	Access the setting menu.
02	▼ / ▲ button	Select function or setting item in the setting menu.
	Set button	Enter or check setting item in the setting menu.
03	Bottom cover	Unscrew 2 screws on the bottom to remove the cover and check the cable connections.

 LED indicator



No.	Item	Name	Status
01	Power	Power indicator	Turns blue when the power is supplied.
02	CPU Alive	CPU operation indicator	Blinks in orange with 1 second intervals during normal operation.
03	Ethernet-Linked	Internet connection indicator	Turns green during normal connection.
04	Ethernet-Active	Internet data transmission/reception indicator	Blinks in orange during normal transmission/reception.
05	COM1~4-TX	Channel 1~4 OnOff controller/Interface module Data transmission indicator	Blinks in green during normal transmission.
06	COM1~4-RX	Channel 1~4 OnOff controller/interface module Data reception indicator	Blinks in green during normal reception.
07	Lon ACK	LonWorks data reception indicator	Blinks in green during normal reception.
08	Lon SVC	LonWorks device status indicator	Blinks in green during un-configured.
09	Check	Indoor/Outdoor unit communication status indicator	Turns green when there is an error on more than one indoor/outdoor unit or in communication.


Bottom

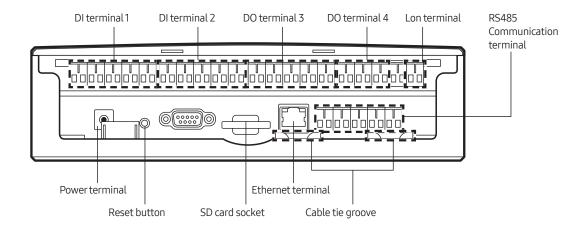


Name	Description
DI terminal 1	Digital Input connection terminal, Channel1~Channel5
DI terminal 2	Digital Input connection terminal, Channel6~Channel10
DO terminal 3	Digital Output connection terminal, Channel1~Channel5
DO terminal 4	Digital Output connection terminal, Channel6~Channel8
Lon terminal	Terminal Block for LonWorks communication (TP/FT-10)
Reset button	Reset LonWorks Gateway
SD card socket	Sub memory (for program update and set information saving) socket
RS485 communication terminal	RS485 port for communication with OnOff controller/interface module
Ethernet Terminal	Connect LAN cable
Cable tie groove	Groove for arranging cables

Connection diagram

MIM-B16UN(PIM) can be connected with outdoor units or controllers to same channel of DMS2.5.

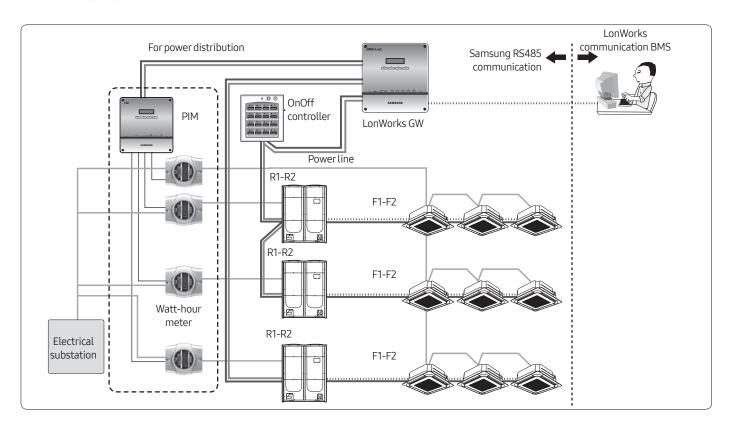

Wiring

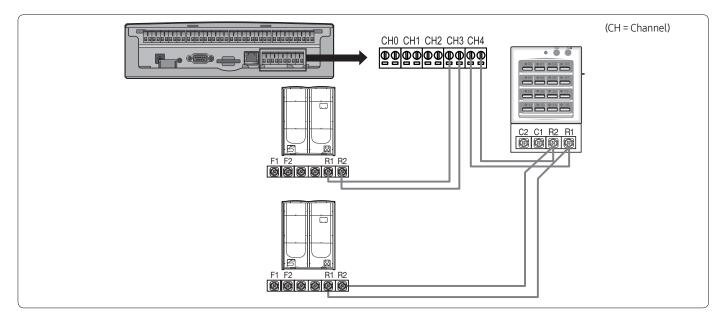


- Connecting outdoor unit directly
 - Maximum 16 outdoor units can be connected to each channel
 - Total 80 outdoor units can be connected
- · Connecting OnOff controller/Touch centralized controller
 - Maximum 15 OnOff controller/Touch centralized controller can be connected to each channel


Note

- LonWorks gateway can connect outdoor unit and OnOff controller/Touch centralized controller at the same time.
- Outdoor unit and OnOff controller/Touch centralized controller can be connected to 1 communication channel at the same time.


Connecting with outdoor unit

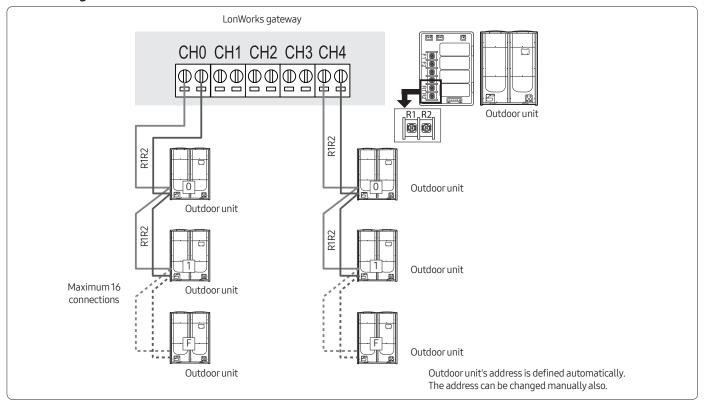


■ Connecting with OnOff controller

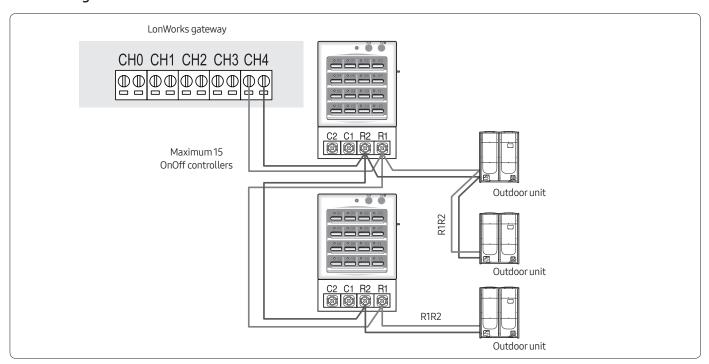

Connecting with outdoor unit and OnOff controller

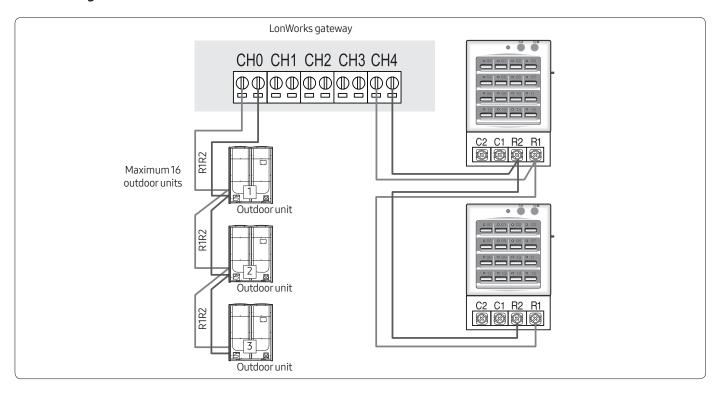

Wiring distance

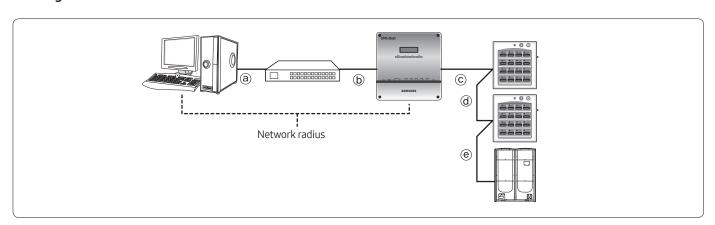


Distance between LonWorks gateway and OnOff controller/outdoor unit

- Distance from the LonWorks gateway to the furthest device cannot exceed 1000m(3280ft).
- ©+ d+ e≤1000m(3280ft)

Distance between LonWorks gateway and upper level controller


• Since LonWorks GW supports 100 Base-T Ethernet, first repeater or upper level controller from the LonWorks GW cannot be further than 100m (328ft) (IEEE 802.3). Therefore, maximum network radius is restricted to 500m (1640ft).

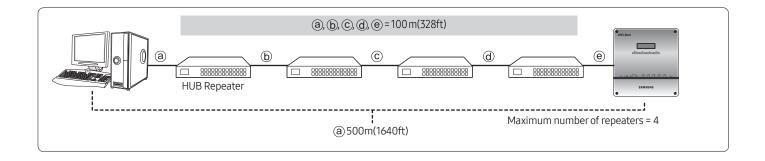

Commission



 • To activate the Service Pin, press and hold [SET] button for more than three seconds while time is displayed in the LCD Display window of the front side of LonWorks Gateway.



• When you press Service Pin, Neuron ID will be sent and [SVC] LED of the front panel will be lit up for a second.

Standard program identifier (SPID)

• Manufacturers: Samsung Electronics Co., Ltd. MID: 191

• Device Classes: 70.00 - Gateways/72.80 --- HVAC Gateways

Usage (Device Subclass): Utility {11}Channel Types: TP/FT-10 {ID: 4}

Object Types	Description	SFPT Name
8500	SCC – Generic	SFPTspaceComfortController

• Program ID: 90:00:BF:48:50:0B:04:00

Item summary

Item		Function		
	Common	Operation On/Off		
		Operation mode		
		Air flow direction		
		Fan speed		
		Device error information		
		Model, address, type information		
		Set temperature		
		Indoor temperature		
		Filter replacement alert/reset		
		Remote controller level		
Control & Monitoring	Indoor unit AHU	Thermostat information		
		Operation restriction setting (Cooling/Heating)		
		Setting lowest temperature/restriction		
		Setting highest temperature/restriction		
		Power consumption		
	Additional functions	Operation time		
		Emergency stop		
		DMS2.5 DI/DO		
		DMS2.5 lock		
		DMS2.5 error information		
		System error information		

Network variable

Indoor unit/ERV/AHU kit/Fresh duct/DVM Chiller/FCU Kit

No.	Name	Туре	M/O	Description
1	nviONOff	SNVT_switch	0	ON/OFF command
2	nviApplicMode	SNVT_hvac_mode	0	Setting operating mode
3	nviSetpoint	SNVT_temp_p	0	Setting desire temperature
4	nviFanStatus	SNVT_switch	0	Setting fan speed
5	nviERVMode	SNVT_count	0	Setting ERV operation mode
6	nviFilterReset	SNVT_switch	0	Filter reset command
7	nviUserLockout	SNVT_switch	0	Setting the restriction of remote control use
8	nviOccOpMode	SNVT_switch	0	Setting cooling only mode/heating only mode
9	nviCoolTempLock	SNVT_switch	0	Setting the low temperature limit
10	nviHeatTempLock	SNVT_switch	0	Setting the high temperature limit
11	nvoSpaceTemp	SNVT_temp_p	М	Display indoor temperature
12	nvoApplicMode	SNVT_hvac_mode	0	Display operating mode
13	nvoSetpoint	SNVT_temp_p	0	Display desire temperature
14	nvoOnOff	SNVT_switch	0	Display ON/OFF status
15	nvoFanStatus	SNVT_switch	0	Display fan speed
16	nvoERVMode	SNVT_count	0	Display ERV operating mode
17	nvoErrorCode	SNVT_count	0	Display Error code
18	nvoDeviceAlarm	SNVT_state	0	Remote control lock, Filter sign, Thermo ON/OFF, Error occurrence status display
19	nvoOccOpMode	SNVT_switch	0	Cooling only/Heating only setup status display
20	nvoCoolTempLock	SNVT_switch	0	Display low temperature limit setting status
21	nvoHeatTempLock	SNVT_switch	0	Display high temperature limit setting status
22	nvoUserLockout	SNVT_switch	0	Display the restriction of remote control use
23	nvoEnergyConp	SNVT_elec_kwh_l	0	Display electricity usage (Time Period)
24	nvoEnergyCon	SNVT_elec_kwh_l	0	Display electricity usage (Basic date)
25	nvoRuntimep	SNVT_time_hour	0	Display used hours (Period)
26	nvoRuntime	SNVT_time_hour	0	Display used hours (Basic date)
27	nvoDevListDesc	SNVT_str_asc	0	Indoor unit HW information

■ DVM system object


No.	Name	Туре	M/O	Description
1	nviDigitalOut[6]	SNVT_ switch	0	Control Digital output of DMS
2	nviAllOff	SNVT_hvac_emerg	0	Control all indoor unit/ERV OFF
3	nvoDigitalOut[6]	SNVT_ switch	0	Display Digital output status of DMS
4	nvoDigitalIn[8]	SNVT_ switch	0	Display Digital input status of DMS
5	nvoSystemLock	SNVT_ switch	0	Display System Lock status of DMS
6	nvoDMS2Alarm	SNVT_ count	0	Display communication error of the sub device connected to DMS
7	nvoSystemAlarm	SNVT_ count	0	

■ Configuration properties


No.	Name	Туре	M/O	Description
1	nciSndHrtBt	SNVT_time_sec SCPTmaxSendTime	0	Send Heartbeat
2	nciMinOutTm	SNVT_time_sec SCPTminSendTime	0	Minimum Send Time
3	nciMinDeltaTemp	SNVT_temp_p SCPTminDeltaTemp	0	Min. difference before update
4	nciDelayStatrup	SNVT_time_sec SCPTpwrupDelay	0	Delay time after a power-up

Network parameter chart

■ Indoor unit/ERV/AHU/DVM Chiller/FCU kit object

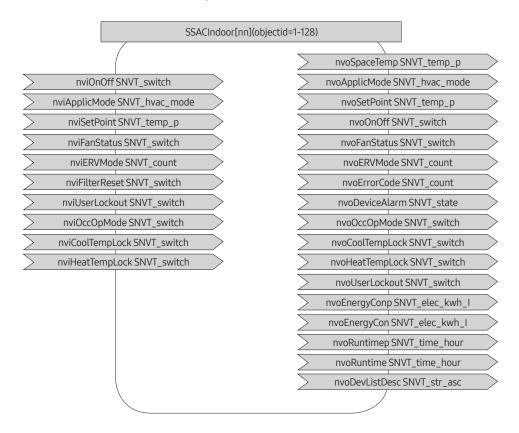

Indoor unit/ERV/AHU/DVM Chiller/FCU kit object

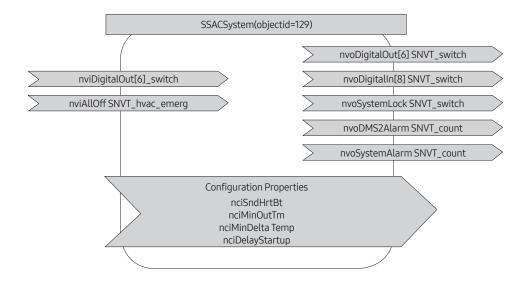

Control and Monitoring Item

▮ Functional classification by a device.

The functions provided can be different according to the type of the connected device.

No	NV Name	Remarks	Indoor	ERV	AHU Kit	Fresh Duct	DVM Chiller	FCU Kit
1	nviOnOff	ON/OFF Command	0	0	0	0	0	0
2	nviApplicMode	Setting operation mode	0	Χ	0	0	0	0
3	nviSetpoint	Setting desiarable temperature	0	Χ	0	Х	0	0
4	nviFanStatus	Setting wind speed and direction	0	0	Х	Х	Х	0
5	nviERVMode	Setting ERV operation mode	Х	0	Х	Х	Х	Х
6	nviFilterReset	Filter reset command	0	0	0	0	Х	Х
7	nviUserLockout	Setting the restriction of remote control use	0	0	0	0	0	0
8	nvoOccOpMode	Setting cooling only mode/Setting heating only mode	0	Х	0	0	Х	0
9	nviCoolTempLock	Setting the low temperature limit	0	Х	0	Х	Х	0
10	nviHeatTempLock	Setting the high temperature limit	0	Χ	0	Х	Х	0
11	nvoSpaceTemp	Display indoor temperature	0	Χ	0	Х	0	0
12	nvoApplicMode	Display operating mode	0	Χ	0	0	0	0
13	nvoSetPoint	Display desire temperature	0	Х	0	Х	0	0
14	nvoOnOff	Display ON/OFF status	0	0	0	0	0	0
15	nvoFanStatus	Display wind speed and direction	0	0	Χ	Х	Х	0
16	nvoERVMode	Display ERV operating mode	Х	0	Χ	Х	Х	Х
17	nvoErrorCode	Display Error code	0	0	0	0	0	0
18	nvoDeviceAlarm	Remote control Lock, Filter Sign, Thermo ON/OFF, Error occurrence status display	0	0	0	0	0	0
19	nvoOccOpMode	Cooling only/Heating only setup status display	0	Х	0	0	Х	0
20	nvoCoolTempLock	Low temperature limit setting status display	0	Χ	0	Χ	Χ	0
21	nvoHeatTempLock	High temperature limit setting status display	0	Χ	0	Х	Х	0
22	nvoUserLockout	Display the restriction of remote control use	0	0	0	0	0	0
23	nvoEnergyCon_p	Display electricity usages(Time Period)	0	Χ	Χ	Х	Х	Х
24	nvoEnergyCon	Display electricity usages(Basic date)	0	Χ	Χ	Х	Χ	Х
25	nvoRuntime_p	Display used hours(Period)	0	Χ	0	Х	0	0
26	nvoRuntime	Display used hours(Basic date)	0	Χ	0	Х	0	0
27	nvoDevListDesc	The summary of device information(Model, Address, Operation Status)	0	0	0	0	0	0

Detail description of network variable

Indoor unit/ERV/AHU/DVM Chiller/FCU kit object

1-1. nvoSpaceTemp(11)

Description	Indoortemperature
SNVT Type	SNVT_temp_p: Signed Long, 2 bytes
Value and operation	Range : -10.0°C(14°F) ~ 50.0°C(122°F)

1-2. nvoApplicMode(12), nviApplicMode(2)

Description	Operation Mode status
SNVT Type	SNVT_hvac_mode: Enumeration(hvac_t)
	0: HVAC_AUTO
	1: HVAC_HEAT
	3: HVAC_COOL
Value and	6: HVAC_OFF
operation	9: HVAC_FAN_ONLY
	11: HVAC_ICE(Cool Storage)
	13: HVAC_ECONOMY(Hot Water)
	14: HVAC_DEHUMID

• Invalid Value: Automatically set as HVAC_AUTO

1-3. nvoSetpoint(13), nviSetpoint(3)

Description	Set Temperature
SNVT Type	SNVT_temp_p: Signed Long, 2 bytes
Value and operation	Cool: 18.0°C(64.4°F) ~ 30.0°C(86.0°F), Heat: 16.0°C(60.8°F) ~ 30.0°C(86.0°F) DVM Chiller: -10°C(14°F) ~ 55°C(131°F)

- Invalid Value: Automatically set up as minimum or maximum value.
- When setting temperature, only an integer value is applied. A decimal point is ignored.

1-4. nvoOnOff(14), nviOnOff(1)

Description	Power ON/OFF status			
SNVT Type	SNVT_switch: Unsigned/signed Short			
Wilmind		Value	State	
Value and operation	OFF	0.0	0	
operation	ON	100.0	1	

1-5. nvoFanStatus(15), nvoFanStatus(4)

Description	Fan Speed and direction				
SNVT Type	SNVT_switch: Unsigned/signed Short				
		Value	State		
	Auto	0.0	-		
	Low	1.0	-		
	Mid	2.0	-		
	High	3.0	-		
Value and operation	Eco	4.0	-		
operation	Turbo	5.0	-		
	Auto	Any>5.0	-		
	Stop	-	0		
	Up-Down	-	1		

- Supporting modes are different according to indoor units.
 - Indoor unit: Auto, Low, Mid, High (Turbo: Optional)
 - ERV: Mid, High, Turbo
 - FCU Kit: Auto, Low, Mid, High
 - AHU Kit: High
- When an indoor unit operation mode is Auto or Dehumid, Fan speed is controlled as 'Auto'.
- When an indoor unit operation mode is FAN ONLY, 'Auto' cannot be controlled by Fan speed.

1-6. nvoERVMode(16), nviERVMode(5)

Description	ERV Operation Mode
SNVT Type	SNVT_count: Unsigned Long, 2 bytes
Value and operation	(0: Auto) 1: H/R (2: Air purification) 3: Sleep 4: Normal

• (): Function that is not supported now.

1-7. nvoErrorCode(17)

Description	Error Code
SNVT Type	SNVT_count: Unsigned Long, 2 bytes
Value and	Valid Range: 0 ~ 999
Value and operation	00 00 → No Error
орегиноп	Refer to list of Error code

1-8. nvoDeviceAlarm(18)

Description	 Remote control restriction status Filter alert status Thermo On/Off status Error alert Status 					
SNVT Type	SNVT_	SNVT_state: 16 Unsigned Bitfields				
	Byte	Bit9	Bit8	Operation	Remark	
	Посо	0	0	Unlock	nvo	
	Flags 1	0	1	Level1	User	
	-'	1	0	Lock	Lockout	
	Byte	Bit9	Bit8	Operation	Remark	
Value and		2	0	No alarm	nvo Filter	
operation		_	1	Alarm	Alarm	
	Flags	1	0	Thermo Off	Thermo	
	_2	'	1	Thermo On	On/Off	
		0	0	No Error	nvo Error	
			1	Error	Code	

1-9. nvoOccOpMode(19), nviOccOpModeCmd(8)

Description	Operation Mode restriction			
SNVT Type	SNVT_switch: Unsigned/signed Short			
		Value	State	
Value and	Unlock	0.0	0	
operation	Cool only	1.0	1	
	Heat only	2.0	1	
	-			

1-10. nvoCoolTempLock(20), nviCoolTempLock(9)

Description	Setting/monitoring Lower limit temperature and function toggle			
SNVT Type	SNVT_switch: Unsigned/signed Short			
	Operation	Value	State	
Value and	Unlock	18.0 ~ 30.0	0	
operation	Lock	18.0 ~ 30.0	1	
орстаноп		18.0°C(64.4° 0.0°C(86.0°F		

1-11. nvoHeatTempLock(21), nviHeatTempLock(10)

Description	Setting/monitoring upper limit temperature and function toggle			
SNVT Type	SNVT_switch: Unsigned/signed Short			
	Operation	Value	State	
Value and	Unlock	16.0 ~ 30.0	0	
Value and operation	Lock	16.0 ~ 30.0	1	
орегация		16.0°C(60.8° 0.0°C(86.0°F)		

1-12. nvoEnergyConp(23)

Description	Electric consumption value within the period
SNVT Type	SNVT_elec_kwh_I: Signed Quad, 4bytes
Value and operation	Raw range: 0 ~ 999999 Resolution: 0.1

1-13. nvoEnergyCon(24)

Description	Electric consumption value after baselin
SNVT Type	SNVT_elec_kwh_I: Signed Quad, 4bytes
Value and operation	Raw range: 0 ~ 999999 Resolution: 0.1

1-14. nvoRunTimep(25)

Description	Indoor unit usage within the period
SNVT Type	SNVT_time_hour: Signed Long, 2bytes
Value and operation	Raw range: 0 ~ 65535

1-15. nvoRunTime(26)

Description	Indoor unit usage after baseline	
SNVT Type	SNVT_time_hour: Signed Long, 2bytes	
Value and operation	Raw range: 0 ~ 65535	

- Energy consumption and Runtime are the accumulated value during the user setting period.
- The data above is for reference so you can not use them for official billing.

1-15. nviFilterReset(6)

Filter alert reset			
SNVT_time_hour: Signed Long, 2bytes			
Value	State	Operation	remark
0.0	0	No Action	
100.0	1	Filter Reset	
	2bytes Value 0.0	SNVT_time_ho 2bytes Value State 0.0 0	SNVT_time_hour: Signed Lor 2bytes Value State Operation 0.0 0 No Action

1-15. nviUserLockout(7), nvoUserLockout(22)

Description	Remote control restriction			
SNVT Type	SNVT_switch: Unsigned/signed Short			
Value and operation	Value	State	Operation	remark
	0.0	0	Unlock	
	100.0	1	Level1	
	100.0	2	Lock	

1-15. nvoDevListDesc(27)

Description	Device Information	
SNVT Type	SNVT_str_asc: Unsigned Character Array, 31bytes	
Value and operation	Refer to Expansion of nvoDevListDesc	

Indoorunit/ERV/AHU/DVM Chiller/FCU kit object

Expansion of nvoDevListDesc

		desription	character	value
	[0]		Alphabet or digit	
	[1]		Alphabet or digit	
	[2]	Model information	Alphabet or digit	
	[3]	Modelinormation	Alphabet or digit	
	[4]		Alphabet or digit	
	[5]		Alphabet or digit	
	[6]	Separator	Underbar(_)	095
	[7]	Centralized controller address	Alphabet or digit	
	[8]	Centratized Controller address	Alphabet or digit	
	[9]	Separator	Period(.)	046
	[10]	Interface Module address	Alphabet or digit	
	[11]	interface Module address	Alphabet or digit	
	[12]	Separator	Period(.)	046
	[13]	Indoor Unit Address	Alphabet or digit	
	[14]	illuooi oliit Audress	Alphabet or digit	
	[15]	Separator	Underbar(_)	095
ascii.	[16]	Unit type	0: indoor unit, 1: AHU, 2: ERV	
	[17]	Separator	Underbar(_)	095
	[18]	Operation mode	DMS Format 0: Auto, 1: Cool, 2: Dehumid, 3: Fan, 4: Heat, 5: Cool Storage, 6: Hot Water	
	[19]	ON/OFF	0,1	
	[20]	Fan speed	0, 1, 2, 3, 4, 5	
	[21]	Fan Swing	0,1	
	[22]	Error	0,1	
	[23]	Separator	Underbar(_)	095
	[24]		Second significant digit	
	[25] setPoint temperate		First significant digit	
	[26]		First decimal place	
	[27]		Second significant digit	
	[28]	Space temperate(*)	First significant digit	
	[29]		First decimal place	
	[30]	Null padding	0	048

• (*) If the value is a negative number, it is displayed as sign, 10-digit, single-digit.

■ DMS System object

2-1. nvoDigitalOut(3), nviDigitalOut(1)

Digital output status on DMS		
SNVT_switch: Unsigned/signed Short		
	Value	State
OFF	0.0	0
ON	100.0	1
	SNVT_switch OFF	SNVT_switch: Unsigned/si

2-2. nvoDigitalIn(4)

Description	Digital Input status on DMS		
SNVT Type	SNVT_switch: Unsigned/signed Short		
Value and operation		Value	State
	OFF	0.0	0
	ON	100.0	1

2-3. nvoSystemLock(5)

Description	System lock status of DMS(only monitoring available)		
SNVT Type	SNVT_switch: Unsigned/signed Short		
Value and operation		Value	State
	Unlock	0.0	0
	Lock	100.0	1
			,

2-4. nvoDMSAlarm(6)

Description	DMS Alarm	
SNVT Type	SNVT_count: Unsigned Long, 2 bytes	
	0: Normal	
	8: Emergency stop	
Value and	105: Tracing in progress	
operation	108: Tracking failed	
operation	109: Lon Module ↔ DMS2.5 communication Error	
	110: Object ID Update	

2-5. nvoSystemAlarm(7)

Description	SIM/PIM Communication Error Code
SNVT Type	SNVT_count: Unsigned Long, 2 bytes
Value and operation	SIM/PIM Communication Error Refer to list of Error code


2-6. nviAllOff(2)

Description	DMS Alarm
SNVT Type	Enumeration, emerg_t
Value and	0: EMERG_NORMAL
operation	4: EMERG_SHUTDOWN

External Contact Interface Module

MIM-B14


Features

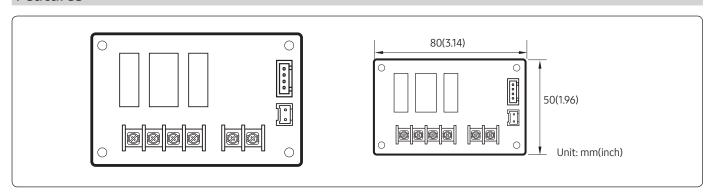

Interlock DVM air-conditioner with external controller

- Indoor unit On/Off control by the external contact (Usable equipment: Card-key, Timer, External Room sensor, Motion Detector Sensor)
- Output the indoor unit thermo ON/OFF state and operation status
- Output the indoor unit error state

Description of parts

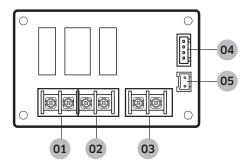


No.	Input/Output	Contact rating	Operation
01	Errorstate	220V AC, 3A	Normal:Close, Error:Open
02	Indoor unit Thermo On/Off or Operation State output (It depends on indoor unit's INSTALL option setting SEG 15.)	220V AC, 3A	[Output signal] SEG 15 = 0 Thermo On/Off SEG 15 =1 Operation On/Off (On:contact close, Off:contact open)
03	Operation signal input load	5V DC, 5mA	-
04	Connector for indoor unit	-	-
05	Connector for indoor unit	-	-

External Contact Interface Module > MIM-B14

Installation

■ External contact line wiring

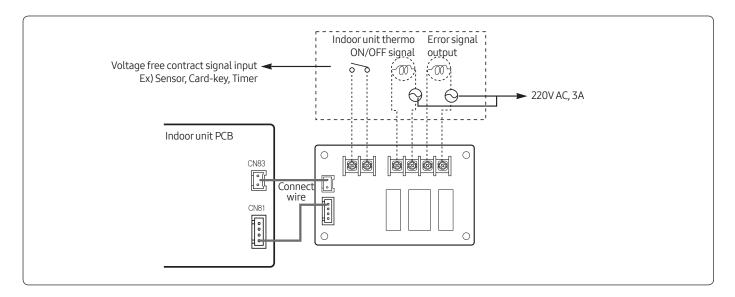


Note

- External operation input load: 5V DC/5mA.
- The length of wiring between MIM-B14 and external control equipment is 100m(328ft) max.
- To use external contact control system, indoor unit's INSTALL option setting is required. (Refer to indoor unit installation manual)
 - SEG 14 External control setting (Default: No use)
- After installed, the first operation will be conducted with Auto mode, Set temp. 24°C(75°F), Auto Fan speed.
- If the indoor unit in OFF status is turned ON through external contact signal; it will operate in the last operation status before it was turned off.

For controlling external heater (On/Off)

Circuit diagram for using external heater for the indoor units without hot water coil terminal

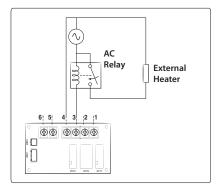


- Detailed method about Installation option establishment refers to Indoor Unit manual. (External contact control setting: Refer to SGE14, SGE15 of 02 Series installation option External heater control setting: Refer to SEG15 of 02 Series Installation Option and SEG18 of 05 Series installation option))
- Dry contact(no power source contact) must be be connected to the input terminal 5,6.
- When MIM-B14 is used for controlling external heater, its contact should not be connected directly to the load. (Only use as switch as shown in above diagram.)


Control

■ Timing diagram for external contact control

• Ex1)

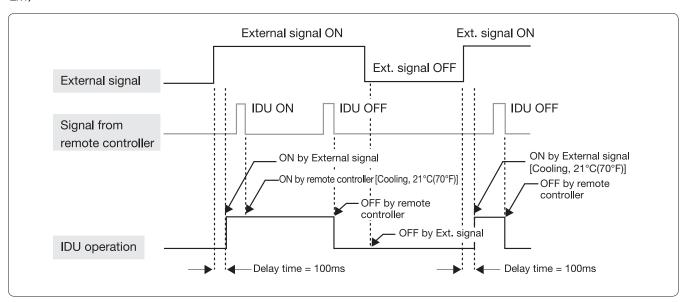

- Note
 - IDU stands for Indoor Unit.
 No prioritized operation between the R/C and the external contact I/M.
- Ex2)

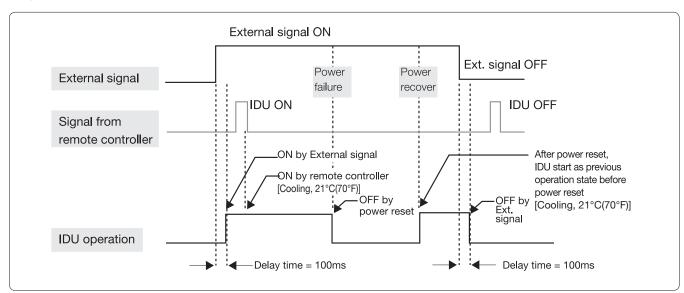


Note

IDU stands for Indoor Unit.
 After power reset, indoor unit operates as previous state. (IDU has power recovery function)

External Contact Interface Module > MIM-B14


Ex3)

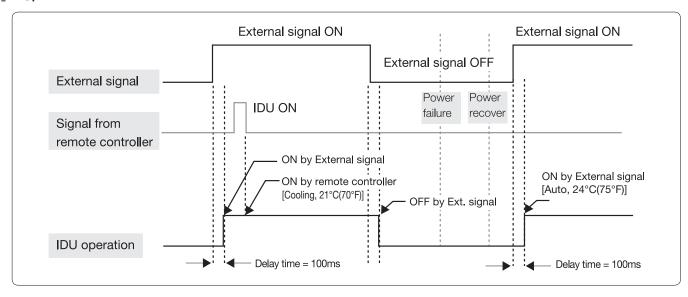

Note

• IDU stands for Indoor Unit. After power reset, if IDU is turn ON by external contact, it starts as Auto mode, 24°C(75°F), Auto fan speed.

Ex4)

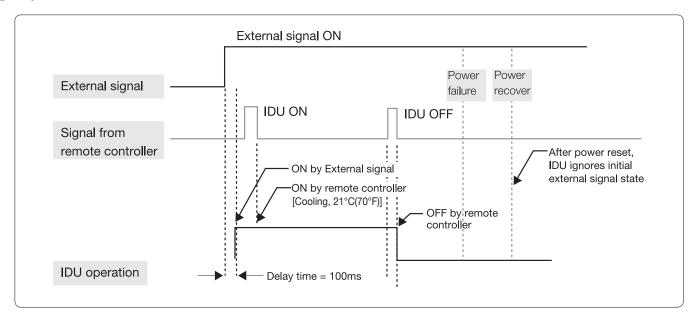

Note

IDU stands for Indoor Unit.
 After power reset, IDU ignores initial external signal state.

External Contact Interface Module > MIM-B14

■ Operation input

It is possible to set the method of indoor unit control by external contact signal.

- Method 1. Turn On/Off the indoor units by external contact signal
- Method 2. Set standby/Turn Off the indoor unit by external contact signal
- Method 3. Return to the last status/Turn Off the indoor unit by external contract signal

	Method1	Method 2	Method 3
Indoor unit INSTALL option setting (Refer to inidoor unit installation manual)	SEG14 =1	SEG14 = 2	SEG14 = 3
Indoor unit operation by external contact	Short → Indoor unit On Open → Indoor unit Off	Short → Standby Open → Indoor unit Off	Short → Return to the last status of indoor unit Open → Indoor unit Off
Remote controller use	Short → Available Open → Available	Short → Available Open → Unavailable	Short → Available Open → Unavailable

■ Operation output


• Thermo off: Status where refrigerant is not flowing in either cooling/heating operation because desired temperature has been reached.

	DVM S series indoor unit			
Outrot singel	SEG 15 = 0	Thermo On/Off		
Output signal	SEG15 = 1	Operation On/Off		
Output signal delay time	None			
Error signal				

PIM (Pulse Interface Module)

MIM-B16UN


Features

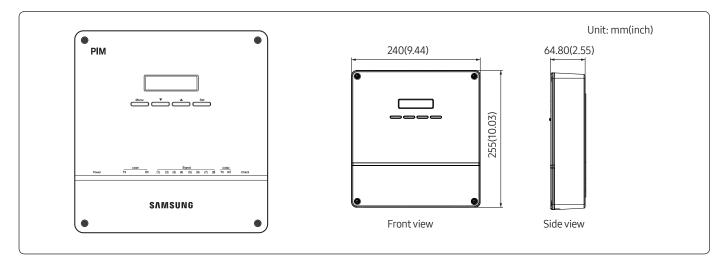

- Pulse output electricity meter interface unit (max. 8 meters)
- 8-channel energy consumption display in real time
- System configuration with button manipulation
- Various text messages in LCD
- Current communication state indication


	Input: 100~240V AC, 50/60Hz, 1.0A
Power supply (adapter)	Output: 12V DC, 3.0A
Operating temperature range	-10°C ~ 50°C (14°F~122°F)
Operating humidity range	10%RH~90%RH
Maximum wiring longth	DMS2.5:1000m (3280ft)
Maximum wiring length	Electricity meter: 200m (656ft)
Number of interfaces	Electricity meter: max. 8 units
Number of interfaces	DMS2.5:1 unit

Display and buttons

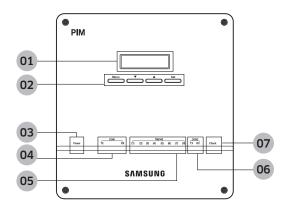


No.	Name	Description
01	LCD window	Information on current electricity readings, settings and operation state is displayed (16 character x 2 line LCD).
02	Menu button	Various menus are selected to monitor current electricity readings, to make configuration settings for electricity meters, and to check the error/settings.
03	Power (blue)	It's ON when power is supplied normally.
04	Communication (orange)	It blinks when communication between DMS2.5 and MIM-B16UN normally works.
05	Pulse input (orange)	Each of the 8 LEDs blinks whenever a pulse from an electricity meter is detected.
06	Communication (orange)	Reserved
07	Check	It's ON when errors occur in communication or pulse input from electricity meters.

Connectors

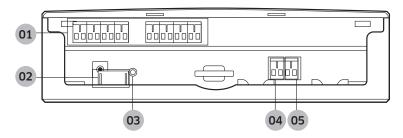

No.	Name	Description
01	Pulse input terminals	8 terminals are allocated to interface pulse-type electricity meters. Each terminal is seen
	- alse input terrimides	with a dedicated address on DMS2.5.
02	Powerinput	Power supply via the power adapter.
03	Reset button	Press the button to reset the MIM-B16UN.
04	COM1	Connection terminal for RS485 communication with DMS2.5.
05	COM2	Reserved


Address & option switches

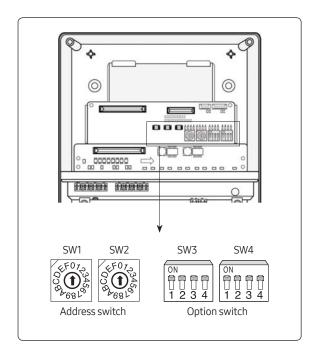

No.	Name	Description
01	SW1	No function
02	SW2	MIM-B16UN address switch. Address greater than 7 (8~F) is not recognized.
03	SW3	No function
04	SW4	No function

Specifications on electricity meter

- Current flow on output: Current-sinking
- Pulse rate :
 - Power meter: 1~10000 Wh/pulse (no decimal pulse rate allowed)
 - Gas meter: 0.001~10 m³/pulse
 - Water meter: 1 ~ 10000 liter/pulse (no decimal pulse rate allowed)
- Pulse width: 20 ~ 1000 ms with +/- 5% tolerance (no decimal pulse rate allowed)
- Time interval between pulses: Min.4ms
- Allowable current sinking: min. 15mA
- Withstanding voltage: min. 15V DC
- Interface circuitry: Electronic isolation circuitry recommended, no voltage output

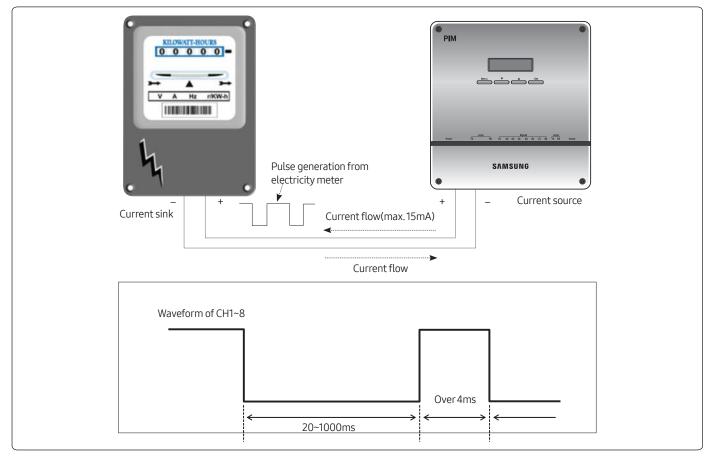

Note


- Interface circuitry of an electricity meter has to withstand min. 15mA and min. 15V DC, both of which are applied by MIM-B16UN.
- Even though MIM-B16UN interface circuitry is realized with electric isolation components, it's highly recommended that interface circuitry of an electricity meter be designed with isolation to ensure robustness from contact spike or electric interference during wiring.

Installation


MIM-B16UN must not be installed in a way that power to MIM-B16UN is off when one of the over-current circuit breakers is switched off. Power supply to MIM-B16UN must be off only when all the power supplies to refrigerant systems whose power consumptions are monitored by the MIM-B16UN are cut off. This is because every pulse from electricity meters of some alive refrigerant systems must be sensed normally even if power supplies to other refrigerant systems have troubles.

• Example 1)

When the circuit breaker, CM1 is switched off for some reason while the others are still on, pulses from the electricity meters, EM1, EM2 and EM3 are not calculated by MIM-B16UN, whose power is off by the CM1. This installation could lead to errors in electricity billing function when power interruption in local areas occurs.

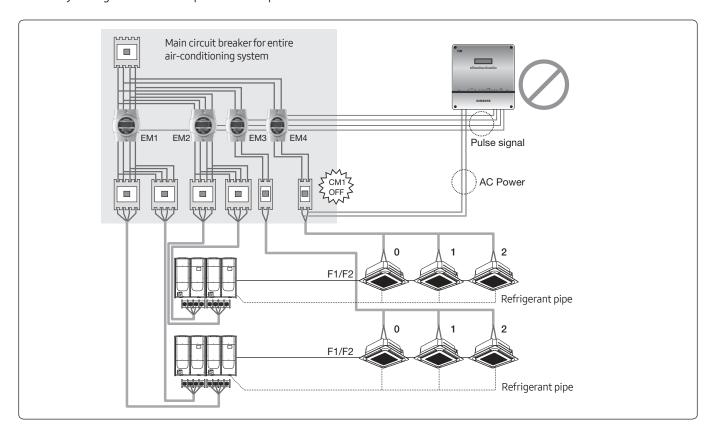


• Example 2)
Even when the circuit breaker, CM1 is switched off while the others are on, pulses from the electricity meters, EM1, EM2 and EM3 are still calculated by MIM-B16UN, whose power is not interrupted by CM1.

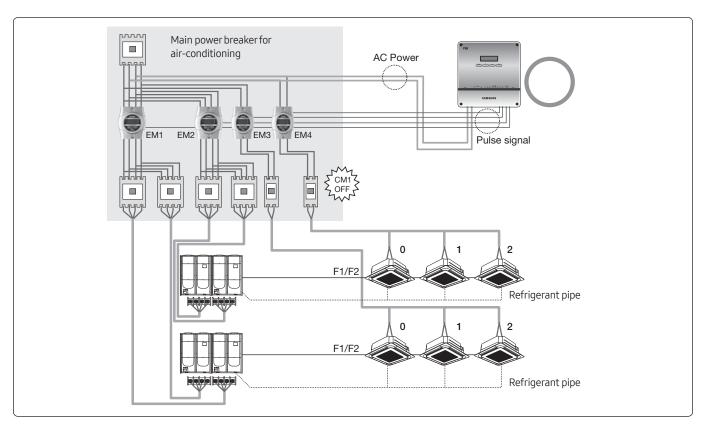

Wiring


Wiring to electricity meter

Attention must be paid to make polarized connection between an electricity meter and MIM-B16UN with correct specifications on wires.

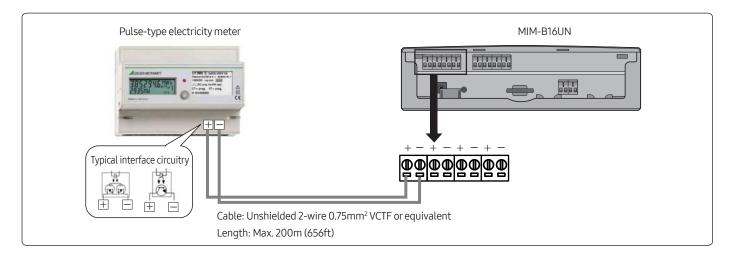

Wiring to DMS2.5

Make sure that communication cable is wired between DMS2.5 and MIM-B16UN with the right polarity.

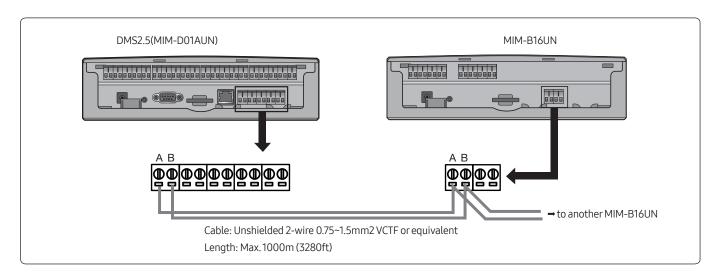


♠ Caution

- MIM-B16UN can be connected with outdoor units/controllers to same channel of DMS2.5. Ex) DMS2.5 CH1: PIM + Outdoor unit (O)/PIM + Touch controller (O)
 - Outdoor unit or Controller should be new communication applied products.

Address assignment


Each of the electricity meters is assigned with the dedicated address depending on MIM-B16UN address setting and the position of the pulse input terminals.

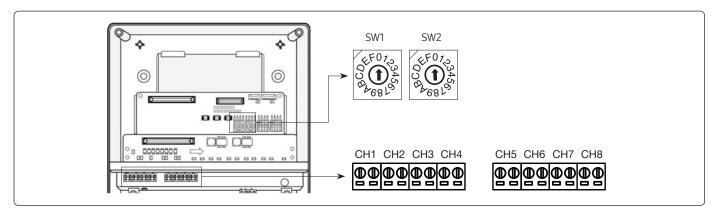

■ Electricity meter address assignment table

CMD				Pulse inp	ut terminal			
SW2	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
0	16.01	16.02	16.03	16.04	16.05	16.06	16.07	16.08
1	17.01	17.02	17.03	17.04	17.05	17.06	17.07	17.08
2	18.01	18.02	18.03	18.04	18.05	18.06	18.07	18.08
3	19.01	19.02	19.03	19.04	19.05	19.06	19.07	19.08
4	20.01	20.02	20.03	20.04	20.05	20.06	20.07	20.08
5	21.01	21.02	21.03	21.04	21.05	21.06	21.07	21.08
6	22.01	22.02	22.03	22.04	22.05	22.06	22.07	22.08
7	23.01	23.02	23.03	23.04	23.05	23.06	23.07	23.08
8~15	Not recognized							

MIM-B16UN menu structure

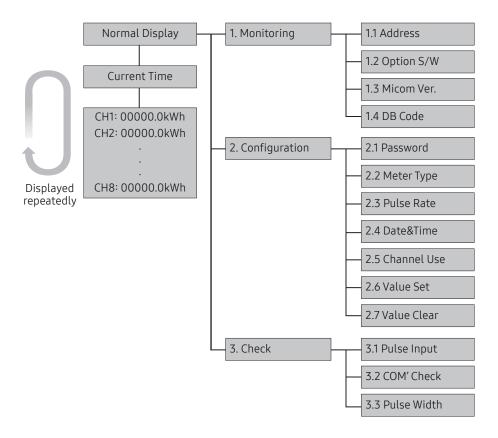

Main menu	Sub menu	Description				
		The MIM-B16UN address is displayed with the physical address SW2 added by 30H on the LCD window.				
		Ex) LCD SW2 setting 1. Monitoring				
		30H 0 1.1 Address				
	PIM Address	31H 1				
		1.1 Address				
		37H 7 58 30 FF				
		Address				
		PIM Fixed				
Monitoring		Option switch setting to ON is displayed with the position number at the corresponding positions while setting to OFF is shown with the mark 'X'.				
	Option SW	Example display: 1X 1.2 Option S/W Option switch 1: On				
		• Option switch 2: Off				
		It displays PIM software version.				
	Micom version	Ex) 1.3 Micom Ver.				
		130123				
		It displays PIM software DB code.				
	DB Code	Ex) 1.4 DB Code				
		DB91-01128A				
		The password, which is asked to enter to change the configuration setting, is used to				
	Password	prevent unauthorized persons from accessing MIM-B16UN. Factory setting is '0000'.				
	Password	Enter your P/W				
		0:0:0:0				
		You can select each channel's meter type.				
_	Metertype	Default value: Power Meter				
Configuration		Type: Power Meter, Gas meter, Water Meter				
		You can set pulse rate of meter which connected to each channel. [Range]				
	Pulse Width	Power meter: 1 ~10000 Wh/pulse (No decimal pulse rate allowed) Gas meter: 0.001~10 m³/pulse				
		Water meter: 1 ~ 10000 liter/pulse (No decimal pulse rate allowed)				
	Date & time	You can set current date and time.				
	Channel use	You can set Enable/Disable state of each channel.				
	If you set "Disable", then PIM doesn't display meter value of the disabled cha					


Main menu	Sub menu	Description			
Value set Configuration		Initial meter value must be set as a starting point for each of the enabled interface channels.			
	Value clear	Each or all the initial meter values are cleared when selected.			
	Pulse Input	When pulse input is detected during the test period, the channel numbers are displayed. Otherwise, the character 'X' is displayed on the corresponding channel position. All Check End X2XX5X7X			
	COM Check	Make a loopback connection between COM1 and COM2 to check if the DMS2.5 communication channel is working or not. Care must be taken for the connection polarity. When the COM1 communication channel is normal, the message 'OK' is displayed of the LCD window.			
Check	Pulse Width	It checks if the pulse width values of actually connected meter are valid or not. OK: When the pulse is valid (pulse is valid when high pulse is between 20 ~ 1000msec), OK (M:####msec) will be displayed. #### represents the duration of the high pulse. NG: When the pulse is invalid (pulse is valid when high pulse is between 20 ~1000msec), or when there is no pulse inputs for 10 seconds), NG (M: 0000msec) will be displayed. PIM does not calculate the energy consumption during the checking process. The calculation will start after the check and returning to the upper menu. CH1 Check OK CH1 Check End NG (M:0000msec)			

Setting parameters on DMS2.5 (MIM-D01AUN)


The following parameters for MIM-B16UN can be also set and monitored on DMS2.5 (MIM-D01AUN)

• Meter value, Meter type/pulse rate, Channel status, Time setting, PIM password

 [Tracking result page --> PIM "Setting"]





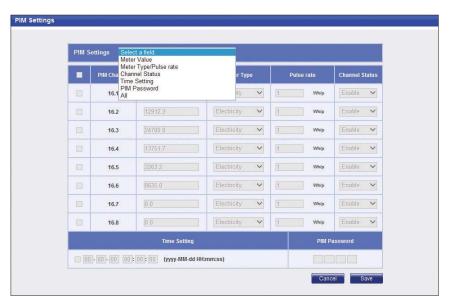



• DMS2.5 setting for MIM-B16UN parameters


Error code

Error code	Description
E613	Error which occurs when there is no communication between DMS and PIM/SIM for 15 minutes.
E632	 Error which occurs when the pulse was input differently from the PIM setting. (If the pulse was inputted at the value outside of 10 ms ~ 1500 ms range for more than 15 times or when high pulse was inputted for over 3 minutes)
E654	Memory Read/Write error.
E108	Error which occurs when same address was assigned to different devices.

Interface module

MIM-N01

Features

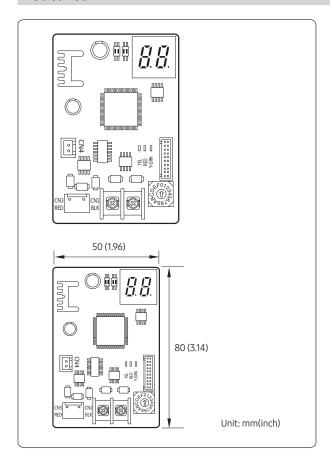

- Communication interface module between outdoor units and the upper level controller which has different communication type
- Connect 1 interface module to 1 outdoor unit
- Individual control Maximum 48 indoor units
- Group control Maximum 16 groups
- Detecting communication type automatically: Judge the communication type of upper level controller according to communication type of the outdoor unit
- Supported communication type
 - Conventional communication outdoor unit ↔ New communication upper level controller
 - New communication outdoor unit ↔ Conventional communication upper level controller

⚠ Caution

 This interface module does not support connection between Conventional communication outdoor unit ↔ Conventional communication upper level controller/New communication outdoor unit ↔ New communication upper level controller

Product specification

Power Supply	DC12V
Power Consumption	2.4 W
Operating Temperature range	-10 °C~50 °C (14°F~122°F)
Operating Humidity range	10%RH~90%RH
Communication	RS485 x 2
Max.Communication Length	1000 M (3280 ft)
Maximum number of	 New communication outdoor unit ← Conventional communication upper level controller F1/F2:1 outdoor unit R1/R2:1 upper level controller
connection	 Conventional communication outdoor unit One New communication upper level controller F1/F2:1 outdoor unit R1/R2: Total up to 16 upper level controllers (Only1 DMS 2.5, BACnet/LonWorks Gateway connection is allowed)

Interface module > MIM-N01

■ Compatible Models

New communication outdoor unit ↔ Conventional communication upper level controller


Outdoorunit	AM*******			
Upper level controller	 1 OnOff controller: MCM-A202D 2 DMS2: MIM-D00A 3 BACnet Gateway: MIM-B17 4 LonWorks Gateway: MM-B18 5 S-NET mini: MST-S3WU 			

- Function controller and S-NET 2 Plus are not supported.
 - New communication Outdoor unit + MIM-N01 + MCM-A202D + Function controller (X)
 - New communication Outdoor unit+ MIM-N01 + MCM-A202D + S-NET 2 Plus (X)

I Conventional communication outdoor unit → New communication upper level controller

Outdoorunit	DVM Plus 4, 3, 2, CAC, FJM		
Upper level controller	 1 OnOff Controller: MCM-A202DN 2 DMS2.5: MIM-D01AUN 3 BACnet gateway: MIM-B17BUN 4 LonWorks gateway: MIM-B18BUN 5 Touch centralized controller: MCM-A300N 6 Wi-Fi kit: MIM-H03UN 		

Description of parts

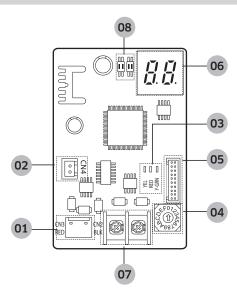

No.	Name	Description
01	F1/F2 communication connector	Communication connector that connects to outdoor unit/F1/F2
02	Power connector	DC12V
03	Communication LED	Communication indicator LED • Left LED 3: No function • Middle LED 1: Blinks during it communicates with upper level controller • Right LED 2: Blinks during it communicates with outdoor unit and indoor unit
04	Address setting switch	Sets the address of interface module
05	Software update connector	Using this connector, Interface module software can be updated
06	7-segment	Displays the communication status between interface module and outdoor unit
07	Upper level controller communication channel	Communication connection channel to upper level controller R1/R2

Interface module > MIM-N01

No.	Name	Description		
		SW4 12	SW5	
		SW4	Description	
08 DIP switch	DIPswitch	h 1	OFF (Automatic address setting, switch must be down) ON (Manual address setting, switch must be up) This function is only applicable when new communication upper level controller is connected.	
			OFF (Set temperature in Celsius, switch must be down) ON (Set temperature in Fahrenheit, switch must be up)	
			Description	
		1	OFF (Disable downloading, switch must be down) ON (Enable downloading, switch must be up) • Switch must be set to OFF when downloading is complete.	

Note


• When connecting to the conventional communication controller, address must be set manually regardless to the SW4-1 setting. When setting the address manually, make sure to set the address that is not assigned to other deivce already.

No function


• When connecting to the new communication controller, SW4-1 must be ON to set the address manually, and make sure to set the address that is not assigned to other compatible interface module or outdoor units.

Connection diagram

New communication outdoor unit ↔ Conventional communication upper level controller

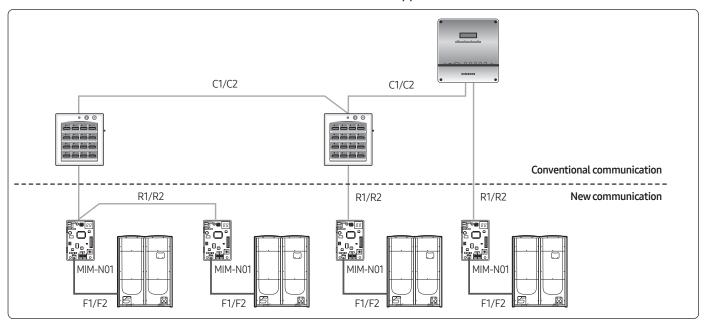


I Conventional communication outdoor unit ↔ New communication upper level controller

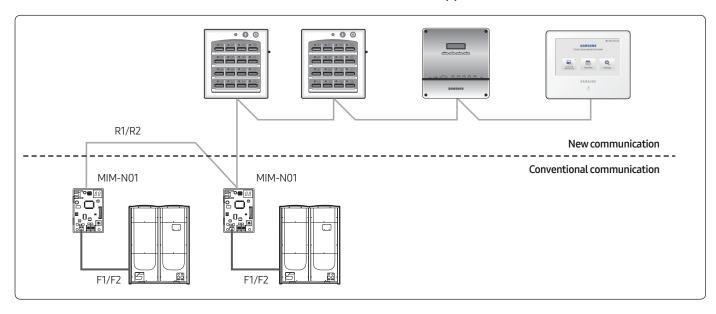

Connection


■ Connecting with OnOff controller

- Conventional communication outdoor unit ↔ New communication OnOff controller (MCM-A202DN)
- New communication outdoor unit ↔ Conventional communication OnOff controller (MCM-A202D)

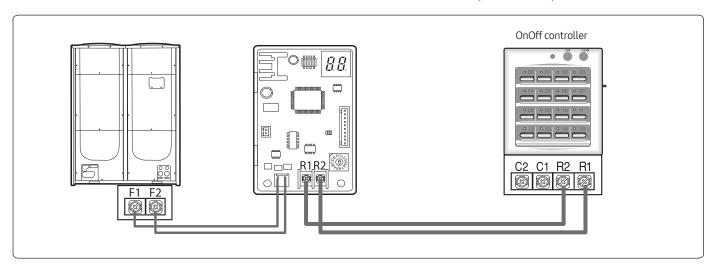


Connecting to Touch centralized controller

• Conventional communication outdoor unit ↔ New communication Touch centralized controller (MCM-A300N)

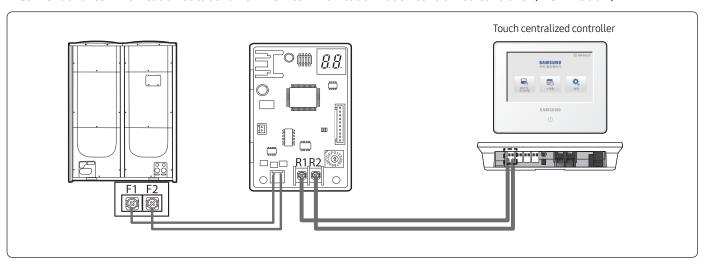

Connecting to DMS2.5/BACnet GW/LonWorks GW

- Conventional communication outdoor unit ↔ New communication DMS2.5 (MIM-D01AUN)/BACnet GW (MIM-B17BUN)/LonWorks GW (MIM-B18BUN)
- New communication outdoor unit ↔
 Conventional communication DMS2 (MIM-D00A)/BACnet GW (MIM-B17)/LonWorks GW (MIM-B18)

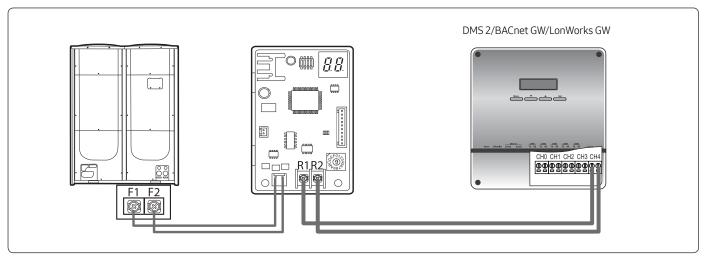

Note

- When connecting AM****X****** AC****X***** outdoor unit and new communication controller, you don't have to connect them with MIM-N01.
- When connecting Conventional communication outdoor unit and controller (ex. MCM-A202D), MIM-B13D or MIM-B13E must be used.

Display

 
Checking the operation




Displays the Main address of the communicating indoor units alternately [Displays the indoor unit that is set as (centralized control)]

Error display

• Communication error between outdoor unit and the interface module




• Interface module tracking failure

 


- Communication error between conventional communication outdoor unit ↔ New communication upper level controller after tracking has been completed
 - It will be displayed after failing 80 times of communication trial after interface module has started tracking (approximately 3 minutes)
- Communication error between New communication outdoor unit ↔ Conventional communication upper level controller after tracking has been completed
 - It will be displayed after failing the tracking process over 10 minutes from the interface module has started tracking.


• Communication error between upper level controller and the interface module after tracking has been completed

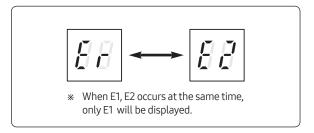

• When problem occurs on EEPROM

 

 • When same address was assigned to more than one interface module (Only detected when new communication upper level controller is connected to conventional communication outdoor unit)



Interface module > MIM-N01


■ Error display table

Error	Display	Error Code	Display on new communication upper level controller	Display on Conventional communication upper level controller
EEPROM	Er-E4	E654	E654	-
Overlapped address	Er-E5	E108	E108	-
Tracking failure	Er-E3	E604	E201	-
Indoor unit communication error	Er-E1	E615	E201 or E101	E615
Outdoor unit communication error	Er-E1	E616	E202	E616
Upper level controller communication error (Conventional type)	Er-E2	-	-	-

FCU interface module

MIM-F10N

Features

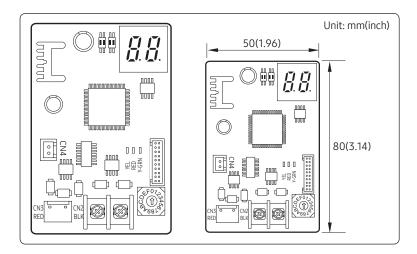

- Communication interface module between FCU KIT and upper level controller.
- Connect 1 FCU interface module to Max. 16 FCU KITs.
- Supports FCU KIT only


Product specification

PowerSupply	DC 12V
Power Consumption	1W
Operating Temperature range	-10 °C~50 °C (14 °F~122 °F)
Operating Humidity range	10%RH~90%RH
Communication	RS485 x 2
Maximum Communication Length	1000 M (3280 ft)
Maximum number of connection	 F1/F2: 16 FCU KITs R1/R2: Total up to 16 upper level controllers (Only1 DMS 2.5, BACnet GW/LonWorks GW connection is allowed)

Compatible Models


FCU KIT	MIM-F00N
Upper level controller	 DMS2.5: MIM-D01AUN BACnet GW: MIM-B17BUN LonWorks GW: MIM-B18BUN Touch centralized controller: MCM-A300N

Description of parts

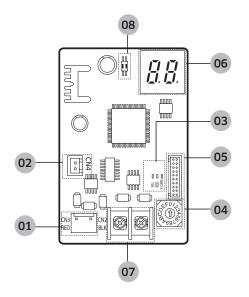


No.	Name	Description		
01	F1/F2 communication connector	Communication terminal that connects to F1/F2 of FCU KIT		
02	Power connector	DC12V		
03	Communication LED	 Communication indicator LED Left LED3: No function Middle RED: Blinks during it communicates with upper level controller Right Y-GRN: Blinks during it communicates with FCU KIT 		
04	Address setting switch	Sets the address of interface module		
05	Software update connector	Using this connector, interface module software can be updates		
06	7-segment	Displays the communication status between interface module and FCU KIT		
07	Upper level controller communication channel	Communication terminal to upper level controller R1/R2		
08	DIPswitch	ON OFF SW4 1 2 ON Manual address OFF Automatic address No function		

Connection diagram

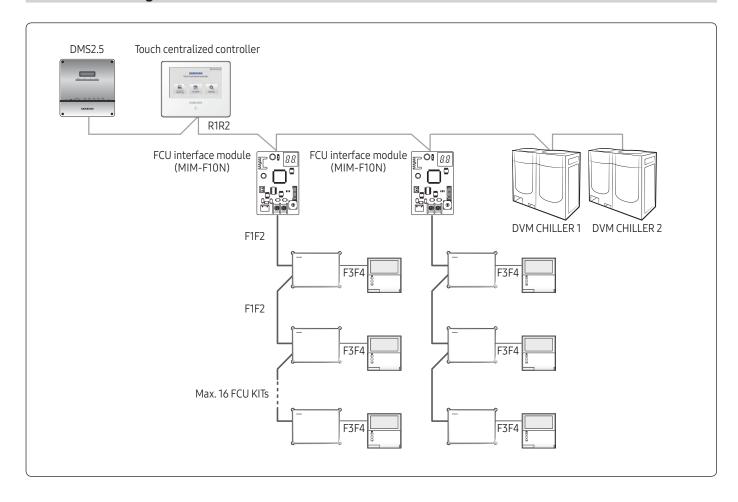


Connection

■ Connecting with Touch centralized controller

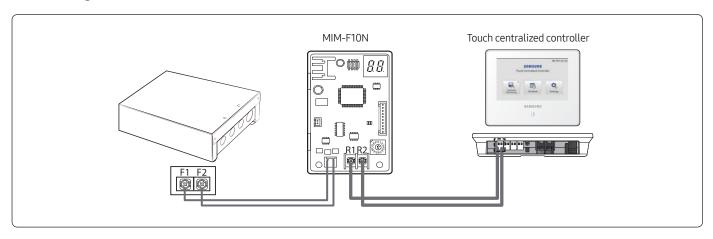

Connecting with with DMS2.5/BACnet GW/LonWorks GW

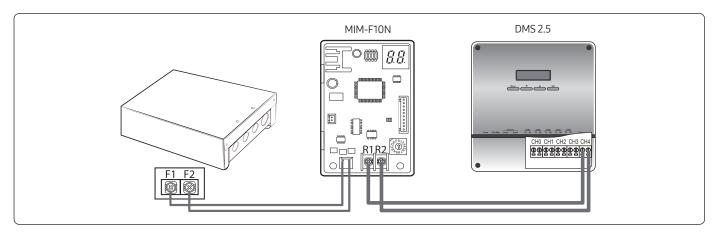

FCU interface module > MIM-F10N

Display

- 1 When initializing power supply, **F** will be indicated after indicating the program cord.
- 2 After receiving valid communication more than once, ### will be indicated.
- **3** When the communication is normal, the MAIN ADDRESS of the FCU KIT that can be controlled by the FCU interface module is indicated in order.
- **4** When there is no communication between the FCU KIT and the FCU interface module for more than 3 minutes, *EF* ↔ *EF* will be indicated alternately.
- **5** When the FCU interface module tracking is not complete, $F_{\alpha} \leftrightarrow F_{\beta}$ will be indicated alternately.
- **6** When there's error on EEPROM of the FCU interface module, 𝚰 ↔ 𝚰 🖁 will be indicated alternately.
- **7** When same address was set to multiple FCU interface modules, ₽₽ ↔ ₽₽ will be indicated alternately.
- **8** When more than 16 FCU KITs are installed, $E_F \leftrightarrow E_F$ will be indicated alternately.
- **9** When FCU KIT and indoor units are installed together, $F_H \leftrightarrow F_H H$ will be indicated alternately.

Chapter 05


Installation / Test run Solution

S-Converter	
MIM-CO2N	25

S-Converter

MIM-C02N

Features

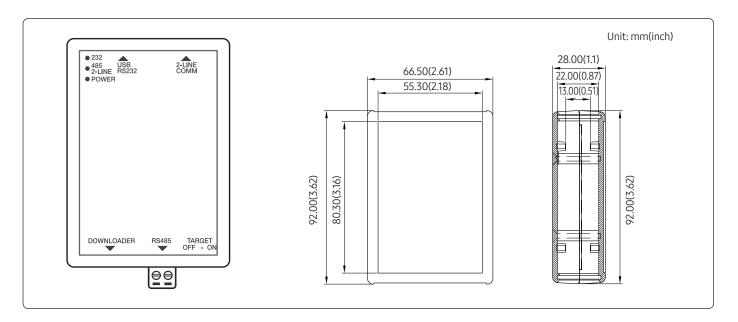

- Communication converting module to connect Samsung system air conditioner to a PC.
- Main purpose for use
 - To connect with test run program


[Test run program]

- S-NET Pro: Conventional communication
- S-NET Pro2: New communication

Product specification


Powersupply			DC 5V, below 500mA
Power consumption Power consumption			Below 3W
Operating temperature range			0°C~40°C (32°F~104°F)
Operating humidity range			0%RH~90%RH
Communication	RS485	Port Q'ty	1
Maximum length of connection	RS485	m(ft)	1000 (3280)

Description of parts

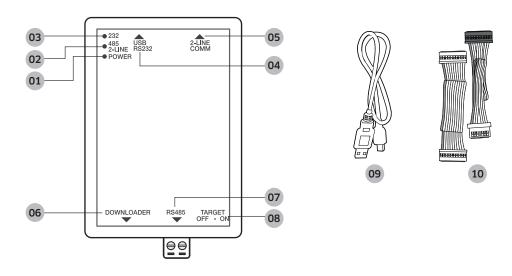


No.	Name	Description	
01	Power LED	Display power status	
02	485 communication/ 2 line communication LED	Displays communication status when outdoor unit 2 line remote controller is connected	
03	232 LED	Displays communication status with the PC	
04	USB-RS232 connection terminal	Connection terminal for communication with the PC	
	2 line communication	Only applies to new communication indoor unit	
05	connection terminal	2 line communication connection terminal between indoor unit - wired remote controller (For R&D testing)	
06	Downloader connection terminal	PBA download connection terminal	
07	RS485 communication connection terminal	Connection cable for connecting with indoor/outdoor unit's F1, F2 communication terminal	
		Only used when S-converter is used as SW downloader for the product	
08	TARGET OFF – ON button	 If the S-Converter supplies the power through the PBA of the product that will download the SW, this button resets the power that was supplied through the S-Converter 	
09	USB-to-232 cable	Cable that connects S-Converter and PC	
10	SW downloader cable	Only used when S-converter is used as SW downloader for the product • Connect S-Converter (20 Pin) and the downloader terminal (10 Pin, 7 Pin) of the product's PCB	

Connection diagram

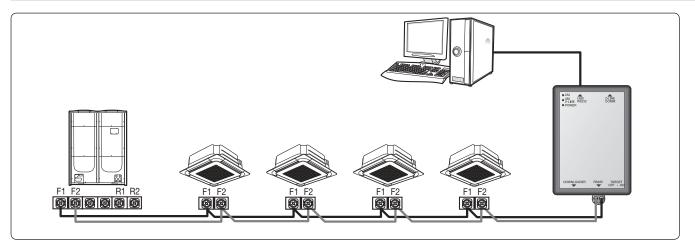


Connecting

▮ Connecting with outdoor unit

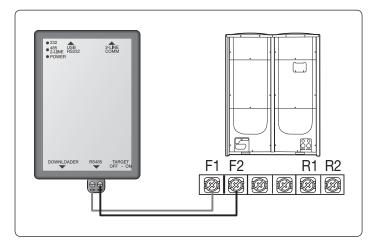

■ Connecting with PC

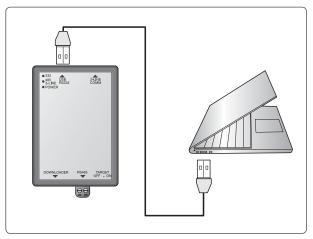

S-Converter > MIM-C02N

Display

POWER LED

- When connected to Conventional communication outdoor unit LED blinks
- When connected to new communication outdoor unit LED is on

232 LED

- LED blinks every time control signal is transmitted from the Test run program
- If the LED doesn't blink even though the test run program sends control command, check if the program is appropriate for the communication type (Conventional communication/new communication)

■485/2-LINE LED

- LED blinks when the data is being transmitted from the 485 or 2-line communication device
- 485 communication cable outdoor unit connection (Connects test run program)
 2-line communication device wired remote controller connection (connects program for the developer)
- If the LED doesn't turn on, check if the communication cable is disconnected/short or check if the device is appropriate for the communication type (Conventional communication/new communication)

Chapter **06**


Others

External Room Sensor	
MRW-TA	260
Operation mode selection switch	
MCM-C200	262
MTFC (Multi Tenant Function Cont	roller)
MCM-C210N	26/1

External Room Sensor

MRW-TA

Features

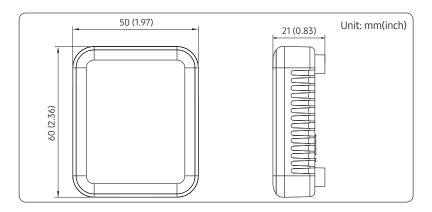

- Indoor unit is operated by MRW-TA instead of its own sensor.
- Wire length: 12m(39ft)


Components

Cab	le Tie(2)	M4X16 Tapped Screw (2)	12m Extension Wire (1)	External Room Sensor (1)	Adapter (2)	Wire Joint (2)	Seal Thermal Kit (1)	Installation Manual (1)
		CHANA	+00		CAE CAE			

♠ Caution

- The external room sensor must be installed by an installation specialist.
- Before installing the external room sensor, check that you have turned off the main power.
- Extension wire should be installed according to the national wiring rules and you must install it to the wall not to be touched by users.


Simulation of usage

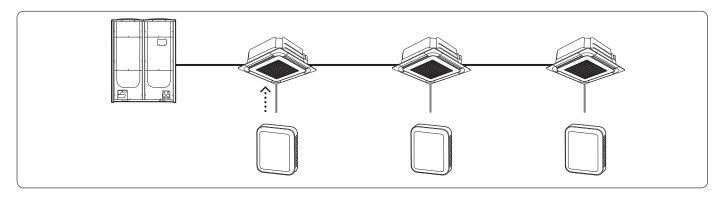

External Room Sensor > MRW-TA

Installation

- Separate the existing thermistor wire from the indoor unit PCB.
- Connect the provided 4P-WIRE adaptor to the thermistor wire(4Pin) terminal on the indoor unit PCB.
- Connect the existing wire to the 4Pin terminal on the 4P-WIRE adaptor.
- Connect the extension wire terminal to the 2Pin terminal on the adaptor.
- Do not cut the existing room temperature sensor and store it inside of the control box.

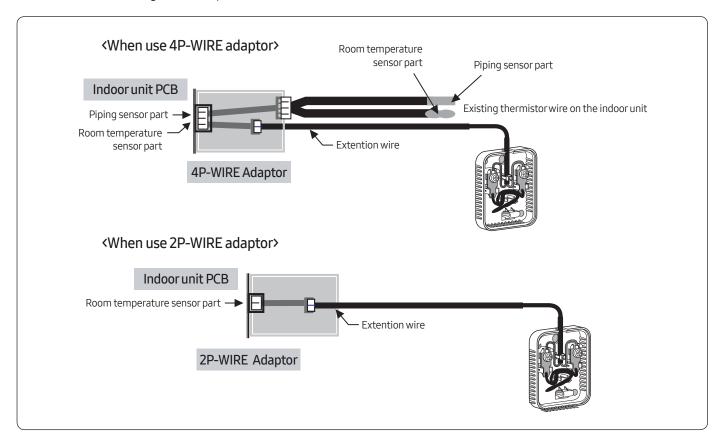

- When installing the external room sensor, turn off the K1 switch of indoor unit PCB.
- Some models need S/W upgrade.




** Before installation you should read installation manual and check whether it is installed correctly after installation.

Operation mode selection switch

MCM-C200


Features

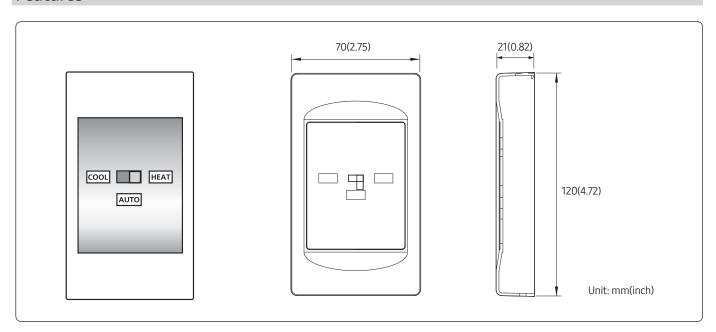

Operation mode selection switch

- Outdoor unit operation mode selection (Cooling, Heating or Auto)
- Mixed operation mode protection


Installation

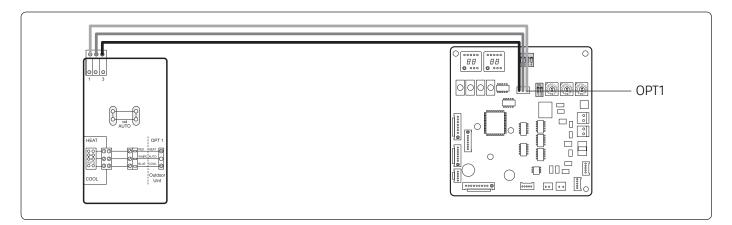

- 1 operation mode selection switch must be connected to 1 outdoor unit.
- Max. distance between the outdoor unit PCB and the MCM-C200:100m(328ft)

Control example


Initial condition

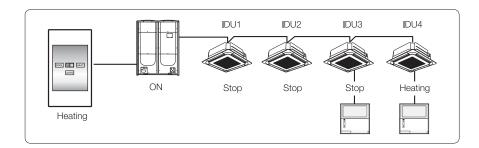

- Cool/Heat Selector: Heating position
- IDU1, 2, 3: Stop mode, IDU4: Heating mode
- Compressor ON

Sequence1

Set the Cool/Heat selector to the Cooling position

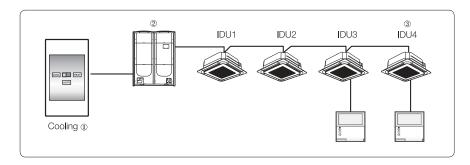


Result

- ① Change Cool/ Heat Selector to Cooling
- ② Automatically compressor OFF
- ③ Running IDU4 stops

Sequence 2

Set IDU4 to Heating with Remote controller

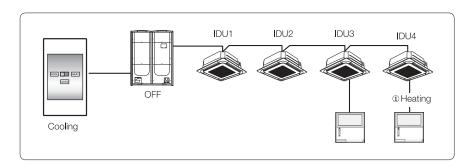

Result

- ① IDU4 ignores Heating command
 - IDU4 keeps OFF status.


Note

• Operation mode selection switch fixed indoor unit operation mode. Indoor unit ignores opposite operation mode. (It will not accept the command and it will just beep shortly)

MTFC (Multi Tenant Function Controller)

MCM-C210N

Features

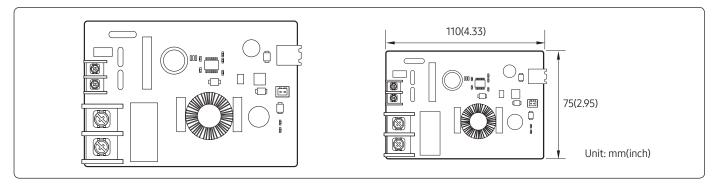

- Multi tenant function controller is an auxiliary power supply device which allows indoor unit to turn off (close EEV) normally and maintain communication when main power supply is cut.
- It is used in site such as hotel where individual power is supplied to the indoor unit

Note


- To intall the MTFC, connection cable for the power, transformer and the IP (Ingress Protection) box must be purchased separately at the installation site.
- Specification of the transformer: UL Standard, Class2, 24Vac ±15% 50/60 Hz

Product specification

Power supply	AC 24V
	50/60 Hz
Power consumption	10W
Operating temperature range	-10°C ~ 50°C (14°F ~ 122°F)
Operating humidity range	10 % RH~90 % RH
Maximum length of connection	3 m (9.84)
Number of control devices	1 indoor unit


MTFC (Multi Tenant Function Controller) > MCM-C210N

Description of parts

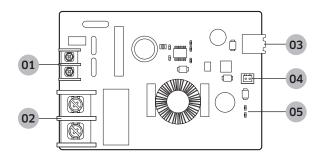


No.	Name	Description
01	Terminal for auxiliary power	Connect AC 24V power
02	Terminal for indoor unit power connection	To check for AC single phase power cut-off of the indoor unit, connect the power cable to the multi tenant function controller.
03	DC 12V output terminal	Terminal which supplies DC 12V to indoor unit
04	DC 5V output terminal	Terminal which supplies DC 5V to indoor unit
05	Operation status indicator LED	 LED ON: When AC single phase power for indoor unit is cut-off and DC12V, DC 5V is output normally from the multi tenant function controller LED OFF: When AC single phase is supplied normally to the indoor unit

Connection diagram

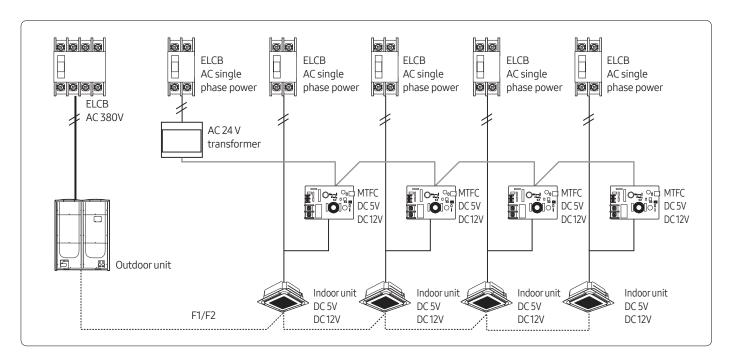

Connecting

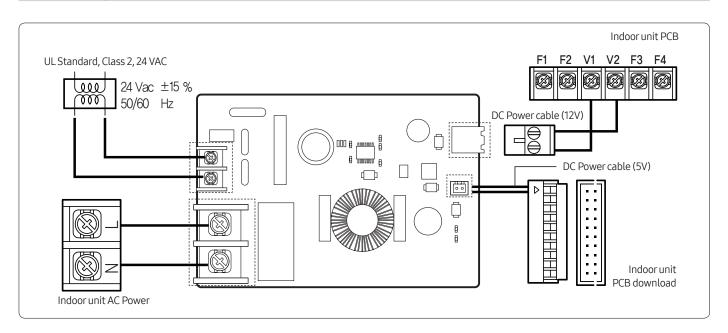

MTFC (Multi Tenant Function Controller) > MCM-C210N

Main fucntion

Multi tenant function controller operation

- When AC power (that is supplied to indoor unit) is cut-off, it supplies auxiliary power (DC 12V, DC 5V) to the indoor unit.
- When AC power (that is supplied to indoor unit) is supplied normally, it cuts-off the auxiliary power (DC 12V, DC 5V) to the indoor unit.

Detail information of the indoor unit when the power is supplied by MTFC

Item	Operation	Detail information
Indoor unit operation	OFF	Remain indoor unit in off status, turning on is not possible
EEV control	Close	Operation off, follows indoor unit's EEV control
Self error diagnosis	Operating	Detects error such as EEV close/open by executing self-diagnosis
Displaying error on panel	Display partially	Case 1) The errors of itself: it displays.
display	Display partially	Case 2) The errors of the other units: it doesn't display.
Operation of the connected wired remote controller	OFF	Power cut (not working)
Panel display	All off	All LEDs is off
Input outdoor unit key mode (Test run)	Not operating	The others are operated except the indoor unit in MTFC mode
Controlling from the control device	Not operating	Remain off status, turning on is not possible
Setting option code	Not operating	Option setting from wireles remote controller, wired remote controller and S-NET Pro etc is not possible
Recognition of MTFC status	Possible only through S-NET Pro 2	Using S-NET Pro2, user can check MTFC working status
Веер	Not operating	-

When AC single phase power is normally supplied to indoor unit

Indoor unit operates normally.

!\ Caution

- Wired remote controller for group control cannot be installed to an indoor unit which Multi Tenant Function controller was installed.
- EEV operation of the stopped Heat mode will be controlled in same condition as noise reduction control option when Multi Tenant Function Controller operates.
- If the Multi Tenant Function Controller operates while multiple indoor units are working in mixed operation mode (cooling and heating at the same time), dew may form on the indoor unit fan.

