
# Service Manual


Air-to-Water Hydromodule

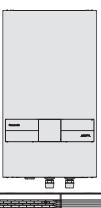

Indoor Unit WH-SDC0916M3E5 WH-SDC0916M6E5

Outdoor Unit WH-WXG09ME5 WH-WXG12ME5

> Destination Europe

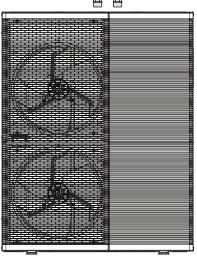

## WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the products dealt with in this service information by anyone else could result in serious injury or death.

#### IMPORTANT SAFETY NOTICE •

There are special components used in this equipment which are important for safety. These parts are marked by ⚠ in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

## PRECAUTION OF LOW TEMPERATURE

In order to avoid frostbite, be assured of no refrigerant leakage during the installation or repairing of refrigerant circuit.

#### **!** CAUTION

#### R290 REFRIGERANT

This AIR-TO-WATER HEATPUMP contains and operates with refrigerant R290.
THIS PRODUCT MUST ONLY BE INSTALLED OR SERVICED BY QUALIFIED PERSONNEL
Refer to National, State, Territory and local legislation, regulations, codes, installation & operation manuals, before the installation, maintenance and/or service of this product.



# **TABLE OF CONTENTS**

1 62	foty Procautions	14.4 Water Circuit Part Safety	77
	fety Precautions4	14.5 Auto Restart Control	
2. Pro	ecaution for Using R290 Refrigerant7	14.6 Indication Panel17	77
	ecifications12	14.7 Indoor Back-Up Heater Control (Excluding	70
		when Operating in Standalone)	/ C
3.1	WH-SDC0916M3E5 WH-WXG09ME512	14.8 Tank Heater Control (Excluding when	71
3.2	WH-SDC0916M3E5 WH-WXG12ME515	Operating in Standalone)	
3.3	WH-SDC0916M6E5 WH-WXG09ME518	14.9 Base Pan Heater Control (Optional) 18	
3.4	WH-SDC0916M6E5 WH-WXG12ME521	14.10 Force Heater Mode	
4 Fo	atures24	14.11 Powerful Operation	
		14.12 Quiet Operation	
5. Lo	cation of Controls and Components25	14.13 Sterilization Mode 18	
E 1	Indoor Unit	14.14 DHW Circulation Pipe Sterilization Operation	
5.1	Indoor Unit	18	
5.2	Outdoor Unit60	14.15 Outdoor Ambient Thermo OFF Control 18	
6. Dir	mensions61	14.16 Alternative Outdoor Ambient Sensor Control	١.
			35
6.1	Indoor Unit61	14.17 Force DHW Mode 18	
6.2	Outdoor Unit62	14.18 SMART DHW Mode18	
7. Re	frigeration and Water Cycle Diagram63	14.19 Anti Freeze Control	
		14.20 Solar Operation (Optional)	
8. Blo	ock Diagram64	14.21 Boiler Bivalent Control	
		14.22 External Room Thermostat Control (Optiona	
8.1	WH-SDC0916M3E5 WH-WXG09ME5	14.22 External Room Thermostat Control (Optiona	
0.0	WH-WXG12ME564	14.23Three Ways Valve Control	
8.2	WH-SDC0916M6E5 WH-WXG09ME5	14.24 Two Ways Valve Control	
	WH-WXG12ME565		
9 Wi	ring Connection Diagram66	14.25 Anti-Stick Mode Operation	
		14.26 External OFF/ON Control	
9.1	Indoor Unit66	14.27 External Compressor Switch (Optional PCB)	
9.2	Outdoor Unit68		
40 E14	potronia Circuit Diagram	14.28 Heat/Cool Switch (Optional PCB)	
IU. Ele	ectronic Circuit Diagram69	14.29 SG Ready Control (Optional PCB) 19	
10.1	Indoor Unit69	14.30 Demand Control (Optional PCB)	
	Outdoor Unit71	14.31 Holiday Mode	
		14.32 Dry Concrete	
11. Pri	inted Circuit Board72	14.33 Flow Sensor 20	)′
11 1	Indoor Unit72	15. Protection Control20	۸-
	Outdoor Unit	13. PTOLECTION CONTROL	J
		15.1 Protection Control for All Operations 20	)2
12. Ins	stallation Instruction77	15.2 Protection Control for Heating Operation	
12 1	Indoor Unit78	20	)4
		15.3 Protection Control for Cooling Operation	
	Appendix95	20	
	Service and Maintenance		
	Outdoor Unit	16. Servicing Guide 20	){
	Appendix	16.1 How to Take Out Front Plate	٦٤
12.6	Service and Maintenance151	16.2 Test Run	
13. Ins	stallation and Servicing Air-to-Water using	16.3 Expansion Vessel (I) (ID) Pre Pressure	)(
	90152	- , ,	٠,
		Checking	
13.1	About R290 Refrigerant152	16.4 How to Adjust Pump Speed	
	Characteristics of R290 Refrigerant152	16.5 How to Unlock Cool Mode	1(
	Refrigerant piping installation • Tools used in	16.6 EEPROM Factory Default Data Setup	
	services154	Procedure2	
13.4	New installation, and Repairing of Refrigerant	16.7 Dry Concrete Setup 2	12
	Cycle System Procedures158	17 Maintenance Guide	4 4
13.5	Servicing159	17. Maintenance Guide2	14
		17.1 Service and Maintenance	17
14. Op	peration and Control161		
_	Basic Function161	18. Troubleshooting Guide2	18
		18.1 Refrigeration Cycle System 2	18
	Water Pump	10.1 Romgoration Oyolo Oyolom	
1/1 4	EXITA PUMO EUNCHON CUNTIONALI 1/5		

	18.2	Relationship Between the Condition of the Air-to-Water Heatpump Indoor and Outd	
		Units and Electric Current	
	18.3	Breakdown Self Diagnosis Function	
		Error Codes Table	
	18.5	Self-Diagnosis Method	225
19	9. Dis	assembly and Assembly Instructions.	285
	19.1	Indoor Unit	285
		Outdoor Unit	
2(	0. Ted	chnical Data	291
	20.1	Operation Characteristics	291
		Heating Capacity Table	
		Cooling Capacity Table	
2	1. Ex	oloded View and Replacement Parts Li	st
			302
	21.1	Indoor Unit	302
	21 2	Outdoor Unit	318

## 1. Safety Precautions

- Read the following "SAFETY PRECAUTIONS" carefully before installation of Air-To-Water Hydromodule + Tank (here after referred to as "Tank Unit").
- Electrical works and water installation works must be done by licensed electrician and licensed water system installer respectively. Be sure to use the correct rating and main circuit for the model to be installed.
- The caution items stated here must be followed because these important contents are related to safety. The
  meaning of each indication used is as below.
   Incorrect installation due to ignorance or negligence of the instructions will cause harm or damage, and the
  seriousness is classified by the following indications.
- Please leave this installation manual with the unit after installation.

<b>⚠</b> WARNING	This indication shows the possibility of causing death or serious injury.
<b>⚠</b> CAUTION	This indication shows the possibility of causing injury or damage to properties only.

The items to be followed are classified by the symbols:

$\Diamond$	Symbol with white background denotes item that is PROHIBITED.
0 •	Symbol with dark background denotes item that must be carried out.

- Carry out test run to confirm that no abnormality occurs after the installation. Then, explain to user the operation, care and maintenance as stated in instructions. Please remind the customer to keep the operating instructions for future reference.
- This appliance is not intended for accessibility by the general public.
- If there is any doubt about the installation procedure or operation, always contact the authorized dealer for advice and information.

1.	Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer. Any unfit method or using incompatible material may cause product damage, burst and serious injury.	0
2.	Do not install outdoor unit near handrail of veranda. When installing outdoor unit at veranda of high rise building, child may climb up to outdoor unit and cross over the handrail and causing accident.	0
3.	Do not use unspecified cord, modified cord, joint cord or extension cord for power supply cord. Do not share the single outlet with other electrical appliances. Poor contact, poor insulation or over current will cause electrical shock or fire.	$\Diamond$
4.	Do not tie up the power supply cord into a bundle by band. Abnormal temperature rise on power supply cord may happen.	0
5.	Do not insert your fingers or other objects into the unit, high speed rotating fan may cause injury.	0
6.	Do not sit or step on the unit, you may fall down accidentally.	0
7.	Keep plastic bag (packaging material) away from small children, it may cling to nose and mouth and prevent breathing.	0
8.	Do not purchase unauthorized electrical parts for installation, service, maintenance and etc They might cause electrical shock or fire.	0
9.	Do not modify the wiring of outdoor unit for installation of other components (i.e. heater, etc). Overloaded wiring or wire connection points may cause electrical shock or fire.	0
10	. Do not pierce or burn as the appliance is pressurized. Do not expose the appliance to heat, flame, sparks, or other sources of ignition. Else, it may explode and cause injury or death.	0
11	. Do not add or replace refrigerant other than specified type. It may cause product damage, burst and injury etc.	$\Diamond$
12	. Do not place containers with liquids on top of the Tank Unit. It may cause Tank Unit damage and/or fire could occurs if they leak or spill onto the Tank Unit.	$\Diamond$
13	. Do not use joint cable for Tank Unit / Outdoor Unit connection cable. Use specified Tank Unit / Outdoor Unit connection cable, refer to	
	instruction 4 CONNECT THE CABLE TO THE TANK UNIT and connect tightly for Tank Unit / Outdoor Unit connection. Clamp the cable so that no external force will be acted on the terminal. If connection or fixing is not perfect, it will cause heat up or fire at the connection.	$\Diamond$
14	. For electrical work, follow the national regulation, legislation and this installation instructions. An independent circuit and single outlet must be used. If electrical circuit capacity is not enough or defect found in the electrical work, it will cause electrical shock or fire.	0
15	. For electrical work, follow local wiring standard, regulation and this installation instruction. An independent circuit and single outlet must be used. If electrical circuit capacity is not enough or defect found in electrical work, it will cause electrical shock or fire.	0
16	. For water circuit installation work, follow to relevant European and national regulations (including EN61770) and local plumbing and building regulation codes.	0

<b>⚠ WARNING</b>	
7. Engage authorized dealer or specialist for installation. If installation done by the user is incorrect, it will cause water leakage, electrical shock or fire.	0
8. Engage dealer or specialist for installation. If installation done by the user is defective, it will cause water leakage, electrical shock or fire.	9
<ul> <li>0. • The refrigerant cycle is completed inside the outdoor unit.</li> <li>• Refrigerant piping work is not required.</li> <li>• Pump down operation is not also required.</li> </ul>	0
I. Install at a strong and firm location which is able to withstand weight of the set. If the strength is not enough or installation is not properly done, the set will drop and cause injury.	0
. This equipment is strongly recommended to be installed with Residual Current Device (RCD) on-site according to the respective national wiring rules or country–specific safety measures in terms of residual current.	0
2. For refrigeration system work, install according to this installation instructions strictly. If installation is defective, it will cause water leakage, electrical shock or fire.	0
B. Do not use joint cable for outdoor connection cable. Use specified outdoor connection cable, refer to instruction <b>(6) CONNECT THE CABLE TO THE OUTDOOR UNIT</b> and connect tightly for outdoor connection. Clamp the cable so that no external force will be acted on the terminal. If connection or fixing is not perfect, it will cause heat up or fire at the connection.	9
Wire routing must be properly arranged so that control board cover is fixed properly. If control board cover is not fixed perfectly, it will cause fire or electrical shock.	0
5. After completion of installation, confirm there is no leakage of refrigerant gas. It may lead to the risk of fire or explosion when the refrigerant contacts with fire.	0
5. Ventilate the room if there is refrigerant gas leakage during operation. Extinguish all fire sources if present. It may lead to the risk of fire or explosion when the refrigerant contacts with fire.	0
7. Use the attached accessories parts and specified parts for installation. Otherwise, it will cause the set to fall, water leakage, fire or electrical shock.	0
3. Only use the supplied or specified installation parts. Else, it may causes unit vibrate, fall, water leakage, electrical shock or fire.	0
9. If there is any doubt about the installation procedure or operation, always contact the authorized dealer for advice and information.	0
9. Select a location where in case of water leakage, the leakage will not cause damage to other properties.	0
	9
2. Any work carried out on the Tank Unit after removing any panels which is secured by screws, must be carried out under the supervision of authorized dealer and licensed installation contractor.	9
s. Any work carried out on the outdoor unit after removing any panels which is secured by screws, must be carried out under the supervision of authorized dealer and licensed installation contractor.	0
s. This system is multi supply appliance. All circuits must be disconnected before accessing the unit terminals.	0
is. For cold water supply has a backflow regulator, check valve or water meter with check valve, provisions for thermal expansion of water in the hot water system must be provided. Otherwise it will cause water leakage.	0
5. The piping installation work must be flushed before Tank Unit is connected to remove contaminants. Contaminants may damage the Tank Unit components.	0
This installation may be subjected to building regulation approval applicable to respective country that may require to notify the local authority before installation.	0
3. The Tank Unit must be shipped and stored in upright condition and dry environment. It may laid on its back when being moved into the building.	0
	9
b. Be aware that refrigerants may not contain an odour.	0
	<u> </u>
2. This unit must be properly earthed. The electrical earth must not be connected to a gas pipe, water pipe, the earth of lightening rod or	9

	⚠ CAUTION	
1.	Do not install the Tank Unit at place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire.	0
2.	Do not install the outdoor unit at place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire.	$\Diamond$
3.	Prevent liquid or vapor from entering sumps or sewers since vapor is heavier than air and may form suffocating atmospheres.	0
4.	Do not release refrigerant during repairing a refrigeration parts. Take care of the liquid refrigerant, it may cause frostbite.	0
5.	Do not install this appliance in a laundry room or other high humidity location. This condition will cause rust and damage to the unit.	0
6.	Make sure the insulation of power supply cord does not contact hot part (i.e. water piping) to prevent from insulation failure (melt).	0
7.	Do not touch the sharp aluminium fin, sharp parts may cause injury.	0
8.	Do not apply excessive force to water pipes that may damage the pipes. If water leakage occurs, it will cause flooding and damage to other properties.	$\Diamond$
9.	Do not transport the Tank Unit with water inside the unit. It may cause damage to the unit.	$\Diamond$
10	. Carry out drainage piping as mentioned in installation instructions. If drainage is not perfect, water may enter the room and damage the furniture.	0
11	Select an installation location which is easy for maintenance.  Incorrect installation, service or repair of this Tank Unit may increase the risk of rupture and this may result in loss damage or injury and/or property.	0
12	<ul> <li>Power supply connection</li> <li>Power supply point should be in easily accessible place for power disconnection in case of emergency.</li> <li>Comply with local national wiring standard, regulation, and this installation instruction.</li> <li>Strongly recommended to make permanent connection to a circuit breaker.</li> <li>Power supply: Use approved 20A 4-poles circuit breaker with a minimum contact gap of 3.0mm.</li> </ul>	0
13	. Ensure the correct polarity is maintained throughout all wiring. Otherwise, it will cause electrical shock or fire.	0
14	. After installation, check the water leakage condition in connection area during test run. If leakage occurs, it will cause damage to other properties.	0
15	. If the Tank Unit not operates for long time, the water inside the Tank Unit should be drained.	0
16	. Installation work. It may need three or more people to carry out the installation work. The weight of Tank Unit might cause injury if carried by one person.	0
17	. Installation work. It may need two or more people to carry out the installation work. The weight of outdoor unit might cause injury if carried by one person.	0
18	. Keep any required ventilation openings clear of obstruction.	0
19	. Water piping in the occupied space shall be installed in such a way to protect against accidental damage in operation and service.	0
20	. Precautions shall be taken to avoid excessive vibration or pulsation to water piping.	0
21	. Protect the water piping from accidental rupture due to moving furniture or reconstruction activities.	0
22	<ul> <li>• Must ensure the installation of water pipe-work shall be kept to a minimum. Avoid use dented pipe and do not allow acute bending.</li> <li>• Must ensure that water pipe-work shall be protected from physical damage.</li> </ul>	0

# 2. Precaution for Using R290 Refrigerant

• Pay careful attention to the following points:

	<u> </u>
1.	The mixing of different refrigerants within a system is prohibited.
2.	Operation, maintenance, repairing and refrigerant recovery should be carried out by trained and certified personnel in the use of flammable refrigerants and as recommended by the manufacturer. Any personnel conducting an operation, servicing or maintenance on a system or associated parts of the equipment should be trained and certified.
3.	Any part of refrigerating circuit (evaporators, air coolers, AHU, condensers or liquid receivers) or piping should not be located in the proximity of heat sources, open flames, operating gas appliance or an operating electric heater.
4.	The user/owner or their authorized representative shall regularly check the alarms, mechanical ventilation and detectors, at least once a year, where as required by national regulations, to ensure their correct functioning.
5.	A logbook shall be maintained. The results of these checks shall be recorded in the logbook.
6.	In case of ventilations in occupied spaces shall be checked to confirm no obstruction.
7.	Before a new refrigerating system is put into service, the person responsible for placing the system in operation should ensure that trained and certified operating personnel are instructed on the basis of the instruction manual about the construction, supervision, operation and maintenance of the refrigerating system, as well as the safety measures to be observed, and the properties and handling of the refrigerant used.
8.	The general requirement of trained and certified personnel are indicated as below:  a) Knowledge of legislation, regulations and standards relating to flammable refrigerants; and,  b) Detailed knowledge of and skills in handling flammable refrigerants, personal protective equipment, refrigerant leakage prevention, handling of cylinders, charging, leak detection, recovery and disposal; and,  c) Able to understand and to apply in practice the requirements in the national legislation, regulations and Standards; and,  d) Continuously undergo regular and further training to maintain this expertise.
9.	Ensure protection devices, refrigerating circuit and fittings are well protected against adverse environmental effects (such as the danger of water collecting and freezing in relief pipes or the accumulation of dirt and debris).

#### ( CAUTION

#### Installation (Space)

- Must comply with national gas regulations, state municipal rules and legislation. Notify relevant authorities in accordance with all applicable regulations.
- 1. Must ensure mechanical connections be accessible for maintenance purposes.
  - In cases that require mechanical ventilation, ventilation openings shall be kept clear of obstruction.
  - When disposal of the product, do follow to the precautions in #12 and comply with national regulations.
  - Always contact to local municipal offices for proper handling.

#### Servicing

#### 2-1. Service personnel

- Any qualified person who is involved with working on or breaking into a refrigerant circuit should hold a current valid
  certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants
  safely in accordance with an industry recognized assessment specification.
- Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the
  assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of
  flammable refrigerants.
- Servicing shall be performed only as recommended by the manufacturer.
- The system is inspected, regularly supervised and maintained by a trained and certified service personnel who is employed by the person user or party responsible.
- Ensure refrigerant charge not to leak.

#### 2-2 Work

- Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimised.
  - For repair to the refrigerating system, the precautions in #2-2 to #2-8 must be followed before conducting work on the system.
- Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapour being
  present while the work is being performed.
- All maintenance staff and others working in the local area shall be instructed and supervised on the nature of work being carried out.
- Avoid working in confined spaces. Always ensure away from source, at least 2 meter of safety distance, or zoning of free space area of at least 2 meter in radius.
- Wear appropriate protective equipment, including respiratory protection, as conditions warrant.
- Keep all sources of ignition and hot metal surfaces away.

#### 2. 2-3. Checking for presence of refrigerant

- The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres.
- Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. non sparking, adequately sealed or intrinsically safe.
- In case of leakage/spillage happened, immediately ventilate area and stay upwind and away from spill/release.
- In case of leakage/spillage happened, do notify persons down wind of the leaking/spill, isolate immediate hazard area and keep unauthorized personnel out.

#### 2-4. Presence of fire extinguisher

- If any hot work is to be conducted on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available at hand.
- Have a dry powder or CO<sub>2</sub> fire extinguisher adjacent to the charging area.

#### 2-5. No ignition sources

- No person carrying out work in relation to a refrigerating system shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. He/She must not be smoking when carrying out such work.
- All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which flammable refrigerant can possibly be released to the surrounding space.
- Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks.
- "No Smoking" signs shall be displayed.

#### 2-6. Ventilated area

- Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot
  work
- A degree of ventilation shall continue during the period that the work is carried out.
- The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.



#### ( CAUTION

#### 2-7. Checks to the refrigerating equipment

- Where electrical components are being changed, they shall be fit for the purpose and to the correct specification.
- At all times the manufacturer's maintenance and service guidelines shall be followed.
- If in doubt consult the manufacturer's technical department for assistance.
- The following checks shall be applied to installations using flammable refrigerants.
  - The ventilation machinery and outlets are operating adequately and are not obstructed.
  - If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant.
  - Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected.
  - Refrigerating pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are properly protected against being so corroded.

#### 2-8. Checks to electrical devices

- Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures.
- Initial safety checks shall include but not limit to:-
  - That capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking.
  - That there are no live electrical components and wiring are exposed while charging, recovering or purging the system.
  - That there is continuity of earth bonding.
- At all times the manufacturer's maintenance and service guidelines shall be followed.
- If in doubt consult the manufacturer's technical department for assistance.
- If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with.
- If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used
- The owner of the equipment must be informed or reported so all parties are advised thereinafter.

#### Repairs to sealed components

- During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc.
- If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.
- Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not
  altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of
  connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.
- connections, terminals not made to original sensure that apparatus is mounted securely.
  - Ensure that seals or sealing materials have not degraded such that they no longer serve the purpose of preventing the ingress of flammable atmospheres.
  - Replacement parts shall be in accordance with the manufacturer's specifications.

NOTE: The use of silicon sealant may inhibit the effectiveness of some types of leak detection equipment. Intrinsically safe components do not have to be isolated prior to working on them.

#### Repair to intrinsically safe components

- Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.
- Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere.
  - The test apparatus shall be at the correct rating.
  - Replace components only with parts specified by the manufacturer. Unspecified parts by manufacturer may result ignition of refrigerant in the atmosphere from a leak.

#### Cabling

5.

- Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects.
  - The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

#### Detection of flammable refrigerants

- 6. Under no circumstances shall potential sources of ignition be used in the searching or detection of refrigerant leaks.
  - A halide torch (or any other detector using a naked flame) shall not be used.

0







#### ( CAUTION

The following leak detection methods are deemed acceptable for all refrigerant systems.

- No leaks shall be detected when using detection equipment with a sensitivity of 5 grams per year of refrigerant or better
  under a pressure of at least 0,25 times the maximum allowable pressure (>0.98MPa, max 3.90MPa). For example, a
  universal sniffer.
- Electronic leak detectors may be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration.
  - (Detection equipment shall be calibrated in a refrigerant-free area.)
- 7. Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used.
  - Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25 % maximum) is confirmed.
  - Leak detection fluids are also suitable for use with most refrigerants, for example, bubble method and fluorescent method
    agents. The use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and
    corrode the copper pipe-work.
  - If a leak is suspected, all ignition sources shall be removed/extinguished.
  - If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system. The precautions in #8 must be followed to remove the refrigerant.

#### Removal and evacuation

When breaking into the refrigerant circuit to make repairs – or for any other purpose – conventional procedures shall be used

However, it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:

- remove refrigerant -> purge the circuit with inert gas -> evacuate -> purge with inert gas ->
- open the circuit by cutting.

Brazing must not be used.

- The refrigerant charge shall be recovered into the correct recovery cylinders.
  - The system shall be purged with OFN to render the appliance safe. (remark: OFN = oxygen free nitrogen, type of inert gas)
  - This process may need to be repeated several times.
  - Compressed air or oxygen shall not be used for this task.
  - Purging shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure
    is achieved, then venting to atmosphere, and finally pulling down to a vacuum.
  - This process shall be repeated until no refrigerant is within the system. (Until the concentration of purge gas is 0.25 LFL or less by the leak detector). \*0.25LFL = 0.525Vol%
  - When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.
  - This operation is absolutely vital if brazing operations on the pipe work are to take place.
  - Ensure that the outlet for the vacuum pump is not close to any potential ignition sources and there is ventilation available.

#### Charging procedures

- In addition to conventional charging procedures, the following requirements shall be followed.
  - Ensure that contamination of different refrigerants does not occur when using charging equipment.
  - Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
  - Cylinders shall be kept in an appropriate position according to the instructions.
  - Ensure that the refrigerating system is earthed prior to charging the system with refrigerant.
- 9. Label the system when charging is complete (if not already).
  - Extreme care shall be taken not to over fill the refrigerating system.
  - Prior to recharging the system it shall be pressure tested with OFN (refer to #8).
  - The system shall be leak tested on completion of charging but prior to commissioning.
  - A follow up leak test shall be carried out prior to leaving the site.
  - Electrostatic charge may accumulate and create a hazardous condition when charging and discharging the refrigerant. To avoid fire or explosion, dissipate static electricity during transfer by grounding and bonding containers and equipment before charging/discharging.



0



#### CAUTION

#### Decommissioning

- Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its
  details.
- It is recommended good practice that all refrigerants are recovered safely.
- Re-use of recovered refrigerant is prohibited.
- It is essential that electrical power is available before the task is commenced.
  - a) Become familiar with the equipment and its operation.
  - b) Isolate system electrically.
  - c) Before attempting the procedure ensure that:

- · mechanical handling equipment is available, if required, for handling refrigerant cylinders;
- all personal protective equipment and leak detectors are available and being used correctly;
- the recovery process is supervised at all times by a competent person;
- recovery equipment and cylinders conform to the appropriate standards.
- d) Make sure that cylinder is situated on the scales before recovery takes place.
- e) Start the recovery machine and operate in accordance with instructions.
- f) Do not over fill cylinders. (No more than 80 % volume liquid charge).
- g) Do not exceed the maximum working pressure of the cylinder, even temporarily.
- h) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- Electrostatic charge may accumulate and create a hazardous condition when charging or discharging the refrigerant. To avoid fire or explosion, dissipate static electricity during transfer by grounding and bonding containers and equipment before charging/discharging.

#### Labelling

10.

- Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant.
  - The label shall be dated and signed.
  - Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

#### Recovery

- When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.
- When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed.
- Ensure that the correct number of cylinders for holding the total system charge are available.
- All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant).
- · Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order.
- Recovery cylinders are evacuated and, if possible, cooled before recovery occurs.
- The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of flammable refrigerants.
- · Make sure the recovery equipment is not a potential ignition source and is suitable for the refrigerant you are using.
- 12. In addition, a set of calibrated weighing scales shall be available and in good working order.
  - Hoses shall be complete with leak-free disconnect couplings and in good condition.
  - Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that
    any associated electrical components are sealed to prevent ignition in the event of a refrigerant release.
     Consult manufacturer if in doubt.
  - The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged.
  - Do not mix refrigerants in recovery units and especially not in cylinders.
  - If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to
    make certain that flammable refrigerant does not remain within the lubricant.
  - The evacuation process shall be carried out prior to returning the compressor to the suppliers.
  - Only electric heating to the compressor body shall be employed to accelerate this process.
  - When oil is drained from a system, it shall be carried out safely.

A



# 3. Specifications

## 3.1 WH-SDC0916M3E5 WH-WXG09ME5

	Ite	em	Unit		Outdo	or Unit					
Performance Te	Performance Test Condition			EN 14511 / EN 14825			5				
			Condition (Ambient/Water)		A35	5W7					
Cooling Capacity	y		kW	9.00							
				30700							
Cooling EER	Cooling EER				3.	61					
							Condition (Ambient/Water)	A7W35			A2W35
Heating Capacity	Heating Capacity			9.00			9.00				
			BTU/h	30700			30700				
Heating COP			W/W	5.23			3.81				
	Low Ten	nperature Application (W	35)	Marmar	A. (a)	rogo	Coldor				
	Applicati	on	Climate	Warmer	Ave	rage	Colder				
	Pdesign		kW	9.0	9	.0	9.0				
	Tbivalen	t / TOL	°C	2/2	-10	/ -10	-22 / -22				
	SCOP / I	ns	(W/W) / %	6.33 / 250	5.00	/ 197	4.45 / 175				
	Annual C	Consumption	kWh	1901	37	'21	4990				
Heating EvD	Class			A+++	A+	++	A+++				
Heating ErP	Medium	Temperature Application	(W55)	Warmer	A.,		Colder				
	Application		Climate	warmer	Average		Coldel				
	Pdesign		kW	9.0	9.0		9.0				
	Tbivalent / TOL		°C	2/2	-10 / -10		-22 / -22				
	SCOP / ns		(W/W) / %	4.40 / 173	3.50 / 137		3.20 / 125				
	Annual C	Consumption	kWh	2735	5318		6939				
	Class			A+++	A	++	A++				
			dB (A) ***	Cooling: - Heating:		Heating: -					
Noise Level			Power Level dB ****	Cooling: 60	)		Heating: 58				
			dB *****	-			Heating: 52				
Air Flow			m³/min (ft³/min)	Cooling: 97.0 (3426) Heating: 83.0 (2931)							
Refrigeration Co	ntrol Devic	e		Expansion Valve							
Refrigeration Oil			cm <sup>3</sup>	PZ68S (1600)							
Refrigerant (R29	00) Prechai	rge / Maximum	kg (oz)	1.78 (62.8) / (-)							
F-GAS		GWP			;	3					
1-040		CO₂eq (ton) (Precharge	d / Maximum)		0.00	6 / (-)					
		Height	mm (inch)		1520 (5	9-27/32)					
Dimension		Width	mm (inch)		1200 (	47-1/4)					
Depth		Depth	mm (inch)		430 (16	6-15/16)					
Net Weight		kg (lbs)		160	(353)						
Pipe Diameter (Inner)		mm	25								
Standard Length		m (ft)	5.0 (16.4)								
Maximum Pipe L	Maximum Pipe Length		m (ft)	30.0 (98.4)							
I/D & O/D Heigh	t Difference	e	m (ft)	30.0 (98.4)							
Water Pipe Coni	nector	Indoor	inch	1-1/4							
a.c. i ipo com		Outdoor		1-1/4							

Item		Unit	Outdoor Unit				
	Туре		Hermetic Motor Compressor (Involute Scroll)				
Compressor	Motor Type		Synchronous Electric Motor (6-poles)				
	Rated Output	kW	3.10				
	Туре		Propeller Fan				
	Material		PP				
	Motor Type		DC (8-poles)				
Fan	Input Power	W	-				
	Output Power	W		120 × 2			
	Fan Speed	rnm		Cooling: 510			
		rpm		Heating: 400			
	Fin material			Aluminium (Pre Coat)			
Heat Exchanger	Fin Type			Corrugated Fin			
ŭ	Row × Stage × FPI			2 × 58 × 19			
	Size (W × H × L)	mm	44	1 × 1473.2 × 868.2:902	2.7		
	Туре			Braze Plate			
Llat Matan Cail	No. of Plates			36			
Hot Water Coil	Size (W × H × L)	mm		76.2 × 524 × 117			
	Water Flow Rate	l/min (m³/h)		Cooling: 25.8 (1.5) Heating: 25.8 (1.5)			
	Motor Type		Brushless DC M	otor (Sensorless vecto	r control system)		
Pump	No. of Speed		Variable speed				
	Input Power	W		175			
Flow Sensor	Туре		Vortex (Piezoelectric sensor)				
Flow Sellsol	Measuring range	l/min	5 ~ 60				
		Ø	Single				
Power Source (Phase, V	oltage, Cycle)	V	230				
		Hz	50				
Input Power		Condition (Ambient/Water)	A35W7	A7W35	A2W35		
mpat i owoi		kW	Cooling: 2.49	Heating: 1.72	Heating: 2.36		
Maximum Input Power Fo	or Heatpump System	kW		6.60	1		
Outdoor Power Supply: I	Phase (Ø) / Max. Current (A)	/ Max. Input Power (W)	1Ø / 29.0 / 6.60k				
Indoor Power Supply : Ph	nase (Ø) / Max. Current (A) / I	Max. Input Power (W)	1Ø / 13.1 / 3.00k				
Power Supply 3 : Phase	(Ø) / Max. Current (A) / Max.	Input Power (W)	-1-1-				
Starting Current	· · · · · · · · · · · · · · · · · · ·	A		10.9			
Punning Current		Condition (Ambient/Water)	A35W7	A7W35	A2W35		
Running Current		Α Α	Cooling: 10.9	Heating: 7.6	Heating: 10.5		
Maximum Current For He	eatpump System	Α	<u>-</u>	29.0	·		
	figure of compressor and	%	Cooling: 99	Heating: 98	Heating: 98		
outdoor fan motor.	Number of core						
Power Cord	Length	m (ft)		<u>-</u>			
 Thermostat	Longai	111 (11.)	- Flankaria Cantal				
Protection Device				Electronic Control			
Pressure Relief Valve Water Circuit		kPa	Electronic Control				
riessule Reliei Valve Wa	alei Olicuit			Open: 400, Close: 280 Cooling: 10 / 43	'		
<b>.</b> –	Outdoor Ambient	°C (min. / max.)	Н	leating (Circuit): -28 / 3	35		
Operation Range	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Circuit): 25 / 55 (Below Ambient -25°C) *4 Heating (Circuit): 25 / 75 (Above Ambient -15°C) *4				
Internal Pressure Differer	ntial	kPa	Cooling: 22.0				
			Heating: 22.0				

	Item	Unit	Indoor Unit		
Performance Test Condition			EN 14511 / EN 14825		
Noise Level		dB (A)	Cooling: 22***	Heating: 22***	
Noise Level		Power Level dB	Cooling: 35****	Heating: 35****	
	Height	mm (inch)	892	2	
Dimension	Width	mm (inch)	500		
	Depth	mm (inch)	348		
Net Weight	·	kg (lbs)	28 (62)		
Water Pipe Diameter	Room	mm (inch)	31 (1-1/4)		
Evnancian Vaccal	Volume	1	12		
Expansion Vessel	MWP	bar	10		
Capacity of Integrated Electric Heater / OLP TEMP		kW / °C	3.00 / 85		
Maximum Working Pressure Heat / Cool		bar	4.0		

#### Note:

- In case it is necessary to indicate the air flow volume in (I/s), the value in (m³/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the "extra-low" temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*4 Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

## 3.2 WH-SDC0916M3E5 WH-WXG12ME5

	Ite	em	Unit	Outdoor Unit				
Performance Te	est Conditio	n		EN 14511 / EN 14825				
			Condition (Ambient/Water)	A35W7				
Cooling Capacity			kW	9.00				
			BTU/h	30700				
Cooling EER			W/W		3.0	61		
			Condition (Ambient/Water)	A7W35			A2W35	
Heating Capaci	ty		kW	12.00			12.00	
			BTU/h	40900			40900	
Heating COP			W/W	5.06			3.54	
	Low Tem	perature Application (V	/35)	10/2	A		Caldan	
	Applicati	on	Climate	Warmer	Avei	rage	Colder	
	Pdesign		kW	12.0	12	0	12.0	
	Tbivalen	t / TOL	°C	2/2	-10 /	′ <b>-</b> 10	-22 / -22	
	SCOP / I	าร	(W/W) / %	6.20 / 245	4.73	/ 186	4.38 / 172	
	Annual C	Consumption	kWh	2586	52	44	6758	
==	Class			A+++	A+	++	A++	
Heating ErP	Medium Temperature Application (W		n (W55)	Warmer	Average		Colder	
	Application		Climate	vvaimoi			Colder	
	Pdesign		kW	12.0	12	0	10.0	
	Tbivalent / TOL		°C	2/2	-10 /	′ <b>-</b> 10	-22 / -22	
	SCOP / ns		(W/W) / %	4.40 / 173	3.65 / 143		3.30 / 129	
	Annual Consumption		kWh	3647	6792		7459	
	Class			A+++	A-	++	A++	
			dB (A) ***	Cooling: -			Heating: -	
Noise Level			Power Level dB ****	Cooling: 60	)		Heating: 59	
			dB *****	-			Heating: 53	
Air Flow			m³/min (ft³/min)	Cooling: 97.0 (3426) Heating: 92.0 (3249)				
Refrigeration Co	ontrol Devic	e			Expansion	on Valve		
Refrigeration O	il		cm <sup>3</sup>		PZ68S	(1600)		
Refrigerant (R2	90) Prechai	ge / Maximum	kg (oz)	1.78 (62.8) / (-)				
		GWP	'		3	3		
-GAS		CO₂eq (ton) (Precharg	jed / Maximum)	0.006 / (-)				
		Height	mm (inch)	1520 (59-27/32)				
Dimension		Width	mm (inch)		1200 (4	17-1/4)		
Depth		Depth	mm (inch)	430 (16-15/16)				
Net Weight		kg (lbs)		160 (	(353)			
Pipe Diameter (Inner)		mm	32					
Standard Length		m (ft)		5.0 (	16.4)			
Maximum Pipe Length		m (ft)	30.0 (98.4)					
I/D & O/D Height Difference		m (ft)	30.0 (98.4)					
		Indoor			1-1	•		
Water Pipe Connector		Outdoor	inch		1-1			

Rated Output	Item		Unit	Outdoor Unit			
Rated Output		Туре		Hermetic Motor Compressor (Involute Scroll)			
Rated Output	Compressor	• • • • • • • • • • • • • • • • • • • •		Synchro	onous Electric Motor (6	G-poles)	
Material   PP			kW	·	-	· · ·	
Material   PP		Туре					
Input Power					PP		
Input Power		Motor Type			DC (8-poles)		
Fan Speed   Fpm	Fan		W		-		
Fan Speed   Fpm		Output Power	W		120 × 2		
Fin material   Aluminium (Pre Coat)		Fan Spand	rnm		Cooling: 510		
Fin Type		-	тріп				
Row × Stage × FPI					, ,		
Row S Stage K FP    2 × 58 × 19     12 × 58 × 19     13 × 1473.2 × 88 × 19     14 × 1473.2 × 88 × 19   14 × 1473.2 × 88 × 19   14 × 1473.2 × 88 × 19   14 × 1473.2 × 88 × 19   14 × 1473.2 × 88 × 19   14 × 1473.2 × 88 × 19   14 × 1473.2 × 88 × 19   14 × 1473.2 × 88 × 19   14 × 1473.2 × 88 × 19   14 × 1473.2 × 88 × 19   14 × 1473.2 × 88 × 19   14 × 1473.2 × 1473.2 × 1473.2 × 14 × 1473.2 × 1473.2 × 14 × 1473.2 × 1473.2 × 14 × 1473.2 × 1473.2 × 14 × 1473.2 × 1473.2 × 1473.2 × 14 × 1473.2 × 1473.2 × 1473.2 × 14 × 1473.2 × 1473.2 × 1473.2 × 1473.2 × 14 × 1473.2 × 1	Heat Exchanger						
Type	Ŭ						
No. of Plates   Size (W × H × L)   mm		Size (W × H × L)	mm	44	× 1473.2 × 868.2:902	2.7	
Size (W × H × L)   mm		• • • • • • • • • • • • • • • • • • • •			Braze Plate		
Size (W FH x L)   mm	Hot Water Coil	No. of Plates					
Motor Type   Motor Type   Brushless DC Motor (Sensorless vector control system)	Tiot water con	Size (W × H × L)	mm				
No. of Speed   Variable speed   Input Power   W   175		Water Flow Rate	l/min (m³/h)				
Input Power   W   175		Motor Type		Brushless DC Mo	otor (Sensorless vecto	r control system)	
Type	Pump	No. of Speed			Variable speed		
Measuring range   I/min   5 - 60		Input Power	W		175		
Measuring range	Flow Copper	Туре		Vor	Vortex (Piezoelectric sensor)		
V   230	Flow Selisoi	Measuring range	l/min	5 ~ 60			
Hz   S0   Condition (Ambient/Water)   A35W7   A7W35   A2W35			Ø	Single			
Condition (Ambient/Water)   A35W7   A7W35   A2W35	Power Source (Phase, Volt	age, Cycle)	V	230			
Applied Power   Applied Powe			Hz	50			
KW   Cooling: 2.49   Heating: 2.37   Heating: 3.39	Input Power		-	A35W7	A7W35	A2W35	
Dutdoor Power Supply : Phase (Ø) / Max. Current (A) / Max. Input Power (W)	•		kW	Cooling: 2.49 Heating: 2.37 Heating: 3.3		Heating: 3.39	
Number of core   Number of core   Length   m (ft)   m (	Maximum Input Power For	Heatpump System	kW	6.60			
Power Supply 3 : Phase (Ø) / Max. Current (A) / Max. Input Power (W)  Condition (Ambient/Water)  A Cooling: 10.9  A Cooling: 10.9  Heating: 10.4  Heating: 15.0  Maximum Current For Heatpump System  A Cooling: 10.9  Power Factor Power factor means total figure of compressor and butdoor fan motor.  Power Cord  Number of core Length  Intermostat  Cooling: 99  Mumber of core Length  Protection Device  Deressure Relief Valve Water Circuit  A Cooling: 99  Heating: 99  Heating: 98  Heating: 98  Heating: 98  Heating: 98  Cooling: 99  Protection Control  Cooling: 10 / 43  Heating (Circuit): -28 / 35  Cooling: 5 / 20  Water Outlet  Protection Processure Differential  Protection Processure Differential  Protection Processure Differential  Processure Relief (Circuit): 25 / 75 (Above Ambient -15°C) *4  Heating (Circuit): 25 / 75 (Above Ambient -15°C) *4  Heating (Cooling: 22.0	Outdoor Power Supply : Ph	ase (Ø) / Max. Current (A) /	Max. Input Power (W)	1Ø / 29.0 / 6.60k			
Condition (Ambient/Water)   A35W7   A7W35   A2W35	Indoor Power Supply : Pha	se (Ø) / Max. Current (A) / M	ax. Input Power (W)	1Ø / 13.1 / 3.00k			
Condition (Ambient/Water)  A Cooling: 10.9 Heating: 10.4 Heating: 15.0  Maximum Current For Heatpump System  A Cooling: 99 Heating: 99 Heating: 98  Dower Factor Power factor means total figure of compressor and butdoor fan motor.  Number of core Cord Length m (ft)  Thermostat Electronic Control Electronic Control  Protection Device Electronic Control  Pressure Relief Valve Water Circuit KPa Open: 400, Close: 280  Outdoor Ambient C (min. / max.)  Outdoor Ambient C (min. / max.)  Water Outlet Pressure Relating (Circuit): 25 / 75 (Below Ambient -15°C) *4  Heating (Circuit): 25 / 75 (Below Ambient -15°C) *4  Pressure Ressure Differential Ressure Differential Pressure Relating (Circuit): 22.0	Power Supply 3 : Phase (Ø	) / Max. Current (A) / Max. Ir	nput Power (W)	-1-1-			
Running Current  (Ambient/Water)  A Cooling: 10.9 Heating: 10.4 Heating: 15.0  Maximum Current For Heatpump System  A 29.0  Power Factor Power factor means total figure of compressor and outdoor fan motor.  Power Cord  Number of core Length  Meating: 99  Heating: 99  Heating: 99  Heating: 99  Heating: 98  Heating: 99  Heating: 98  Heating: 98  Heating: 99  Heating: 98  Heating: 98  Heating: 99  Heating: 98  Heating: 99  Heating: 98  Heating: 98  Heating: 99  Heating: 98  Heating: 99  Heating: 98  Heating: 9	Starting Current		Α		10.9		
A Cooling: 10.9 Heating: 10.4 Heating: 15.0  Maximum Current For Heatpump System  A 29.0  Power Factor Power factor means total figure of compressor and butdoor fan motor.  Power Cord    Number of core	Running Current			A35W7	A7W35	A2W35	
Power Factor Power factor means total figure of compressor and % Cooling: 99 Heating: 99 Heating: 98    Number of core	-		A	Cooling: 10.9	Heating: 10.4	Heating: 15.0	
Power factor means total figure of compressor and butdoor fan motor.    Number of core   Cooling: 99   Heating: 99   Heating: 98	Maximum Current For Heat	pump System	A		29.0		
December 200	Power Factor Power factor means total figure outdoor fan motor.	gure of compressor and	%	Cooling: 99	Heating: 99	Heating: 98	
December 200		Number of core			-		
Thermostat  Protection Device  Electronic Control  Pressure Relief Valve Water Circuit  Representation Range  Outdoor Ambient  Coling: 10 / 43 Heating (Circuit): -28 / 35  Cooling: 5 / 20 Water Outlet  Pressure Relief Valve Water Circuit  Representation Range  Cooling: 5 / 20 Heating (Circuit): 25 / 55 (Below Ambient -25°C) *4 Heating (Circuit): 25 / 75 (Above Ambient -15°C) *4  Representation Range  Cooling: 22.0	Power Cord	Length	m (ft)		-		
Pressure Relief Valve Water Circuit  Repare to Cooling: 10 / 43  Cooling: 10 / 43  Heating (Circuit): -28 / 35  Cooling: 5 / 20  Water Outlet  Pressure Differential  Repare to Cooling: 25 / 75 (Above Ambient -15°C) *4  Cooling: 22.0	Thermostat		. ,		Electronic Control		
Outdoor Ambient  Cooling: 10 / 43 Heating (Circuit): -28 / 35  Cooling: 5 / 20  Water Outlet  Cooling: 5 / 20  Water Outlet  Cooling: 5 / 55 (Below Ambient -25°C) *4 Heating (Circuit): 25 / 75 (Above Ambient -15°C) *4  Peternal Pressure Differential  Cooling: 22.0	Protection Device				Electronic Control		
Department C (min. / max.) Heating (Circuit): -28 / 35  Cooling: 5 / 20  Water Outlet °C (min. / max.) Heating (Circuit): 25 / 55 (Below Ambient -25°C) *4  Heating (Circuit): 25 / 75 (Above Ambient -15°C) *4  Percentage Pressure Differential Research Differential	Pressure Relief Valve Water Circuit		kPa		Open: 400, Close: 280	1	
Operation Range  Water Outlet  °C (min. / max.)  Cooling: 5 / 20  Heating (Circuit): 25 / 55 (Below Ambient -25°C) *4  Heating (Circuit): 25 / 75 (Above Ambient -15°C) *4  Percentage Ressure Differential  Cooling: 22.0		Outdoor Ambient	°C (min. / max.)	Н		35	
	Operation Range	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Circuit): 25 / 55 (Below Ambient -25°C) *4			
<u> </u>	Internal Pressure Differenti	al	kPa				

Item		Unit	Indoo	r Unit	
Performance Test Condi	tion		EN 14511	/ EN 14825	
Noise Level		dB (A)	Cooling: 22***	Heating: 22***	
Noise Level		Power Level dB	Cooling: 35****	Heating: 35****	
	Height	mm (inch)	88	92	
Dimension	Width	mm (inch)	500		
	Depth	mm (inch)	348		
Net Weight		kg (lbs)	28 (62)		
Water Pipe Diameter	Room	mm (inch)	31 (1	-1/4)	
Evnancian Vaccal	Volume	I	12		
Expansion Vessel	MWP	bar	10		
Capacity of Integrated Electric Heater / OLP TEMP		kW / °C	3.00 / 85		
Maximum Working Pressure	Heat / Cool	bar	4.0		

#### Note:

- In case it is necessary to indicate the air flow volume in (I/s), the value in (m³/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the "extra-low" temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*4 Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

# 3.3 WH-SDC0916M6E5 WH-WXG09ME5

	Ite	em	Unit	Outdoor Unit			
Performance Tes	st Conditio	n			EN 14511 / EN 1482	5	
			Condition (Ambient/Water)		A35W7		
Cooling Capacity	У		kW	9.00			
			BTU/h	30700			
Cooling EER			W/W		3.61		
			Condition (Ambient/Water)	A7W35		A2W35	
Heating Capacity	y		kW	9.00		9.00	
			BTU/h	30700		30700	
Heating COP			W/W	5.23		3.81	
	Low Ten	perature Application (W	/35)	10/2	A	Caldan	
	Applicati	on	Climate	Warmer	Average	Colder	
	Pdesign		kW	9.0	9.0	9.0	
	Tbivalen	t / TOL	°C	2/2	-10 / -10	-22 / -22	
	SCOP / I	ns	(W/W) / %	6.33 / 250	5.00 / 197	4.45 / 175	
	Annual C	Consumption	kWh	1901	3721	4990	
Haatina EsD	Class			A+++	A+++	A+++	
Heating ErP	Medium	Temperature Application	n (W55)	Marmor	Average	Colder	
	Application		Climate	Warmer	Average	Coldei	
	Pdesign		kW	9.0	9.0	9.0	
	Tbivalent / TOL		°C	2/2	-10 / -10	-22 / -22	
	SCOP / ns		(W/W) / %	4.40 / 173	3.50 / 137	3.20 / 125	
	Annual Consumption		kWh	2735	5318	6939	
	Class			A+++	A++	A++	
			dB (A) ***	Cooling: -	Heating: -	Heating: -	
Noise Level			Power Level dB ****	Cooling: 60	Heating: 58	Heating: 58	
			dB *****	-	Heating: 52	Heating: 52	
Air Flow			m³/min (ft³/min)	Cooling: 97.0 (3426) Heating: 83.0 (2931)			
Refrigeration Co	ntrol Devic	e			Expansion Valve		
Refrigeration Oil			cm <sup>3</sup>		PZ68S (1600)		
Refrigerant (R29	00) Prechai	ge / Maximum	kg (oz)		1.78 (62.8) / (-)		
F-GAS		GWP			3		
r-GAS		CO₂eq (ton) (Precharg	ed / Maximum)	0.006 / (-)			
		Height	mm (inch)		1520 (59-27/32)		
Dimension		Width	mm (inch)		1200 (47-1/4)		
Depth		mm (inch)		430 (16-15/16)			
Net Weight		kg (lbs)		160 (353)			
Pipe Diameter (Inner)		mm		25			
Standard Length		m (ft)		5.0 (16.4)			
Maximum Pipe Length		m (ft)		30.0 (98.4)			
I/D & O/D Height	t Difference	9	m (ft)		30.0 (98.4)		
Water Pipe Con	nector	Indoor	inch		1-1/4		
- valor ripe com		Outdoor	mon		1-1/4		

lı	tem	Unit		Outdoor Unit		
	Туре		Hermetic Motor Compressor (Involute Scroll)			
Compressor	Motor Type		Synchronous Electric Motor (6-poles		G-poles)	
	Rated Output	kW		3.10		
	Туре			Propeller Fan		
	Material			PP		
	Motor Type			DC (8-poles)		
Fan	Input Power	W		-		
	Output Power	W		120 × 2		
	Fon Snood	rnm		Cooling: 510		
	Fan Speed	rpm		Heating: 400		
	Fin material			Aluminium (Pre Coat)		
Heat Exchanger	Fin Type			Corrugated Fin		
	Row × Stage × FPI			2 × 58 × 19		
	Size (W × H × L)	mm	44	1 × 1473.2 × 868.2:902	2.7	
	Туре			Braze Plate		
11-41M-4 O-31	No. of Plates			36		
Hot Water Coil	Size (W × H × L)	mm		76.2 × 524 × 117		
	Water Flow Rate	l/min (m³/h)		Cooling: 25.8 (1.5) Heating: 25.8 (1.5)		
	Motor Type		Brushless DC M	otor (Sensorless vecto	r control system)	
Pump	No. of Speed			Variable speed		
	Input Power	W		175		
Flavo Camaan	Туре		Vortex (Piezoelectric sensor)			
Flow Sensor	Measuring range	l/min	5 ~ 60			
		Ø	Single			
Power Source (Phase, Vo	ltage, Cycle)	V	230			
		Hz	50			
Input Power		Condition (Ambient/Water)	A35W7	A7W35	A2W35	
input i owei		kW	Cooling: 2.49	Heating: 1.72	Heating: 2.36	
Maximum Input Power Fo	r Heatpump System	kW		6.60		
Outdoor Power Supply : P	hase (Ø) / Max. Current (A)	Max. Input Power (W)	1Ø / 29.0 / 6.60k			
Indoor Power Supply : Pha	ase (Ø) / Max. Current (A) / N	Max. Input Power (W)	1Ø / 26.1 / 6.00k			
Power Supply 3 : Phase (9	Ø) / Max. Current (A) / Max. I	nput Power (W)	-/-/-			
Starting Current	, ( )	A		10.9		
		Condition (Ambient/Water)	A35W7	A7W35	A2W35	
Running Current		Α	Cooling: 10.9	Heating: 7.6	Heating: 10.5	
Maximum Current For Hea	atpump System	A	<u> </u>	29.0		
Power Factor Power factor means total f	<u> </u>	%	Cooling: 99	Heating: 98	Heating: 98	
outdoor fan motor.	Number of core					
Power Cord	Length	m (ft)		<u>-</u>		
 Thermostat	Lengui	III (It)	- Electronic Control			
Protection Device			Electronic Control			
Pressure Relief Valve Water Circuit		kPa			<u> </u>	
Fiessule Reliei valve Wal	lei Girduit			Open: 400, Close: 280 Cooling: 10 / 43	'	
Operation Pance	Outdoor Ambient	°C (min. / max.)	Н	leating (Circuit): -28 / 3	5	
Operation Range	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Circuit): 25 / 55 (Below Ambient -25°C) *4 Heating (Circuit): 25 / 75 (Above Ambient -15°C) *4			
Internal Pressure Different	tial	kPa		Cooling: 22.0 Heating: 22.0		
		1				

Item		Unit	Indoor Unit	
Performance Test Condi	tion		EN 14511	/ EN 14825
		dB (A)	Cooling: 22***	Heating: 22***
Noise Level		Power Level dB	Cooling: 35****	Heating: 35****
	Height	mm (inch)	89	92
Dimension	Width	mm (inch)	500	
	Depth	mm (inch)	348	
Net Weight		kg (lbs)	28 (62)	
Water Pipe Diameter	Room	mm (inch)	31 (1	-1/4)
Function Vessel	Volume	I	12	
Expansion Vessel	MWP	bar	10	
Capacity of Integrated Electric Heater / OLP TEMP		kW / °C	6.00 / 85	
Maximum Working Pressure	Heat / Cool	bar	4.0	

#### Note:

- In case it is necessary to indicate the air flow volume in (I/s), the value in (m³/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the "extra-low" temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*4 Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

# 3.4 WH-SDC0916M6E5 WH-WXG12ME5

	Ite	em	Unit	Outdoor Unit				
Performance Te	est Conditio	n			EN 14511	'EN 14825		
			Condition (Ambient/Water)		A35	W7		
Cooling Capaci	ty		kW		9.0	00		
			BTU/h		307	700		
Cooling EER			W/W		3.0	61		
		Condition (Ambient/Water)	A7W35			A2W35		
Heating Capaci	ty		kW	12.00			12.00	
			BTU/h	40900			40900	
Heating COP			W/W	5.06			3.54	
	Low Tem	perature Application (V	/35)	10/2	A		Caldan	
	Applicati	on	Climate	Warmer	Avei	rage	Colder	
Heating ErP	Pdesign		kW	12.0	12	0	12.0	
	Tbivalen	t / TOL	°C	2/2	-10 /	′ <b>-</b> 10	-22 / -22	
	SCOP / I	าร	(W/W) / %	6.20 / 245	4.73	/ 186	4.38 / 172	
	Annual C	Consumption	kWh	2586	52	44	6758	
	Class			A+++	A+	++	A++	
	Medium	Temperature Applicatio	n (W55)	Warmer	Avei	ane	Colder	
	Application		Climate	Walliel		age Colder		
	Pdesign		kW	12.0	12	0	10.0	
	Tbivalent / TOL		°C	2/2	-10 /	′ <b>-</b> 10	-22 / -22	
	SCOP / ns		(W/W) / %	4.40 / 173	3.65	/ 143	3.30 / 129	
	Annual Consumption		kWh	3647	6792		7459	
	Class			A+++	A-	++	A++	
			dB (A) ***	Cooling: -			Heating: -	
Noise Level			Power Level dB ****	Cooling: 60	)		Heating: 59	
			dB *****	-			Heating: 53	
Air Flow			m³/min (ft³/min)	Cooling: 97.0 (3426) Heating: 92.0 (3249)				
Refrigeration Co	ontrol Devic	e			Expansion	on Valve		
Refrigeration O	il		cm <sup>3</sup>		PZ68S	(1600)		
Refrigerant (R2	90) Prechai	ge / Maximum	kg (oz)		1.78 (62	2.8) / (-)		
		GWP	'		3	3		
-GAS		CO₂eq (ton) (Precharg	jed / Maximum)		0.006	6 / (-)		
		Height	mm (inch)		1520 (59			
Dimension		Width	mm (inch)		1200 (4	17-1/4)		
Depth		mm (inch)	430 (16-15/16)					
Net Weight		kg (lbs)		160 (	(353)			
Pipe Diameter (Inner)		mm		3	2			
Standard Length		m (ft)		5.0 (	16.4)			
Maximum Pipe Length		m (ft)		30.0 (				
/D & O/D Heigh		e	m (ft)		30.0 (	•		
		Indoor			1-1	•		
Water Pipe Cor	nector	Outdoor	inch		1-1			

Type	Item		Unit	Outdoor Unit			
Motor Type		Ι		Hermetic M	Hermetic Motor Compressor (Involute Scroll)		
Rated Output   NW   3.10   Propoler Fan	Compressor	• • • • • • • • • • • • • • • • • • • •			· ` `		
Malerial   PP			kW	<u> </u>		,	
Malerial   PP		Туре					
Input Power					PP		
Input Power		Motor Type			DC (8-poles)		
Fan Speed	Fan		W		-		
Fan speed   rpm		Output Power	W		120 × 2		
Fin material   Aluminium (Pre-Coat)		Fan Snood	rnm				
Fin Type		-	тріп				
Row × Stage × FPI   2 × 58 × 19     32 × 58 × 19     32 × 58 × 19     32 × 58 × 19     32 × 58 × 19     32 × 58 × 19     34 × 1473 2 × 868 2:902.7     36 × 36 ×					,		
Row * Stage * FP    2 * 58 * 19     3 * 58 * 19     58 * 19   58 * 19	Heat Exchanger						
Type	Ŭ						
No. of Plates   No. of Speed   No. of S		Size (W × H × L)	mm	44	× 1473.2 × 868.2:902	2.7	
Size (W × H × L)		• • • • • • • • • • • • • • • • • • • •			Braze Plate		
Size (W × L)   mm	Hot Water Coil	No. of Plates					
Motor Type   Motor Type   Brushless DC Motor (Sensorless vector control system)	Tiot water con	Size (W × H × L)	mm				
No. of Speed   Variable speed   Input Power   W   175		Water Flow Rate	l/min (m³/h)				
Input Power   W   175   Type   Vortex (Plezoelectric sensor)		Motor Type		Brushless DC M	otor (Sensorless vecto	r control system)	
Type	Pump	No. of Speed			Variable speed		
Measuring range   I/min   5 ~ 60		Input Power	W		175		
Measuring range	Flow Concor	Туре		Vor	Vortex (Piezoelectric sensor)		
Power Source (Phase, Voltage, Cycle)   V   230	Flow Serisor	Measuring range	l/min	5 ~ 60			
Hz			Ø	Single			
Condition (Ambient/Water)   A35W7   A7W35   A2W35   KW   Cooling: 2.49   Heating: 2.37   Heating: 3.39   KW   Cooling: 2.49   Heating: 2.37   Heating: 3.39   Maximum Input Power For Heatpump System   KW   6.60	Power Source (Phase, Volt	age, Cycle)	V	230			
Agrice   A			Hz	50			
KW   Cooling: 2.49   Heating: 2.37   Heating: 3.39	Input Power		-	A35W7	A7W35	A2W35	
Outdoor Power Supply : Phase (Ø) / Max. Current (A) / Max. Input Power (W)         1Ø / 29.0 / 6.60k           Indoor Power Supply : Phase (Ø) / Max. Current (A) / Max. Input Power (W)         1Ø / 26.1 / 6.00k           Power Supply 3 : Phase (Ø) / Max. Current (A) / Max. Input Power (W)         -/-/-           Starting Current         A         10.9           Running Current         A         10.9           Running Current         A         Cooling: 10.9         Heating: 10.4         Heating: 15.0           Maximum Current For Heatpump System         A         29.0         Power Factor         Power Factor Reads outdoor fan motor.         Power Factor Reads outdoor fan motor.         Cooling: 99         Heating: 99         Heating: 98           Heating: 98         Heating: 99         Heating: 98         Heating: 99         Heating: 98           Thermostat         Electronic Control         Electronic Control         Poen: 400, Close: 280           Protection Device         Electronic Control         Cooling: 10 / 43         Heating (Circuit): -28 / 35           Operation Range         "C (min. / max.)         Heating (Circuit): 25 / 56 (Below Ambient -25°C) *4         Heating (Circuit): 25 / 56 (Below Ambient -15°C) *4           Internal Procesure Differential         Poen: 40, Close: 28.0         Cooling: 22.0         Cooling: 22.0	'		kW	Cooling: 2.49 Heating: 2.37 Heating: 3.3		Heating: 3.39	
Indoor Power Supply : Phase (Ø) / Max. Current (A) / Max. Input Power (W)	Maximum Input Power For	Heatpump System	kW	6.60			
Power Supply 3 : Phase (Ø) / Max. Current (A) / Max. Input Power (W)	Outdoor Power Supply : Ph	ase (Ø) / Max. Current (A) /	Max. Input Power (W)	1Ø / 29.0 / 6.60k			
Starting Current	Indoor Power Supply : Pha	se (Ø) / Max. Current (A) / M	ax. Input Power (W)	1Ø / 26.1 / 6.00k			
Condition (Ambient/Water)	Power Supply 3 : Phase (Ø	) / Max. Current (A) / Max. Ir	put Power (W)		-/-/-		
A	Starting Current		А		10.9		
A Cooling: 10.9 Heating: 10.4 Heating: 15.0  Maximum Current For Heatpump System  A 29.0  Power Factor Power factor means total figure of compressor and outdoor fan motor.  Power Cord    Number of core	Running Current			A35W7	A7W35	A2W35	
Power Factor Power factor means total figure of compressor and outdoor fan motor.  Power Cord    Number of core	-		A	Cooling: 10.9	Heating: 10.4	Heating: 15.0	
Power factor means total figure of compressor and outdoor fan motor.    Number of core	Maximum Current For Hear	pump System	A		29.0		
Power Cord  Length m (ft)  Thermostat  Electronic Control  Protection Device  Pressure Relief Valve Water Circuit  Outdoor Ambient  Outdoor Ambient  Cooling: 10 / 43 Heating (Circuit): -28 / 35  Cooling: 5 / 20 Water Outlet  Cooling: 22.0  Cooling: 22.0	Power Factor Power factor means total figure outdoor fan motor.	gure of compressor and	%	Cooling: 99	Heating: 99	Heating: 98	
Power Cord  Length m (ft)  Thermostat  Electronic Control  Protection Device  Pressure Relief Valve Water Circuit  Outdoor Ambient  Outdoor Ambient  Cooling: 10 / 43 Heating (Circuit): -28 / 35  Cooling: 5 / 20 Water Outlet  Cooling: 22.0  Cooling: 22.0		Number of core			-		
Thermostat  Protection Device  Pressure Relief Valve Water Circuit  Outdoor Ambient  Outdoo	Power Cord	Length	m (ft)		-		
Pressure Relief Valve Water Circuit  kPa  Open: 400, Close: 280  Cooling: 10 / 43 Heating (Circuit): -28 / 35  Operation Range  Water Outlet  Cooling: 5 / 20  Heating (Circuit): 25 / 55 (Below Ambient -25°C) *4 Heating (Circuit): 25 / 75 (Above Ambient -15°C) *4  Internal Pressure Differential  Cooling: 22.0	Thermostat		. ,		Electronic Control		
Outdoor Ambient  Cooling: 10 / 43 Heating (Circuit): -28 / 35  Cooling: 5 / 20  Water Outlet  Cooling: 5 / 20  Water Outlet  Cooling: 5 / 20  Heating (Circuit): 25 / 55 (Below Ambient -25°C) *4 Heating (Circuit): 25 / 75 (Above Ambient -15°C) *4  Cooling: 22.0	Protection Device				Electronic Control		
Operation Range  Water Outlet  C (min. / max.)  Heating (Circuit): -28 / 35  Cooling: 5 / 20  Heating (Circuit): 25 / 55 (Below Ambient -25°C) *4  Heating (Circuit): 25 / 75 (Above Ambient -15°C) *4  Internal Pressure Differential  LP2  Cooling: 22.0	Pressure Relief Valve Water Circuit		kPa		Open: 400, Close: 280		
Operation Range  Water Outlet  °C (min. / max.)  Cooling: 5 / 20  Heating (Circuit): 25 / 55 (Below Ambient -25°C) *4  Heating (Circuit): 25 / 75 (Above Ambient -15°C) *4  Cooling: 22.0		Outdoor Ambient	°C (min. / max.)		Cooling: 10 / 43		
	Operation Range	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Circuit): 25 / 55 (Below Ambient -25°C) *4			
	Internal Pressure Differenti	al	kPa				

Item		Unit	Indoo	or Unit	
Performance Test Condit	ion		EN 14511 / EN 14825		
Noise Level		dB (A)	Cooling: 22***	Heating: 22***	
Noise Level		Power Level dB	Cooling: 35****	Heating: 35****	
	Height	mm (inch)	89	92	
Dimension	Width	mm (inch)	500		
	Depth	mm (inch)	348		
Net Weight		kg (lbs)	28 (62)		
Water Pipe Diameter	Room	mm (inch)	31 (1-1/4)		
Evnancian Vaccal	Volume	1	12		
Expansion Vessel	MWP	bar	10		
Capacity of Integrated Ele	Capacity of Integrated Electric Heater / OLP TEMP		6.00 / 85		
Maximum Working Pressure	Heat / Cool	bar	4.0		

#### Note:

- In case it is necessary to indicate the air flow volume in (I/s), the value in (m³/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the "extra-low" temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*4 Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

### 4. Features

- Inverter Technology
  - o Energy saving
- High Efficiency
- Long Installation Piping
  - o Long piping up to 30 meter
- A-class energy efficiency pump
  - o Water pump speed can be set by selection at control panel
- Improved deice cycle
- Protection Feature
  - o Random auto restart after power failure for safety restart operation
  - o Gas leakage protection
  - Prevent compressor reverse cycle
  - Inner protector to protect compressor
- Serviceability Feature
  - o Breakdown Self Diagnosis function
  - o System Status Check Buttons for servicing purpose
  - System Pumpdown Button for servicing purpose
  - o Front maintenance design for outdoor unit


## 5. Location of Controls and Components


#### 5.1 Indoor Unit

## 5.1.1 Remote Controller Buttons and Display

(B) (C) (D) The LCD display as shown in this manual are for instructional purpose only, and may differ from the actual unit. **Buttons / Indicator** 型分別自己見到新**置** 10:34am,Mon (H) **Quick Menu button \** (E) **Back button** (A) 40°c Returns to the previous screen (3) **LCD Display** 18°c (Actual - Dark background with white icons)  $^{\circ}$ Main Menu button 2 For function setup (4) **ON/OFF** button Starts/Stops operation Operation indicator (6) Illuminates during operation, blinks during (1)(5) 6 When the backlight is off, press any button to turn (Do not press button (5)) The time until the backlight turns off can be changed **Cross key buttons** in the Menu (Personal setup) Selects an item. Up Press centre Left Right Down **Enter button** No glove Fixes the selected content. No pen

#### Display

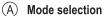

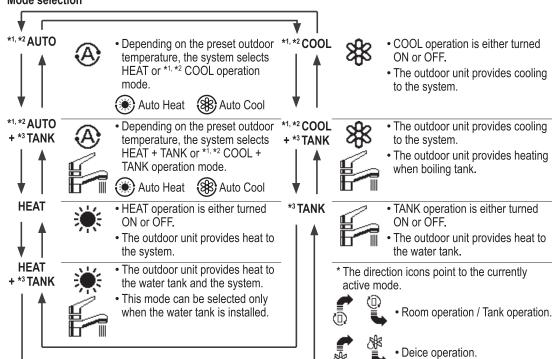

#### (B) Operation icons

The status of operation is displayed.

Icon will not display (under operation OFF screen) whenever operation is OFF except weekly timer.



Holiday operation status



Weekly Timer operation status



Quiet operation status



Zone:Room Thermostat

→Internal sensor status



Powerful operation status



Demand Control or SG ready or SHP status



Tank Heater status



Solar status



(Boiler)

Temperature of each zone

Bivalent status

Room Heater status

The zone 2 will shown in LCD display if is connected with Optional PCB.

- (D) Time and day
- (E) Water Tank temperature (with electric anode operation icon)
- (F) Outdoor temperature
- (G) Sensor type/Set temperature type icons



Water Temperature

→Compensation curve



Water Temperature

→Direct



Pool only



Room Thermostat

Room Thermosta →External



Room Thermostat

→Internal



Room Thermistor

(H) Water pressure (bar)

\*1 The system is locked to operate without COOL mode. It can be unlocked only by authorised installers or our authorised service partners.
\*2 Only displayed when COOL mode is unlocked (This means when COOL mode is available).

\*3 Only displayed when Tank connection is Yes.

#### 5.1.2 Initialization

Before starting to install the various menu settings, please initiate the Remote Controller by selecting the language of operation and installing the date and time correctly.

When power is turned on for the first time, it becomes the setting screen automatically. It can also be set from personal setting of the menu.

#### Selecting the language

Wait while the display is initializing. When initializing screen ends, it turns to normal screen.

When any button is pressed, language setting screen appears.

- Scroll with 
   and 
   to select the language.
- 2 Press do confirm the selection.

#### Setting the clock

- Select with 
   ✓ or 
   ∧ how to display the time, either 24h or am/pm format (for example, 15:00 or 3:00pm).

- Once the time is set, time and day will appear on the display even if the Remote Controller is turned OFF.


#### Checking the front grilles


Final precaution step to check and confirm whether outdoor front grille is fixed before operating the unit for safety purpose.


Select Yes if outdoor front grille is already fixed. Then it will proceed to main screen.

Select No if outdoor front grille is not yet fixed. A caution message will pop up to remind on the installation.

\*The display will not appear once you set it.

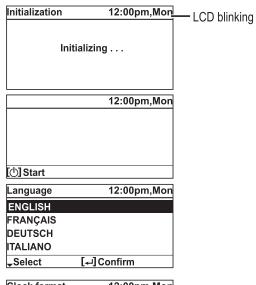


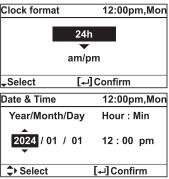


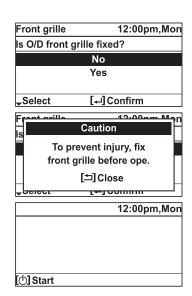

#### 5.1.3 Quick Menu

After the initial settings have been completed, you can select a quick menu from the following options and edit the setting.

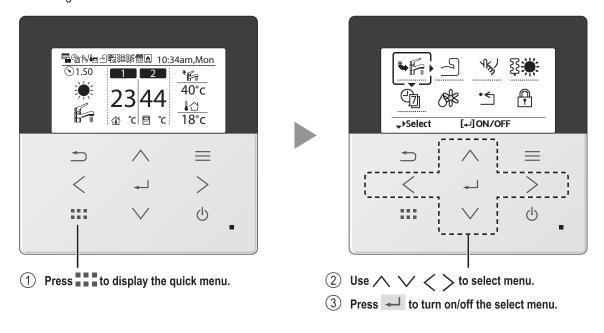

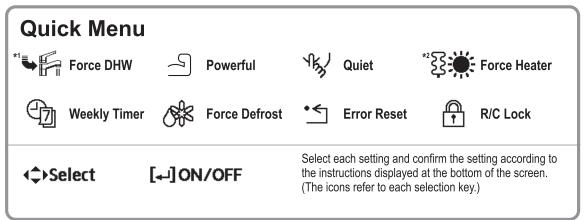

To return to the Main Screen,

Press or .

<sup>\*1</sup> Only displayed when Tank connection is Yes.

<sup>\*2</sup> It is not displayed when the outdoor unit is used alone. When the indoor unit has the heater, it is displayed even if set not to operate the heater.

#### 5.1.4 How to Use the Quick Menu



Select this icon to turn the Tank DHW on or off.

Press 🚭 to confirm your selection.



#### Note:


- Force DHW is disabled when Force Heater is turned on.
- When Force DHW is turned off, operation & mode should change back to the previous memorized status.

# Powerful

Select this icon to operate the heating system powerfully.

Press do confirm your selection.

(The powerful operation starts approximately 1 minute after is pressed.)

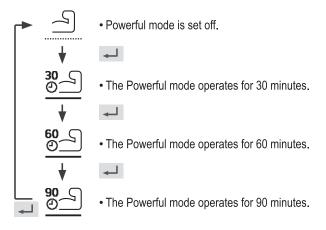

#### Note:


• Powerful is disabled when operation is turned OFF.


# <sup>পি</sup>ঠু/ Quiet

Select this icon to operate quietly.

#### Press 🔟 to confirm your selection.

(The quiet operation starts approximately 1 minute after  $\longrightarrow$  is pressed.)

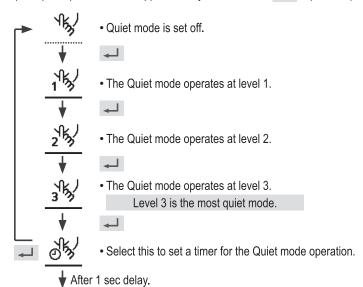

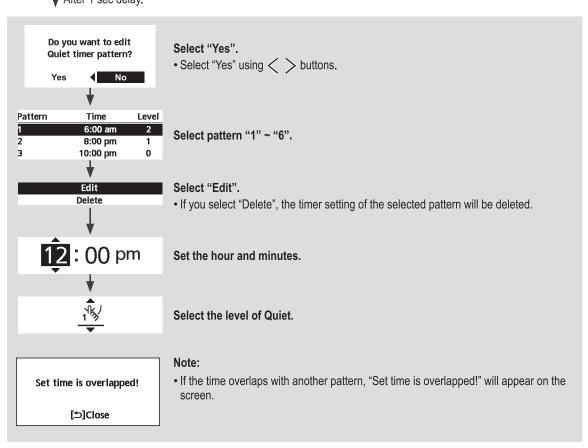


# **≨** Force Heater

Select to force the Heater on.

#### Press 🖊 to confirm your selection.

(The Force Heater mode starts approximately 1 minute after  $\begin{tabular}{ll} \end{tabular}$  is pressed.)

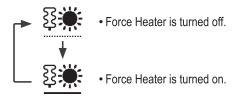

#### Note:

- Force Heater is disabled whenever operation is already on and "Disabled due to operation ON!" will be displayed.
- It is not displayed when the outdoor unit is used alone, and when the heater is set to OFF even if the indoor unit is connected.


Disabled due to operation ON!


[⊅]Close

# **Weekly Timer**

Select this icon to delete (cancel) or change the pre-set Weekly Timer.

Press do confirm your selection.

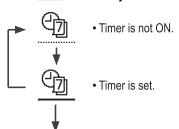

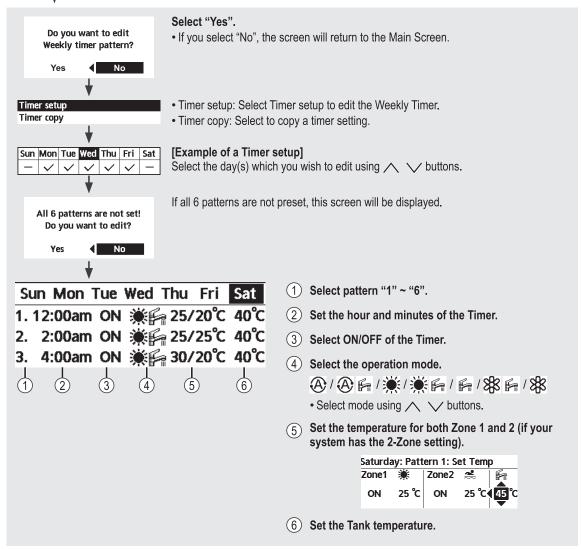

#### Note:

- Timer is disabled when Force Heater is turned on or Heat-Cool SW is enabled.
- If you have preset the Weekly Timer on 2 zones, you must repeat the same procedure with Zone 2.

# /常 Force Defrost

Select to defrost the frozen pipes.

Press 🔟 to confirm your selection.

(When the mode is accepted, below screen will be displayed.)

Request accepted!

[⊅]Close

# \* Error Reset

Select to restore the previous settings when error has occurred.

Press do confirm your selection.

(When the mode has been accepted, below screen will be displayed.)

Request accepted!

[⊅]Close

• Make sure all units are turned off before selecting this mode which restores the whole system to the previous settings.



# R/C Lock

Select to lock the Remote Controller.

(When the mode has been accepted, below screen will be displayed.)

Do you want to lock remote control?

Yes

Select "Yes".

(The Main Screen will be locked.)

• If "No" is selected, the screen will return to the Main Screen.

#### To unlock the Remote Controller

#### Press anv kev.

(When the mode has been accepted, below screen will be displayed.)




Enter any 4 digits of number (if the number is correct, the screen will be unlocked).

#### To reset forgotten password (under operation OFF screen)

Press  $\supset$  ,  $\longrightarrow$  and  $\searrow$  continuously for 5 seconds.

(When the mode has been accepted, below screen will be displayed.)

Select "Reset".

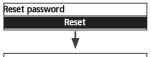

1.Password is reset to 0000 2.Remote control is unlocked

(The screen will be off after 3 seconds.)

#### 5.1.5 Menus (For User)


Select menus and determine settings according to the system available in the household. All initial settings must be done by an authorised dealer or a specialist. It is recommended that all alterations of the initial settings are also done by an authorised dealer or a specialist.

- After initial installation, you may manually adjust the settings.
- The initial setting remains active until the user changes it.
- The Remote Controller can be used for multiple installations.
- Ensure the operation indicator is OFF before setting.
- The system may not work properly if set wrongly. Please consult an authorised dealer/specialist.

To display <Main Menu>:

To select menu:  $\land \lor < \gt$ 

To confirm the selected content:

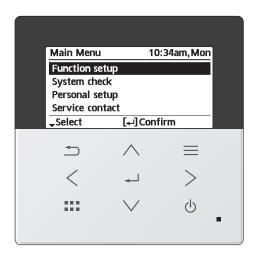

Me	enu	Default Setting	Setting Options /	Display	
1.1	Function setup > Weekly timer				
1.1	Once the weekly timer is set up, User can edit from Quick Menu. To set up to 6 patterns of operation on a daily basis.  • Disabled if Heat-Cool SW is select "Yes" or if Force Heater	set the patte (Time / Operation	the week and erns needed ON/OFF / Mode)	Weekly timer  Sun Mon Tue We  1. 8:00am ON  2. 12:00pm ON  3. 1:00pm ON  Day Patter	∮ 40°C ∮ 24/28°C 40°C ☀ 12/10°C
1.2	is on. > Holiday timer	Select day	of the week		
	To save energy, a holiday period may be set to either turn	OFF		ON OFF	
	OFF the system or lower the	> ON			
	temperature during the period.		art and end. nd time	Holiday: End Year/Month/Day	10:34am,Mon Hour : Min
		2410 4	ed temperature		
	Weekly timer setting may be tem but it will be restored once the H			2024 / 01 / 01 Select	10 : 34 am [₄]Confirm
1.3	> Quiet timer			- Coloct	£* 100
	To operate quietly during the preset period.		art Quiet : nd time		10:34am, Mon me Level 00am 0
	6 patterns may be set. Level 0 means the mode is off.		quietness: ~ 3	2 5:0 3 11:0	00pm 1 00pm 3  Edit

Me	nu	Default Setting	Setting Options / Display
1.4	> Quiet priority		
	<ul> <li>To select priority during Quiet mode between Sound and Capacity.</li> <li>If Sound priority is selected, unit will operate in quiet condition only.</li> <li>If Capacity priority is selected, unit will operate in quiet condition but it will prioritize on providing required capacity at the same time.</li> </ul>	Sound	Sound V Capacity
1.5	> *1 Room heater		
	To set the room heater ON or OFF.	OFF	ON OFF
1.6	> *2 Tank heater		
	To set the tank heater ON or OFF.	OFF	ON OFF
1.7	> *2 Sterilization		
	To set the auto sterilization ON or OFF.	ON	ON OFF
			rent scalding with hot water, or overheating of shower.  I of sterilization function field settings according to the local
1.8	> *3 DHW mode (Domestic Hot	Water)	
	To set the DHW mode to Standard or Smart. • Standard mode have faster DHW Tank heat up time. Meanwhile Smart mode take longer time to heat up DHW time with lower energy consumption.	Standard	Standard — Smart
	To set the tank sensor to Top or Center.  • Selection of the tank sensor to top slow down the start of boiling up the tank and reduce power consumption.  Please change this selection to "Center" when the hot water becomes insufficient.	Тор	Top ————————————————————————————————————

<sup>\*1</sup> It is not displayed when the outdoor unit is used alone or depending on the settings.
\*2 Only displayed when Tank connection is Yes.
\*3 Only displayed when connect Panasonic AIR-TO-WATER HYDROMODULE+TANK.

	[←]Clear history	
2.4 > Compressor		
Shows the compressor	Compressor	10:34am, Mon
performance.	1. Current frequency	: 0 Hz
periormaneer	Select and retrieve 2. (OFF-ON) counter	: 0
	3. Total ON time	: 0 h

[⊅]Back

2.5 > Heater Heater 10:34am, Mon Total hours of ON time for **Total ON time** \*4 Room heater/ \*5 Tank heater. **₹** 0h Select and retrieve ₽₽ Ωh : [⊅]Back

(NOTE): If [Approx.] is shown on Energy Monitor display, data displayed on the remote controller is obtained through heat pump's internal calculation.

If [Approx.] is NOT shown on Energy Monitor display, data\*\* displayed on the remote controller is obtained by External Meters.

Data stored on the Aquarea unit can be mixed between internal calculation and External Meters.

\*\*In order to know the exact consumption or generation, please use as reference always the External Meters' data.

- \*1 The system is locked to operate without COOL mode. It can be unlocked only by authorised installers or our authorised service partners.
- \*2 Only displayed when COOL mode is unlocked (This means when COOL mode is available).
- \*3 The items displayed differ depending on the Appliance and connected units.
- \*4 It is not displayed when the outdoor unit is used alone.
- \*5 Only displayed when Tank connection is Yes.
- \*6 If [Approx.] is shown on Energy Monitor display, data displayed on the remote controller is obtained through heat pump's internal
- If [Approx.] is NOT shown on Energy Monitor display, data displayed on the remote controller is obtained by External Meters.
- \*7 Only displayed when each connection is Yes.

Me	nu	Default Setting	Setting Options / I	Display	
3	Personal setup				
3.1	> Remote control No.				
	<ul> <li>To display remote control number of a particular remote controller so that installer and end user are well informed.</li> <li>Main remote controller is displayed as RC-1. Second remote controller is displayed as RC-2.</li> </ul>	Select and retrieve		RC No.	10:34am,Mor
3.2	> Touch sound				
	Turns the operation sound.	3	OFF/1/2/3/4	Touch sound Level  3  \$\\$\\$\\$	9:53am,Mon
3.3	> LCD contrast				
	Sets the screen contrast.	3		LCD contrast  Low  Select [+-]	10:34am, Mor
3.4	> Backlight				
	Sets the duration of screen backlight.	1 min		Backlight  15 secs  1 min  → Select [+]	10:34am,Mon 5 mins 10 mins Confirm
3.5	> Backlight intensity			r Select [₄]	Commi
0.0	Sets screen backlight brightness.	4		Dark  Select [+-]	10:34am, Mor Bright Confirm
3.6	> *1 Clock format	<u>'</u>	<u>'</u>		
	Sets the type of clock display.	am/pm		24h am/p	
3.7	> Date & Time			25.561	
-11	Sets the present date and time.	Year / Month / [	Day / Hour / Min	Date & Time Year/Month/Day 2024 / 01 / 01	10:34am,Mon Hour : Min 10 : 34 am
		1			

Menu	Default Setting	Setting Options / [	Display	
3.8 > Language				
Sets the display language for the top screen.	ITALIANO / ESP. SWEDISH / NORV CZECH / NEDERL SUOMI / MAGYAR HRVATSKI / LIETUV БЪЛГАРСКИ / EE ROMÂNĂ / SHQII	ÇAIS / DEUTSCH / ÅÑOL / DANISH / VEGIAN / POLISH / LANDS / TÜRKÇE / R / SLOVENŠČINA / VIŲ / PORTUGUÊS / ESTI / LATVIEŠU / P / SLOVENČINA / AÄHCЬKA / EΛΛΗΝΙΚΑ	Language ENGLISH FRANÇAIS DEUTSCH ITALIANO  Select  [+-	10:34am, Mon
3.9 > Unlock password				
4 digit password for all the settings.	0000		Unlock password	10:34am,Mon
			\$Select [+	]Confirm
4 Service contact 4.1 > Contact 1 / Contact 2				
Preset contact number for installer.	Select ar	nd retrieve	Service setup  Contact 1  Name : Bryan A	
			-Select	

#### **Menus (For Installer)** 5.1.6

Menu Default Setting Setting Options / Display				
5 Installer setup > System setup				
5.1 > *1 Optional PCB connectivity				
To connect to the external PCB required for servicing.	No	Yes No		

- If the external PCB is connected (optional), the system will have following additional functions:
  - ① Control over 2 zones (including the swimming pool and the function to heat water in it).
  - Solar function (the solar thermal panels connected to either the DHW (Domestic Hot Water) Tank or the Buffer Tank.
     DHW is not applicable for WH-ADC \*models.
  - ③ External compressor switch.
- 4 External error signal.
  5 SG ready control.
  6 Demand control.

- 7 Heat-Cool SW

	To select the sensors and to	Zone		Zone & Sensor	10:34am, Mon
	To select the sensors and to select either 1 zone or 2 zone system.	After selecting 1 or 2 zone system, proceed to the selection of room or swimming pool.     If the swimming pool is selected, the temperature must be selected for △T temperature between 0°C ~ 10 °C.      Sensor     * For room thermostat, there is a further selection of external or internal.     If select internal, there is a further selection of RC-1 or RC-2 (only available when Zone selection is 1 zone system).      Select RC-1 if main remote controller's		Zone  1 Zo 2 Zoi  Select  Zone & Sensor  Sensor  Water  Room	10:34am, Mor one system nes system [] Confirm 10:34am, Mor temperature thermostat thermistor [] Confirm
5.3	> *1 Heater capacity	control and vice versa	ed for room temperature  i.		
	To reduce the heater power if unnecessary.* 3 kW / 6 kW / 9 kW * Options of kW vary depending			Heater capacity	10:34am,Mor
	on the model.				[4]Confirm
5.4	> Anti freezing				
	To activate or deactivate the water freeze prevention when the system is OFF	Yes		-	Yes ▼ No
5.5	> *2 Tank connection				
	To connect tank to the system.	No			Yes No

<sup>\*\*1</sup> It is not displayed when the outdoor unit is used alone.

<sup>\*2</sup> It is not displayed when connect Panasonic AIR-TO-WATER HYDROMODULE+TANK.

5.6 >*1 DHW capacity To select tank heating of					
to variable or standard. capacity heat up tank w fast mode and keep the temperature with efficie While standard capacity tank with rated heating When "Efficiency" is sel the "5.25 Heating controsetting, the tank heat-up process will be delayed a much lower tank wate temperature is reached improves the efficiency heating process. To ensufficient hot water, sele "Standard" in this setting "Comfort" in the "5.25 Heating."	Variable vith the tank of	Variable		Variable Variable Standard	I
5.7 > *2 Buffer tank conn	ection				
To connect tank to the sand if selected YES, to		No		Yes No	
$\triangle T$ temperature.		> Yes			
		5°C	Set △T for Buffer Tank	Buffer tank  ∆T for Buffer tank  Range: (0°C~10°C)  Steps: ±1°C	10:34am,Mon
5.8 > *1 Tank heater					
To select external or into tank heater and if Exter selected, set a timer for heater to come on.  * This option is available connection is selected	nal is the e if Tank	External		Tank heater  Exter Inter	_
		> External			
		1:30		Tank heater  Tank heater: ON tin  Range: (0:20~3:00  Steps: ±0:05	

<sup>\*1</sup> Only displayed when Tank connection is Yes.
\*2 It is not displayed when the outdoor unit is used alone and Panasonic AIR-TO-WATER HYDROMODULE+TANK 2 Zone model.

lenu	Default Setting	Setting Options / D	Display
9 > Base pan heater			
To select whether or not optional base pan heater is	No		Yes No
connected.	> Yes		
* Type A - The base pan heater activates only during deice operation.  * Type B - The base pan heater activates when outdoor ambient temperature 5 °C or lower.		Set base pan heater type*.	Base pan heater type 10:34am, Mon
0 > *1 Alternative outdoor sens	sor		
To select an alternative outdoor sensor.	No		Yes No
1 > Bivalent connection			
To select to enable or disable bivalent connection.	No		Yes
> Yes			
To select either auto control pattern or SG ready input control pattern or smart control pattern.  * This selection only display to select when optional pcb connection set to Yes.	Auto		Auto SG ready Smart
To select a bivalent connection	> Yes > Auto		
to allow an additional heat source such as a boiler to heat- up the buffer tank and domestic hot water tank when heatpump capacity is insufficient at low		Set outdoor temperature for turn ON Bivalent connection.	Bivalent connection 10:34am, Mor Turn ON: Outdoor temp Range: (-15°C~35°C) Steps: ±1°C
outdoor temperature. The bivalent feature can be set-up	Yes > After selecting	the outdoor temperatu	<u> </u>
either in alternative mode	Control pattern	vatavoi tompoiata	Bivalent connection 10:34am, Mo
(heatpump and boiler operate		el / Advanced parallel	Control pattern
alternately), or in parallel mode (both heatpump and boiler operate simultaneously), or in advance parallel mode	Select advanced para the tanks.		Alternative Parallel Advanced parallel Select [+] Confirm
(heatpump operates and boiler	Control pattern > Alt	ernative	
turns on for buffer-tank and/or domestic hot water depending on the control pattern setting options).	OFF	Option to set external pump either ON or OFF during bivalent operation. Set to ON if system is simple bivalent connection.	Bivalent connection 10:34am,Mo External pump  ON OFF  Select []Confirm

\*1 It is not displayed when the outdoor unit is used alone.

Default Setting	Setting Options / D	isplay
Control pattern > Adv	/anced parallel	
Heat	Selection of the tank	Bivalent connection 10:34am, Mon Advanced parallel
"Heat" implies Buffer implies Domestic Hot		Heat DHW
		\$\square\$ Select [←] Confirm
Control pattern > Adv	/anced parallel > Heat >	
Buffer Tank is activate "Yes".	ed only after selecting	Bivalent connection 10:34am, Mon Advanced parallel: Heat  Yes  No
		Select [←] Confirm
-8 °C	Set the temperature threshold to start the bivalent heat source.	Bivalent connection 10:34am, Mon Heat start: Target temp.  Range: (-10°C~0°C) Steps: ±1°C
	bivaioni noat odaroo!	\$Select [4] Confirm
	Delay timer to start the bivalent heat source (in hour and minutes).	Bivalent connection 10:34am, Mon Heat start: Delay time
0:30		Range: (0:00~1:30) Steps: ±0:05
		\$Select [←] Confirm
-2 °C	Set the temperature threshold to stop the bivalent heat source.	Bivalent connection 10:34am, Mon Heat stop: Target temp.  Range: (-10°C~0°C) Steps: ±1°C
		\$Select [₄-]Confirm
0:30	Delay timer to stop the bivalent heat	Bivalent connection 10:34am, Mon Heat stop: Delay time Range: (0:00~1:30)
0.30	source (in hour and minutes).	Steps: ±0:05 0:30  \$\frac{1}{2}\text{Confirm}\$
Control pattern > Adv	/anced parallel > DHW >	
DHW Tank is activated only after selecting "Yes".		Bivalent connection 10:34am, Mon Advanced parallel: DHW  Yes No  Select [←] Confirm
0:30	Delay timer to start the bivalent heat source (in hour and minutes).	Bivalent connection 10:34am, Mon DHW: Delay time Range: (0:30~1:30) Steps: ±0:05  \$\times\$ Select [-4] Confirm


Menu

Menu	Default Setting	Setting Options / D	Display
SG ready input control for	> Yes > SG ready		
bivalent system follow below input condition.  SG signal Operation pattern  Vcc-bit1 Vcc-bit2  Open Open Boiler OFF  Short Open Short Boiler ON  Short Short Short Boiler ON  Short Short Short Boiler ON	OFF	Option to set external pump either ON or OFF during bivalent operation. Set to ON if system is simple bivalent connection.	Bivalent connection 10:34am,Mon External pump  ON  OFF  Select [+-] Confirm
To do settings related to	> Yes > Smart		
electricity and boiler so that unit is able to determine whether to operate heat pump or boiler at a particular period depends on operating cost of both heat sources. These settings are electricity price, boiler price, season, schedule etc.	OFF	Option to set external pump either ON or OFF during bivalent operation. Set to ON if system is simple bivalent connection.	Bivalent connection 10:34am,Mon External pump  ON  OFF  Select [] Confirm
	> Yes > Smart > After	selecting for the extern	al pump > Energy price
	<ul> <li>Select Electricity to set on electricity price.</li> <li>Select Boiler to set on boiler price and its efficiency.</li> </ul>		Bivalent connection 10:34am,Mon Energy price  Electricity  Boiler  Select [→] Confirm
	> Yes > Smart > After Electricity	selecting for the extern	al pump > Energy price >
	<ul> <li>0.0 * / kWh</li> <li>There are total 10 different prices can be for Electricity: Electricity price 1 ~ Electricity price 10</li> <li>Range is 0 ~ 999.9 * / kWh</li> <li>Press ∧ or ∨ to enter a setting screen shown in Figure 1. Then start setting the value of electricity price.</li> <li>After finish setting a particular electricity (eg. Electricity price 1), press &lt; or &gt; to and set for other electricity price.</li> <li>* Set the price according to value provide electrical supply company.</li> </ul>		Range: (0~999.9 */kWh) Steps: ±0.1*/kWh  O.0    Steps: ±0.1*/kWh   O.0    Steps: ±0.1*/kWh   O.0   O.0

Remark: \* Currency setting depends on where you use this product.

-Select [₊-] Edit

- Select "1" to edit both start time and electricity price. Select "2" to edit electricity price only.

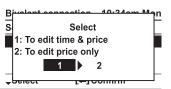

Remark: \* Currency setting depends on where you use this product.

Menu

Menu	Default Setting	Setting Options / D	isplay		
		nge of start time displayed can be in "24h" "am/pm" format depend on setting of ock format".		art time 0~23.00) our	10:34am,Mon
	- Range of electricity price is 0 ~ 10 which		\$Select	[+-](	Sommin
			Season 1		10:34am,Mon
	refers back to the 10 price set previously (		Pattern 1: Pr		0.0 */kWh
	Electricity":  Electricity price 1 ~ E	0, 1	Range: (0~1 Steps: ±1	0)	0
	The price displayed of indicates the previous price 1 to Electricity p * When the price is set price will be treated a	on the upper right corner is set value of Electricity orice 10.  to "0", the electricity is 0.0 * / kWh. It is for istaller when 0.0 is the	\$Select	[+](	Confirm
5.12 > *1 External SW					
	No			Yes No	
5.13 > *2 Solar connection					
The optional PCB connectivity must be selected YES to	No			Yes No	
enable the function.  • If the optional PCB	> Yes				
connectivity is not selected,			Solar connec	tion	10:34am,Mor
the function will not appear on				Buffer t	ank
the display.  • DHW is not applicable for	Buffer tank	Selection of the tank		<b>▼</b> DHW ta	nk
WH-ADC models.					
	Non Afternational	41 41.	→Select	[+]	Confirm
	> Yes > After selecting	ig the tank	Solar connec	41	40:24am Mar
			ΔT Turn ON	LIUII	10:34am, Mor
	40.00	Set △T ON	Range: (6°C	~15°C)	
	10 °C	temperature	Steps: ±1°C	,	10 °c
			\$Select	[+]	Confirm
	> Yes > After selecting	ig the tank > $\triangle$ T ON tem	•		
			Solar connec		10:34am, Mor
		Set △T OFF	ΔT Turn OFF Range: (2°C		
	5 °C	temperature	Steps: ±1°C	a cj	<b>5</b> ℃
			\$Select	[4]	Confirm

<sup>\*1</sup> It is not displayed when the outdoor unit is used alone.

<sup>\*2</sup> It is not displayed when the outdoor unit is used alone and Panasonic AIR-TO-WATER HYDROMODULE+TANK 2 Zone model.

Menu	Default Setting	Setting Options / D	Display		
-	> Yes > After selecti	ng the tank > △T ON tem	perature > △T OFF	temperature	
	5 °C	Set Antifreeze temperature	Solar connection Anti freeze Range: (-20°C~10°C Steps: ±1°C	10:34am, Mon	
		temperature		Confirm	
		ng the tank > △T ON tem ntifreeze temperature	mperature > \( \triangle T \) OFF temperatu		
	80 °C	Set Hi limit	Solar connection Hi limit Range: (70°C~90°C) Steps: ±5°C	80 °C	
5.14 > *1 External error signal			\$Select [+1]	Confirm	
5.14 / External error signal	No		Yes		
5.15 > *1 Demand control					
	No		Yes No		
5.16 > *1 SG ready					
	No		Yes No		
	> Yes > After selection	ng Capacity			
	120 %	Capacity (1) & (2) of DHW (in %), Heat (in %) and Cool (in °C)	SG ready Capacity [1-0]: DHW Range: (50%~150% Steps: ±5%  \$\\$\$Select [+-]		
	> Yes > After selection	ng Power consumption :	> *HPU stop consur	nption	
	*², *4 3.6kW	*HPU stop consumption	SG ready HPU stop consump Range: (0.5kW~10. Steps: ±0.1kW  \$\disps: \( \text{L} \)		
	> Yes > After selection	 ng *HPU stop consumpt			
	*33.6kW	Consumption (1) & (2) of DHW (in kW), Heat (in kW) and Cool (in kW)	SG ready Consumption [1-0]: Range: (0.5kW~10. Steps: ±0.1kW		

Remark: \* HPU means Heat pump unit (Outdoor unit).

<sup>\*1</sup> It is not displayed when the outdoor unit is used alone.

\*2 Depending on the model, it may be less than 3.6kW.

\*3 Depending on the model, it may be less than 3.6kW or more than 3.6kW.

\*4 Even though the setting value is lower than 3.0kW, actual power consumption can be 3.0kW caused by back-up heater operation.

Me	nu	Default Setting	Setting Options / Display
5.17	> *1 External compressor SW		
		No	Yes No
		> Yes	
			Ext. compressor SW 11:34am,Mon
		Heat source	Heater Heat source
5.18	Circulation liquid		^Select [₄-] Confirm
J. 10	> Circulation liquid  To select whether to circulate		Circulation liquid 10:34am, Mon
	water or glycol in the system.	Water	Water
		vvator	Glycol
			\$\times \text{Select}  \text{[] Confirm}
5.19	> *1, *2 Heat-Cool SW		
		No	Yes A No
5.20	> *1 Force heater		
	To turn on Force heater either manually (by default) or automatically.	Manual	Force heater 10:34am,Mon  Auto  Manual  Select [+] Confirm
5.21	> Force defrost		Sciett []commi
	If auto selection is set, outdoor unit will start defrost operation if long heating hour operate during low outdoor temperature.	Manual	Auto Manual
5.22	> *1 Defrost signal		
	To turn on defrost signal to stop fan coil during defrost operation. (If defrost signal set to yes, bivalent function will not available to use)	No	Yes No

<sup>\*1</sup> It is not displayed when the outdoor unit is used alone.
\*2 Only displayed when COOL mode is unlocked. (This mean when COOL mode is available)

Me	nu	Default Setting	Setting Options / I	Display
5.23	> Pump flowrate			
	To set variable flow pump control or fix pump duty control.	ΔT		ΔT ▼ Max. Duty
.24	> DHW Defrost			
	Allow system to run defrost by using hot water instead of room unit for better room comfort.	Yes		Yes No
.25	> Heating control			
	To select unit operation condition whether to achieve set temperature faster or to	Comfort		Comfort  Efficiency
	save energy.	> Efficiency		
	When "Efficiency" is selected, the time setting will transition to 1st, 2nd, and 3rd stage. Increasing the time will slowly increase the capacity. It is a function for Heating + Tank operation.  When "Variable" is selected in the "5.6 DHW capacity" setting, the tank heat-up process will be delayed until a much lower tank water temperature is reached, which improves the efficiency of the heating process. To ensure sufficient hot water, select either "Comfort" in this setting or "Standard" in the "5.6 DHW capacity" setting.	0:20		Heating control 10:34am,Mo Efficiency: Stage 1 Range: (0:00~1:00) Steps: ±0:05  \$\\$Select [] Confirm  Capacity  \text{Total tiles}  \text{Total tiles}  \text{Total tiles}
5.26	> External meter			
	To set which external meter to be used depends on meter connection.  There are generation meters and various types of electricity meters.  For generation meters, there are two connection systems:  a) One generation meter system:	Heat-cool meter: No * Tank meter: No Elec. meter HP: No Elec. meter 1 (PV): No Elec. meter 2 (Building) Elec. meter 3 (Reserve  * Only available if both Tank connection are s	: No ) : No Heat-cool meter and	External meter 10:34am,Mo  Heat-Cool meter  Tank meter  Elec. meter HP  Elec. meter 1 (PV)  Select [] Confirm  External meter 10:34am,Mo  Elec. meter HP  Elec. meter 1 (PV)  Elec. meter 2 (Building)  Elec. meter 3 (Reserve)  *Select [] Confirm
	Heat-cool meter only b) Two generation meter	> Heat-cool meter		
	system: Heat-cool meter and Tank meter	- Set Heat-cool meter to generation meter is co - It is to measure energ pump unit during heat operation (one genera during heating, cooling (two generation meter	onnected.  y generation of heat ing and cooling only ation meter system) or g and DHW operation	Yes A No

Remark : Elec. means "Electricity", HP means "Heat pump"

Menu	Default Setting  Setting Options / Display	
	> Tank meter	
	- Set Tank meter to Yes when this generation	
	meter is connected.	
	- It is to measure energy generation of heat pump unit during DHW operation*.	
	* Only available if both Heat-cool meter and	
	Tank connection are set to Yes.	
	Only set Tank meter to Yes when the	
	connection is two generation meter system.	
	> Elec. meter HP	
	- Set Elec. meter HP to Yes when this	
	electricity meter is connected.	
	- It is to measure energy consumption of heat	
	pump unit.	
	> Elec. meter 1 (PV)	
	- Set Elec. meter 1 (PV) to Yes when this	
	electricity meter is connected.  It is to measure energy generation of solar.  Yes	
	- It is to measure energy generation of solar system. This data will be displayed only on	
	Cloud system.	
	> Elec. meter 2 (Building)	
	- Set Elec. meter 2 (Building) to Yes when this	
	electricity meter is connected	
	- It is to measure energy consumption of the	
	building. This data will be displayed only on	
	Cloud system.	
	> Elec. meter 3 (Reserve)	
	- Set Elec. meter 3 (Reserve) to Yes when this	
	electricity meter is connected.	
	- It is to measure energy consumption. This	
F 07 > Floatwicel and de	data will be displayed only on Cloud system.	
5.27 > Electrical anode	Vac (for All models)	
To enable or disable operation	Yes (for -AN models) No (for non -AN models)	
of electrical anode.	Yes Yes	
	Yes : display	
	No : no display (* 40°C	

Remark : Elec. means "Electricity" HP means "Heat pump"

5.28 > *1 Extra pump	
Selects whether the extra pump is used in the circulation circuit	No Heat DHW
for heating or in the circulation circuit for DHW, or it is not used.	
If set to "No", the pump is not used.  Pump ON time	11:34pm,Mon
If set to "Heat", the extra pump is used as a pump for the	: 00 am
circulation circuit (for heating/ cooling).   Select	[₄-]Confirm
If set to "DHW" the extra pump	11:34pm,Mon
circulates domestic hot water in	ie
the domestic not water from	: 00 pm
getting cold.  - If set to "Comfort", hot water	[₄-]Confirm
is continuously circulated DHW	11:34pm,Mon
during DHW operation.	Comfort
extra pump turns ON and Comfort or Efficiency	Efficiency
OFF alternatively following	[₄]Confirm
ON/OFF time setting.  > DHW > After selecting Efficiency	
DHW	11:34pm,Mon
ON time	
0:15 Set ON time Range: (0:05~ Steps: ±0:05	0:15
\$Select	[←] Confirm
DHW	11:34pm,Mon
OFF time	
0:15 Set OFF time Range: (0:05~ Steps: ±0:05	0:15
\$Select	[←] Confirm
5.29 > External heater	
Set to "YES" after an external	
heater is installed.	Yes
(This menu is only displayed for the	No
Control Module model (indoor unit))  5.30 > Static pressure	
If set to "No", the fans in the	
outdoor unit rotate at a normal	
speed.	Yes
If set to "YES", the fans in the No	No
outdoor unit rotate at a higher speed than normal for response	
to high static pressure.	

\*1 It is not displayed when the outdoor unit is used alone.

Menu	Default Setting	Setting Options / Display
5.31 > *1 Cooling capacity		
Selects the cooling capacity. If set to "Efficiency", the cooling operation is performed at rated capacity for efficient cooling. If set to "Comfort", the cooling operation is performed at maximum capacity.	Efficiency	Comfort Efficiency

١,	*1 Only displayed when	n COOL mode is unlocked (	(This means when COOL	. mode is available).	

Me	nu	Default Setting	Setting Options / D	isplay	
6	Installer setup > Operation s	etup			
	To access to the four major functions or modes.	4 main	modes *1, *2 Auto / *3 Tank	Operation setup  Heat  Cool  Auto  Tank	10:34am,Mon
				→Select [←]	Confirm
6.1	> Heat				
To set various water & ambient temperatures for heating.		Water temp. for heating ON / Outdoor temp. for heating OFF / △T for heating ON / Heater ON/OFF		Operation setup 10:34am, Mon Heat Water temp. for heating ON Outdoor temp. for heating OFF  AT for heating ON  Select [+-] Confirm	
		> Water temp. for hea	ating ON		
		Compensation curve	Heating ON temperatures in compensation curve or direct input.	Operation setup Heat ON: Water tem Compensati Direct  Select	on curve
		> Water temp. for hea	ating ON > Compensation	on curve	
		X axis: -5 °C, 15 °C Y axis: 55 °C, 35 °C	Input the 4 temperature points (2 on horizontal X axis, 2 on vertical Y axis).	Heat ON: Water tem  55°C  75  35°C  25  -20  -5°C  ←Select  ←J	p.:Zone1
		Temperature range fo WH-WXG model: 25 ° Regardless of the abouthe operating conditio If 2 zone system is se 2.	°C ~ 75 °C ove setting, there is a limi	t to the water temper	input for Zone
		> Water temp. for hea		spiay if offig 1 Zoffe s	system.
		-	Temperature for	Operation setup  Heat ON: Water tem  Range: (25°C~75°C)	
		35 °C	heating ON	Steps: ±1°C	35 °C Confirm
		the operating conditio If 2 zone system is se	°C ~ 75 °C ove setting, there is a limi	t to the water temper	ature. Refer to

<sup>\*1</sup> The system is locked to operate without COOL mode. It can be unlocked only by authorised installers or our authorised service partners.

\*2 Only displayed when COOL mode is unlocked (This means when COOL mode is available).

\*3 Only displayed when Tank connection is Yes.

Menu	Default Setting	Setting Options / D	Display	
	> Outdoor temp. for	heating OFF		
	•	heating OFF > Heat OFF	outdoor temp.	
	24 °C	Set outdoor temp to stop heating.	Operation setup Heat OFF: Outdoor Range: (6°C~35°C)	
	24 0	Setting range is 6°C~35°C	Steps: ±1°C  \$Select [4]	Confirm
	> Outdoor temp. for	heating OFF > Heat ON		
	7 Outdoor temp. for		Operation setup	10:34am,Mo
	23 °C	Set outdoor temp to start heating.  Setting range is 5°C~X°C (X is heating OFF temp1)	Heat ON: Outdoor to Range: (5°C~23°C) Steps: ±1°C	
				Confirm
	> Outdoor temp. for	heating OFF > Heat ON	-	
	0:30 min	Set delay time from heating OFF to heating ON.	Operation setup Heat ON: Delay time Range: (0:30~24:00 Steps: ±0:30	
		nealing ON.	\$Select [+]	Confirm
	> AT four hootings O	<u> </u>	*2elect [+]	Commi
	> △T for heating O	Set △T for heating ON.	Operation setup	10:34am, Mo
	5 °C	* This setting will not available to set when pump flowrate set to	Range: (1°C~15°C) Steps: ±1°C	5 °C
	> *1 Heater ON/OFF	Max. duty.	\$3010CC [4-]	Commi
		Outdoor temp. for heate	r ON	
	7 Heater ON/OTT 7	Outdoor temp. for fleate	Operation setup	10:34am,Mo
	0 °C	Temperature for heater ON	Heater ON: Outdoo Range: (-20°C~15°C Steps: ±1°C	r temp.
			\$Select [←]	Confirm
	> Heater ON/OFF >	Delay time for heater ON	l .	
			Operation setup	10:34am,Mo
	0:30 min	Delay time for heater to turn on	Heater ON: Delay ti Range: (0:10~1:00) Steps: ±0:10	
			\$Select [←]	Confirm
	> Heater ON/OFF >	Water temperature for h	eater ON	
		Setting of water	Operation setup Heater ON: ΔT of ta	10:34am,Mo
	-4 °C	temperature to turn on from water set temperature.	Range: (-10°C~-2°C) Steps: ±1°C	
			\$Select [←]	Confirm
*1 It is not displayed when the outdoor	unit is used alone.			

Menu	Default Setting	Setting Options / D	isplay	
	> Heater ON/OFF > V	Vater temperature for he	eater OFF	
	-2 °C	Setting of water temperature to turn off from water set temperature.	Operation setup Heater OFF: ΔT of Range: (-8°C~0°C) Steps: ±1°C	10:34am,Mon target Temp.
6.2 >*1, *2 Cool			♣2ciect [+-]	Commi
To set various water & ambient temperatures for cooling.		res for cooling ON cooling ON.	Operation setup 10:34am, Cool Water temp. for cooling ON AT for cooling ON	
	> Water temp. for cod	oling ON	→Select [←	Confirm
	Compensation curve	Cooling ON temperatures in compensation curve or direct input.	Operation setup  Cool ON: Water ten  Compensati  Dire  Select	on curve
	> Water temp. for cooling ON > Compensation curve			
	X axis: 20 °C, 30 °C Y axis: 15 °C, 10 °C	Input the 4 temperature points (2 on horizontal X axis, 2 on vertical Y axis)	Cool ON: Water ten  15°C 20  10°C 5  15 20°C  4>Select []	np: Zone1  30°C 30  Confirm
	• If 2 zone system is selected, the 4 temperature points must also be input for Zone			
	2. • "Zone 1" and "Zone 2	" will not appear on the di	splay if only 1 zone	system.
	> Water temp. for cod	oling ON > Direct		
	10 °C	Set temperature for Cooling ON	Operation setup  Cool ON: Water ten  Range: (5°C~20°C)  Steps: ±1°C	10 °c
	• If 2 zone system is se	lected, temperature set p		Confirm
	• "Zone 1" and "Zone 2" will not appear on the disp			
	> △T for cooling ON			
	5 °C	Set △T for cooling ON * This setting will not available to set when pump flowrate set to	Operation setup Cool ON: ΔT Range: (1°C~15°C) Steps: ±1°C	10:34am, Mon
		Max. duty.	\$Select [+-]	Confirm

\*1 The system is locked to operate without COOL mode. It can be unlocked only by authorised installers or our authorised service partners.
\*2 Only displayed when COOL mode is unlocked (This means when COOL mode is available).

Menu	Default Setting	Setting Options / D	isplay	
6.3 > *1, *2 Auto				
Automatic switch from Heat to Cool or Cool to Heat.	to Cool or Outdoor temp.	s for switching from Heat Cool to Heat. for (Heat to Cool) / for (Cool to Heat)	Operation setup Auto Outdoor temp. for Outdoor temp. for	
	> Outdoor temp. for	(Heat to Cool)	Applicate Fa-1	Commin
	15 °C	Set outdoor temperature for switching from Heat to Cool.	Operation setup  Auto: Outdoor tem  Range: (11°C~25°C)  Steps: ±1°C	
	> Outdoor temp. for	(Cool to Heat)	Applicate Fall	
	10 °C	Set outdoor temperature for switching from Cool to Heat.	Operation setup Auto: Outdoor tem Range: (5°C~14°C) Steps: ±1°C	10°C
6.4 >*3 Tank			\$Select [←]	Confirm
Setting functions for the tank.		max) / Tank heat up time at temp. / Sterilization	Operation setup Tank Floor operation tin Tank heat up time Tank re-heat temp.  Select	(max)
	The display will show	3 functions at a time.		
	> Floor operation tim	ne (max)		
	8:00	Maximum time for floor operation (in hours and minutes)	Operation setup Tank: Floor ope. tir Range: (0:30~10:00 Steps: ±0:30	8:00
	> Tank heat up time	(max)	\$Select [4-]	Confirm
	· Taill Hout up tille	(	Operation setup	10:34am, Mon
	1:00	Maximum time for heating the tank (in hours and minutes)	Tank: Heat up time Range: (0:05~4:00) Steps: ±0:05	(max)
			\$Select [←]	Confirm
	> Tank re-heat temp.			
	-8 °C	Set temperature to perform reboil of tank water.	Operation setup Tank: Re-heat temp Range: (-12°C~-2°C Steps: ±1°C	
			\$Select [+-]	Confirm

\*1 The system is locked to operate without COOL mode. It can be unlocked only by authorised installers or our authorised service partners.

\*2 Only displayed when COOL mode is unlocked (This means when COOL mode is available).

\*3 Only displayed when Tank connection is Yes.

	_		
Menu	Default Setting	Setting Options / D	Display
	> Sterilization		
	Monday	Sterilization may be set for 1 or more days of the week.  Sun / Mon / Tue /	Operation setup 10:34am, Mon Sterilization: Day  Sun Mon Tue Wed Thu Fri Sat  - V
		Wed / Thu / Fri / Sat	<b>◆Day</b> \$☑/☐ [←]Confirm
	> Sterilization: Time		
	12:00	Time of the selected day(s) of the week to sterilize the tank  0:00 ~ 23:59	Operation setup 10:34am,Mon Sterilization: Time 10:34am,Mon
	> Sterilization: Boilin	na temp.	
	65 °C	Set boiling temperatures for sterilize the tank.	Operation setup 10:34am,Mon Sterilization: Boiling temp.  *1 Range: (55°C-65°C) Steps: ±1°C  Select [] Confirm
	> Sterilization: Ope. t	time (max)	
	0:10	Set sterilizing time (in hours and minutes)	Operation setup 10:34am, Mon Sterilization: Ope. time (max) Range: (0:05~1:00) Steps: ±0:05
			\$Select [₄-]Confirm
7 Installer setup > Service set	ир		
7.1 > Pump maximum speed			
To set the maximum speed of the pump.		max. duty and operation of the pump.	Service setup 10:34am,Mon Flow rate Max. Duty Operation
	Max. Duty: 0	XX.X L/min 0x40 ~ 0xFE, DFF/Air Purge	46.0 L/min OXCE → OFF  ⇒ Select
7.2 >*2 Zone2 pump speed	`		
To set the zone2 pump speed.	Max. Duty: 0	XX.X L/min 0x46 ~ 0xC5,	Service setup 11:34pm,Mon Flow rate Max. Duty Operation  10.0 L/min 0x50 OFF
	Pump:	ON/OFF	A O L (


**\$→** Select

<sup>\*1</sup> When using external heater, 55°C ~ 75°C. \*2 Only displayed when Panasonic AIR-TO-WATER HYDROMODULE+TANK 2Zone model.


Menu	Default Setting	Setting Options / D	Display	
7.3 > Dry concrete				
To dry the concrete (floor, walls, etc.) during construction.	Edit to set the temperature of dry concrete.		Service setup Dry concrete ON	10:34am,Mon
Do not use this menu for any other purposes and in period	ON	/ Edit	Edit	
other than during construction	> Edit		Applicate [4.1	
	Stages: 1 Temperature: 25 °C	Heating temperature for drying the concrete. Select the desired stages: 1 ~ 10,	Dry concrete: 1/10 Range: (25°C~55°C) Steps: ±1°C	10:34am, Mon
	> ON	range: 1 ~ 99	^Select [←]	Confirm
	Confirm the setting temperatures of dry concrete for each stage.		Service setup Dry concrete: Status Stage Water set temp. Actual water temp.  [the off of the set of	10:34am, Mon : 1/10 : 25°C :25°C/25°C
7.4 > Service contact	_			
To set up to 2 contact names and numbers for the User.	-	me and contact number.  / Contact 2	Service setup Service contact: Contac	
	> Contact 1 / Contact	12	→Select [←]	Commi
	Contact name or number.		Service contact Contact 1	10:34am, Mon
	Name / phone icon		Name : Bryan Ad	
	Input name and number  Contact name: alphabet a ~ z.		ABCDEFGHIJKLM STUVWXYZ abco jklmnopqrstuv √→Select [⊷]	lefghi BS
	Contact nu	ımber: 1 ~ 9	Number: 2 3 4 5 6 7 8 9 × 0 4 4 >> Select [+]	) - <u>BS</u>

Default Setting Setting Option		Setting Options / Display		
trol setup				
	Selection of one or two remote controllers.	Single		
	When Dual is selected, Main remote controller (RC-1) will			
Single	start to communicate with second remote controller (RC-2) and display "RC-1 & RC-2 sync, in progress"	RC-1 & RC-2 sync. in progress!		
	They are ready to be used after this pop up screen disappears.			
	When both remote controllers have communication failure, it will display "Communication with	Communication with RC-2 failed!		
	Single	Selection of one or two remote controllers.  When Dual is selected, Main remote controller (RC-1) will start to communicate with second remote controller (RC-2) and display "RC-1 & RC-2 sync. in progress".  They are ready to be used after this pop up screen disappears.  When both remote controllers have communication		

## 5.1.7 Main Components

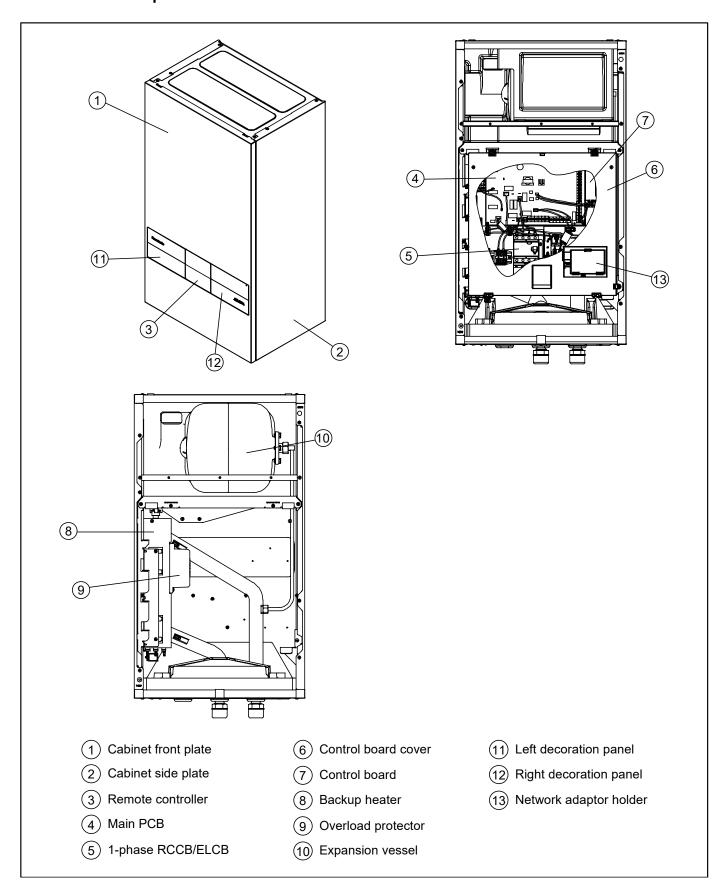


## 5.2 Outdoor Unit

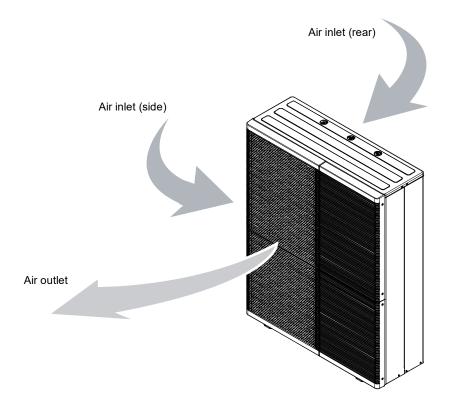


## 6. Dimensions


## 6.1 Indoor Unit

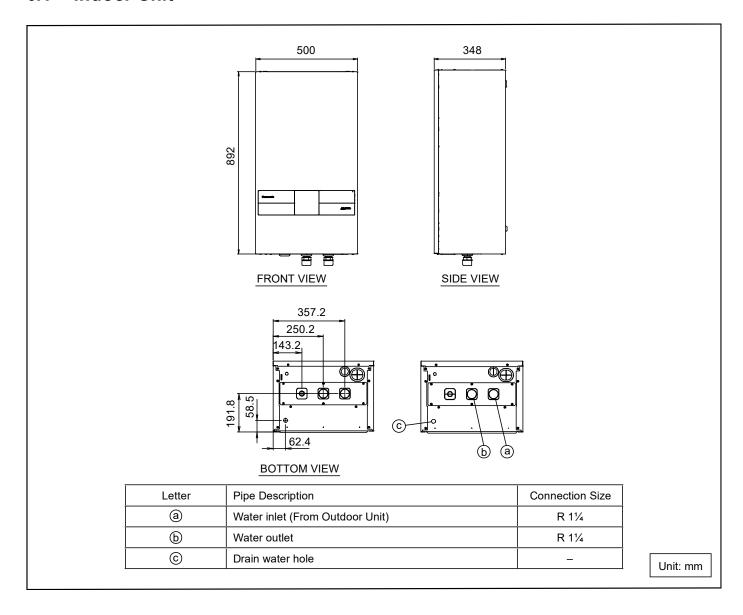

## 6.2 Outdoor Unit

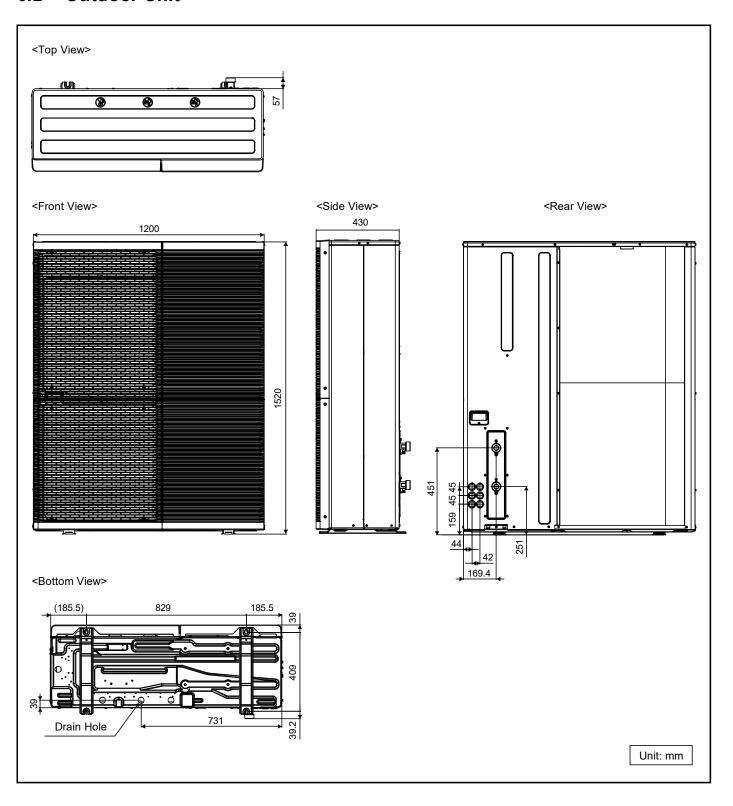

# 7. Refrigeration and Water Cycle Diagram

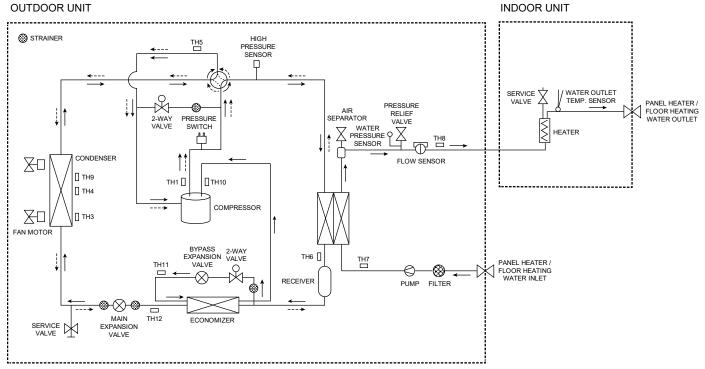


- → REFRIGERANT CYCLE [HEATING]
- ····➤ REFRIGERANT CYCLE [COOLING]


TH1	Outdoor discharge sensor
TH2	-
TH3	Outdoor heat exchanger sensor
TH4	Outdoor ambient sensor
TH5	Evaporator outlet sensor
TH6	Refrigerant sensor
TH7	Water inlet 2 sensor
TH8	Water outlet sensor 2
TH9	Outdoor heat exchanger middle sensor
TH10	Bypass outlet sensor
TH11	Bypass inlet sensor
TH12	Economizer outlet sensor

## 8. Block Diagram

### 8.1 WH-SDC0916M3E5 WH-WXG09ME5 WH-WXG12ME5

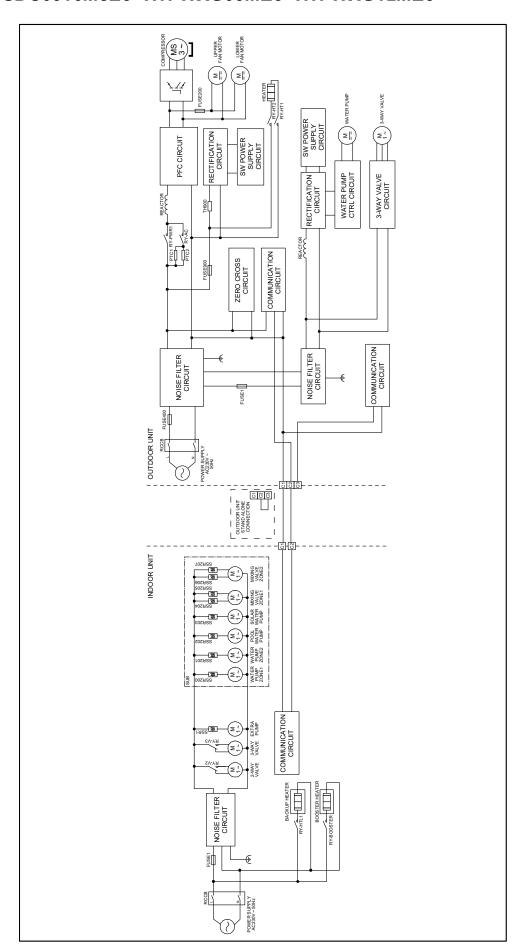


### 8.2 WH-SDC0916M6E5 WH-WXG09ME5 WH-WXG12ME5

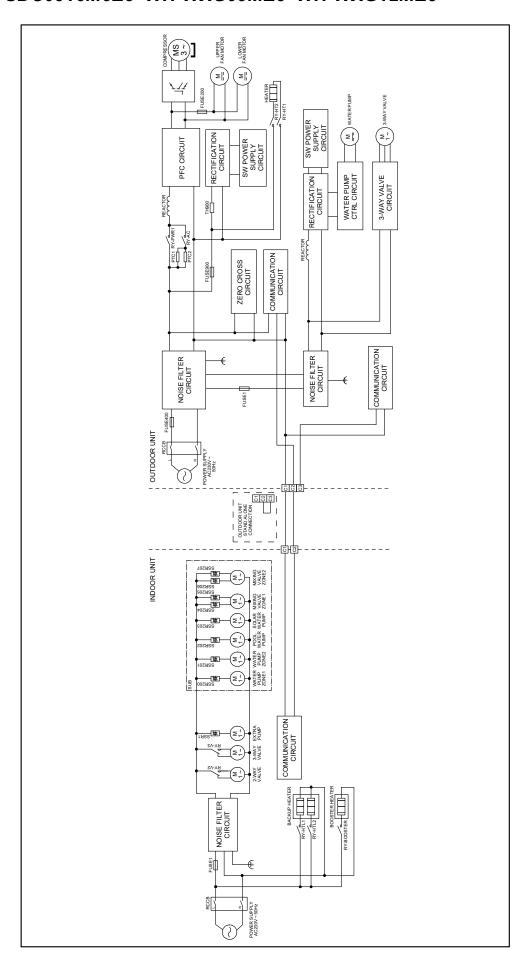


## 9. Wiring Connection Diagram

#### 9.1 Indoor Unit


#### 9.1.1 WH-SDC0916M3E5

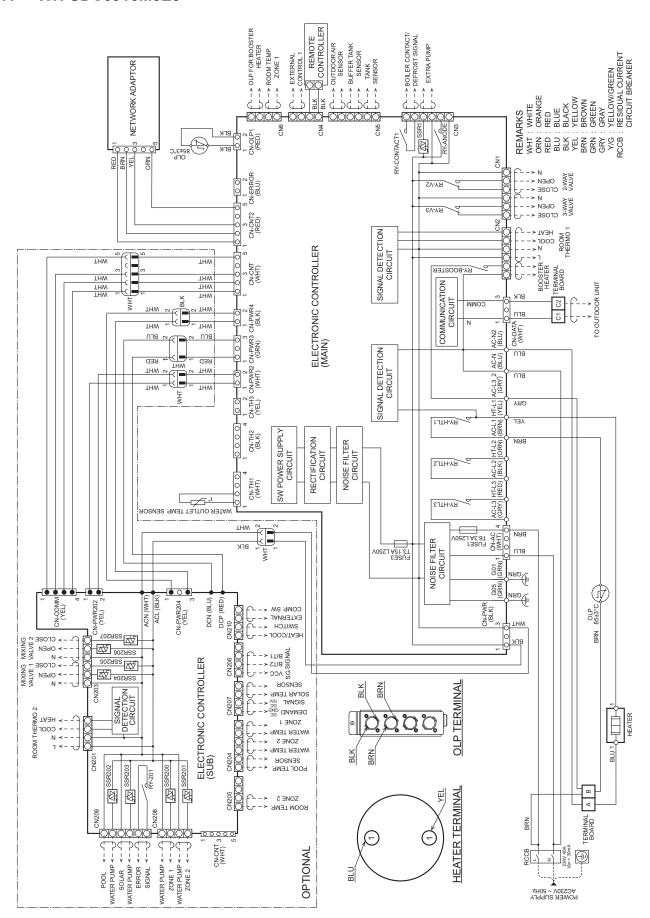

#### 9.1.2 WH-SDC0916M6E5

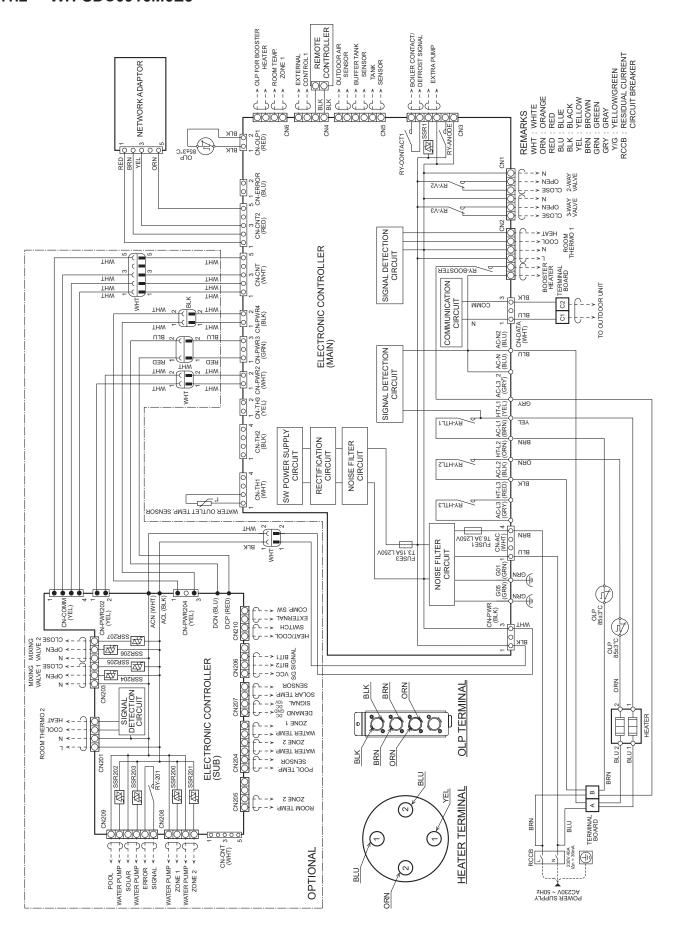

#### 9.2 Outdoor Unit

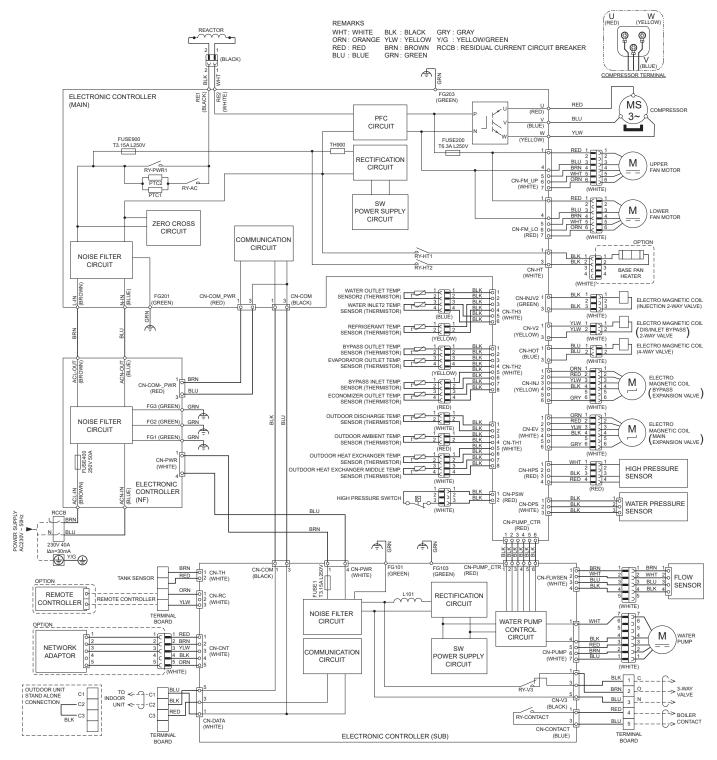

Resistance of Compressor Windings


MODEL	WH-WXG09ME5 / WH-WXG12ME5
CONNECTION	7CD081XA02
U - V	0.210 Ω
V - W	0.210 Ω
U - W	0.210 Ω

Note: Resistance at 20°C of ambient temperature.


## 10. Electronic Circuit Diagram

### 10.1 Indoor Unit


#### 10.1.1 WH-SDC0916M3E5

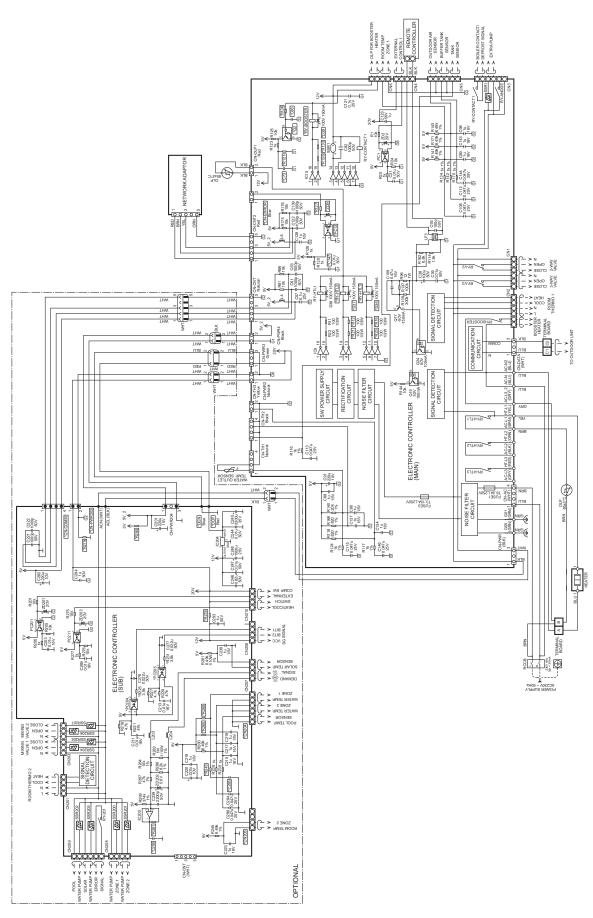

#### 10.1.2 WH-SDC0916M6E5

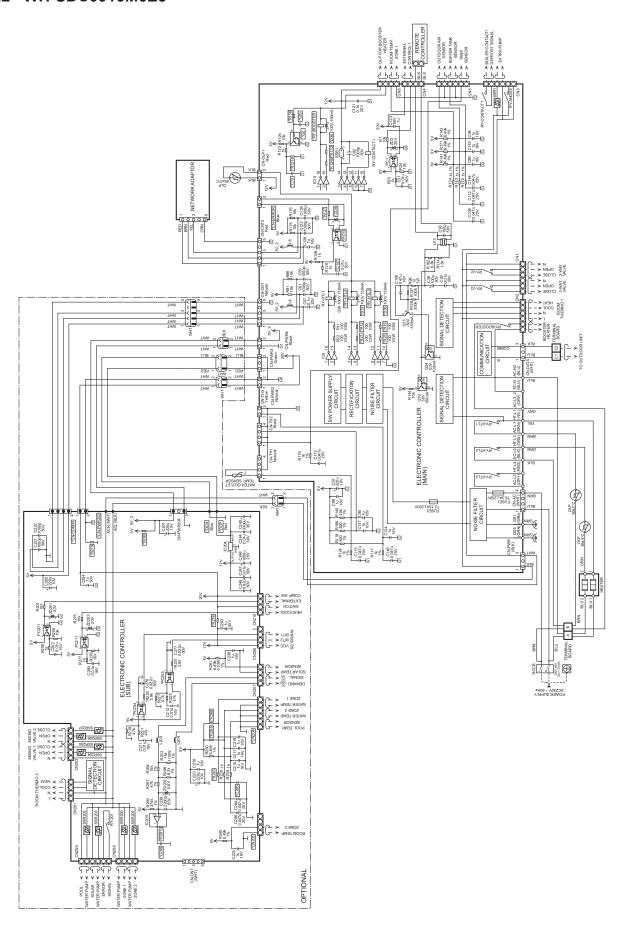


#### 10.2 Outdoor Unit

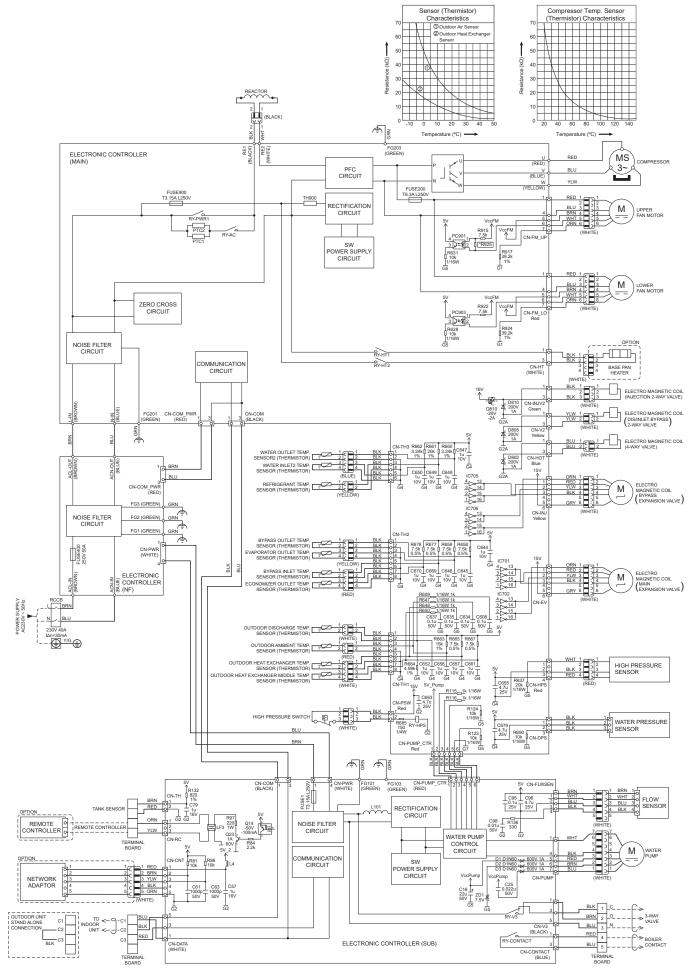


## 11. Printed Circuit Board

#### 11.1 Indoor Unit

#### 11.1.1 Main Printed Circuit Board

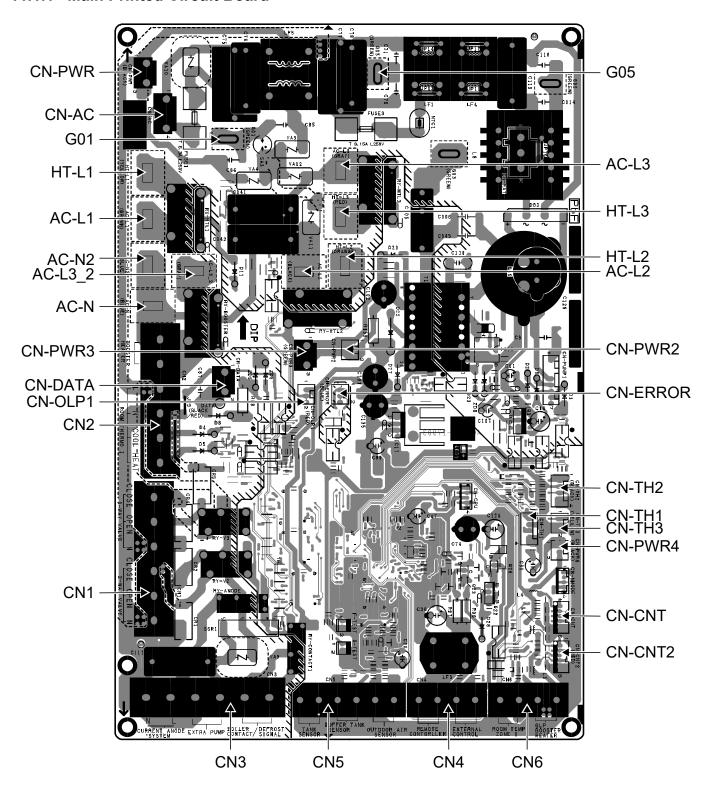


### 11.1.2 Sub Printed Circuit Board (Optional)

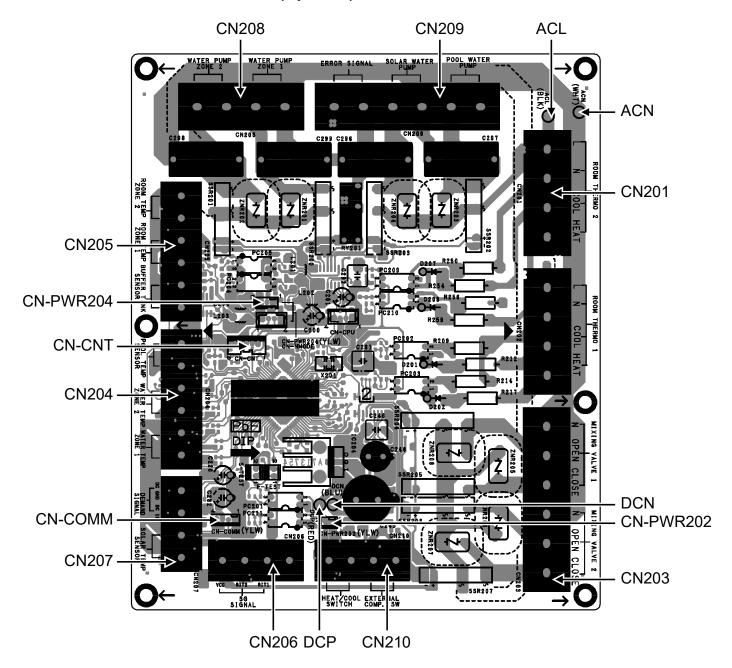


### 11.2 Outdoor Unit


### 11.2.1 Main Printed Circuit Board

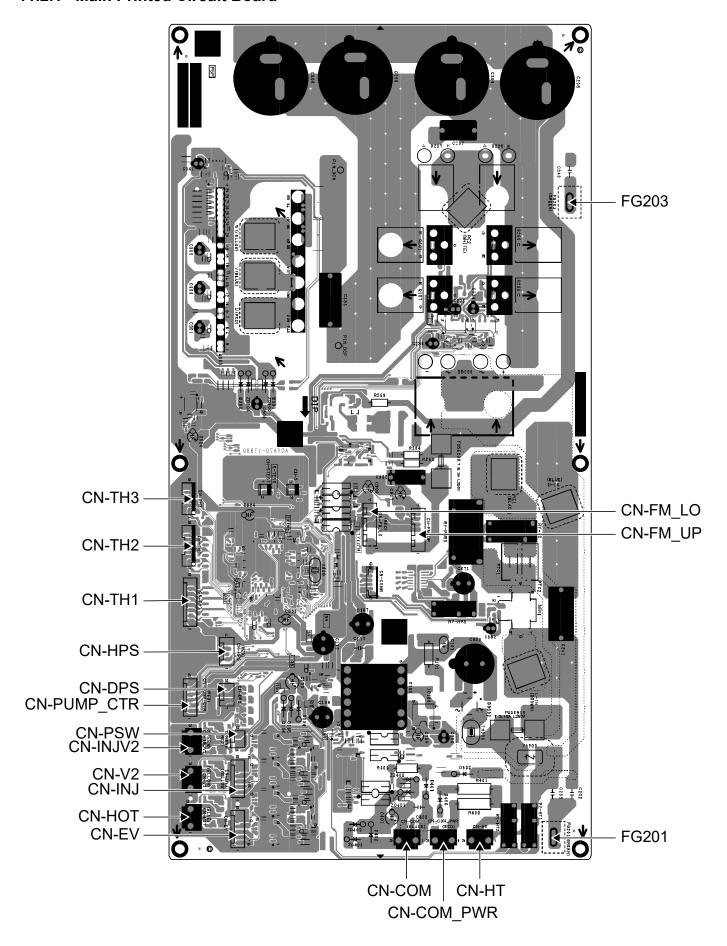

### 11.2.2 Noise Filter Printed Circuit Board

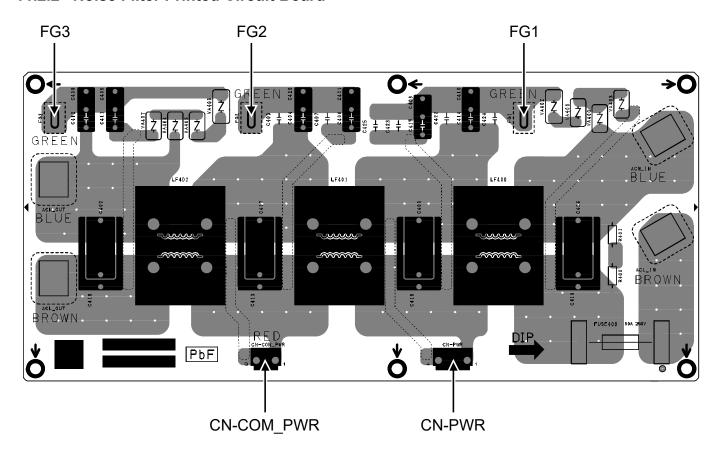


### 11.2.3 Sub Printed Circuit Board

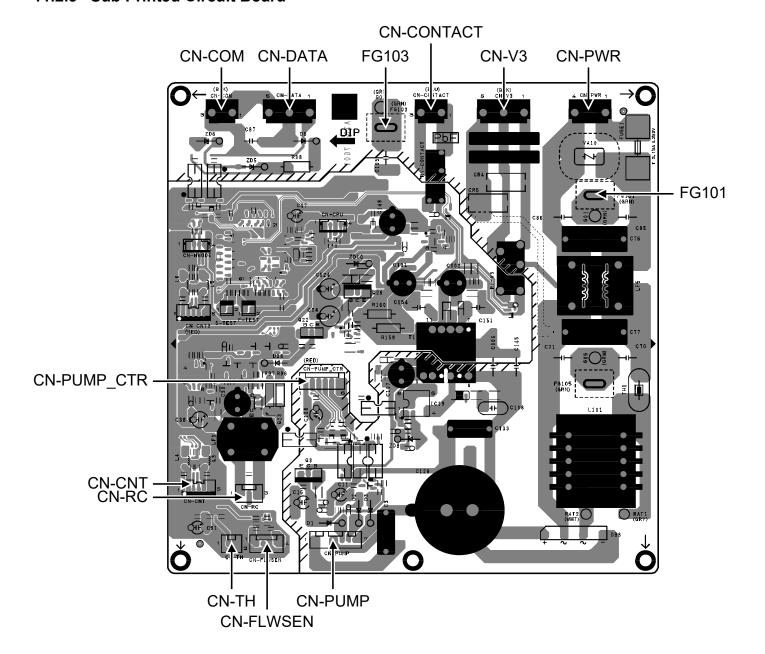

### 12. Installation Instruction

### **Attached Accessories**

No.	Accessory Parts	Qty.	No.	Accessory Parts	Qty.
1	Installation plate	1	4	Installation plate	1
2	Drain Elbow	1	5	Screw	3
3	Packing for drain	1	6	Network adaptor (CZ-TAW*)	1

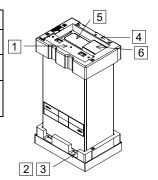

### **Optional Accessories**

No.	Accessory Parts	Qty.
7	Remote controller case (PAW-A2W-COV-KL)	1
8	Extension cable (CZ-TAW1-CBL)	1
9	Optional PCB (CZ-NS6P)	1
10	Remote controller (CZ-RTW2-1)*1	1
11	3 way valve kit (CZ-NV3)	1

<sup>\*1</sup> If you need a second remote controller, buy 10 and set it up as the secondary remote controller.

### **Field Supply Accessories (Optional)**

No.	Part		Model	Specification	Manufacturer
	2-way valve kit	Electromotoric Actuator	SFA21/18	AC230V, 12 VA	Siemens
!	*Cooling model	2-port Valve	VVI46/25	-	Siemens
ii	2 way yahya kit	Electromotoric Actuator	SFA21/18	AC230V, 12 VA	Siemens
"	3-way valve kit	3-port Valve	VXI46/25	-	Siemens
	De ave the average tot	Wired	PAW-A2W-RTWIRED	A C220V	
iii Room thermostat	Wireless	PAW-A2W-RTWIRELESS	AC230V	-	
iv	Mixing valve	-	13020800	AC 230V, 5 VA	ESBE
٧	Pump	-	Yonos Pico 1.0 25/1-8	AC 230V, 0.6 A max	Wilo
vi	Buffer tank sensor	-	PAW-A2W-TSBU	-	-
vii	Outdoor sensor	-	PAW-A2W-TSOD	-	-
viii	Zone water sensor	-	PAW-A2W-TSHC	-	-
ix	Zone room sensor	-	PAW-A2W-TSRT	-	-
Х	Solar sensor		PAW-A2W-TSSO		

■ It is recommended to select the field supply accessories in the table above.


### 12.1 Indoor Unit

### 12.1.1 Select the Best Location

Obtain customer's approval before deciding on the installation location.


- Ensure that there are no heat sources or vapours near the indoor unit.
- Good air ventilation in the room.
- A place where drainage can be easily done (e.g. a utility room).
- A place where the indoor unit's operation noise will not cause discomfort to users.
- A place where the indoor unit is far from doorways.
- Ensure a minimum distance from walls, ceilings, or other obstacles, as illustrated below.
- A place where flammable gas leaking might not occur.
- Recommended installation height for the indoor unit shall be at least 1150 mm.
- The indoor unit must be installed on a vertical wall.
- When installing electrical equipment in a wooden building with metal lath or wire lath, ensure that there is no electrical contact between the equipment and the building according to electrical facility technical standards. An insulator must be installed in between them.
- Do not install the indoor unit at outdoor. This is designed for indoor installation only.

### 12.1.1.1 Required Space for Installation

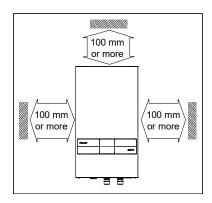


When installing a buffer tank

- a) When a buffer tank is connected to the water circuit, be sure to close the automatic air purge valve if it is installed on the top of the buffer tank.
- b) If it is not possible to keep it closed, make sure that the automatic air purge valve outlet can be vented to the outdoors through a tube.
- c) Or, the room in which the buffer tank is placed must be well ventilated. In the unlikely event that R290 refrigerant leaks into the water circuit, there is a risk of refrigerant leaking into the room.

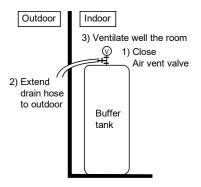

### 12.1.1.2 Installation Position

The mounting wall is strong and solid enough to prevent vibration.

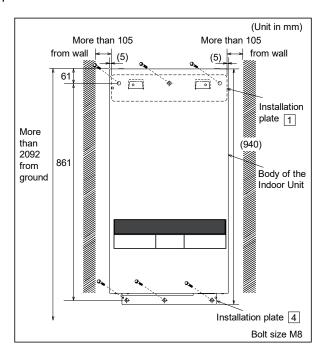

The edge of the installation plate 1 should be more than 105 mm from the wall on both right and left sides. The distance from the ground to the top of the unit should be more than 2092 mm to facilitate easier handling of the Remote controller.

- Always mount the installation plates horizontally by aligning the marking thread and using a level gauge.
- Mount the installation plates on the wall with 6 sets of M8 plugs, bolts, and washers (field supply).


## 12.1.2 To Drill a Hole in the Wall and Install a Piping Sleeve

- 1. Make a through hole. (Check pipe diameter and insulation thickness)
- 2. Insert the piping sleeve into the hole.
- 3. Fix the bushing to the sleeve.
- 4. Cut the sleeve until it extrudes about 15 mm from the wall.

### **CAUTION**

When installing in a wall with hollow space or gap within the wall structure, use the sleeve for the tubing assembly. This will protect the connection cable from damage by rodents and other pests.

5. Finish by sealing the sleeve with putty or caulking compound at the final stage.

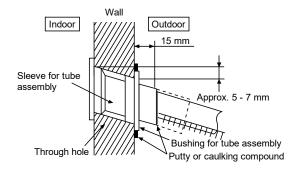

### 12.1.3 Indoor Unit Installation


### ♠ WARNING



This section is for authorized and licensed electricians or water system installers only. Work behind the front plate (secured by screws) must be carried out only under supervision of qualified contractors, installation engineers or service technicians.


### 12.1.3.1 Install the Indoor Unit

- 1. Engage the slots on the indoor unit to the hooks of the installation plate 1. Ensure the hooks are properly seated on the installation plate by moving it left and right.
- 2. Fix the screws 5 to the holes on the hooks of the installation plate 4, as illustrated below.

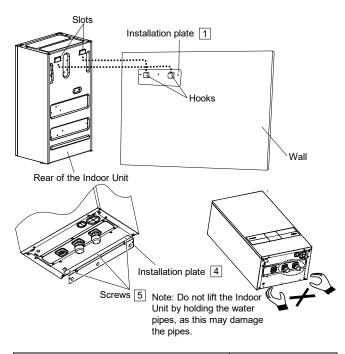

Screws 5 Tightening torque cN•m {kgf•cm} 147.1~245 {15~25}

### 12.1.3.2 Typical Piping Installation

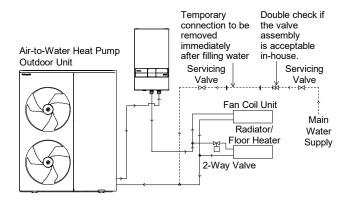


### 12.1.3.3 Water Piping Installation

- Please engage a licensed water circuit installer to install this water circuit.
- This water circuit must comply with relevant European and national regulations (including EN61770), and local building regulation codes.
- Ensure that the components installed in the water circuit can withstand water pressure during operation.
- Do not use worn-out tubes or detachable hose sets.
- Do not apply excessive force to pipes, as it may damage them.
- Choose a proper sealer which can withstand the pressures and temperatures of the system.
- Make sure to use two spanners to tighten the connection. Then, further tighten the nuts with a torque wrench to the specified torque as stated in the table.
- Cover the pipe end to prevent dirt and dust from entering when inserting it through a wall.
- If non-brass metallic piping is used for installation, ensure the pipes are insulated to prevent galvanic corrosion.
- Do not connect galvanised pipes, as this can cause galvanic corrosion.
- Use the correct nuts for all indoor unit tube connections and clean all tubes with tap water before installation. Refer to the Tube Position Diagram for details.

Tube connector	Nut size	Torque
a & b	RP 11/4"	117.6 N•m

\*Do not install automatic air purge valve on indoor water pipes. In the unlikely event that R290 refrigerant leaks into the water circuit, there is a risk of refrigerant leaking into the room.

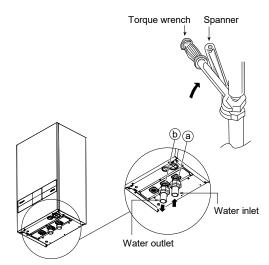

**⚠** CAUTION

O not over-tighten as this may cause water leakage.

- Ensure the water circuit pipes are insulated to prevent a reduction of heating capacity.
- After installation, check the water leakage condition in connection area during the test run.
- Failure to connect the tube appropriately might cause the indoor unit to malfunction.
- Protection from Frost:


  If the indoor unit is exposed to frost due to a power supply failure or pump operating failure, drain the system. When water remains idle inside the system, freezing is likely to occur, which could damage the system. Make sure the power supply is turned off before draining. Backup heater (8) may be damaged under dry heating.

### 12.1.3.3.1 Indoor Unit Pipework

- Failure to connect the tube appropriately might cause the indoor unit to malfunction.

## 12.1.3.4 Drain Elbow and Hose Installation

- Fix the drain elbow 2 and packing 3 to the bottom of the indoor unit, as shown in the illustration below.
- Use a 17 mm inner diameter drain hose available on the market.
- This hose must be installed in a continuously downward direction and in a frost-free environment.
- Guide this hose's outlet to the outdoors only.
- Do not insert this hose into sewage or drain pipes that may generate ammonia, sulfuric acid, or other harmful gases.
- If necessary, use a hose clamp to securely tighten the hose at the drain hose connector to prevent leakage.
- Water will drip from this hose; therefore, the outlet must be installed in an area where it cannot become blocked.
- If drain hose is in the room (where dew may form), increase the insulation by using POLY-E FOAM with a thickness of 6 mm or greater.

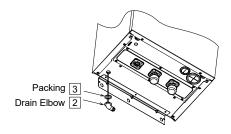

## 12.1.4 Connect the Cable to the Indoor


### WARNING

This section is for authorised and licensed electricians only. Work behind the control board cover (6) (secured by screws) must be carried out only under supervision of qualified contractors, installation engineers or service technicians.

#### 12.1.4.1 Access to Internal Components

Please follow the steps below to remove the front plate. Before removing the cabinet front plate of the indoor unit, always switch off all power supplies (e.g. indoor unit power supply, heater power supply).

- Remove the 2 mounting screws located at the bottom of the cabinet front plate.
- Gently pull the lower section of the cabinet front 2. plate towards you to detach it from the left and right hooks.
- 3. Hold the left and right edges of the cabinet front plate and lift it off the hooks.

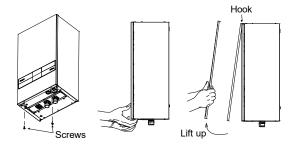

When closing the cabinet front plate (1), use the specified tightening torque below.


Screws Tightening torque cN•m {kgf•cm} 147.1~245 {15~25}

### 12.1.4.2 Open the Control Board Cover (6)

Please follow the steps below to open the control board cover.

Before opening the control board cover of the indoor unit, always switch off all power supplies (e.g. indoor unit power supply, heater power supply).

- Remove the 2 mounting screws from the control board cover.
- 2. Swing the control board cover towards the front.

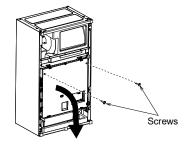

When closing the Control Board Cover (6), use the specified tightening torque below.

Screws Tightening torque cN•m {kgf•cm} 78.5~117.7 {8~12}

### CAUTION

Care must be taken when opening the control board cover 6 and control board (7) for unit installation and servicing, as it may cause injury.



### 12.1.4.3 Power Supply Cable and Connecting Cable Installation

1. Connect the power supply cable. The specifications for the power supply cable must be as follows:

Cable size: 5 × min 1.5 mm<sup>2</sup> (WH-SDC0316M9E8), 3 × min 1.5 mm<sup>2</sup> (WH-SDC0916M3E5), 3 × min 4.0 mm<sup>2</sup> (WH-SDC0916M6E5)

- Cable type: 60245 IEC 57 or heavier, with an approved polychloroprene sheath.
- The earth wire must be longer than the other

The specifications for the isolating device (disconnecting means) and RCD must be as follows:

The isolating device: 20A

(WH-SDC0316M9E8),

15/16A

(WH-SDC0916M3E5),

30A


(WH-SDC0916M6E5)

Recommended RCD: 30mA, 4P, type A

(WH-SDC0316M9E8), 30mA, 2P, type A (WH-SDC0916M3E5, WH-SDC0916M6E5)

- The isolating device must be connected to the power supply cable.
- The isolating device must have a contact gap of at least 3.0 mm.

The method of wiring a cable is shown below.

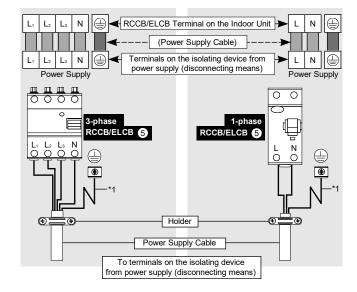


Terminals of RCCB/ELCB tightening torque cN•m {kgf•cm}	160~200 {16.3~20.4}
Holder tightening torque cN•m {kgf•cm}	70~130 {7.1~13.3}


- \*1 The earth wire should be longer than the other cables for safety reasons.
- Connect the ID-OD communication cable.
   The specifications for the ID-OD communication cable must be as follows:
  - Cable size: 2 × min 0.75 mm<sup>2</sup>
  - Cable type: 60245 IEC 57 or heavier, with a double-insulated approved polychloroprene sheath.

The method of wiring a cable is shown below.

\* Do not connect a 1-phase indoor unit to a 3-phase outdoor unit.

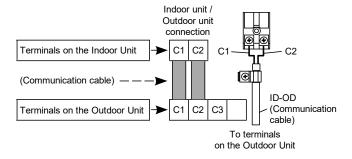

## 12.1.4.4 Wire Stripping and Connecting Requirements

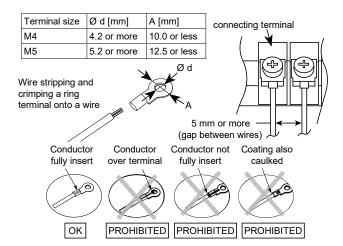

## 12.1.4.5 Connection Requirements For model WH-SDC0316M9E8, WH-SDC0916M3E5

- The equipment's power supply complies with IEC/EN 61000-3-2.
- The equipment's power supply complies with IEC/EN 61000-3-3 and can be connected to the current supply network.

### For model WH-SDC0916M6E5

- The equipment's power supply complies with IEC/EN 61000-3-12.
- The equipment's power supply complies with IEC/EN 61000-3-3 and can be connected to the current supply network.

## 12.1.5 Connect to External Devices (Optional)

### ♠ WARNING

This section is for authorized and licensed electricians only. Work behind the control board cover (a) (secured by screws) must be carried out only under the supervision of a qualified contractor, installation engineer, or service technician.

### 12.1.5.1 Cable Specifications


- All connections must comply with local national wiring standards.
- It is strongly recommended to use parts and accessories recommended by the manufacturer for installation.
- For connection to Main PCB 4.
- The two-way valve must be of the spring and electronic type.

Refer to the "Field Supply Accessories" table for details. The valve cable must be (3 × min 1.5 mm²), and of type designation 60245 IEC 57 or heavier.

- \*Note: The two-way valve must be a CE-marked component.
  - The maximum load for the valve is 12 VA.
- 2. The three-way valve must be of the spring and electronic type. The valve cable must be (3 × min 1.5 mm²), and of type designation 60245 IEC 57 or heavier.
  - \*Note: The three-way valve must be a CE-marked component.
    - The three-way valve must be directed towards the room by default.
    - The maximum load for the valve is 12 VA.
- The room thermostat 1 cable must be (4 or 3 × min 0.5 mm²), and of type designation 60245 IEC 57 or heavier.
- 4. The extra pump cable must be (2 × min 1.5 mm<sup>2</sup>), and of type designation 60245 IEC 57 or heavier.
- 5. The boiler contact cable/defrost signal cable must be (2 × min 0.5 mm²), and of type designation 60245 IEC 57 or heavier.
- 6. The external control must be connected to a 1-pole switch with a minimum 3.0 mm contact gap. Its cable must be (2 × min 0.5 mm²), and of type designation 60245 IEC 57 or heavier.
  - \*Note: The switch used must be a CE-compliant component.
    - The maximum operating current must be less than 3  $A_{\text{rms}}$ .
- The room temperature zone 1 cable must be (2 × min 0.3 mm²), double insulation layer (with an insulation strength of minimum 30 V).
- 8. The outdoor air sensor cable must be (2 × min 0.3 mm²), double insulation layer (with an insulation strength of minimum 30 V).
- 9. The buffer tank sensor cable must be (2 × min 0.3 mm²), double insulation layer (with an insulation strength of minimum 30 V).

10. The tank sensor must be of the resistance type. Refer to the graph below for the sensor's characteristics and details. Its cable must be (2 × min 0.3 mm²), double insulation layer (with an insulation strength of minimum 30 V) of either PVC-sheathed or rubber-sheathed.


Tank Sensor Resistance Vs Temperature

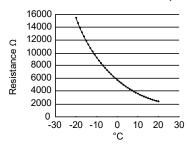

Tank sensor characteristic

- 11. The maximum output power of the booster heater must be ≤ 3 kW. The booster heater cable must be (3 × min 1.5 mm²), and of type designation 60245 IEC 57 or heavier.
- 12. The OLP for the booster heater cable must be (2 × min 0.5 mm<sup>2</sup>), and of type designation 60245 IEC 57 or heavier.

Please wire according to the diagram below, following the solid or dotted lines. Solid lines are the priority; dotted lines can be used in combination.

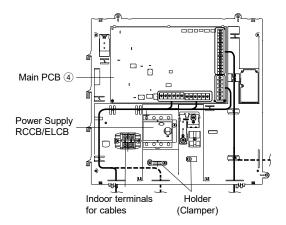

Guidelines for Connecting Optional Cables and Power Supply Cord (view without internal wiring)

Optional Cables: · OLP for booster heater cable Buffer tank sensor cable Tank sensor cable · External control cable · Room temperature zone 1 Outdoor air sensor cable Remote controller cable Optional Cables: 2-way valve cable 3-way valve cable · Room thermostat 1 cable Extra pump cable Power Supply cable · Boiler contact cable/Defrost signal Indoor unit/Outdoor unit

For connection to Optional PCB 9.

cable

Booster Heater cable


By connecting the Optional PCB, 2-zone temperature control can be achieved. Connect the mixing valves, water pumps, and thermistors for Zone 1 and Zone 2 to the corresponding terminals on the Optional PCB.

Temperature of each zone can be controlled.

connecting cable

Temperature of each zone can be controlled independently using the remote controller.

- The water pump cables for zone 1 and zone 2 must be (2 × min 1.5 mm²), and of type designation 60245 IEC 57 or heavier.
- The solar water pump cable must be (2 × min 1.5 mm²), and of type designation 60245 IEC 57 or heavier
- The pool water pump cable must be (2 × min 1.5 mm²), and of type designation 60245 IEC 57 or heavier.
- The room thermostat 2 cable must be (4 or 3 × min 0.5 mm²), and of type designation 60245 IEC 57 or heavier.
- 5. The cables for mixing valves 1 and 2 must be (3 × min 1.5 mm<sup>2</sup>), and of type designation 60245 IEC 57 or heavier.
- 6. The room temperature zone 2 cable must be (2 × min 0.3 mm²), double insulation layer (with an insulation strength of minimum 30 V).
- 7. The pool temperature sensor and the solar temperature sensor cable must be (2 × min 0.3 mm²), double insulation layer (with an insulation strength of minimum 30 V).
- 8. The water temperature cables for zone 1 and zone 2 must be (2 × min 0.3 mm<sup>2</sup>), double insulation layer (with an insulation strength of minimum 30 V).
- 9. The demand signal cable must be (2 × min 0.3 mm²), double insulation layer (with an insulation strength of minimum 30 V).
- 10. The SG signal cable must be (3 × min 0.3 mm<sup>2</sup>), double insulation layer (with an insulation strength of minimum 30 V).
- 11. The heat/cool switch cable must be (2 × min 0.3 mm²), double insulation layer (with an insulation strength of minimum 30 V).
- 12. The external compressor switch cable must be (2 × min 0.3 mm²), double insulation layer (with an insulation strength of minimum 30 V).

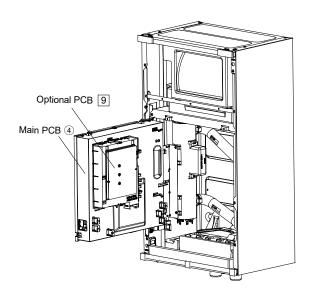


\* For guidance on routing the lead wires between the Optional PCB 9 and the Main PCB 4, please refer to the "Optional PCB (CZ-NS6P)" manual.

## 12.1.5.2 Guide Optional and Power Supply Cables to Bushings

### ⚠ CAUTION

Wires must be routed away from hot surfaces to prevent cable insulation damage and the risk of electric shock.

Wire pathways must be smooth and free from sharp edges to prevent cable insulation damage and the risk of electric shock.

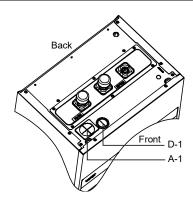

- A-1 bushing is used for:
- Indoor unit/Outdoor unit connecting cable
- Water pump zone 1 cable
- Water pump zone 2 cable
- Solar water pump cable
- External control cable
- Outdoor air sensor cable
- Remote controller cable
- Room temperature zone 1 cable
- Room temperature zone 2 cable
- Room thermostat 1 cable
- Room thermostat 2 cable
- Mixing valve 1 cable
- Mixing valve 2 cable
- Booster heater cable
- OLP for booster heater cable
- Buffer tank sensor cable
- Tank sensor cable
- Pool water pump cable


- Pool temperature sensor cable
- 2-way valve cable
- 3-way valve cable
- Extra pump cable
- Boiler contact cable/Defrost signal cable
- Water temperature zone 1 cable
- Water temperature zone 2 cable
- Demand signal cable
- Solar temperature sensor cable
- SG signal cable
- Heat/Cool switch cable
- External compressor switch cable
- D-1 bushing is used for the following:
- Power supply cable
- Ensure that all sensor cables do not come into contact with the front panel.
- Once all wiring is complete, secure the cables with a banding strap (field supply) to prevent them from touching hot surfaces, such as the heater assembly.

### 12.1.5.3 Cable Length for Connections

When connecting cables between the indoor unit and external devices, the cable length must not exceed the maximum lengths specified in the table.

External device	Maximum cable length (m)
2-way valve	50
3-way valve	50
Mixing valve	50
Room Thermostat	50
Extra pump	50
Solar water pump	50
Pool water pump	50
Zone water pump	50
Boiler contact/Defrost signal	50
External control	50
Booster heater	50
OLP for booster heater	30
Zone room temperature sensor	30
Outdoor air sensor	30
Buffer tank sensor	30
Pool temperature sensor	30
Solar temperature sensor	30
Zone water temperature sensor	30
Tank sensor	30
Demand signal	50
SG signal	50
Heat/Cool switch	50
External compressor switch	50

### 12.1.5.4 Main PCB Connections

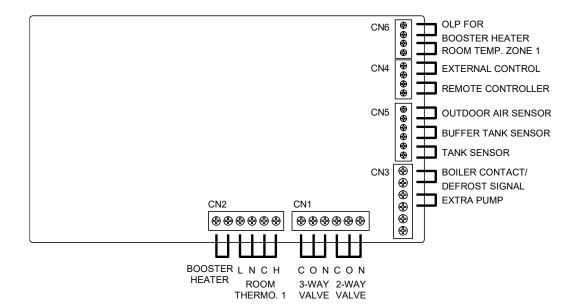

### ■ Signal Inputs

Room Thermostat L N=AC230V, Heat, Cool=Thermostat heat, Cool terminal	
External control	Dry contact: Open=not operating, Short=operating (system setup required) Operation can be switched on and off by an external switch.
Remote controller	Already connected (Use a 2-core wire for relocation and extension. The total length of the cable must be 50m or less.)


### Outputs

3-way valve	AC230V N=Neutral Open, Close=direction (for switching the circuit when connecting a DHW tank)	AC230V, 12 VA
2-way valve	AC230V N=Neutral Open, Close (prevent water circuit pass in Cool mode)	AC230V, 12 VA
Extra pump	AC230V (for use when the pump capacity of the indoor unit is insufficient).	AC230V, 0.6 A max.
Boiler contact/ Defrost signal	Dry contact (System setup required)	

### ■ Thermistor Inputs

Zone room sensor	PAW-A2W-TSRT
Outdoor ambient sensor	PAW-A2W-TSOD (Total cable length: 30 m or less)

### 12.1.5.5 Optional PCB (CZ-NS6P) Connections

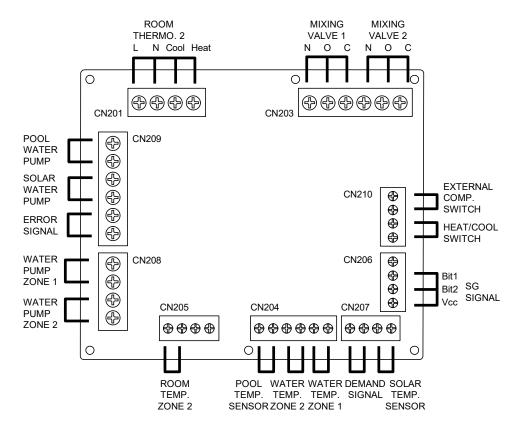

### ■ Signal Inputs

Room Thermostat	L N=AC230V, Heat, Cool=Thermostat Heat/Cool terminals
SG signal	Dry contact: Vcc-Bit1, Vcc-Bit2 Open/short (system setup required) Switching SW (connect to 2-contact controller).
Heat/Cool switch	Dry contact: Open=Heat, Short=Cool (system setup required)
External compressor switch	Dry contact: Open=Comp. OFF, Short=Comp. ON (System setup required).
Demand signal	DC 0-10 V (System setup required). Connect to a controller with DC 0-10 V.

### Outputs

Mixing valve	AC230V N=Neutral Open, Close=Mixed Direction Operating time: 30 s to 120 s	AC230V, 6 VA
Pool water pump	AC230V	AC230V, 0.6 A max.
Solar water pump	AC230V	AC230V, 0.6 A max.
Zone water pump	AC230V	AC230V, 0.6 A max.


### ■ Thermistor Inputs

Zone room sensor	PAW-A2W-TSRT
Buffer tank sensor	PAW-A2W-TSBU
Pool water sensor	PAW-A2W-TSHC
Zone water sensor	PAW-A2W-TSHC
Solar sensor	PAW-A2W-TSSO

## 12.1.5.6 Recommended External Device Specifications


This section describes the external devices (optional) recommended by Panasonic. Always use the correct external devices when installing the system.

- Optional sensor
- Buffer tank sensor: PAW-A2W-TSBU
   Use to measure the buffer tank temperature.
   Insert the sensor into the sensor pocket and affix it to the surface of the buffer tank.

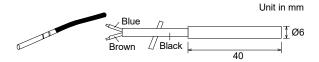


Zone water sensor: PAW-A2W-TSHC
 Use to detect water temperature of the control zone.

Attach the sensor to water pipework using stainless steel metal straps and contact paste (both are included).

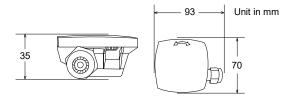


Outdoor ambient sensor: PAW-A2W-TSOD
 If the outdoor unit is installed in direct sunlight, the outdoor air temperature sensor may not accurately measure the actual outdoor temperature.


In this case, the outdoor temperature can be measured more accurately by installing the optional outdoor temperature sensor in an appropriate location.

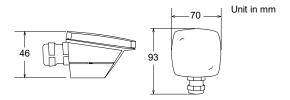

4. Zone room sensor: PAW-A2W-TSRT Install the room temperature sensor in the room where room temperature control is required.

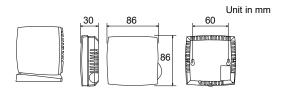

5. Solar sensor: PAW-A2W-TSSO
Use to measure the temperature of solar panel.
Insert the sensor into the sensor pocket and secure it to the surface of the solar panel.

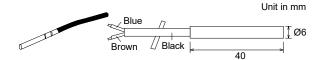

Refer to the table below for the characteristic of the sensors (No. 1 to 5).

Temperature (°C)	Resistance value (kΩ)	
30	5.326	
25	6.523	
20	8.044	
15	9.980	
10	12.443	
5	15.604	
0	19.70	
-5	25.05	
-10	32.10	
-15	41.45	
-20	53.92	
-25	70.53	
-30	93.05	
-35	124.24	
-40	167.82	

Temperature (°C)	Resistance value (kΩ)	
150	0.147	
140	0.186	
130	0.236	
120	0.302	
110	0.390	
100	0.511	
90	0.686	
80	0.932	
70	1.279	
65	1.504	
60	1.777	
55	2.106	
50	2.508	
45	3.003	
40	3.615	
35	4.375	

 Optional pump Power supply: AC230V/50 Hz, <500 W Recommended part: Yonos PICO 1.0 25/1-8: Made by Wilo



Optional mixing valve


Power supply: AC230V/50 Hz (Input open/Output

close)

Operating time: 120 seconds.

Recommended part: 13020800: Made by ESBE



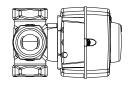


### MARNING ♦


This section is for authorized and licensed electricians or water system installers only. Work behind the front plate (secured by screws) must be carried out only under supervision of qualified contractors, installation engineers or service technicians.

### 12.1.5.7 Network Adaptor 6 Installation


1. Insert a flathead screwdriver into the slot on top of the adaptor and remove the cover.

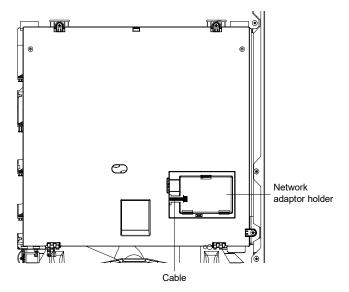

2. Connect the cable coming from the left side of the network adaptor holder to the connector inside the adaptor.

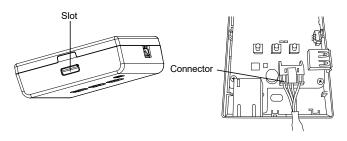

3. Pull the CN-CNT cable through the hole in the bottom of the adaptor and reattach the front cover to the back cover.

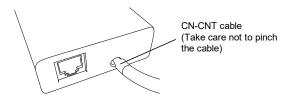


4. Fix the network adaptor 6 to the network adaptor holder.

Guide the cable as shown in the diagram to ensure that external forces do not affect the connector in the adaptor.

## 12.1.5.8 Connection of M-Bus or Modbus, etc.

When connecting devices such as Panasonic A2W-compatible M-Bus or Modbus, etc.


 It will be necessary to adjust the connection position of the CZ-TAW\* on the Main PCB.

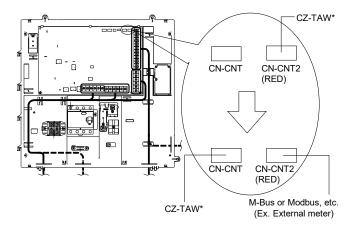

- Replace the lead wire connector of CZ-TAW\* from CN-CNT2 with CN-CNT.
- 2. Insert the M-Bus or Modbus, etc. lead wire connector into CN-CNT2.

When connecting Panasonic A2W Optional PCB to devices such as M-Bus or Modbus, etc.


 It will be necessary to adjust the connection position of the CZ-TAW\* on the Main PCB.

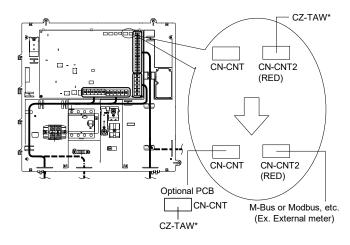

- Insert the Optional PCB lead wire connector into CN-CNT.
- 2. Replace the lead wire connector of CZ-TAW\* from CN-CNT2 with CN-CNT on Optional PCB.
- 3. Insert the M-Bus or Modbus, etc. lead wire connector into CN-CNT2.

### 12.1.6 Charge the Water

- Make sure all the piping installations are properly done before carrying out the steps below.
- 1. Start filling water into the space heating/cooling circuit through the tube connector (2) on the outdoor unit, using a pressure of more than 1 bar (0.1 MPa).
- 2. If water flows through the drain pipe of the pressure relief valve, stop filling water and check the Outdoor Unit.
- 3. Turn ON the indoor unit.
- Remote control menu → Installer setup → Service setup → Pump maximum speed → Turn ON the pump.
- 5. Ensure that the water pump is working.
- 6. Check to ensure there is no water leakage at the tube connecting points.

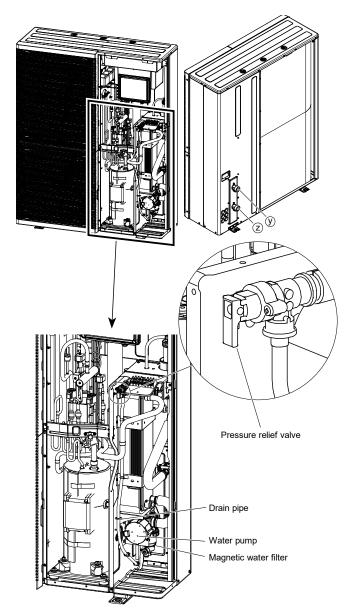


### 12.1.7 Reconfirmation

### 12.1.7.1 Check Water Pressure

\*(0.50 bar = 0.05 MPa)

Water pressure should not be lower than 0.5 bar (check the water pressure using the remote controller). If necessary, fill the space heating/cooling pipes with water through the tube connector (2) on the outdoor unit.

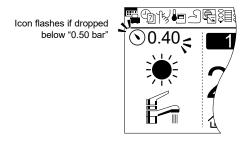


### 12.1.7.1.1 Special Installation Patterns

Special installation patterns mentioned here apply when there is a significant elevation difference (e.g. more than 10 m) between the outdoor unit and the panel/floor heater (or indoor unit).


In this case, special attention is required, as incorrect water filling during installation can prevent the system from operating correctly and may lead to water leaks.

① When the Outdoor Unit is located below and the heating terminal is 30 m above it:

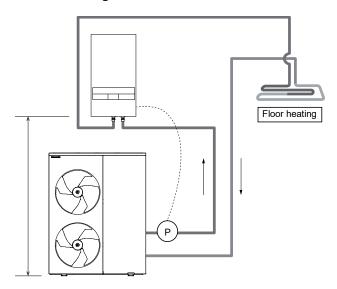

- Pressure checked by the remote controller:
   3.5~4 bar at an elevation difference of 30 m.
- When installing an extra pump, connect it to the water outlet of the outdoor unit.
   (If installed at the water inlet, the safety valve will activate and drain the water.)

2) When the outdoor unit is located above and the heating terminal is 30 m below it:

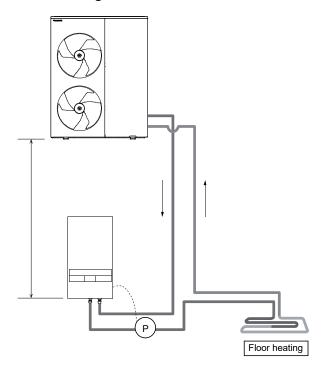


- Pressure checked by the remote controller: 0.5~1.0 bar at an elevation difference of 30 m.
- When installing an extra pump, connect it to the water outlet from the indoor unit to the outdoor unit.
- An extra pump is required to be installed on the indoor unit.

Elevation Difference Between Outdoor and Indoor Units		Outdoor Unit Water Pressure
Outdoor unit positioned above the indoor unit	Up to 30 m	0.5~1.0 bar
	Up to 20 m	1.0~2.0 bar
	Up to 10 m	1.0~3.0 bar
Outdoor unit positioned below the indoor unit	Up to 10 m	1.5~4.0 bar
	Up to 20 m	2.5~4.0 bar
	Up to 30 m	3.5~4.0 bar

## 12.1.7.2 Check the Pressure Relief

\*The pressure relief valve is located on the outdoor unit.

- Pull the lever horizontally and verify that the pressure relief valve is functioning correctly.
- Release the lever when water begins to flow from the drain pipe of the pressure relief valve. If air continues to come out of the drain pipe, keep raising the lever until all the air is fully discharged.
- 3. Verify that the water flow from the drain pipe has stopped.
- 4. If water is leaking, pull the lever several times and then return it to ensure that the leak stops.
- 5. If water continues to flow from the drain, drain the water from the system. Turn OFF the system and contact your local authorized dealer.

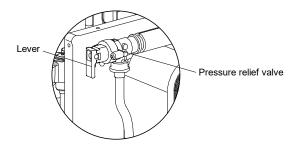

### 12.1.7.3 Check for Air Accumulation

- Open the air vent plugs on the heating panel, fan convector, etc., to release any accumulated air from the equipment and piping.
- If the outdoor unit and indoor unit are installed on different floors, open the air vent plug on the water plug of the outdoor unit and the air vent plug on the heater bottle inside the indoor unit to release any trapped air (note that water will also come out).

## 12.1.7.4 Expansion Vessel (10) Pre-Pressure Check

### 12.1.7.4.1 For Space Heating/Cooling

- The indoor unit is equipped with a 12-liter expansion vessel, which has an initial pressure of 1 bar.
- The total volume of water in the system should not exceed 200 L.
- If the total water volume exceeds 200 L, add an additional expansion vessel (Field supply).
- The installed height difference in the water circuit of the system should not exceed 30 m. (Otherwise, an extra pump may be required).
   \*However, in case of 30 m, set the pressure in the circulation circuit to 0.5~1.0 bar.
   Setting it higher than 1.0 bar may cause water leakage due to component damage.

### 12.1.7.5 Check the RCCB/ELCB

Ensure that the RCCB/ELCB is in the "ON" position before performing any checks.

Turn ON the indoor unit.

This test can only be conducted when power is supplied to the indoor unit.

### ♠ WARNING

When power is supplied to the indoor unit, avoid touching any parts other than the RCCB/ELCB test button to prevent an electric shock. Before accessing the terminals, all supply circuits must be disconnected.

Press the TEST button on the RCCB/ELCB. The lever would turn down if it is functioning correctly.

- If the RCCB/ELCB malfunctions, contact an authorized dealer.
- Turn OFF the indoor unit.
- If the RCCB/ELCB operates correctly, set the lever to 'ON' again after the test.


## 12.1.8 Installation when Remote Controller is Used as a Room Thermostat

• The remote controller ③ mounted to the indoor unit can be moved to the room and used as a room thermostat.

### 12.1.8.1 Installation Location

- Install it at a height of 1 to 1.5 m above the floor, where it can accurately detect the average room temperature.
- Install it vertically against the wall.
- Avoid the following locations for installation.
  - 1. By the window, etc. where it is exposed to direct sunlight or direct air.
  - 2. In shaded areas or behind objects that are away from the room's airflow.
  - Location where condensation occurs (the remote controller is not moisture-proof or drip-proof).
  - 4. Areas near heat sources.
  - 5. Uneven surfaces.
- Keep the remote controller at least 1 m away from TVs, radios, and PCs to avoid interference that may cause image distortion or noise.


### 12.1.8.2 Wiring the Remote Controller

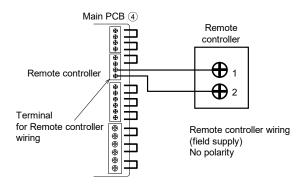


- The remote controller cable must be (2 × min 0.3 mm²), double insulation layer (with an insulation strength of minimum 30 V). The total cable length must be 50 m or less.
- Ensure that cables are not connected to other terminals on the indoor unit (e.g. power supply wiring terminals), as this may cause malfunctions.
- Do not bundle the remote controller cable with the power source wiring or store in the same metal conduit, as this may cause operational errors.
- When using a second remote controller (optional), connect it to the terminal of the indoor unit and secure it tightly.

## 12.1.8.3 Remove the Remote Controller from the Indoor Unit


1. Remove both the left decoration panel ① and the right decoration panel ② from the front plate ① by gently pressing from behind.

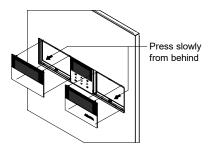


2. Remove the 4 screws and take out the holder along with the remote controller (3).

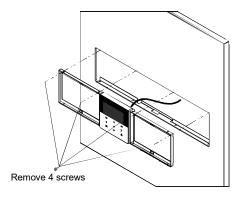

3. Remove the body from the base.

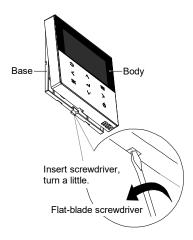


4. Remove the wiring between the remote controller 3 and the indoor unit terminal.

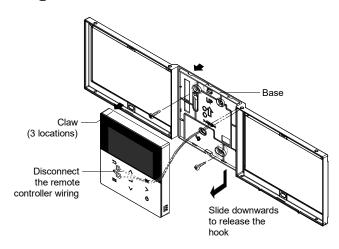

## 12.1.8.4 Mounting the Remote Controller


For exposure type

**Preparation:** Make 2 holes for the screws using a screwdriver.

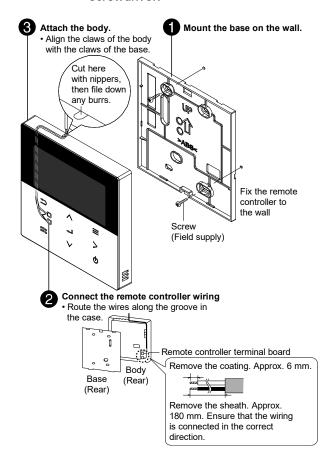


### For embedded type

**Preparation:** Make 2 holes for the screws using a screwdriver.

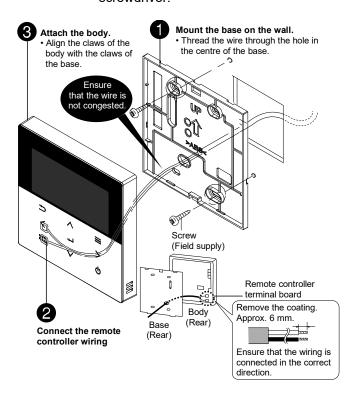

## 12.1.8.5 Replace the Remote Controller Cover

- To plug the hole after removing the remote controller, fit a remote controller case 7 in place of the removed remote controller:
  - Refer Section "Remove the remote controller from the indoor unit" for removing the remote controller.
  - 2. Remove the body from the base of the remote controller case 7.

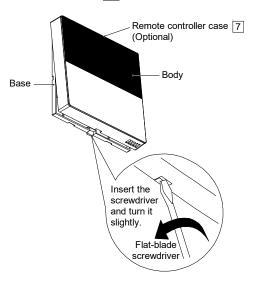

3. Reverse steps 1-4 in the section "Remove the Remote Controller from the Indoor Unit" to secure the remote controller case 7 to the indoor unit.

### 12.1.9 Test Run

- Before the test run, ensure that the following items are checked:
  - a) Pipework is properly installed.
  - Electrical cable connections are correctly made.
  - c) The indoor unit is filled with water and all trapped air is released.
  - d) Turn ON the power supply after the indoor unit is completely filled.
- Switch ON the power supply of the indoor unit. Set the indoor unit RCCB/ELCB (5) to the "ON" position. Then, please refer to the Operation Instruction for using the remote controller (3).

### Note

During winter, turn ON the power supply and allow the unit to stand by for at least 15 minutes before conducting a test run. This will give the refrigerant sufficient time to warm up and help prevent incorrect error code readings.

- 3. For normal operation, the water pressure should be between 0.5 bar and 4 bar (0.05 MPa and 0.4 MPa). If the pressure is outside this range, adjust the water pump speed to achieve the correct pressure. If adjusting the speed of the water pump does not resolve the issue, contact a local authorized dealer.
- 4. After the test run, clean the magnetic water filter set according to the "Maintenance for Magnetic Water Filter" section in the Installation Manual of the AIR-TO-WATER HEATPUMP OUTDOOR UNIT. Reinstall the filter after cleaning.

## 12.1.9.1 Check Water Flow of Water Circuit

Ensure that the air purge operation is carried out to remove air from the pipes.

Select Installer setup  $\rightarrow$  Service setup  $\rightarrow$  Pump maximum speed  $\rightarrow$  Air purge.

Confirm that the maximum water flow during main pump operation is not less than 25 l/min.

- Water flow can be check in the Service setup (Pump maximum speed)
  - [Heating operation at low water temperature with lower water flow may trigger an "H75" code during the defrost process.]
- \* If there is no water flow or if "H62" is displayed, stop the pump operation and release the air (refer to "CHECK AIR ACCUMULATION").

### 12.1.9.2 Reset Overload Protector (9)

Overload protector (9) is a safety device designed to prevent water overheating. If the overload protector (9) is activated, reset it using the following procedure:

- 1. Remove the cover.
- 2. Reset the overload protector (9) by gently pressing the central button with a test pen.
- 3. Re-secure the cover as it was before.




### 12.1.10 Maintenance

- To ensure the safety and optimal performance of the indoor unit, seasonal inspections of the indoor unit and functional checks of the RCCB/ELCB, field wiring and pipes should be carried out on a regular basis. This maintenance and scheduled inspection should be carried out by an authorized dealer.
- Regular maintenance of the expansion vessel (at least once a year) is recommended and should be performed by an authorized dealer. First, make sure that the expansion or pressure tank is completely drained of water, that the system is switched off, and that there are no live electrical components. If you need to reset the preload pressure, set it to 1 bar.

## 12.1.10.1 How to Access the Expansion Vessel

Take out the front plate.

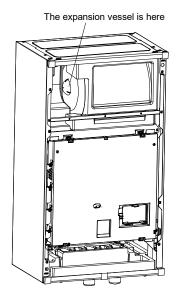

### 12.2 Appendix


### 12.2.1 Variation of System

This section introduces various systems that use Air-to-Water Heat Pumps and describes the actual setting methods. For this model, the Zone 1 external room thermistor and Zone 1 external room thermostat must be always connected to the Main PCB 4.

### 12.2.1.1 Introduce Applications Related to Temperature Setting

### 12.2.1.1.1 Temperature Setting Variation for Heating

### 1. Remote controller

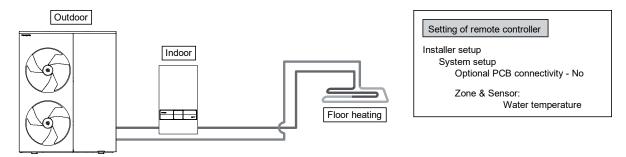


On the way to floor heating / radiators, outdoor unit connect them via indoor unit.

On the way back from floor heating / radiators, outdoor unit connect them directly.

The remote controller is located on the indoor unit.

This is the basic form of the simplest system.

### 2. Room Thermostat

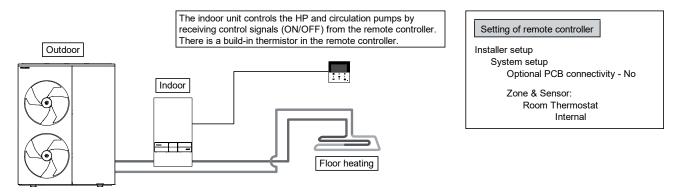


On the way to floor heating / radiators, outdoor unit connect them via indoor unit.

On the way back from floor heating / radiators, outdoor unit connect them directly.

Remove the remote controller from the indoor unit and install it in the room where the floor heating is installed.

This is an application that uses remote controller as Room Thermostat.

### 3. External Room Thermostat

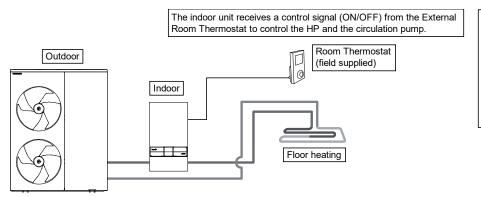

Setting of remote controller

Installer setup
System setup
Optional PCB connectivity - No
Zone & Sensor:
Room Thermostat
(External)

On the way to floor heating / radiators, outdoor unit connect them via indoor unit.


On the way back from floor heating / radiators, outdoor unit connect them directly.

The remote controller is located on the indoor unit.

Install separate External Room Thermostat (field supply) in the room where floor heating is installed.

This is an application that uses External Room Thermostat.

### 4. Room Thermistor

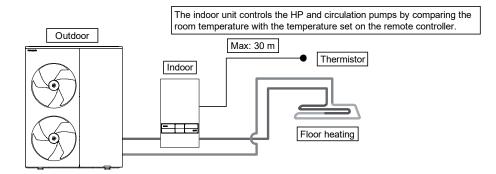

Setting of remote controller

Installer setup
System setup
Optional PCB connectivity - No
Zone & Sensor:
Room thermistor

On the way to floor heating / radiators, outdoor unit connect them via indoor unit.

On the way back from floor heating / radiators, outdoor unit connect them directly.

The remote controller is located on the indoor unit.

An external room thermistor (specified by Panasonic) is installed in the room where the floor heating is installed. This is an application that uses an external room thermistor.

There are two ways of setting the circulating water temperature.

Direct: Sets the circulating water temperature directly (fixed value).


Correction curve: sets the circulating water temperature according to the outside temperature.

In case of Room thermistor, the compensation curve is shifted according to the thermo ON/OFF situation.

(Example) If room temperature increasing speed is;
 If very slow → Shift the compensation curve upwards
 If very fast → Shift compensation curve downwards

### 12.2.1.1.2 Examples of Installations

Floor heating 1 + Floor heating 2

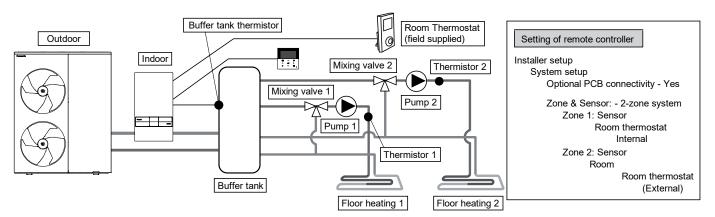

Connect Floor heating to the 2 circuits via buffer tank as shown in the figure.

Install mixing valves, pumps and thermistors (specified by Panasonic) on both circuits.

Remove the remote controller from the indoor unit and attach it to either circuit to use as a Room Thermostat. Install an external Room Thermostat (field-supply) on a another circuit.


Both circuits can set the circulating water temperature independently.

Install the buffer tank thermistor on the buffer tank.

The buffer tank connection settings and the  $\Delta T$  temperature settings for heating operation are required separately. This system requires an Optional PCB (CZ-NS6P).

Note: Buffer tank thermistor must be connected to Main PCB 4 only.

### Floor heating + Radiator

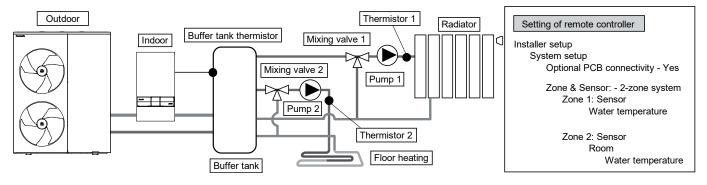

Connect Floor heating and radiators to the 2 circuits via buffer tank, as shown in the figure. Install pumps and thermistors (specified by Panasonic) on both circuits.

Install a mixing valve in the circuit with lower temperature among the 2 circuits. (Generally, where floor heating and radiator circuits are installed in 2 zones, install mixing valve in the floor heating circuit.)


The remote controller is located on the indoor unit.

The temperature setting selects the circulating water temperature for both circuits. Both circuits can set the circulating water temperature independently.

Install the buffer tank thermistor on the buffer tank. The buffer tank connection settings and the  $\Delta T$  temperature settings for heating operation are required separately.

This system requires the Optional PCB (CZ-NS6P). Note that if there is no mixing valve on the secondary side, the circulating water temperature may be higher than the set temperature.

Note: Buffer tank thermistor must be connected to Main PCB (4) only.

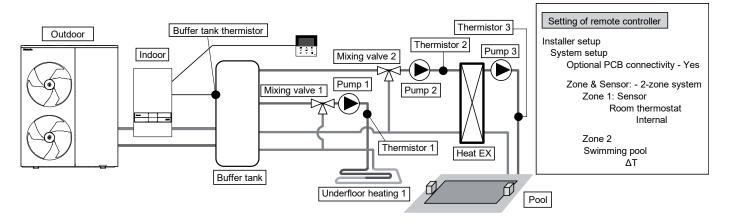

Connect floor heating and swimming pool to the 2 circuits via buffer tank, as shown in the figure.

Install mixing valves, pumps and thermistors (specified by Panasonic) on both circuits.

Additional pool heat exchanger, pool pumps and pool sensor are then installed in the pool circuit.

Remove the remote controller from the indoor unit and install it in the room where the floor heating is installed. Floor heating and pool circulation water temperatures can be set separately.

Install buffer tank thermistor on the buffer tank.


The buffer tank connection settings and the  $\Delta T$  temperature settings for heating operation are required separately. This system requires the Optional PCB (CZ-NS6P).

※ Be sure to connect the pool to "Zone 2".

When connected to a swimming pool, operating in 'Cool' will stop the pool operation.

Note: Buffer tank thermistor must be connected to Main PCB 4 only.

### Swimming pool only

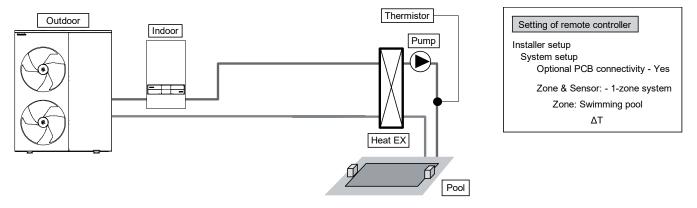

This is an application that connect to the swimming pool only.

On the way to the swimming pool, outdoor unit connect them via indoor unit.

On the way back from the swimming pool, outdoor unit connect them directly without using a buffer tank.


Install a pool pump and pool thermistor (specified by Panasonic) at the secondary side of the pool heat exchanger.


The pool temperature can be set with a remote controller.

This system requires the Optional PCB (CZ-NS6P).

The cooling mode cannot be selected for this application. (Not displayed on the remote controller).

### Simple 2 zone (Floor heating + Radiators)

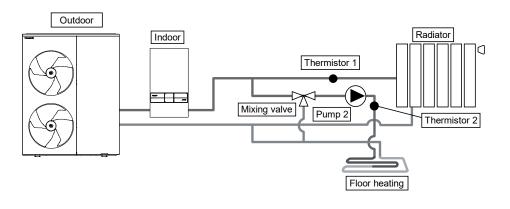

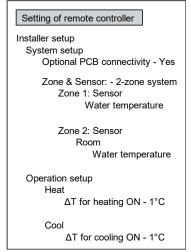

This is an example of simple 2 zone control without buffer tank.

The built-in pump in the Outdoor unit acts as the pump for zone 1.

Install mixing valve, pump and thermistor (specified by Panasonic) at zone 2 circuit.

The temperature in Zone 1 is not adjustable, so always assign the hot side to Zone 1.

To display the temperature of zone 1 on the remote controller, zone 1 thermistor is required.

The circulating water temperature for both circuits can be set independently.

(However, the temperature of high temperature side and low temperature side cannot be reversed.)

This system requires the Optional PCB (CZ-NS6P).


### Note:

- Thermistor 1 has no direct influence on the operation. However, if thermistor 1 is not installed, an error will occur.
- Adjust the flow rate so that zone 1 and zone 2 are balanced. If not correctly adjusted, performance may be affected.

(If the pump flow rate in zone 2 is too high, hot water may not flow to zone 1)

The flow rate can be checked from "Actuator Check" under maintenance menu.

### Buffer tank connection

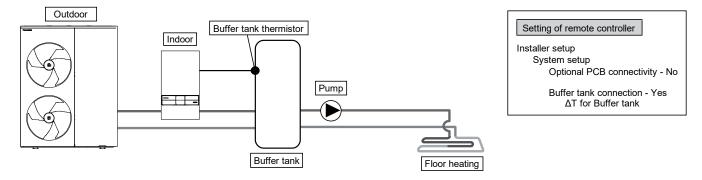


This is an application that connects the Buffer tank unit to the indoor unit.

The temperature of the buffer tank is detected by a buffer tank thermistor (specified by Panasonic).

If Optional PCB is not connected, external pump can be used for circulation in the floor heating circuit.

Note: Buffer tank thermistor must be connected to Main PCB (4) only.

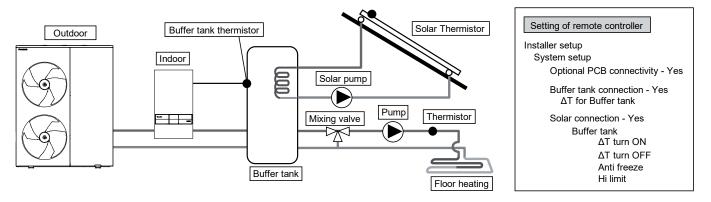

This is an application that connect the buffer tank unit to the indoor unit and then to the solar water heater to heat the Buffer tank.

The temperature of the buffer tank is detected by a buffer tank thermistor (specified by Panasonic).

The temperature of the solar panel is detected by a solar thermistor (specified by Panasonic).

Buffer tanks are stand-alone tanks with built-in solar heat exchange coils.


During winter season, solar pump for circuit protection will be activated continuously. If does not want to activate the solar pump operation, please use glycol and set the anti-freezing operation start temperature to -20°C.

Heat accumulation operates automatically by comparing the temperature of tank thermistor and solar thermistor.

This system requires the Optional PCB (CZ-NS6P).

Note: Buffer tank thermistor must be connected to Main PCB (4) only.

### **Boiler connection**

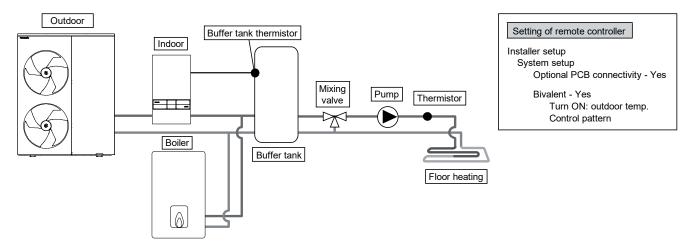

This is an application that connects the boiler to the indoor unit, to compensate for insufficient capacity by operate boiler when outdoor temperature drops & heat pump capacity is insufficient.

Boiler is connected parallel with heat pump and used as heating circuit.

The boiler output can be controlled either by SG-ready input from a board (sold separately) or by automatic control via three mode selection patterns.

(Operation setting of boiler shall be responsible by installer.)

This system requires the Optional PCB (CZ-NS6P) for SG-ready input control.

Depending on the settings of the boiler, it is recommended to install buffer tank as temperature of circulating water may get higher. (In particular, if the advanced parallel setting is selected, it must be connected to a buffer tank.) Note: Buffer tank thermistor must be connected to Main PCB (4) only.

### 

### **↑** CAUTION

Make sure the boiler and its integration in the system complies with applicable legislation.


Ensure that the return water temperature from the heating circuit to the indoor unit does not exceed 70°C.

Boiler is turned off by safety control when the water temperature of the heating circuit exceed 85°C.


### 12.2.2 System Installation


### 12.2.2.1 Remote Controller Outline

The LCD display as shown in this manual are for instructional purpose only, and may differ from the actual unit.

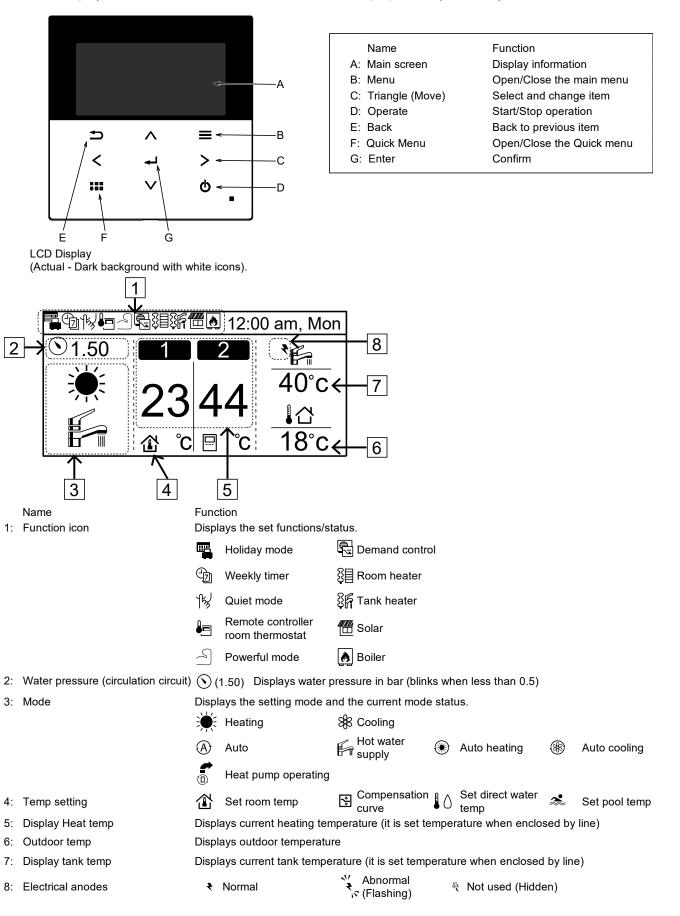



### First time of power ON (Start of installation)

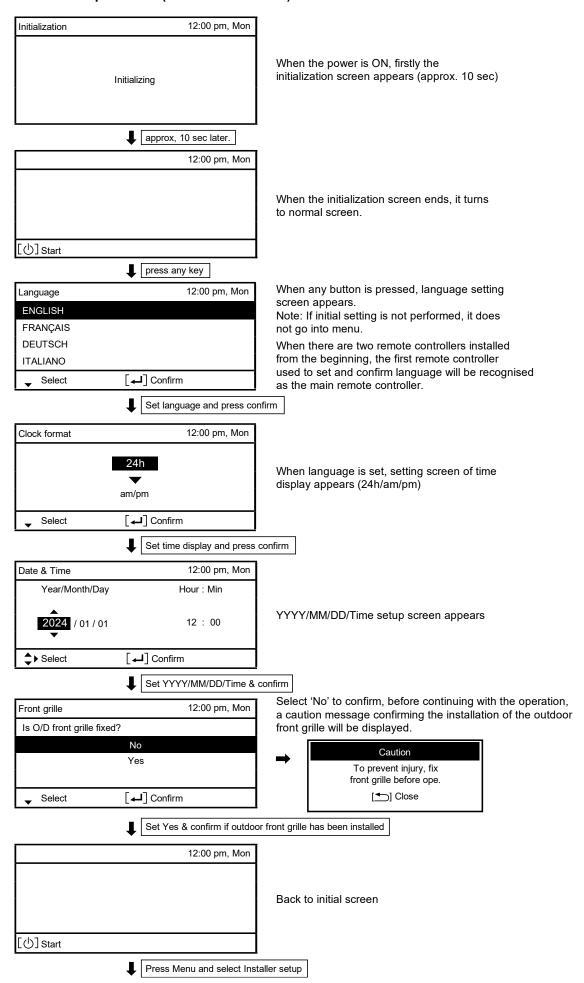


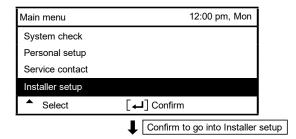

### 12.2.2.2 Installer Setup

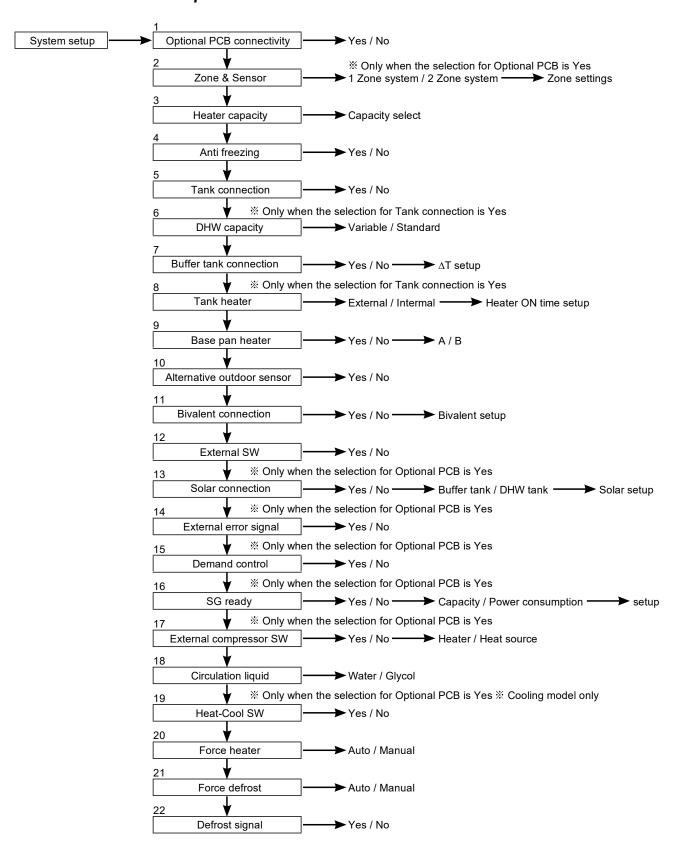

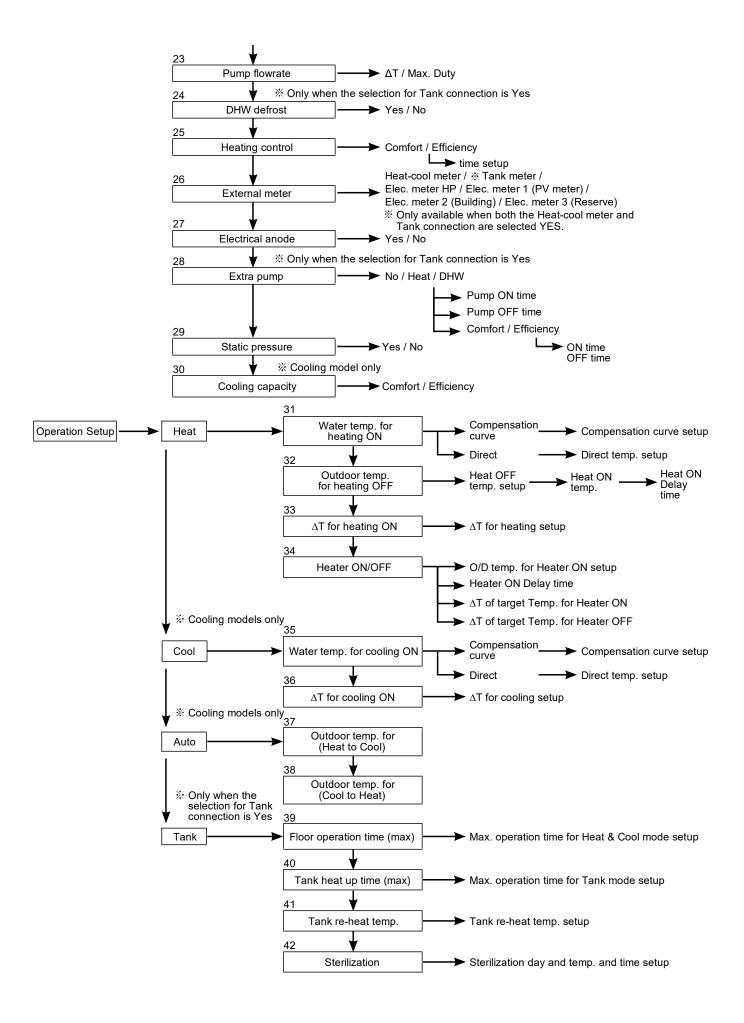

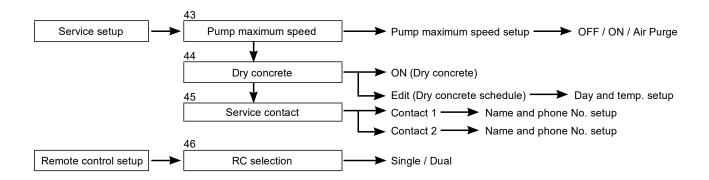

### 12.2.2.3 System Setup

### 1. Optional PCB connectivity

Initial setting: No

If any functions below is necessary, purchase and install (CZ-NS6P). Select Yes after installing it.

- 2-zone control
- Pool
- Solar
- · External error signal output
- · Demand control
- · SG ready
- · Stop heat source unit by external SW
- · Heat-Cool SW

12:00 pm, Mon

### 2. Zone & Sensor

Initial setting: Room and Water temp.

If there is no Optional PCB

Select sensor of room temperature control from the following 3 items

- ① Water temperature (water circulation target temperature)
- 2 Room thermostat (External or Internal)
- 3 Room thermistor

When there is Optional PCB connectivity

Select either 1 zone control or 2 zone control.

If it is 1 zone, select either room or pool. When room is selected, select sensor.

When pool is selected, set  $\Delta T$  for pool.

If it is 2 zone, select sensor of zone 1 and set the same items as shown above for zone 2.

Note: In 2 zone system, pool function can be set at zone 2 only.

### 3. Heater capacity

Initial setting: Depend on model

If there is built-in Heater, set the heater capacity.

Note: Some heaters cannot select the capacity.

[ ] Confirm

### 4. Anti freezing

Initial setting: Yes

Operate anti-freezing of water circulation circuit.

if set to yes, the pump will start when the water temperature reaches its freezing temperature.

if the temperature does not reach the pump stop temperature, heat pump will be activated.

Note: If set to No, when the water temperature reaches its freezing temperature or below, the water circulation circuit may freeze and cause malfunction.

System setup 12:00 pm, Mon

Optional PCB connectivity

Zone & Sensor

System setup

Zone & Sensor

Heater capacity

Anti freezing

Select

Optional PCB connectivity

Heater capacity

### Anti freezing

Select

[ ] Confirm

### 5. Tank connection

Initial setting: No

Select whether it is connected to hot water tank or not. If set to Yes, it enables the hot water function settings.

Hot water temperature of the tank can be set from main screen.

System setup

12:00 pm, Mon

Zone & Sensor

Heater capacity

Anti freezing

### Tank connection

Select

[ ← ] Confirm

### 6. DHW capacity

Initial setting: Variable

Variable DHW capacity setting normally run with efficient boiling which is energy saving heating. However while hot water usage high and tank water temperature low, variable DHW mode will run with fast heat up which heat up the tank with high heating capacity.

If standard DHW capacity setting is selected, heat pump run with heating rated capacity at tank heat up operation.

System setup	12:00 pm, Mon
Heater capacity	
Anti freezing	
Tank connection	
DHW capacity	
Select	[ 🗗 ] Confirm

### 7. Buffer Tank connection

Initial setting: No

Select whether it is connected to buffer tank for heating or not. If buffer tank is used, set to Yes.

Connect buffer tank thermistor and set  $\Delta T$  ( $\Delta T$  use to increase primary side temperature against secondary side target temperature).

If the buffer tank capacity is not so large, set larger value for  $\Delta T$ .

System setup	12:00 pm, Mon	
Anti freezing		
Tank connection		
DHW capacity		
Buffer tank connection		
Select	[←] Confirm	

### 8. Tank heater

Initial setting: Internal

Select to use either built-in heater or external heater as heater for hot water tank. If heater is installed on tank, please select External.


Note: Does not display if there is no tank for hot water supply.

Set "Tank heater" to "ON" in the "Function setup" from remote controller when using heater to boil the tank.

External: A setting which is using booster heater installed on DHW tank to boil the tank.

The permissible heater capacity is 3kW and below. The operation to boil the tank with heater is as below. In addition, set the "Tank heater: ON time" appropriately.


### For 75°C setting

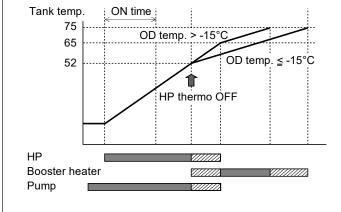

Internal: A setting which is using backup heater of indoor unit to boil the tank.

The operation to boil the tank with heater is as below.

### For 65°C setting

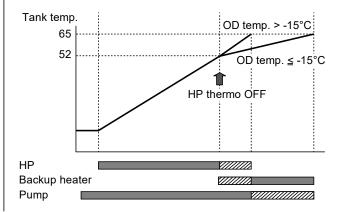

### 9. Base pan heater

Initial setting: No

Select whether Base pan heater is installed or not. If set to Yes, select to use either heater A or B.

A: Turn ON Heater when heating with defrost operation only

B: Turn ON Heater at heating

# Initial setting: No Set to Yes if outdoor sensor is installed. Controlled by optional outdoor sensor without reading the outdoor sensor of heat pump unit. System setup Buffer tank connection Tank heater Base pan heater Alternative outdoor sensor Alternative outdoor sensor Select Full Confirm

### System setup 12:00 pm, Mon 11. Bivalent connection Initial setting: No Tank heater Set if heat pump linked with boiler operation. Base pan heater Connect the start signal of the boiler in boiler contact terminal (Main PCB). Alternative outdoor sensor Set Bivalent connection to YES. After that, begin setting according to remote controller instruction. Bivalent connection Boiler icon will be displayed on remote controller top screen. Select [ ← ] Confirm After Bivalent connection Set to YES, there are three options of control pattern (Auto / SG Ready / Smart). There are 3 different modes in the boiler auto pattern operation. Movement of each modes are shown below. 2 Alternative (switch to boiler operation when drops below setting temperature) Parallel (allow boiler operation when drops below setting temperature) Advanced Parallel (able to slightly delay boiler operation time of parallel operation)


When boiler temperature is higher than heat pump temperature, zone temperature cannot be achieved if mixing valve is not installed. This product only allows one signal to control the boiler operation. Operation setting of boiler shall be responsible by installer.

Alternative mode

Parallel mode

When the boiler operation is "ON", "boiler contact" is "ON", "\_"(underscore) will be displayed below the boiler icon.

Set target temperature of boiler to be the same as heat pump temperature.

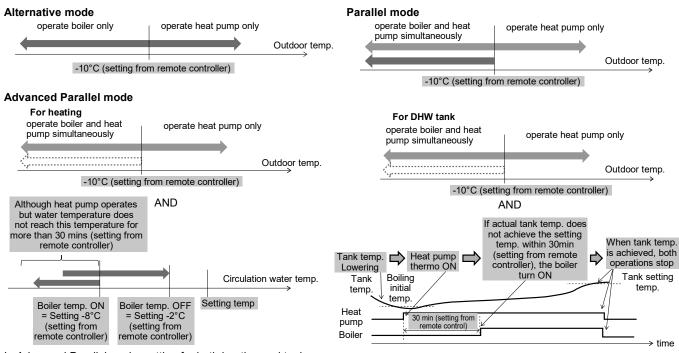

In Advanced Parallel mode, setting for both heating and tank can be made simultaneously. During operation of "Heating/Tank" mode, when each time the mode is switched, the boiler output will be reset to OFF. Please have a good understanding on the boiler control characteristic in order to select the optimal setting for the system.

2) SG ready (Only available to set when optional PCB set to YES)

- SG Ready input from optional PCB terminal control ON/OFF of boiler and heat pump as below condition

SG signal		Operation pattern
Vcc-bit1	Vcc-bit2	
Open	Open	Heat pump OFF, Boiler OFF
Short	Open	Heat pump ON, Boiler OFF
Open	Short	Heat pump OFF, Boiler ON
Short	Short	Heat pump ON, Boiler ON

\* This bivalent SG ready input is sharing same terminal as [16. SG ready] connection. Only one of these two setting can be set at the same time.

When one is set, another setting will reset to not set.

#### 3) Smart


There are Energy price (both electricity and boiler) and Schedule to be set on remote controller.

Operation setting of Energy price and Schedule shall be responsible by installer.

Based on these settings, system will calculate the final price for both electricity and boiler.

When final price of Electricity is lower than Boiler's, heat pump will operate.

When final price of Electricity is higher than Boiler's, boiler will operate.

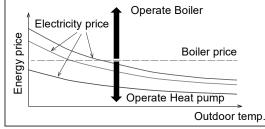

12. External SW

Initial setting: No

Able to turn ON/OFF the operation by external switch.

System setup 12:00 pm, Mon

Base pan heater
Alternative outdoor sensor
Bivalent connection

External SW

Select [ ] Confirm

#### 13. Solar connection

Initial setting: No

Set when solar water heater is installed.

Setting include items below.

- ① Set either buffer tank or DHW tank for connection with solar water heater.
- ② Set temperature difference between solar panel thermistor and buffer tank or DHW tank thermistor to operate the solar pump.
- 3 Set temperature difference between solar panel thermistor and buffer tank or DHW tank thermistor to stop the solar pump.
- Anti-freezing operation start temperature (change setting based on usage of glycol.)
- (§) Solar pump stop operation when it exceeds high limit temperature (when tank temperature exceed designated temperature (70~90°C))

Note: Does not display if there is no Optional PCB.

# Alternative outdoor sensor Bivalent connection External SW Solar connection \$\Displays \text{ Select} \text{ Confirm}

12:00 pm, Mon

System setup

#### 14. External Error Signal

Initial setting: No

Set when external error display unit is installed. Turn ON Dry Contact SW when error happened.

Note: Does not display if there is no Optional PCB.

When error occurs, error signal will be ON.

After turn OFF "close" from the display, error signal will still remain ON.

#### 15. Demand control

Initial setting: No

Set when there is demand control.

Adjust terminal voltage within 1  $\sim$  10 V to change the operating current limit.

Note: Does not display if there is no Optional PCB.

System setup	12:00 pm, Mon
External SW	
Solar connection	
External error signal	
Demand control	

[←] Confirm

Analog input [v]		Rate [%]	
0.0 0.1 ~ 0.6	4	not activate	
0.7		10	not activate
0.9 ~ 1.1		-	0
1.2 1.3		15	10
1.4 ~ 1.6	П	-	5
1.7 1.8		20	15
1.9 ~ 2.1		20	
2.2			
2.3		25	20
2.4 ~ 2.6		2	25
2.7 2.8		30	25
2.9 ~ 3.1			30
3.2			
3.3		35	30
3.4 ~ 3.6		3	35
3.7 3.8		40	35

Analog input [v]	Rate [%]		
3.9 ~ 4.1		4	0
4.2		45	40
4.3			_
4.4 ~ 4.6		4	5
4.7		50	45
4.8		30	
4.9 ~ 5.1	Ц	5	0
5.2		55	50
5.3		33	30
5.4 ~ 5.6		5	5
5.7		60	55
5.8		00	33
5.9 ~ 6.1		6	0
6.2		65	60
6.3		05	00
6.4 ~ 6.6		6	5
6.7		70	65
6.8		70	65
6.9 ~ 7.1		7	0
7.2		75	70
7.3		75	70

Analog input [v]		Rate [%]	
7.4 ~ 7.6		7	5
7.7	Š	80	75
7.8		80	75
7.9 ~ 8.1		8	0
8.2		85	80
8.3		85	60
8.4 ~ 8.6		85	
8.7		90	85
8.8	90	00	
8.9 ~ 9.1		90	
9.2		95	90
9.3		95	90
9.4 ~ 9.6		95	
9.7		100	95
9.8		100	95
9.9 ~		10	00

Select

<sup>\*</sup>A minimum operating current is applied on each model for protection purpose.
\*0.2 voltage hysteresis is provided.
\*The value of voltage after 2nd decimal point are cut off.

# 16. SG Ready Select Capacity

Initial setting: No

Switch operation of heat pump by open-short of 2 terminals.

The following settings are possible.

Capacity: limit by capacity.

Power consumption: limit by power consumption.

SG signal		Operation pattern
Vcc-bit1	Vcc-bit2	
Open	Open	Normal
Short	Open	Heat pump/heater OFF
Open	Short	Capacity 1
Short	Short	Capacity 2

#### System setup 12:00 pm, Mon Solar connection External error signal Demand control SG Ready [ ← ] Confirm Select

Capacity setting 1

- DHW capacity \_\_\_
- Heating capacity \_\_\_\_%. - Cooling capacity \_\_\_\_°C

#### Capacity setting 2

- DHW capacity \_\_\_
- Heating capacity \_\_\_\_%.
- Cooling capacity \_\_\_\_°C

SG ready - Yes - Capacity setting

#### Select Power consumption

HPU stop consumption kW

HPU stop consumption value never exceeded

If the value is exceeded, heating is provided by the heater only.

Power consumption setting 1

- Power consumption of DHW kW
- Heating power consumption \_\_\_\_kW
- Cooling power consumption \_\_\_\_kW

Power consumption setting 2

- Power consumption of DHW \_\_\_
- Heating power consumption \_\_\_
- Cooling power consumption \_\_\_\_kW

(If SG ready is set to 'Yes', Bivalent control pattern is set to 'Auto' ).

Note: Does not display if there is no Optional PCB.

#### 17. External compressor SW

Initial setting: No

Set when external compressor SW is connected.

After external compressor SW set to Yes, there are 2 options of control pattern to be select (Heat source / Heater),

1) Heat source

Open signal will stop Heat pump, Outdoor water pump and Heater (Booster Heater and back-up Heater) operations.

Optional functions are not canceled.

2) Heater

Open signal will stop back-up heater operations.

Heat pump and optional functions are not canceled.

\*Optional functions means Solar, Boiler, zone control and so on.

Note: Does not display if there is no Optional PCB.

12:00 pm, Mon System setup External error signal Demand control SG Ready External compressor SW Select [ \rrbracket Confirm

SG ready - Yes - Power consumption setting

#### 18. Circulation Liquid

Initial setting: Water

Set circulation of heating water.

There are 2 types of settings, water and glycol.

Note: Set glycol when using anti-freeze liquid. It may cause error if setting is wrong.

System setup 12:00 pm, Mon Demand control SG Ready External compressor SW Circulation liquid

Confirm

#### 19. Heat-Cool SW

Initial setting: Disable

Able to switch (fix) heating & cooling by external switch.

(Open): Fix at Heating (Heating +DHW) (Short): Fix at Cooling (Cooling +DHW)

Note: This setting is disabled for model without Cooling. Note: Does not display if there is no Optional PCB.

Timer function cannot be used. Cannot use Auto mode.

12:00 pm, Mon System setup SG Ready External compressor SW Circulation liquid Heat-Cool SW Select [ 🗗] Confirm

#### 20. Force Heater

Initial setting: Manual

Under manual mode, user can turn ON force heater through quick menu.

If selection is 'auto', force heater mode will turn automatically if pop up error happen during operation.

Note: When external heater is No and tank heater is OFF, force heater does not turn ON even if selection is 'auto'.

Force heater operation follows the latest mode selection. Mode selection is disable under force heater operation.

Heater source will ON during force heater mode.

#### 12:00 pm, Mon System setup External compressor SW

Circulation liquid

Heat-Cool SW

Select

Select

#### Force heater

Select [ ← ] Confirm

#### 21. Force Defrost

Initial setting: Manual

Under manual mode, user can turn ON force defrost through quick menu.

If selection is 'auto', outdoor unit will run defrost operation once if heat pump have long hour of heating without any defrost operation before at low ambient condition. (Even if 'auto' is selected, user still can turn ON force defrost through quick menu)

System setup	12:00 pm, Mon
Circulation liquid	
Heat-Cool SW	
Force heater	
Force defrost	

[ ← ] Confirm

#### 22. Defrost signal

Initial setting: No

Defrost signal and bivalent connection have the same connection port in the Main PCB. When defrost signal set to YES, bivalent connection reset to NO. Only one function can be set between defrost signal and bivalent.

When defrost signal set to YES, during defrost operation is running at outdoor unit defrost signal contact turn ON. Defrost signal contact turn OFF after defrost

(Purpose of this contact output is to stop indoor fan coil or water pump during defrost operation).

#### 12:00 pm, Mon System setup Heat-Cool SW Force heater Force defrost Defrost signal Select [ ← ] Confirm

#### 23. Pump flowrate

Initial setting: ∆T

If pump flowrate setting is  $\Delta T$ , unit adjust pump duty to get different of water inlet and outlet base on setting on \*  $\Delta T$  for heating ON and \*  $\Delta T$  for cooling ON in operation setup menu during room side operation.

If pump flowrate setting is set to Max. duty, unit will set the pump duty to the set duty at \*Pump maximum speed in service setup menu during room side operation.

System setup	12:00 pm, Mon
Force heater	
Force defrost	
Defrost signal	
Pump flowrate	
Select	[\rrbracket Confirm

#### 24. DHW defrost

Initial setting: Yes

When DHW defrost set to YES, hot water of domestic hot water tank will be used during defrost cycle.

When DHW defrost set to NO, hot water of floor heating circuit will be used during defrost cycle.

System setup	12:00 pm, Mon
Force defrost	
Defrost signal	
Pump flowrate	
DHW defrost	
Select	[ 🗗] Confirm

#### 25. Heating control

Initial setting: Comfort

Compressor frequency control can be selected from two modes: Comfort and Efficiency.


Select "Comfort"

- The compressor operates at the maximum frequency at the upper zone limit and reaches the set temperature faster.


Select "Efficiency"

- The compressor frequency is gradually increased to reduce power consumption. The system have 3 steps to achieve maximum compressor frequency. You can set period time of each stage on R/C.

(compressor frequency for each stage)
1st stage: 50% of the maximum frequency
2nd stage: 66% of the maximum frequency

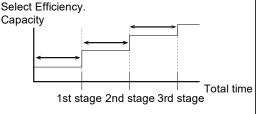3rd stage: 83% of the maximum frequency It is a function for Heating + Tank operation. 

#### 26. External meter

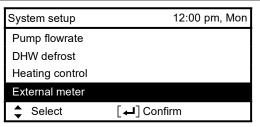

There are two systems for generation meter connection : one generation meter system

(Heat-cool meter) or two generation meter system (Heat-cool meter and Tank meter)

Both systems can provide all generation data of heating, cooling and DHW directly from external meter.

If Heat-cool meter is set to Yes, it will read from external meter for heat pump's energy generation data during heating, cooling and DHW operation '1.

If Heat-cool meter is set to No, it will base on unit's calculation for heat pump's energy generation data during heating, cooling and DHW operation.

If Tank meter is set to Yes, it will read from external meter for heat pump's energy generation data during DHW operation "1.

If Elec. meter HP is set to Yes, it will read from external meter for heat pump's energy consumption data.

If Elec. meter HP is set to No, it will base on unit's calculation for heat pump's energy consumption data.

If Elec. meter 1 (PV meter) is set to Yes, it will read from external meter for energy generation data of solar system and display it on Cloud system.

If Elec. meter 2 (Building) is set to Yes, it will read from external meter for energy consumption data of the building and display it on Cloud system.

If Elec. meter 3 (Reserve) is set to Yes, it will read from external meter for energy consumption data obtained from reserved electricity meter and display it on Cloud system.

1 Set Heat-cool meter to Yes and set Tank meter to No when 1 generation meter system is installed.

Set Heat-cool meter to Yes and set Tank meter to Yes when 2 generation meter system is installed.

Remark: Elec. meter HP refers to Electricity meter that measures Heat Pump unit's consumption.

Elec. meter 1 / 2 / 3 refers to Electricity meter no. 1 / no. 2 / no. 3

#### 27. Electrical anode

Initial setting: No

Power can be supplied from the indoor unit when an electrical anode is attached to an external tank.

System setup 12:00 pm, Mon

DHW defrost
Heating control
External meter

Electrical anode

\$\Displays \text{ Select} \text{ Confirm}\$

#### 28. Extra pump

Initial setting: Heat

Selects whether the extra pump is used in the circulation circuit for heating or in the circulation circuit for DHW, or it is not used.

If select for DHW, make choices such as the pump ON/OFF time and whether Comfort or Efficiency is a priority.


#### Select DHW

- Pump ON time 8:00 - Pump OFF time 20:00

Select Comfort (Exit extra pump settings)

#### Select Efficiency

- ON time 0:15 (0:05 ~ 1:00) - OFF time 0:15 (0:05 ~ 1:00)

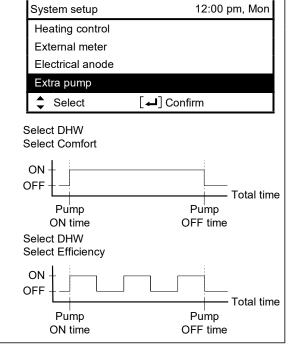

#### 29. Static pressure

Initial setting: No

If set to No, the outdoor fan motor operates at a normal speed. If set to YES, the outdoor fan motor operates at a higher speed than normal in response to high static pressure.

System setup 12:00 pm, Mon

External meter

Electrical anode

Extra pump

Static pressure

Select [ ] Confirm

#### 30. Cooling capacity

Initial setting: Efficiency

Select the cooling capacity.

If set to "Efficiency", the unit performs cooling operation efficiently at rated capacity. If set to "Comfort", the cooling operation is performed at maximum capacity.

System setup 12:00 pm, Mon

Electrical anode

Extra pump

Static pressure

Cooling capacity

A Select [ ] Confirm

#### 12.2.2.4 Operation Setup

#### Heat

#### 31. Water temp. for heating ON


Initial setting: compensation curve

Set target water temperature to operate heating operation.

Compensation curve: Target water temperature change in conjunction with outdoor ambient temperature change.

Direct: Set direct water circulation target temperature.

In 2 zone system, zone 1 and zone 2 water temperature can be set separately.

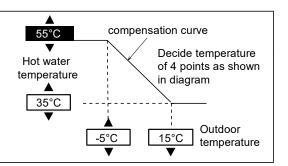

#### 32. Outdoor temp. for heating OFF

If the operation of the outdoor unit is frequently switched on and off depending on the outdoor air temperature, the following settings can be used to reduce the frequency.

a. Outdoor temp. for heating OFF

Initial setting: 24°C

Set outdoor temp. to stop heating Setting range is 6°C~35°C

b. Outdoor temp. for heating ON

Initial setting: 23°C


Set outdoor temp. to start heating.

Setting range is 5°C~X°C (X is heating OFF temp. -1)

c. Heating ON delay time

Initial setting: 0:30min

Set delay time from heating OFF to heating ON.

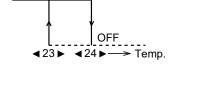

ON




#### 33. $\Delta T$ for heating ON

Initial setting: 5°C

Set temp difference between out temp & return temp of circulating water of Heating operation.

When temp gap is enlarged, it is energy saving but less comfort. When the gap gets smaller, energy saving effect gets worse but it is more comfortable. Setting range is  $1^{\circ}$ C ~  $15^{\circ}$ C

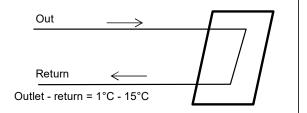

OFF

Heater ON.

ON

Compressor ON

#### 34. Heater ON/OFF

a. Outdoor temp. for heater ON

Initial setting: 0°C

Set outdoor temp when back-up heater starts to operate.

Setting range is -20°C ~ 15°C

User shall set whether to use or not to use heater.

b. Heater ON delay time

Initial setting: 30 minutes

Set delay time from compressor ON for heater to turn ON if not achieve water set temperature.

Setting range is 10 minutes ~ 60 minutes

c. Heater ON: ΔT of target Temp

Initial setting: -4°C

Set water temperature for heater to turn ON at heat mode. Setting range is -10°C  $\sim -2$ °C

d. Heater OFF: ΔT of target Temp

Initial setting: -2°C

Set water temperature for heater to turn OFF at heat mode. Setting range is -3°C ~ 0°C

Set water temperature

Heater OFF

-4°C

Heater ON.

#### Cool

#### 35. Water temp. for cooling ON


Initial setting: compensation curve

Set target water temperature to operate cooling operation.

Compensation curve: Target water temperature change in conjunction with outdoor ambient temperature change.

Direct: Set direct water circulation target temperature.

In 2 zone system, zone 1 and zone 2 water temperature can be set separately.

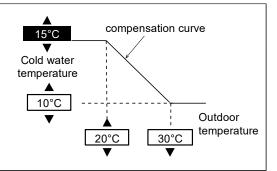


#### 36. $\Delta T$ for cooling ON

Initial setting: 5°C

Set temp difference between out temp & return temp of circulating water of Cooling operation.

When temp gap is enlarged, it is energy saving but less comfort. When the gap gets smaller, energy saving effect gets worse but it is more comfortable. Setting range is  $1^{\circ}$ C  $\sim 15^{\circ}$ C

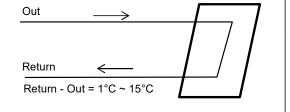


#### **Auto**

#### 37. Outdoor temp. for (Heat to Cool)

Initial setting: 15°C

Set outdoor temp that switches from heating to cooling by Auto setting. Setting range is 11°C  $\sim 25^{\circ}\text{C}$ 

Timing of judgement is every 1 hour

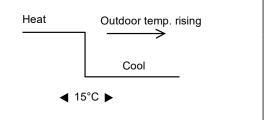


#### 38. Outdoor temp. for (Cool to Heat)

Initial setting: 10°C


Set outdoor temp that switches from Cooling to Heating by Auto setting. Setting range is  $5^{\circ}C \sim 14^{\circ}C$ 

Timing of judgement is every 1 hour

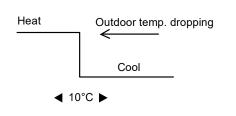


#### **Tank**

# Set max operation time (max) Set max operating hours of heating. When max operation time is shortened, it can boil the tank more frequently. Setting range is 30 minutes ~ 10 hours. It is a function for Heating + Tank operation. Heat 30min ~ 10h Tank

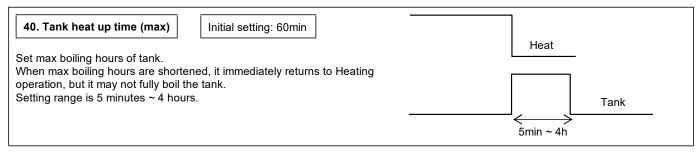



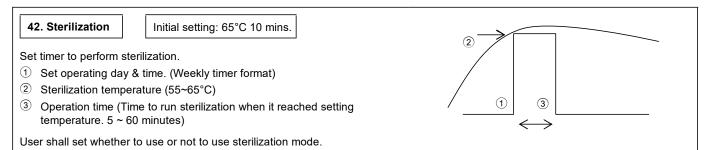

#### 12.2.2.5 Service Setup

43. Pump maximum speed


Initial setting: Varies according to model


Normally setting is not necessary.

Adjust when needed to reduce the pump sound, etc.

Besides that, the unit has Air Purge function.


When the Pump flow setting is Max. Duty, this duty setting is the duty of fixed pump that runs during operation.

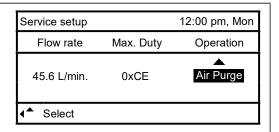


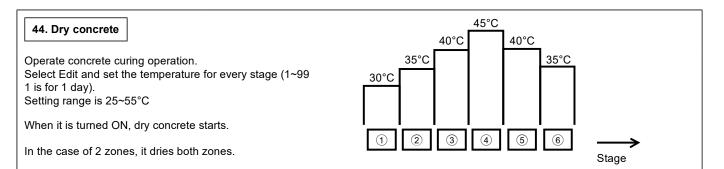

#### 45. Service contact

Able to set the name & telephone no. of contact person when there is breakdown etc. or client has trouble. (2 items)

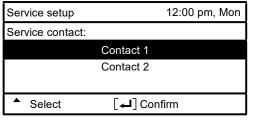

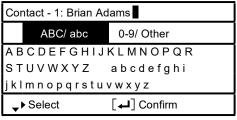


#### 12.2.2.6 Remote Control Setup



Initial setting: Single

If there is only one remote controller, set to "Single". If two remote controllers are installed, set to "Dual".

For details on the Dual setting, refer to the instruction manual of the optional remote controller.

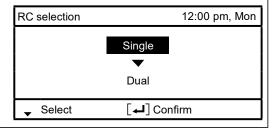

#### 12.3 Service and Maintenance

If you forget your password and cannot operate the remote controller

+ + + > Press for 5 seconds.

If the password unlock screen appears, press "Confirm" to reset the password.

It will be set to 0000. Please reset the password to a new one. Note: This screen appears only when the remote controller is password-locked.

#### 12.3.1 Maintenance Menu

How to set up the Maintenance menu

Maintenance menu

12:00 pm, Mon

Actuator check
Test mode
Sensor setup
Reset password

Select

Confirm

+ + > Press for 5 seconds.

Items that can be set:

- 1 Actuator check (Manual ON/OFF of all functional parts) Note: As there is no protection action, be careful not to cause any errors when operating each part (e.g., do not turn ON the pump when there is no water).
- Test mode (Test run)
  This mode is generally not used.
- ③ Sensor setup (Offset gap of detected temperature of each sensor, can be set within a range of -3°C to 3°C). Note: Use this setting only if the sensor is deviated as it affects temperature control.
- 4 Reset password (Password reset)

#### 12.3.2 Custom Menu

How to set up a Custom menu

Custom menu

12:00 pm, Mon

Cool mode

Back-up heater

Reset energy monitor

Reset operation history

✓ Select

✓ Confirm

Custom menu 12:00 pm, Mon

Back-up heater
Reset energy monitor
Reset operation history

Anti-stick mode

Select [ ] Confirm

Items that can be set:

Cool mode (Select Cooling function: Enable/Disable)
 Default setting is Disable.

Note: Enabling or disabling Cool Mode may affect electricity usage, be careful and do not simply change it.

In Cool mode, ensure that piping is properly insulated; otherwise, condensation may occur, leading to water dripping on the floor and potentially causing damage.

② Back-up heater (Select Back-up heaters: Enable/Disable) Note: This setting differs from the customer's choice to use or not use the back-up heater. It disables the heater power for freeze protection. (This setting should only be used if requested by the utility company.)

This setting may result in a lower heating temperature, potential failure of defrosting, and system stoppages (H75 error).

Installation must be performed by a qualified

Installation must be performed by a qualified personnel. If the system stops frequently, the issue may be due to insufficient circulation flow or a heating set temperature that is too low.

3 Reset energy monitor (Deletes the memory of the energy monitor)

Use this function when moving house or handing over the

- Reset operation history (Deletes the memory of the operation history)
  - Use this function when moving house or handing over the unit.
- Anti-stick mode (select Anti-stick mode: Enable/Disable)
   Default setting is Enable.

The actuator is automatically activated every Monday at 3:00 am to prevent the actuating parts from sticking together.

If you wish to stop the periodic activation, select "Disable". Parts and other components that are not operated for an extended period may stick if Anti-stick mode is disabled.

#### 12.4 Outdoor Unit

#### Attached accessories

No.	Accessories part	Qty.
1	Drain Elbow	1
2	Screw	8
3	Rubber Cap	3
4	Rubber Cap	15
5	Discharge Grille (Left Top)	1
6	Discharge Grille (Left Bottom)	1
7	Discharge Grille (Right Top)	1
8	Discharge Grille (Right Bottom)	1

#### **Optional Accessories**

No.	Accessories part	Qty.
9	Remote Controller set (CZ-RTW2TAW1C) *Include Remote Controller + Network adaptor with 10m cable	1
10	Remote Controller (CZ-RTW2, CZ-RTW2-1)	1
11	Base Pan Heater CZ-NE4P	1

- When you purchase an indoor unit, the remote controller and network adaptor are included.
- When the outdoor unit is used alone, either 9 or
   10 is always required.
- If you need the 2nd remote controller, purchase

  10 and set it up as the 2nd remote controller.
- When installing the outdoor units in cold climates, it is strongly recommended to install a base pan heater (optional). For installation details, refer to the installation manual of the base pan heater (optional).

#### Field Supply Accessories (Optional)

Part	3-way valve kit		
	Electromtoric Actuator	3-port Valve	
Model	SFA 21/18	VXI 46/25	
Specification	AC230V, 12VA	-	
Supplier	Siemens		

#### 12.4.1 Select the Best Location

- If an awning is placed over the unit to avoid direct sunlight or rain, be careful not to disturb the heat dissipation from the capacitor.
- Avoid installation where the ambient temperature may fall below -28°C.
- A protective zone is defined in the area close to the perimeter of the product. Refer to 12.4.2 Protective Zone section.
- Do not place obstacles that could short-circuit the discharge air.
- The lifespan of Outdoor Unit may be shorter if it is installed near the sea, in areas with high sulphur content or high oil content (e.g. machine oil).
- For maximum length and elevation between outdoor unit and indoor unit, refer to "Cooling/Heating Pipework" in 12.4.5 Piping Installation.

#### 12.4.2 Protective Zone

This outdoor unit is filled with R290 (Extremely flammable gas, safety A3 group per ISO 817). Note that this refrigerant has a higher density than air. In case of a refrigerant leak, the leaked refrigerant may accumulate near the ground.

Prevent accumulation of refrigerant in any way that is potentially dangerous, explosive or risk suffocation. Prevent refrigerant from entering the building through building openings. Prevent accumulation of refrigerant in the drain grooves.


A protective zone is defined around this outdoor unit. There must be no building openings, windows, doors, light shafts, cellar entrances, escape hatches, flat-roof windows or ventilation openings in the protective zone.

There must be no ignition sources, such as heat above 360°C, sparks, open flame, plug sockets, light switches, lamps, electrical switches or other permanent ignitions sources, in the protective zone.


The protective zone must not extend to adjacent buildings or public traffic areas (boundaries of neighbors, the public road, neighbor's private roads, subsidence area, depressions, pump shafts, sewers intakes, waste water shafts and so on.).

In the protective zone, you are not permitted to make any subsequent structural alterations which infringe the stated rules for the protective zone.


1) Protective zone for ground installation (or flat-roof installation) at the open areas

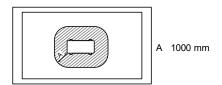


 Protective zone for ground installation in front of a building wall

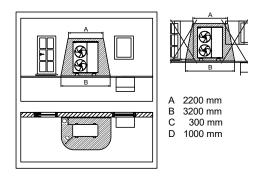

 Protective zone for ground installation in a building corner

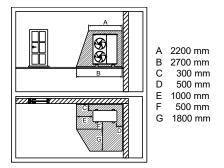


4) Protective zone for wall installation in front of a building wall

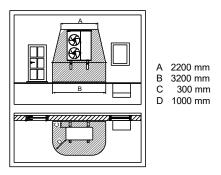

The protective zone under the product extends to the floor.


 Protective zone for wall installation in a building corner

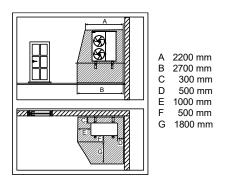


The protective zone under the product extends to the floor.

#### 12.4.3 Install Outdoor Unit

#### 12.4.3.1 Dimension Diagram

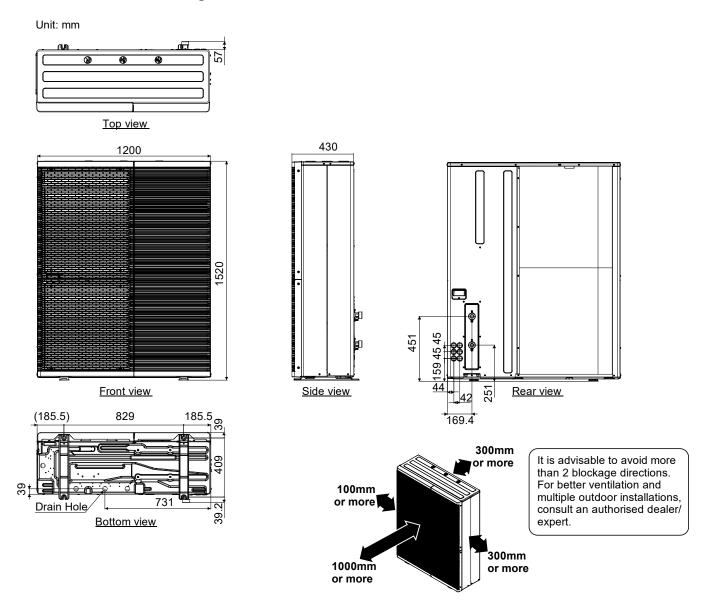


#### 12.4.3.2 Main Components Diagram

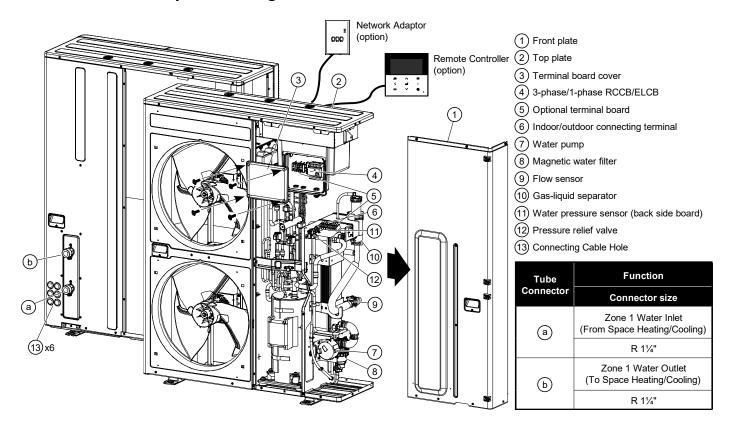


#### 12.4.3.3 Install the Outdoor Unit

- After selecting the best location, start installation according to the Installation Diagram.
- 1. When installing at roof, please consider strong wind and earthquake. Please fasten the installation stand firmly with bolt or nails.
- For mounting on concrete or solid surfaces, fix the unit using M10 or W 3/8 bolts and nuts. Make sure that the unit is installed vertically against the horizontal plane. (Install the unit using anchor bolt as shown below.)

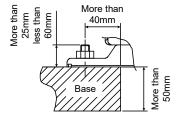

#### 12.4.3.4 Disposal of Outdoor Unit Drain Water

- When the Drain elbow 1 is used, please ensure to:
  - The unit must be mounted on a stand at least 50 mm high.
  - Seal the ø32 mm holes with Rubber caps 3. (Refer to the diagram below and install from the outside)
  - If drain water leaks, attach rubber caps 4 when necessary. (Refer to the diagram below and install from the outside)
  - When disposing drain water from the outdoor unit, use a tray (field supply) if necessary.
- If the unit is used in an area where temperature falls below 0°C for 2 or 3 consecutive days, it is recommended not to use the Drain elbow 1 Rubber caps 3 and Rubber caps 4 since drain water will freeze up and obstruct fan rotation.

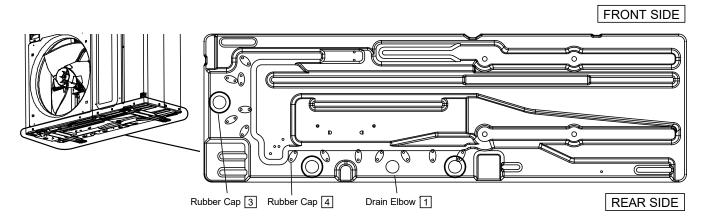


# 12.4.4 Install a Sleeve of Piping (Drilll a Hole in the Wall)

- 1. Make a through hole. (Check pipe diameter and insulation thickness)
- 2. Insert the piping sleeve into the hole.
- 3. Fix the bushing to the sleeve.
- Cut the sleeve until it extrudes about 15 mm from the wall.




5. Finish by sealing the sleeve with putty or caulking compound at the final stage.

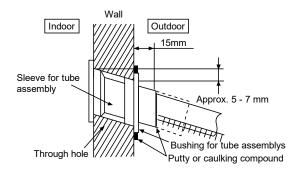


#### 12.4.5 Piping Installation

#### 12.4.5.1 Typical Piping Installation


#### When outdoor unit is used alone

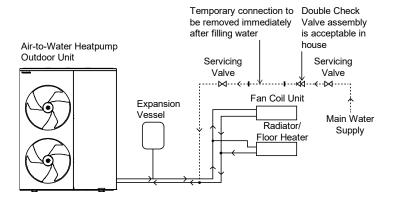

#### When indoor unit (hydromodule + tank) is connected

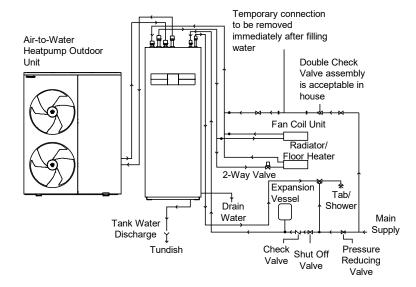


#### When indoor unit (Bi-bloc) is connected

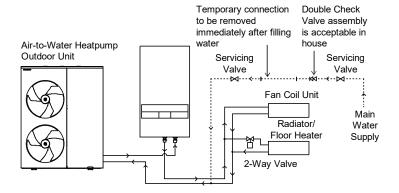

#### 12.4.5.2 Water Piping Installation

- Please engage a licensed water circuit installer to install this water circuit.
- This water circuit must comply with relevant European and national regulations (including EN61770), and local building regulation codes.
- Ensure the components installed in the water circuit could withstand water pressure during operation.
- Do not use worn out tube or detachable hose set.
- Do not apply excessive force to the pipe. There is a risk of damage.
- Choose proper sealer which can withstand the pressures and temperatures of the system.
- Make sure to use two spanners to tighten the connection. Further tighten the nuts with torque wrench to the specified torque as stated in the table.
- Cover the pipe end to prevent dirt and dust when inserting it through a wall.
- If non-brass metallic piping is used for installation, make sure to insulate the pipes to prevent galvanic corrosion.
- Do not connect galvanised pipes. This may cause galvanic corrosion.
- Use correct nut for all Outdoor Unit tube connections and clean all tubes with tap water before installation.

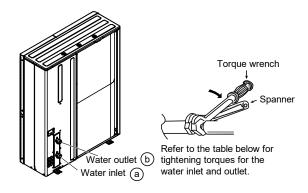

	Size	Torque
Water Inlet Port (a)	R 1¼"	117.6 N•m
Water Outlet Port (b)	K 1/4	117.0 119111

# CAUTION Do not overtighten, overtightening may cause water leakage.

- Make sure to insulate the water circuit pipes to prevent reduction of heating capacity.
- After installation, check the water leakage condition in connection area during test run.
- Failure to connect the tube appropriately might cause the Outdoor Unit malfunction.
- Protection from frost:

When water is left inside the system, freezing up is very likely to happen, which could damage the system.

Make sure the power supply is turned off before draining.

#### When outdoor unit is used alone

Install an expansion tank (set pressure: 1 bar) to the circulation circuit.

For capacity, refer to 12.4.11 Reconfirmation.

#### 12.4.5.3 Space Cooling/Heating Pipework

- Failure to connect the tube appropriately might cause the Outdoor Unit malfunction.
- Refer to the table below for the rated flow rate of each particular Outdoor Unit.

Madal	Rated flow rate (L/min)	
Model	Cooling	Heat
WH-WXG09ME8 WH-WXG09ME5	25.8	25.8
WH-WXG12ME8 WH-WXG12ME5	25.8	34.4
WH-WXG16ME8	25.8	45.9

#### When outdoor unit is used alone

- Connect Outdoor unit Zone 1 Water inlet (a) to outlet connector of Zone 1 Panel/Floor heater.
- Connect Outdoor unit Zone 1 Water outlet (b) to inlet connector of Zone 1 Panel/Floor heater.

#### When connected to indoor unit

Refer to the Indoor Unit Installation Manual.

- \* In the case of Control Module model, it is the same as outdoor unit alone case.
- \* Do not connect a 1-phase indoor unit to a 3-phase outdoor unit.

#### Pipe diameter and length

Model	Water piping between outdoor unit and indoor unit			
Model	Inner diameter	Maximum length	Insulator thickness	Maximum Elevation
WH-WXG09ME8 WH-WXG09ME5	ø 25 mm			
WH-WXG12ME8 WH-WXG12ME5	ø 32 mm	30m	30 mm or more	30m
WH-WXG16ME8				

\* However, if the indoor unit is located more than 10 m below, the water pressure in the circulation circuit (outdoor unit section) shall be 0.5 to 1 bar. If the outdoor unit is located below, install an extra pump on the outdoor side.

Refer to "12.4.5.4 Special Installation Patterns" in next page.


\* WH-WXG16ME8 may require installation of an extra pump depending on piping length.

	Water piping (When outdoor unit is use		
Model	Inner diameter	Insulation thickness	Maximum elevation between outdoor unit and Panel/Floor heater
WH-WXG09ME8 WH-WXG09ME5	ø 25 mm		
WH-WXG12ME8 WH-WXG12ME5	ø 32 mm	30 mm or more	10m
WH-WXG16ME8			

#### 12.4.5.4 Special Installation Patterns


Special construction patterns mentioned here refer to the case where there is a substantial difference in elevation (e.g. more than 10 m) between the outdoor unit installation and the Panel/Floor heater (or indoor unit). In this case, attention must be paid since incorrect water filling during installation may prevent the system from operating correctly and may cause water leak.

① When outdoor unit is located below and Panel/Floor heater is 30 m above it

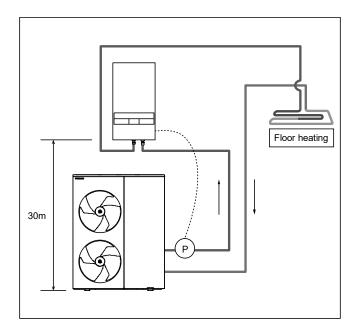

- Pressure checked by remote controller:
   3.5 ~ 4 bar. (at an elevation difference of 30 m)
- When installing an extra pump, connect it to the water outlet of the outdoor unit.
   (If installed to the water inlet, the safety valve is activated and the water is drained)
- Indoor unit is required to install an extra pump.

2 When outdoor unit is located above and Panel/Floor heater is 30 m below it

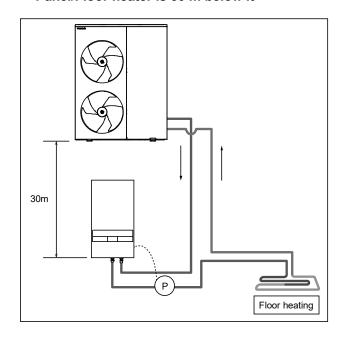

- Pressure checked by remote controller:
   0.5 ~ 1 bar. (at an elevation difference of 30 m)
- When installing an extra pump, connect it to the water outlet of the indoor unit.
- Indoor unit is required to install an extra pump.

#### 12.4.6 Connect the Cable to the Outdoor Unit


<u></u> WARNING
This section is intended for licensed electricians.  Work inside terminal board covers ③ fixed with work screws must be carried out by an installer or service personnel under the supervision of qualified personnel.

#### **♠** CAUTION

Make sure to install the discharge grille to the outdoor unit before powering ON to protect againts a rotating fan.

(Refer to the unit wiring diagram for details)

• For safety, install the discharge grille (left side) 5 • 6 using screws 2 before connecting the cables.

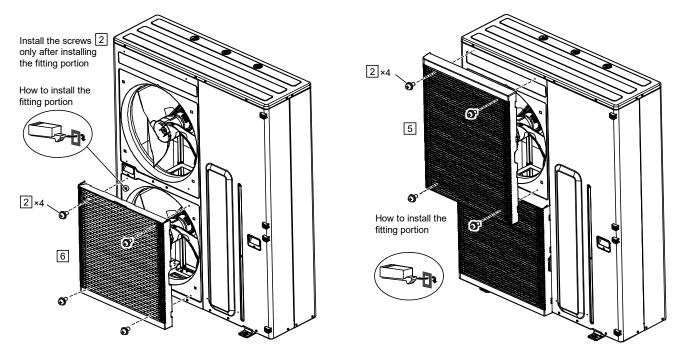

#### 12.4.6.1 Fixing of Power Supply Cable and Connecting Cable

- 1. An isolating device must be connected to the power supply cable.
  - Isolating device (disconnecting means) should have minimum 3.0 mm contact gap.
  - Use approved polychloroprene sheathed flexible cable of type designation 60245 IEC 57 or heavier. Connect
    the other end of the cable to isolating device (Disconnecting means). See table below for cable size
    requirements.

#### Power Supply Cable

Model	WH-WXG09ME8 WH-WXG12ME8	WH-WXG16ME8	WH-WXG09ME5 WH-WXG12ME5
Cable specification	5 × min 1.5 mm <sup>2</sup>	5 × min 2.5 mm <sup>2</sup>	3 × min 4.0 mm <sup>2</sup>
Cable Diameter	ø 8.5 ~ 10.0 mm		
Cable gland (see diagram in 2 next page)	А		
Isolating Devices	20A	25A	32A
Recommended RCD	30mA, 4P, typeA		30mA, 2P, typeA


• Earth wire shall be longer than the other wires as shown in the figure 3 for the electrical safety in case of the slipping out of the cord from the Holder (Clamper).


- 2. Connecting cable must be an approved polychloroprene sheathed flexible cable (see table below), type designation 60245 IEC 57 or heavier. The sheath diameter of some connecting cables must be within specifications compatible with the cable gland.
- \* Do not connect a 1-phase indoor unit to a 3-phase outdoor unit.

	Connection between Indoor unit and outdoor unit	Tank temperature sensor	Remote controller
Cable Specifications	2 × min 0.75 mm <sup>2</sup>	2 × min 0.3 mm <sup>2</sup>	2 × min 0.3 mm <sup>2</sup>


	3-Way Valve	Boiler
Cable Specifications	3 × min 1.5 mm <sup>2</sup>	2 × min 0.5 mm <sup>2</sup>
Cable Diameter	ø 8.5 ~ 10.0 mm	ø 4.0 ~ 7.0 mm
Cable gland to be used (see diagram in below)	В	С

- 3. Route the cables as follows.
  - Do not damage the cables by sharp edges.
  - Remove the front plate ① and pull the power cable (cabtyre cable \*1) and connection cable through into the rear bushing. Be sure to use the bushing and do not lose it.
  - Remove the terminal board cover 3 and cable gland cap and insert the cables into the cable gland on the bottom of the electrical control unit box.
  - 3 Connect to 3-phase/1-phase RCCB/ELCB 4 and optional terminal board 5.
  - 4 Fix the cable gland by referring to [Figure 2]\*2
  - 5 Set the terminal board cover 3 by referring to [Figure 2] \*2
  - \*1 Locally procure the specified cabtyre cable.
  - \*2 Screws of cable gland and terminal board cover ③ must be tightened to the specified tightening torque to prevent ingress of gas.

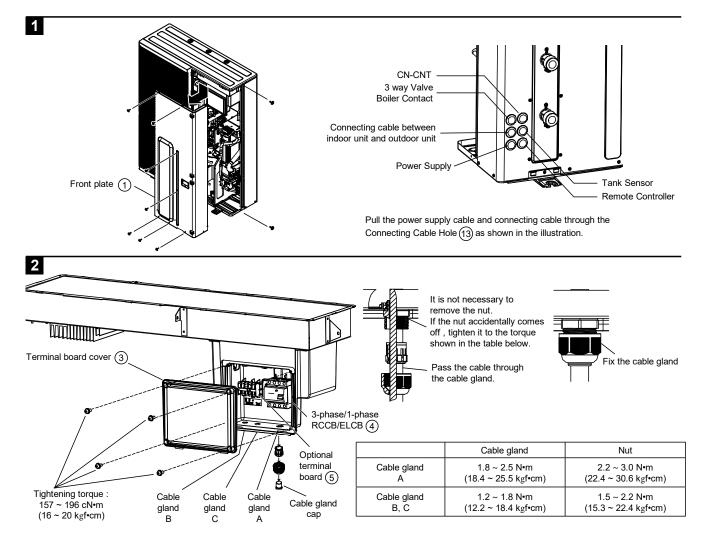

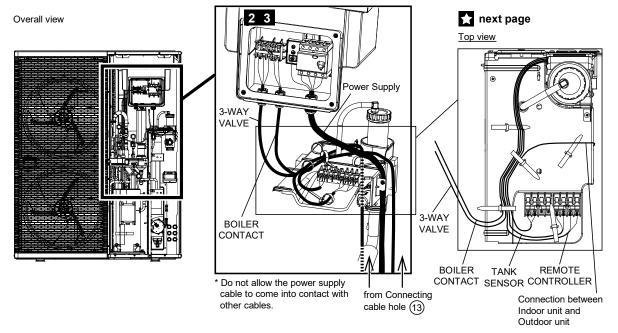


Route the cables as shown in the diagram above.

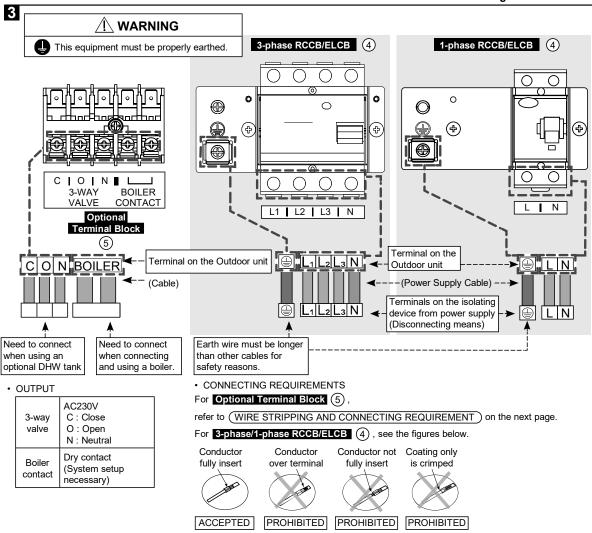


 $\bigstar$ 

#### 12.4.6.2 Connection Between Indoor Unit and Outdoor Unit


When outdoor unit is used alone, leave the short-circuit wires "C2" and "C3" attached as shown in the diagram below.

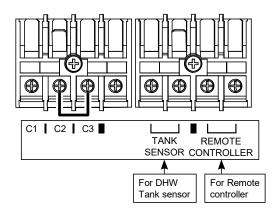

When connecting to an indoor unit, remove the short-circuit wires "C2" and "C3" and connect as shown in the diagram below.

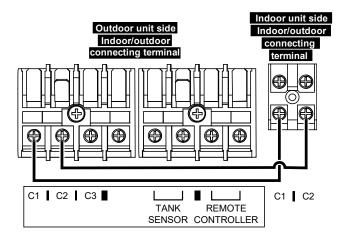

#### 12.4.6.3 Wire Stripping and Connecting Requirement

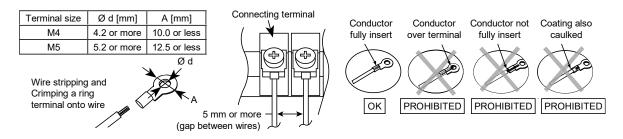

Terminal screw	Tightening torque cN•m {kgf•cm}
M4	157 ~ 196 {16 ~ 20}
M5	196 ~ 245 {20 ~ 25}

#### 12.4.6.4 Connection Requirement

#### For model WH-WXG09ME8, WH-WXG12ME8

- The equipment's Power Supply complies with IEC/EN 61000-3-2.
- The equipment's Power Supply complies with IEC/EN 61000-3-3 and can be connected to current supply network.

#### For model WH-WXG16ME8, WH-WXG09ME5, WH-WXG12ME5

- The equipment's Power Supply complies with IEC/EN 61000-3-12.
- The equipment's Power Supply complies with IEC/EN 61000-3-3 and can be connected to current supply network.

#### 12.4.7 Install Remote Controller

· Remote controller is an optional item.

Be sure to purchase it if the outdoor unit is used alone.


If you have purchased an indoor unit, it is included.

When relocating the remote controller, install in accordance with its Installation Manual.

#### 12.4.7.1 Installation Location

- When using as Room Thermostat, install at the height of 1 to 1.5 m from the floor (Location where average room temperature can be detected).
- Install vertically against the wall.
- Avoid the following locations for installation.
  - 1. By the window, etc. where is exposed to direct sunlight or direct air
  - 2. In the shadow or backside of objects deviated from the room airflow
  - 3. Location where condensation occurs (Remote Controller is not moisture proof or drip proof)
  - 4. Location near heat source
  - 5. Uneven surface
  - 6. Outdoors
- Keep distance of 1 m or more from the TV, radio and PC. (Cause of fuzzy image or noise)


#### 12.4.7.2 Remote Controller Wiring (If the Outdoor Unit is Used Alone)

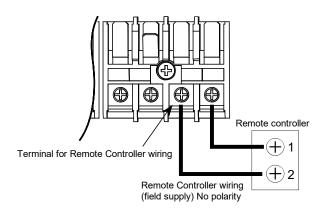


- Remote Controller cable shall be (2 × min 0.3 mm²) of double insulation PVC-sheathed or rubber sheathed cable. Total cable length shall be 50 m or less.
  - (UV protection should be provided for the portion exposed to the outdoors)
- Be careful not to connect cables to other terminals of Outdoor Unit (e.g. power source wiring terminal).
   Malfunction may occur.
- Do not bundle together with the power source wiring or store in the same metal tube. Operation error may occur.
- When using the 2nd Remote Controller (optional), connect it to the terminal by tightening it together.

#### 12.4.8 Network Adaptor Installation


 Insert a flat head screwdriver into the slot on the top of the adaptor and remove the cover. Connect the CN-CNT cable to the connector inside the adaptor.

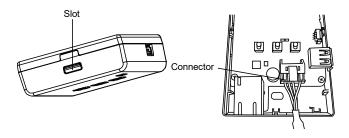

2. Pull the CN-CNT cable through the hole at the bottom of the adaptor and reattach the cover.

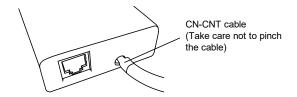

Connect the CN-CNT cable to the CN-CNT connector on the outdoor unit.

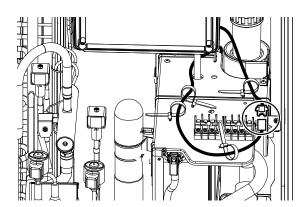


For details, refer to the instructions supplied with the network adaptor. For installation location, refer to "Installation location" in 12.4.7 Install Remote Controller.

#### 12.4.9 Piping Insulation

 Carry out insulation of pipe connections according to "Space Cooling/Heating Pipework" in 12.4.5
 Piping Installation. Wrap the pipes end-to-end with insulation to prevent condensation.

#### 12.4.10 Charging the Water

- Make sure all the piping installations are properly done before carrying out the steps below.
- 1. Start filling water to the Space Heating /Cooling circuit via Zone 1 Water inlet (a) (with pressure more than 1 bar (0.1MPa))
- 2. Stop filling water if the free water flow through Drain pipe of Pressure Relief Valve (2). (Check the Outdoor Unit)
- 3. Turn ON the Outdoor Unit.
- Remote control menu → Installer setup → Service setup → Pump maximum speed → Turn on the pump.
- 5. Make sure Water Pump (7) is running.
- 6. Check and make sure no water leaking at the tube connecting points.

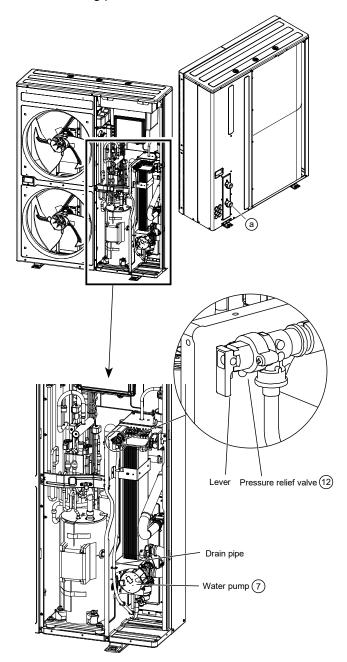


#### 12.4.11 Reconfirmation

#### 12.4.11.1 Check Water Pressure

\*(0.50 bar = 0.05 MPa)

Water pressure should not be lower than 0.5 bar. (Check the water pressure by the remote controller) If necessary, add water into Space Heating /Cooling pipes (through the Zone 1 water inlet ⓐ).

Icon flashes if dropped below "0.50 bar"

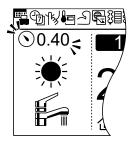

#### 12.4.11.2 Check Pressure Relief Valve

- 1. Pull the lever in the horizontal direction and confirm that the pressure relief valve works properly.
- Release the lever when water comes out of the drain pipe of the pressure relief valve. (While the air continues to come out of the drain pipe, keep raising the lever to completely discharge the air)
- 3. Confirm that the water from the drain pipe stops.
- 4. If water is leaking, pull the lever several times and return it to make sure the water stops.
- 5. If water keeps coming out of the drain, drain water. Turn off the system and contact your local authorized dealer.

#### 12.4.11.3 Check Air Accumulation

- Open the air vent plugs on the heating panel, fan convector, etc., and remove the air accumulated in the equipment and piping.
- If the outdoor unit and the indoor unit are installed on different floors, open the air vent plug on the water plug of the outdoor unit and the air vent plug on the heater bottle inside the indoor unit to remove the air.

(Be careful, water will come out)

### 12.4.11.4 Expansion Vessel Volume and Set Pressure

- This outdoor unit does not have a built-in expansion tank.
- Capacity of expansion vessel should be calculated using the formula below:
- Install an expansion vessel (set pressure: 1 bar) to the circulation circuit.

See formula below for capacity:

$$V = \frac{\epsilon \times Vo}{1 - \frac{98 + P_1}{98 + P_2}}$$

V : Required gas amount <expansion vessel volume: L>

Vo : System total water volume <L>

ε: Water expansion rate
 P1 : Expansion tank charging pressure
 P2 : Maximum system
 5 x 80°C = 0.0219
 P1 = 100 kPa
 P2 = 400 kPa

pressure

 It is recommended to calculate the required volume of vessel with a margin of approximately

#### Water expansion rate table

Water temperature (°C)	Water expansion rate ε
10	0.0003
20	0.0019
30	0.0044
40	0.0078
50	0.0121
60	0.0171
70	0.0228
80	0.0291
90	0.0360

When an indoor unit is introduced and it is installed more than 7m lower than the outdoor unit

Increase the initial pressure in the expansion tank as per the calculations below.

#### Pg= (H\*10+30) kPa

Pg: Initial pressure of expansion tank (kPa)

H: Difference in elevation (m)

#### 12.4.11.5 Check RCCB/ELCB

- Ensure the RCCB/ELCB is set to "ON" condition before checking RCCB/ELCB.
- Turn on the power supply to the outdoor unit.
   This testing can only be done when power is supplied to the outdoor unit.

#### **MARNING**

Be careful not to touch parts other than the TEST button of RCCB/ELCB when the power is supplied to Outdoor Unit. Else, electrical shock may happen. Before obtaining access to terminals, all supply circuits must be disconnected.

- Press the "TEST" button on the RCCB/ELCB. The lever would turn down if it functions normal.
- Contact authorized dealer if the RCCB/ELCB malfunction.
- If the RCCB/ELCB operates correctly, set the lever to 'ON' again after the test.


#### 12.4.11.6 Check Connecting Bar

#### **♠** CAUTION

A connecting bar is mounted on compressor during transportation.

Please make sure to remove it before installing the unit.

Otherwise, it can result in abnormal noise and the bending of a pipe

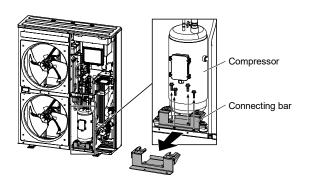



How to remove the connecting bar


- 1. Remove the 4 screws from the connecting bar.
- 2. Remove the connecting bar.
- 3. Dispose of the connecting bar and 4 screws.
- \* If it is difficult to remove the connecting bar, loosen 2 nuts from the compressor. In that case, please make sure that they are tightened with the specified torque of 10.8 ~ 17.6 N•m (110 ~ 180 kgf•cm).

#### 12.4.12 Install Discharge Grille

- 1 Install the front plate ①
- Remove the 4 screws securing the cabinet front plate (1).
- Insert the 4 claws of the discharge grille (right side) 7 and 8, and tighten the 4 screws.

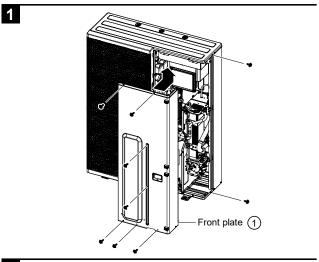

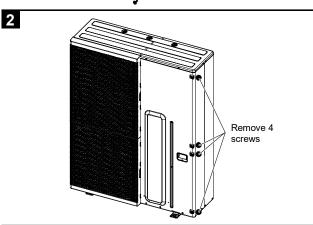

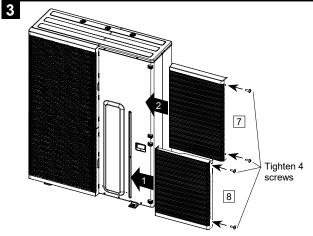

#### 12.4.13 Test Run

- Before test run, make sure below items have been checked:
  - a) Pipework are properly done.
  - Electric cable connecting work are properly done.
  - c) The Space Heating/Cooling circuit is filled up with water and trapped air is released.
- Switch ON the power supply of the Outdoor Unit. Set the Outdoor Unit RCCB/ELCB to "ON" condition. Then, please refer to the Operation Instruction for operation of Remote Controller.

#### Note:

During winter, turn on the power supply and standby the unit for at least 15 minutes before test run. Allow sufficient time to warm up refrigerant and prevent wrong error code judgement.

- 3. For normal operation, the water pressure reading should be in between 0.5 bar and 4 bar (0.05 MPa and 0.4 MPa). If necessary, adjust the speed of the water pump 7 accordingly to obtain normal water pressure operating range. If adjusting the speed of the water pump 7 does not solve the problem, contact a local authorized
- 4. After test run, please clean the magnetic water filter (8). Reinstall it after the cleaning is finished. (Refer to 12.4.14 Maintenance)

## 12.4.13.1 Check Water Flow of Water Circuit

Select Installer setup  $\rightarrow$  Service setup  $\rightarrow$  Pump maximum speed  $\rightarrow$  Air purge.

Confirm the rated flow rate has been reached. If don't reach, change max duty or install the extra pump.

\*Water flow can be check in Service setup (Pump maximum speed)

[Heating operation at low water temperature with lower water flow may trigger "H75" during defrost process.]


\*If there is no flow or H62 is displayed, stop operating the pump and release the air. (See "CHECK AIR ACCUMULATION" in 12.4.11 Reconfirmation)

#### 12.4.14 Maintenance

 In order to ensure safety and optimal performance of the Outdoor Unit, seasonal inspections, functional check of RCCB/ELCB, field wiring and piping have to be carried out at regular intervals. This maintenance and scheduled inspection should be carried out by authorized dealer.

# 12.4.14.1 Maintenance for Magnetic Water Filter (8)

- 1. Turn OFF the power supply.
- 2. Place a container below Magnetic Water Filter (8).
- 3. Turn to remove the Magnet Bar at bottom of Magnetic Water Filter (8).
- 4. Remove the Cap of Discharge Port with Allen key (8mm).
- Open the Service Valve with Allen key (4mm) to release the dirty water from the Discharge Port into a container. Close the service valve when the container is full to avoid spillage in the outdoor unit. Dispose the dirty water.
- 6. Reinstall the Cap of Discharge Port and Magnet
- Re-charge the water to Space Heating / Cooling circuit if necessary.
   (For details, refer to 12.4.10 Charging the Water)
- 8. Turn ON the power supply.

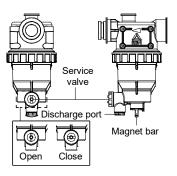

### 12.4.14.2 Maintenance for Expansion Vessel

 Regular maintenance of the expansion vessel (at least once a year) is recommended and should be performed by authorized dealer. First, make sure that the expansion or pressure tank is completely drained of water, that the system is switched off, and that there are no live electrical components. If you need to reset the preload pressure, set 1bar.

#### **↑** CAUTION

Do not clean the outdoor unit with hydrocarbon solvents when Outdoor Unit needs to be cleaned during installation or servicing.

#### 12.5 Appendix


#### 12.5.1 Variation of System


This section introduces variation of various systems using Air-To-Water Heatpump and actual setting method. (NOTE): This model does not have a built-in expansion vessel to prevent the pressure in the water circuit from rising in the event of temperature rise. Be sure to purchase in the market and install it.

#### 12.5.1.1 Introduce Applications Related to Temperature Setting

#### 12.5.1.1.1 Temperature Setting Variation for Heating


1. Remote controller

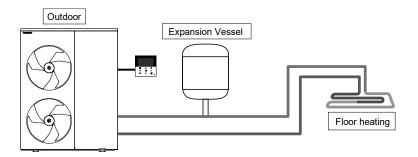


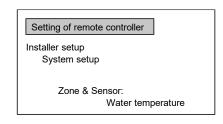

Connect floor heating or radiator directly to the Outdoor Unit. Install remote controller on the wall of the room. This is the basic form of the simplest system.

#### 2. Room Thermostat

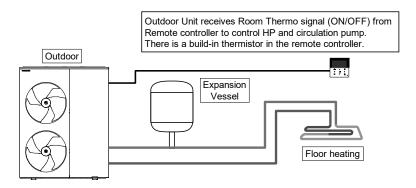

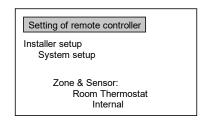


Connect floor heating or radiator directly to the Outdoor Unit.


Install the remote controller in the room where floor heating is installed.

This is an application that uses remote controller as Room Thermostat.


#### 12.5.1.1.2 Examples of Installations


1. DHW (Domestic Hot Water) Tank connection

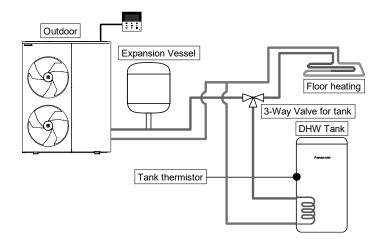

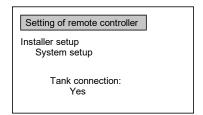

#### 2. Boiler connection

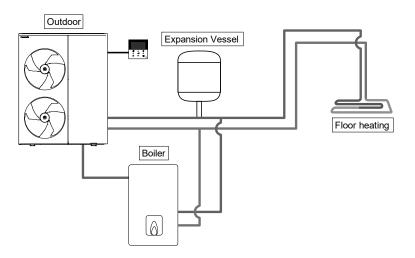

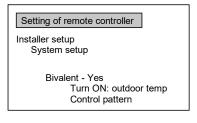

This is an application that connects the boiler to the Outdoor Unit, to compensate for insufficient capacity by operate boiler when outdoor temperature drops & heat pump capacity is insufficient.


Boiler is connected parallel with heat pump and used as heating circuit.

Besides that, an application that connects to the DHW tank's circuit to heat up tank 's hot water is also possible. Boiler output can be control by either SG ready input from Control Module unit or Auto control by 3 modes selection pattern.

(Operation setting of boiler shall be responsible by installer.)

Depending on the settings of the boiler, it is recommended to install buffer tank as temperature of circulating water may get higher. (It must connect to buffer tank especially when select Advanced Parallel setting) However, buffer tank connection requires Control Module unit.

Note: Buffer tank thermistor must be connected to Control Module unit PCB.

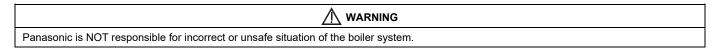

#### / CAUTION

Make sure the boiler and its integration in the system complies with applicable legislation.

Make sure the return water temperature from the heating circuit to the Outdoor Unit does NOT exceed 70°C.

Boiler is turned off by safety control when the water temperature of the heating circuit exceed 85°C.

If you wish to use optional features other than connecting DHW tank or boiler, purchase an optional indoor unit or Control Module unit.

Functions that become available by purchasing an indoor unit, etc. include:

- Buffer tank connection
- 2-zone control
- · Solar connection
- SG Ready
- Demand control

and others


≻ Optional PCB is required

#### 12.5.2 System Installation

7 Display tank temp -


#### 12.5.2.1 Remote Controller Outline


The LCD display as shown in this manual are for instructional purpose only, and may differ from the actual unit.

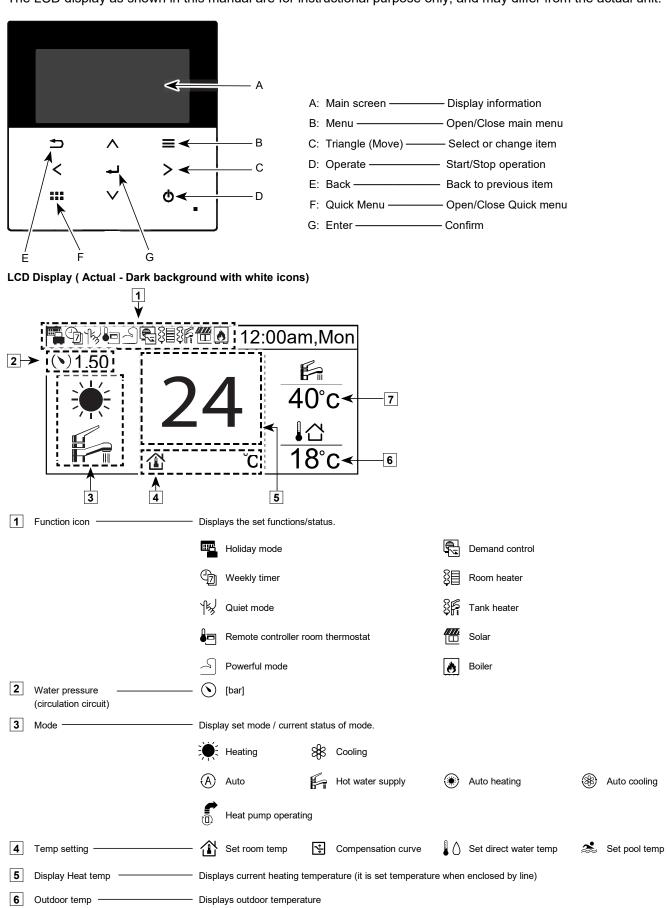

Displays current tank temperature (it is set temperature when enclosed by line)


#### First time of power ON (Start of installation)

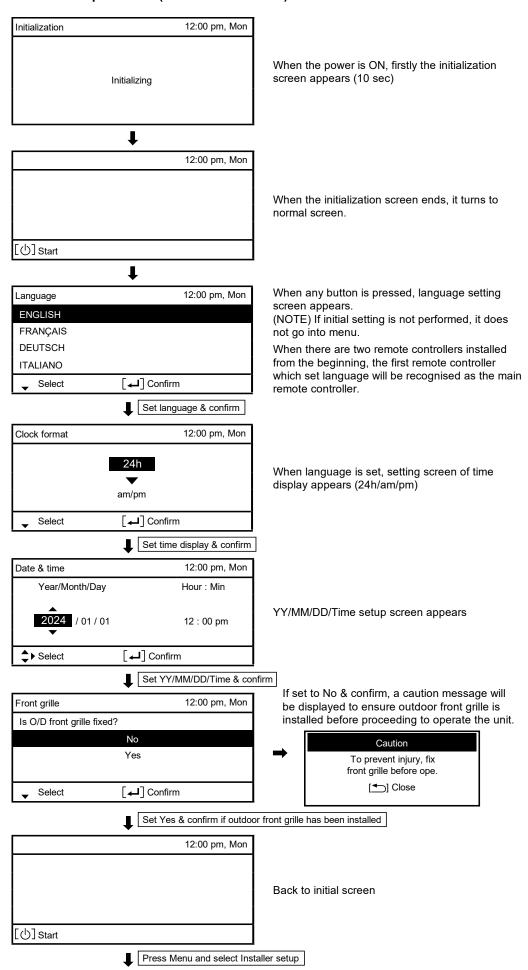

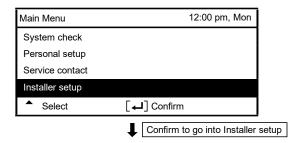


#### 12.5.3 Setup

#### 12.5.3.1 Installer Setup

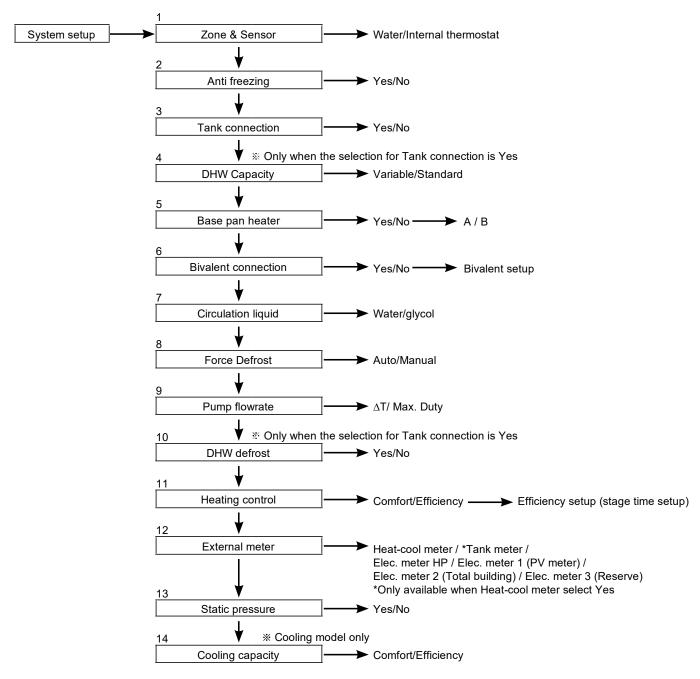



The above description is for outdoor unit alone case.
For indoor units, please refer to the installation manual supplied with the indoor unit.

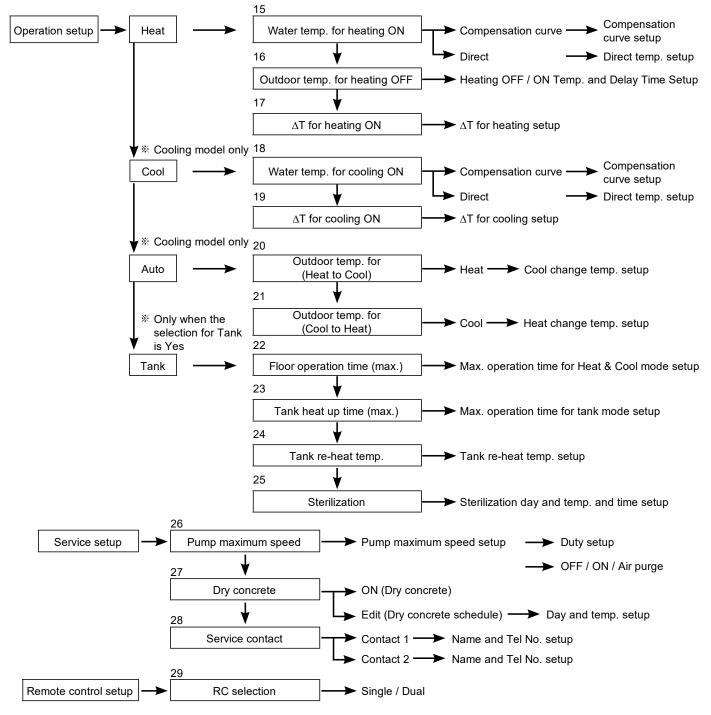



The above description is for outdoor unit alone case.
For indoor units, please refer to the installation manual supplied with the indoor unit.


#### 12.5.3.2 System Setup

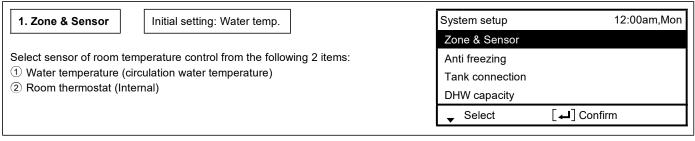

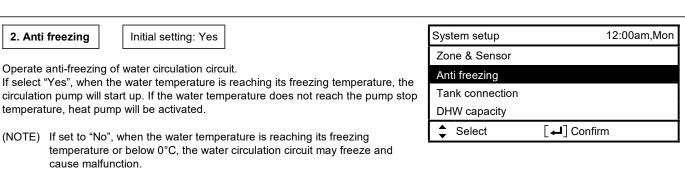


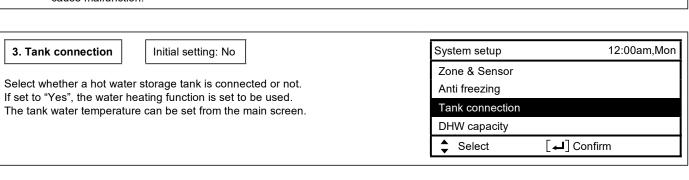

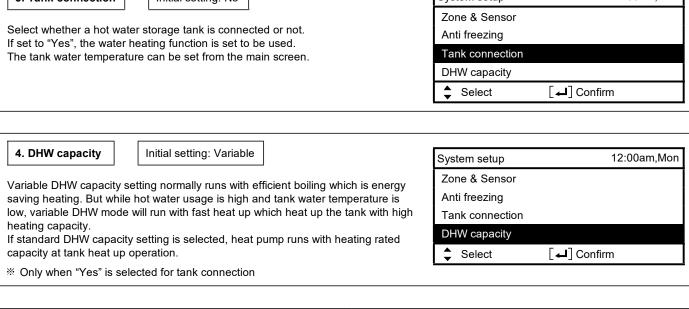

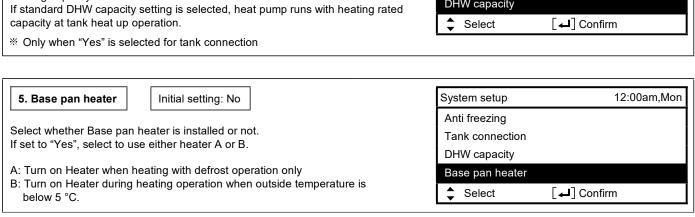

\* The above description is for outdoor unit alone case. For indoor units, please refer to the installation manual supplied with the indoor unit.

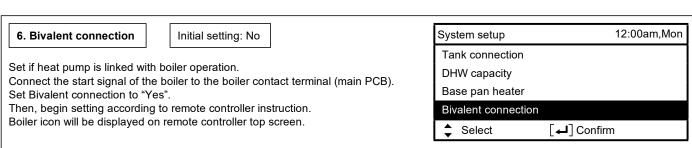

#### Auto


There are 3 different modes in the boiler auto pattern operation. Movement of each mode is as shown below:

- 1) Alternative (switch to boiler operation when drops below setting temperature)
- 2 Parallel (allow boiler operation when drops below setting temperature)
- 3 Advanced Parallel (able to slightly delay boiler operation time of parallel operation)

When the boiler operation is "ON", "boiler contact" is "ON", "\_"(underscore) will be displayed below the boiler icon.

Please set target temperature of boiler to be the same as heat pump temperature.

When boiler temperature is higher than heat pump temperature, zone temperature cannot be achieved if mixing valve is not installed. This product only allows one signal to control the boiler operation. Operation setting of boiler shall be responsible by installer.

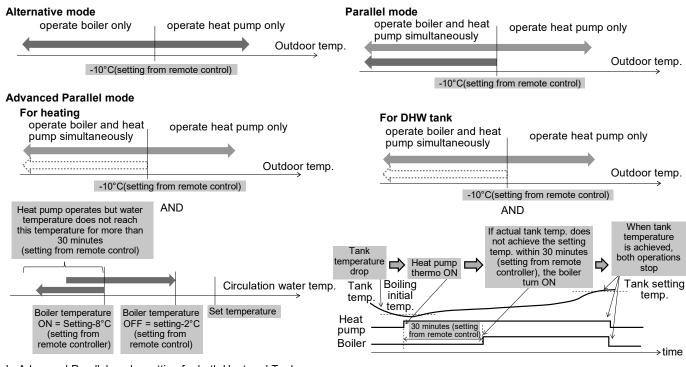

In Advanced Parallel mode, setting for both Heat and Tank can be made simultaneously. During operation of "Heat/Tank" mode, when each time the mode is switched, the boiler output will be reset to OFF. Please have good understanding on the boiler control characteristic in order to select the optimal setting for the system.

#### Smart


There are Energy price (both electricity and boiler) and Schedule to be set on remote controller.

Operation setting of Energy price and Schedule shall be responsible by installer.

Based on these settings, system will calculate the final price for both electricity and boiler.

When final price of Electricity is lower than Boiler's, heat pump will operate.

When final price of Electricity is higher than Boiler's, boiler will operate.

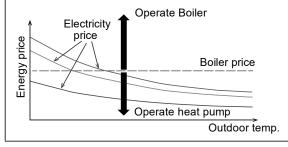

\* The above description is for outdoor unit alone case.

For indoor units, please refer to the installation manual supplied with the indoor unit.

### 7. Circulation Liquid


Initial setting: Water

Set circulation of heating water.

There are 2 types of settings: water and glycol.

(NOTE) Please set glycol when using anti-freeze liquid.

It may cause error if setting is wrong.

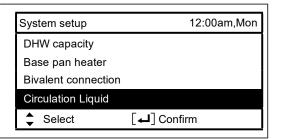

#### 8. Force Defrost

Initial setting: Manual

Under manual mode, user can turn on force defrost through quick menu.

If 'Auto' is selected, the outdoor unit will run defrost operation once if heat pump have long hour of heating without any defrost operation at low ambient condition. (Even when Auto is selected, user still can turn on force defrost through quick menu)


System setup	12:00am,Mon
Base pan heater	
Bivalent connection	
Circulation Liquid	
Force Defrost	
Select	[ <b>←</b> ] Confirm

### 9. Pump flowrate

Initial setting: ∆T

If pump flowrate setting is  ${}^*\Delta T$ , the unit adjusts pump duty to use different water inlet and outlet based on the setting of  ${}^*\Delta T$  for heating ON and  ${}^*\Delta T$  for cooling ON in operation setup menu during indoor operation.

If pump flowrate setting is set to Max. duty, the unit will set the pump duty at \*Pump maximum speed in the service setup menu during room side operation.

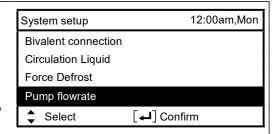

\*1

### 10. DHW Defrost

Initial setting: Yes

When DHW defrost set to "YES", hot water of domestic hot water tank will be used during defrost cycle.

When DHW defrost set to "NO", hot water of floor heating circuit will be used during defrost cycle.

System setup	12:00am,Mon
Circulation Liquid	
Force Defrost	
Pump flowrate	
DHW Defrost	
Select	[ <b>←</b> ] Confirm

### 11. Heating control

Initial setting: Comfort

Compressor frequency control can be selected from two modes: Comfort and Efficiency.


### Select "Comfort"


- The compressor operates at maximum frequency at the upper zone limit and reaches the set temperature faster.

### Select "Efficiency"

The compressor frequency is gradually increased to reduce power consumption.
 The system has 3 steps to achieve maximum compressor frequency. You can set the duration of each stage on the remote control (R/C).

(compressor frequency for each stage)
1st stage: 50% of the maximum frequency
2nd stage: 66% of the maximum frequency
3rd stage: 83% of the maximum frequency

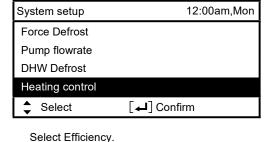

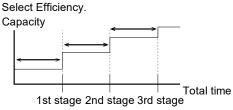

- \*1 Only when the selection for Tank connection is Yes
- ※ The above description is for outdoor unit alone case.

For indoor units, please refer to the installation manual supplied with the indoor unit.

### 12. External meter

[ Elec. meter HP: No ]
[ Elec. meter 1 (PV meter): No ]
[ Elec. meter 2 (Total building): No ]
[ Elec. meter 3 (Reserve): No ]

System setup 12:00am,Mon

Pump flowrate

DHW Defrost

Heating control

External meter

\$\Delta\$ Select \[ \rightarrow \] Confirm

There are two systems for generation meter connection: single generation meter system (Heat-cool meter) or two generation meter system (Heat-cool meter and Tank meter)

Both systems can provide all generation data of heating, cooling and DHW directly from external meter.

If Heat-cool meter is set to "Yes", it will read from external meter for heat pump's energy generation data during heating, cooling and DHW operation \*1.

If Heat-cool meter is set to "No", it will base on unit's calculation for heat pump's energy generation data during heating, cooling and DHW operation.

If Heat-cool meter is set to "Yes", it will read from external meter for heat pump's energy generation data during heating, cooling and DHW operation \*1.

If Elec. meter HP is set to "Yes", it will read from external meter for heat pump's energy consumption data.

If Elec. meter HP is set to "No", it will base on unit's calculation for heat pump's energy consumption data.

If Elec. meter 1 (PV meter) is set to "Yes", it will read from external meter for energy generation data of solar system and display it on Cloud system.

If Elec. meter 2 (Building) is set to "Yes", it will read from external meter for energy consumption data of the building and display it on Cloud system.

If Elec. meter 3 (Reserve) is set to "Yes", it will read from external meter for energy consumption data obtained from reserved electricity meter and display it on Cloud system.

<sup>™</sup> Set Heat-cool meter to Yes and set Tank meter to No when the 1 generation meter system is installed.

Set Heat-cool meter to Yes and set Tank meter to Yes when the 2 generation meter system is installed.

Remarks: Elec. meter HP refers to the electricity meter that measures Heat Pump unit's consumption.

Elec. meter 1 / 2 / 3 refers to the Electricity meter No. 1 / No. 2 / No. 3.

### 13. Static pressure

Initial setting: No

If set to "No", the outdoor fan motor operates at a higher speed.

If set to "YES", the outdoor fan motor operates at a higher speed in response to high static pressure.

System setup 12:00am,Mon

DHW Defrost

Heating control

External meter

Static pressure

\$\Displays \text{ Select} \text{ Confirm}\$

### 14. Cooling Capacity

Initial setting: Efficiency

Select the cooling capacity.

If set to "Efficiency", the unit performs cooling operation efficiently at rated capacity.

If set to "Comfort", the cooling operation is performed at maximum capacity.

System setup 12:00am,Mon

Heating control

External meter

Static pressure

Cooling capacity


Select [ ---] Confirm


The above description is for outdoor unit alone case.


For indoor units, please refer to the installation manual supplied with the indoor unit.

# 12.5.3.3 Operation Setup

### Heat

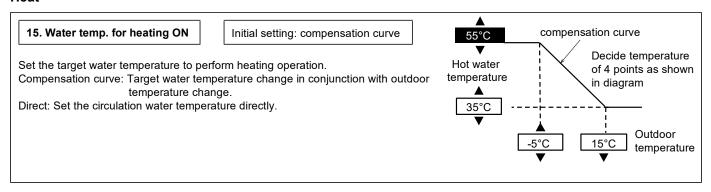


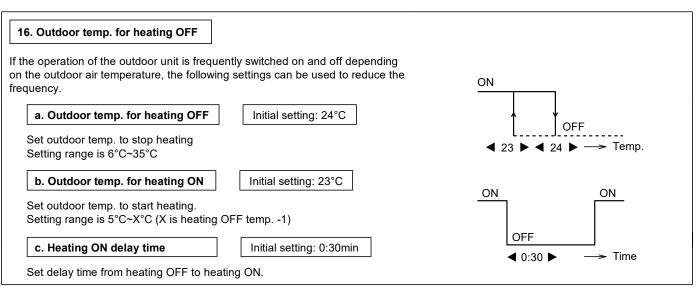

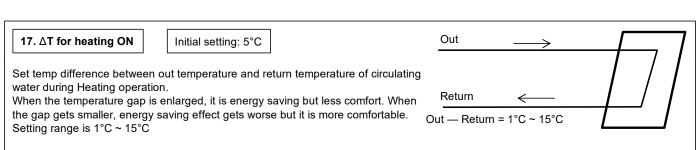


### Cool \*\* Cooling model only


# 18. Water temp. for cooling ON Initial setting: compensation curve Set target water temperature to perform cooling operation. Compensation curve: Target water temperature change in conjunction with outdoor ambient temperature change. Direct: Set the circulation water temperature directly.

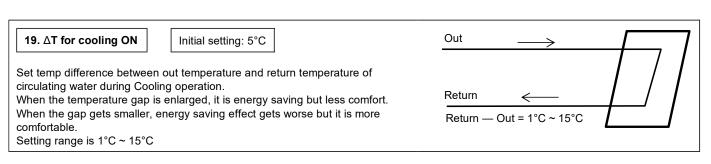


### Auto \*\* Cooling model only

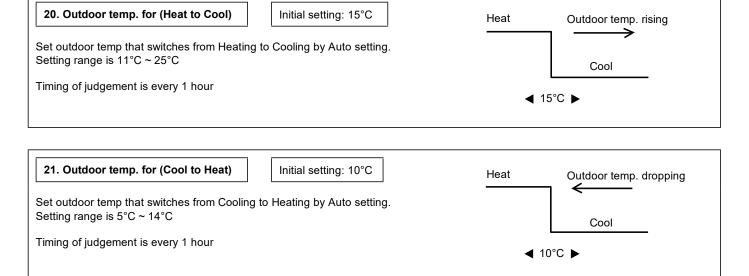



Tank \* Only when the selection for Tank connection is Yes

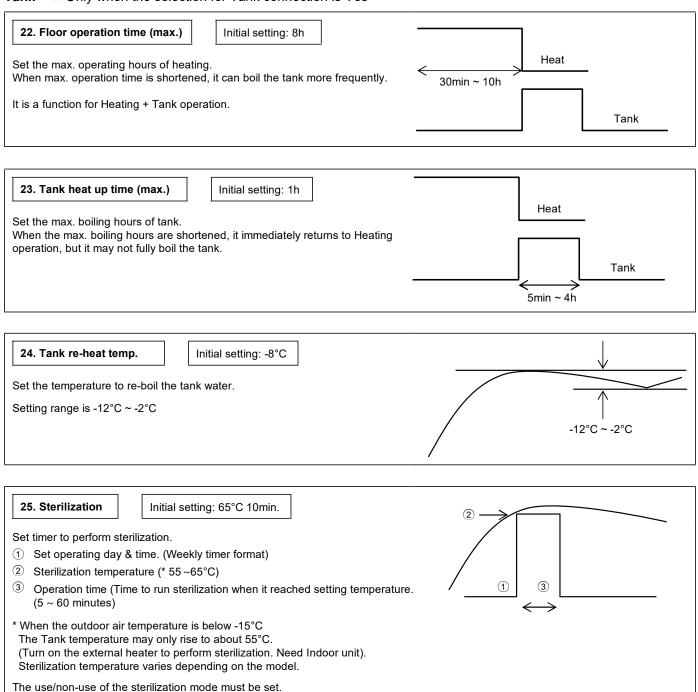


### 12.5.3.4 Service Setup

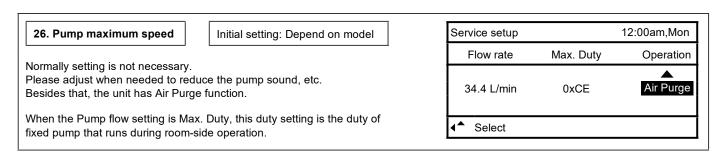

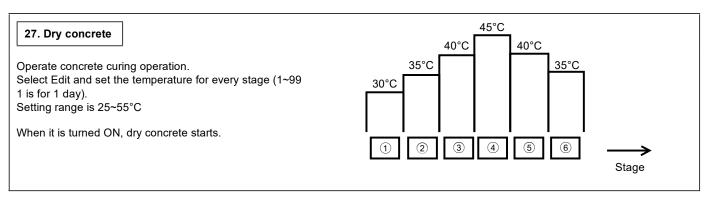


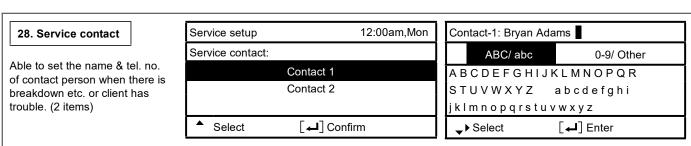


### 12.5.3.5 Remote Control Setup

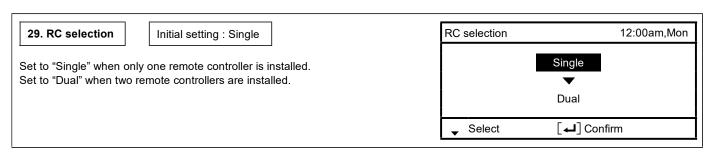


### 12.6 Service and Maintenance

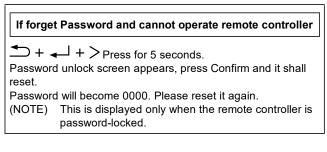

### 12.6.1 Maintenance Menu

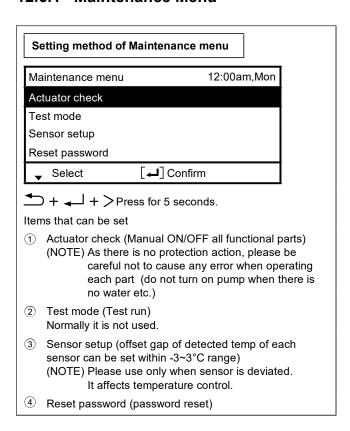

### 12.6.2 Custom Menu

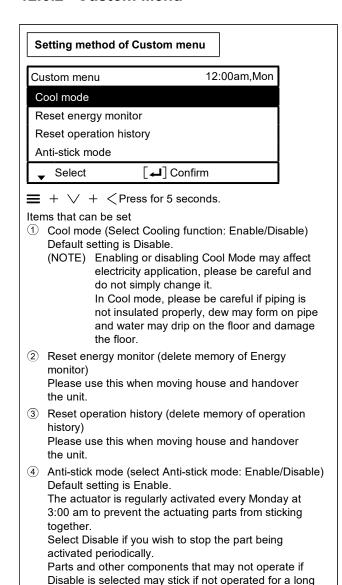

X The above description is for outdoor unit alone case.

period of time.

For indoor units, please refer to the installation manual supplied with the indoor unit.

# 13. Installation and Servicing Air-to-Water using R290



This symbol shows that this equipment uses a flammable refrigerant with safety A3 group per ISO 817. If the refrigerant is leaked, together with an external ignition source, there is a possibility of fire / explosion.

# 13.1 About R290 Refrigerant

Hydrocarbon is a class of organic chemical made up only with the element Carbon (C) and Hydrogen (H). R290 is the type of Hydrocarbon refrigerant which is environmentally good-natured and odorless refrigerant. Under Kigali Amendment to the Montreal Protocol, 80% reduction of greenhouse gas emission by next 30 years is required, and due to this requirement, further reduction in the emission of high greenhouse effect gas is required. Therefore, the conversion of air-conditioning refrigerant into one which has no greenhouse effect, even if it is dissipated into the atmosphere became our responsibility.

Nevertheless, in case of air-conditioning refrigerant, it would be the best if there is a refrigerant which has no impact on global warming but ensures good energy efficiency and performance, and is safe; however, there is no such refrigerant which satisfies all these conditions. As a result, we have been considering the practical usage, within the safety frame-work, of R290 refrigerant which has no effect of global warming but highly flammable.

# 13.2 Characteristics of R290 Refrigerant

### 1. Chemical Characteristics

R290 (Propane) is refrigerant grade propane, which is natural, non toxic, and chemically stable compound formed by hydrogen.

R290 is one of natural refrigerant, therefore it has almost zero greenhouse gas effect. R-290 is a single-component hydrocarbon substance and the most hydrocarbon properties as it is highly flammable.

Chemical Characteristic Table of R290 and R32

	R290	R32
Chemical Formula	C3H8	CH2F2
Composition	Single Composition	Single Composition
Boiling point (°C)	-42.1	-51.7
50°C vapor pressure (MPa)	1.71	3.14
Ozone Depletion Potential	0	0
Global Warming Potential (GWP)	3	675
Inflammability	Highly Inflammable (A3)	Slightly Inflammable (A2L)
Toxicity	None	None

### 2. Characteristic of Pressure

As shown in Table 2, R290 has half the vapor pressure of R32 at the same refrigerant temperature. As such, it can be installed and maintained with the same high-pressure tools and components as the R32.

Table 2. Saturated vapor pressure comparison table

(Unit: MPaG)


Temperature (°C)	Refrigerant		
	R290	R32	
-20	0.14	0.30	
0	0.37	0.71	
20	0.74	1.37	
40	1.27	2.38	
60	2.03	3.84	
65	2.23	4.29	

Reference : Thermal properties table of Japan Society of Refrigerating and Air Conditioning Engineers (60, 65°C) NIST REFPROP V8.0 (-20  $\sim$  40°C)

### 3. Flammable characteristic

As shown in below table, R290 is highly flammable and explosive when heated. The installation must be equipped with ATEX (Atmospheres Explosible) certified equipment and must always turn on the combustible gas detector during servicing and when entering the service area. Service must also be performed in a well-ventilated area, especially if the refrigerant system is being accessed.

### 3.1 Safety class

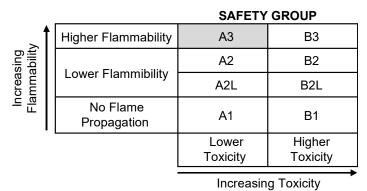

Refrigerant	Burning Speed cm/s
Daa	6.7


**R290** 38.7

### 3.2 Concentration control for R290

Because R290 is highly flammable, it can burn or explode if there is enough product concentrated in one space and the refrigerant comes in contact with an ignition source.

### Control measurement;

Descriptions	Specifications
Lower flammability limit (LFL) [kg/m³]	0.038
Lower flammability limit (LFL) [%]	2.1
Practical limit (PL) [kg/m³]	0.008
Density of vapour [kg/m³]	1.83

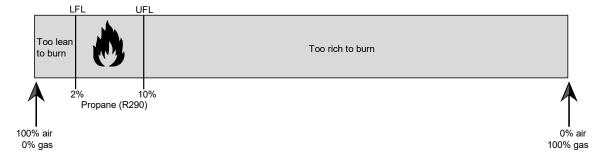

The concentration of R290 between the lower flammable limit (2%) and upper flammable limits (10%) is enough to ignite fire.

### Note:

LFL – Lower flammable limit whereby the concentration of flammable gas, vapour or mist in the air below which an explosive gas atmosphere will not be formed.

UFL – Upper flammable limit whereby the concentration of flammable gas, vapour or mist in the air below which an explosive gas atmosphere will not be formed.

PL - Defined as concentration used for simplified calculation to determine the maximum acceptable amount of refrigerant in an occupied space (20% of LFL)

### 3.3 Material classification and Hazard statement

H280	Contain gas under pressure; may explode if heated
CGA-HG01	May cause frostbite

# 13.3 Refrigerant piping installation • Tools used in services

### 13.3.1 Required Tools

R290 refrigerant air conditioners must use ATEX (Atmosphere Explosible) certified equipment. The common parts as R32 air conditioners for two-way valves and three-way valves (diameters of service ports); thus, they maintain commonality in the maintenance of the compressive strength, the size of pipe flaring, and the size of flare nuts as R32. However refrigerant pipe installation and services must use tools certified for highly flammable gas.

However, mixing of refrigerants is not allowed, so that you have to separate the cylinders for the recovery of refrigerants.

Tools used for installation • relocation • replacement of air conditioning units

Works	R290	R32	
Connecting of refrigerant pipes	Not applicable	e for Monobloc	
Connecting of reingerant pipes	Not applicable for Monobloc		
Manifold gauge charging hose	HC Manifold gauge to avoid refrigerant contamination	R32 & R410A Common	
Air purging	Vacuum pump complied with ATEX (Atmosphere Explosible)	Vacuum pump + Reducer / expander	
Gas leakage test	Combustible gas detector	Detection liquid or soup water, HFC detector	

For other installation, you can use general tools such as screw drivers (+, -), metal saws, long-nose pliers, hole core drills, linen tape, levels, temperature gauges, clamp meters, electric knives, nippers, pipe cutters, reamers or scrapers, spring benders, monkey wrenches, fixing wrenches, feeler gauges, hexagon wrenches (4 mm), testers, megohm testers, etc.

Tools used for services.

Works	R290	R32
Insertion of refrigerant	Digital scale for refrigerant charging, refrigerant cylinders, cylinder adopters and packing *a	
Recovery of refrigerant	Refrigerant recovery devices, refrigerant cylinders, manifold gauges, charging hoses *b	

<sup>\*</sup>a. Use cylinder for each refrigerant, cylinder adopter and packing.

<sup>\*</sup>b. Use refrigerant recovery cylinder separately for each refrigerant (no mixture of refrigerant allowed).

### 13.3.2 Tools for R290

### 1. Manifold gauges

R32 gauge can be used for R290 pressure.

Each port of manifold has different shapes in order to prevent inserting wrong refrigerant.

\*However, the port shape for R290 and R32 is the same; therefore, attention need to be paid not to insert wrong refrigerant.

### Differences in high/low pressure gauges

	R290 (common R32)
High pressure gauges (red)	-0.1 ~ 5.3 MPa -76 cmHg ~ 53 kgf / cm²
Low pressure gauges (blue)	-0.1 ~ 3.8 MPa -76 cmHg ~ 38 kgf / cm²

### Difference in manifold port sizes


	R290 (common R32)
Port sizes	1/2 UNF20

### 2. Charging hoses

The material is changed to HC resistant, and the size of each manifold adopter is common, as the R32 port size of manifold gauge.

Further, some hoses are with anti-gas pressure backflow valves placed near the adopters. (hoses with the valves recommended)

### Manifold gauges / Charging hoses

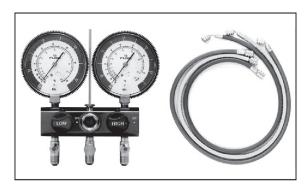

### Differences in charging hoses

		R290 (common R32)
Pressure	piessule	5.1 MPa (52 kgf / cm²)
Resistance Burst pressure		27.4 MPa (280 kgf / cm²)
Material		HNBR rubber Internal nylon coating

### 3. Vacuum pump and isolator.

When using a vacuum pump, it is compulsory to use an ATEX certified vacuum pump.

When connecting service equipment (such as vacuum pumps) to a power source, the connection should be made in outside the Temporary Danger Zone. It is recommended to use an ATEX Isolator switch to facilitate a safe shutdown in the danger zone. It is necessary to set a solenoid valve in order to prevent backflow of vacuum pump oil into the charge hoses and use a vacuum pump with oil backflow prevention function.

If vacuum pump oil (mineral oil-based) mixes with R290, it may cause damage to the machine.

### Vacuum pump



### Isolator



### 4. Leak Detector

HC refrigerant Electric gas leakage tester is used for R290. The usage of existing HFC detectors cannot be use as they can produce spark. We recommend to use detectors specifically designed for combustible gas.

### Combustible gas leak detector



5. Digital scale for refrigerant charging R290 has lower pressure level and the evaporates speed is slow. Thus, the digital scale for refrigerant charging can be used in common with R32. The charging port for R32 is (1/2 UNF20), common with R290

### Digital scale for refrigerant charging



### 6. Refrigerant cylinders

Refrigerant cylinders for R290 are painted in other colors that might subject to change according to the international standards. R290 is a single refrigerant, so that both liquid and gas insertion are possible. Additional charging is also possible.

### Refrigerant cylinders



Connection ports of refrigerant cylinders and packing

Charging ports which fit to the charging hose connection port size (1/2 UNF20) is needed. At the same time, the packing has to be of HC resistant materials.

### Connection ports and packing



### 8. Tools used for refrigerant piping installations and services

	Common tools	R290	R32
1.	Pipe cutters, reamers or scrapers	Not applicable for Monobloc	Not applicable for Monobloc
2.	Flare tools (clutch type)	Not applicable for Monobloc	Not applicable for Monobloc
3.	Torque wrench (1/4, 3/8)	Not applicable for Monobloc	Not applicable for Monobloc
4.	Torque wrench (1/2, 5/8)	Not applicable for Monobloc	Not applicable for Monobloc
5.	Manifold gauges, charging hose	0	0
6.	Vacuum pump, vacuum pump isolator *2	Connection 5/16 [ATEX certified] *1	
7.	Electric gas leakage detectors	Combustible gas detector	HFC detector
8.	Digital scale for refrigerant charging	0	0
9.	Recovery devices (connection port 5/16) *2	ATEX certified	HFC recovery devices
10.	Refrigerant cylinder color	Other (colors that might subject to change according to the international standards)	Other (colors that might subject to change according to the international standards)
11.	Refrigerant cylinder connection port and packing	х	0
12.	Allen wrench (4mm) Electric knives x		
*1	Those testers only for HC only cannot be for common use with HFC		
*2	Pacayany davisas which are cartified by Atmosphere Explosible (ATEY)		

\*2 Recovery devices which are certified by Atmosphere Explosible (ATEX)

[Knowledge for the common usage of tools for R290 & R32] R290 and R32 machines use different compressor oils.

• If unregulated compressor oil gets mixed into, it may cause damage to the machine function.

[Inserting wrong refrigerant]

- It may cause "not cooling" and "not heating" customer claims because each component (expansion valve, compressor, PCB) of the refrigerant cycle is specially adjusted for R290.
- At the same time, it is not subject to product warranty, if wrong refrigerant was inserted into system.


### Reference:-

- ASHRAE Standard 34-2016
- ISO Standard ISO 5149
- ISO 817:2014

# 13.4 New installation, and Repairing of Refrigerant Cycle System Procedures

Personnels working on A3 systems may be subject to applicable occupational hazard or regulations required by local or national law.


For safe servicing and disposal, technicians must have detailed knowledge and skills in handling of flammable refrigerants, prevention of refrigerant leaks, leak detection, personal protective equipment, cylinder handling and loading. A dry powder or CO<sub>2</sub> fire extinguisher must be available at the place of service.

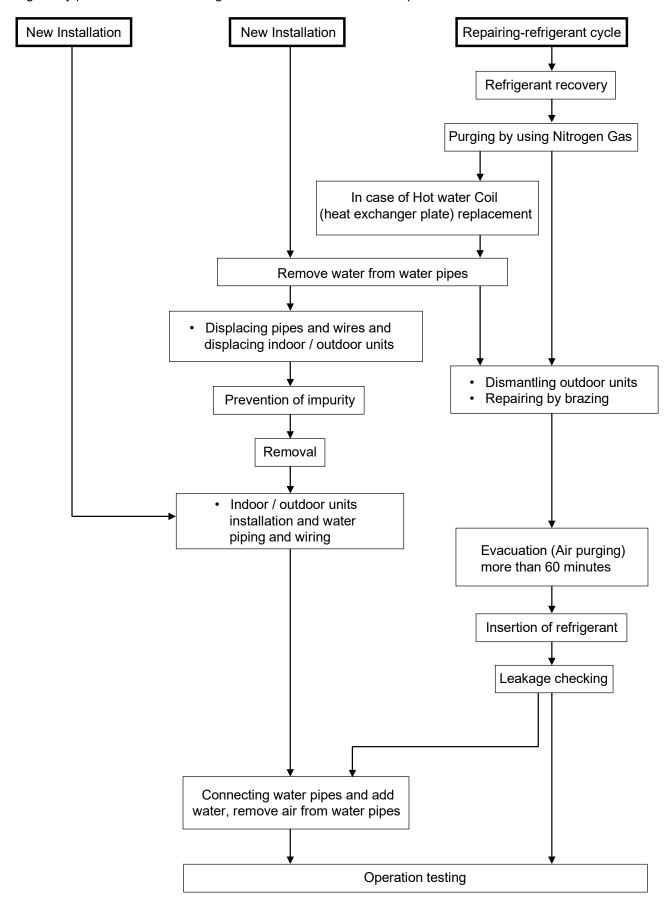

# 13.5 Servicing


# 13.5.1 Recover R290 refrigerant with refrigerant recovery machine CAUTION!

- Always turn ON the combustible leak detector.
- Keep all ignition sources, hot surface, and open flames 3 meter away from the product.
- Ensure the servicing area is well ventilated.
- Ensure the product is service by certified serviceman.
- Ensure to always have the approved fire extinguisher.

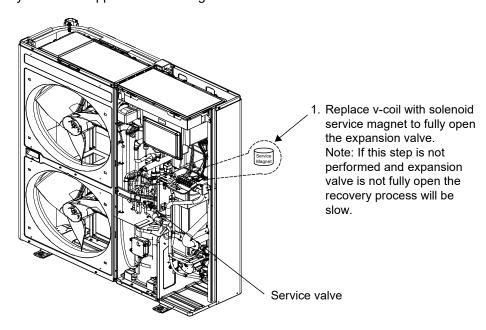

### **CAUTION!**

All equipment and material must be ATEX certified to be allowed to operate within Atmosphere Explosible zone.

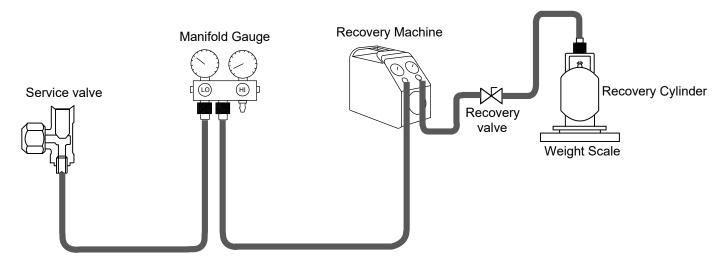


### **CAUTION!**

Do not refill R290 refrigerant more that 50% of recovery cylinder capacity to avoid overpressure. (Safety risk)

Refrigerant Type	Recovery Cylinder Capacity
R32	80% of the weight
R290	50% of the weight

- 2. Connect the Low side charging hose of the manifold gauge to the service valve (2-way valve) in the outdoor unit.
- 3. Connect the center hose of the manifold gauge to the recovery machine.
- 4. Attached the manifold gauge correctly and tightly. Ensure both valve (Low side and High side) is in close position.
- 5. Connect the hose from recovery machine to the recovery cylinder.
- 6. Turn ON the recovery machine, turn the low side valve, service valve and recovery valve to open position.

### 13.5.2 Purging by using Nitrogen Gas Before Servicing and Disposal

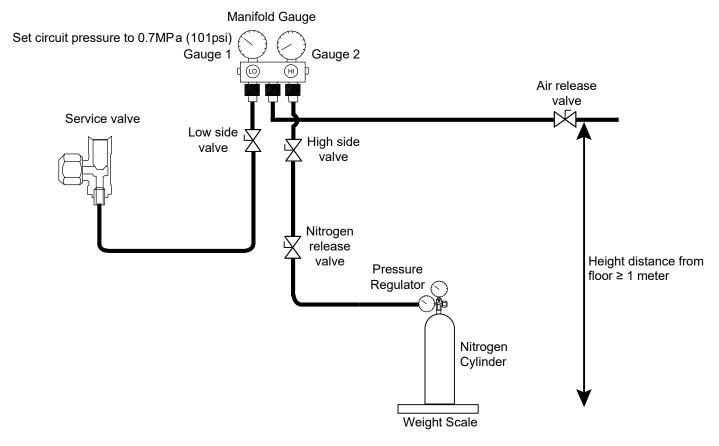

- 1. Connect nitrogen cylinder to the high side at the manifold gauge. Ensure nitrogen cylinder is connected to pressure regulator.
- 2. Close air release valve and open service valve.
- 3. Open High side valve and nitrogen release valve. (Set the pressure regulator to 200psi).
- 4. Charge nitrogen gas up to 0.7MPa (101psi) or charge 400 grams of nitrogen into the unit.
- 5. Close high side valve and open air release valve (half open) to release remaining propane to the atmosphere. Air release valve must be directed 1 meter from the floor to enable the propane gas to spread properly in the atmosphere. [Beware not to fully open the air release valve to avoid high pressure and compressor oil discharge].
- 6. When gauge 1 pressure reach near atmospheric (15psi) point the combustible leak detector to air release valve to detect the presence of propane. If presence of propane can still be detected, repeat procedure 2 to 5 until presence of propane cannot be detected.
  - [Then refrigerant circuit repairment or unit decommissioning should be done].
- 7. Before charging new refrigerant, vacuum the system until it reaches to 500micron (67Pa) to remove foreign gas in the system and hold for 15 minutes.

# 14. Operation and Control

### 14.1 Basic Function

Inverter control, which equipped with a microcomputer in determining the most suitable operating mode as time passes, automatically adjusts output power for maximum comfort always. In order to achieve the suitable operating mode, the microcomputer maintains the set temperature by measuring the temperature of the environment and performing temperature shifting. The compressor at outdoor unit is operating following the frequency instructed by the microcomputer at indoor unit that judging the condition according to internal water setting temperature and water outlet temperature.

### 14.1.1 Internal Water Setting Temperature

Once the operation starts, control panel setting temperature will be taken as base value for temperature shifting processes. These shifting processes are depending on the Air-to-Water Heat pump settings and the operation environment. The final shifted value will be used as internal water setting temperature and it is updated continuously whenever the electrical power is supplied to the unit.

### 14.1.2 Heating Operation

### 14.1.2.1 Thermostat Control

- Compressor is OFF when Water Outlet Temperature Internal Water Setting Temperature > 3°C for continuously 3 minutes.
- Compressor is ON after waiting for 3 minutes, if the Water Outlet Temperature Water Inlet Temperature (temperature at thermostat OFF is triggered) < -3°C.</li>

### 14.1.2.2 Thermostat Control (Outdoor Ambient Temperature)

Stops provide heating to room side during high outdoor ambient condition. Control content:

- Heating operation and water pump will turn OFF when outdoor ambient temperature > outdoor thermo off temperature + 3°C.
  - (Outdoor thermo off set temperature is set by control panel. Thermo off set temperature is between 5°C ~ 35°C)
- Heating operation will resume when Outdoor ambient temperature < Outdoor thermo OFF set temperature + 1°C.</li>

### 14.1.2.3 Heat Mode Operation

Operation of heat pump provide heating capacity to room side by hot water through heating panel, floor heating or fan coil unit.

- 1 3 ways valve control:
  - 3 ways valve switch and fix to heating side.
- 2 Heat pump operates follow normal heating operation.
- 3 Back up heater operate follow normal operation.
- 4 2 ways valve control:
  - o 2 ways valve opens.

### 14.1.3 Cooling Operation

### 14.1.3.1 Thermostat Control

- Compressor is OFF when Water Outlet Temperature Internal Water Setting Temperature < -1.5°C for continuously 3 minutes.
- Compressor is ON after waiting for 3 minutes, if the Water Outlet Temperature Water Inlet Temperature (temperature at thermostat OFF is triggered) > 3°C.

### 14.1.3.2 Cool Mode Operation

- 1 3 ways valve control:
  - 3 ways valve switch and fix to cooling side.
- 2 Heat pump operates follow normal cooling operation.
- 3 Room heater DOES NOT operate during cool mode.
- 4 2 ways valve control:
  - 2 ways valve is closed.

### 14.1.3.3 Cooling Capacity Control

The cooling capacity can be set to either Efficiency or Comfort priority. (However, this is only available for WH-WXG12ME5.)

# Remocon setting: Cooling capacity = Efficiency (default)

Prioritize efficiency and operate the cooling with reduced capacity

### Remocon setting: Cooling capacity = Comfort

Prioritize comfort and operate the cooling at maximum capacity.

### 14.1.4 Target Water Temperature Setting

# 14.1.4.1 Target Water Temperature Control of Standard System (Optional PCB not Connected)

There are 2 types of temperature control selection which are Compensation and Direct.

• Temperature control type selection by installer:

1 Compensation : Wlo, WHi, ODLo, ODHi can be set at installer menu.

2 Direct : Direct Water Temperature Set

Remote control setting by user:

1 Compensation : Shift value ±5°C from the compensation curve

2 Direct : Direct water temperature set change

- Target water temperature is calculated as below condition.
  - Target water temperature = A (Base temperature) + B (shift temperature)

A (Base Temperature)	Compensation	Direct
A (base remperature)	Value from the curve + User shift value set	Direct value from user setting

B (shift temperature) value is depend on the room sensor selection at remote controller as below table:

B (Shift Temp.)	B (Shift Temp.)  B shift value depend on the room sensor selection at remocon as table below		
Sensor selection			
Water temperature	B = 0		
External Room thermostat B = 0			
Internal Room thermostat &	Cool Mode: B = 0; when Zone OFF or Zone Room Thermo OFF B = B = 1* (room set temp (R/C) – actual room temp) Max/Min Regulation of B: (Max = 5; Min = -5)		
Room Thermistor	Heat Mode: B = 0; when Zone OFF or Zone Room Thermo OFF B = follow Heating Room Temperature PI control logic		

• Maximum/minimum regulation of Target Water Temperature

	Heating	Cooling
MAX	55°C (Below Ambient -25°C) * 75°C (Above Ambient -15°C) *	20°C
MIN	25°C	5°C


<sup>\*</sup> Between outdoor ambient -15°C and -25°C, max target decreases gradually from 75°C to 55°C.

<sup>\*</sup>This setting only able to set when room sensor select as Water Temperature.

<sup>\*</sup>Instead of water temperature, user will set target room temperature when room sensor select as Room Thermistor OR Internal Room Thermostat.

### Compensation Type: (Operation under Heat Mode and Cool Mode)


• The set temperature defines the parameters for the ambient (Outdoor temperature) dependent operation of the unit. The water temperature is determined automatically depending on the outdoor temperature. Default setting is the colder outdoor temperature will result in warmer water and vice versa. The user has the possibility to shift up and shift down the target water by remote control setting.

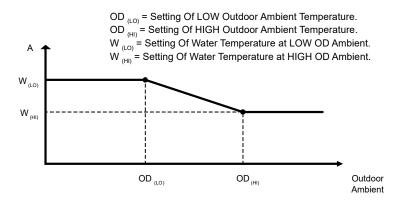

- Outdoor ambient is updated every 30 minutes when operation ON.
- Setting water outlet temperature always follow W<sub>(LO)</sub> or W<sub>(HI)</sub> whenever is higher if outdoor ambient sensor or indoor communication error happen.

However, when powerful mode is requested by remote control during heating mode, the higher value of HLo or Whi will be used for A calculation.

- \* There are 2 compensation curves (for heating and cooling). During heating mode, the heating curve is used and during cooling mode, the cooling curve is use.
- Compensation curve set shift value:

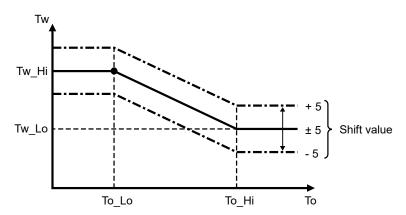

# 14.1.5 Target Water Temperature at Extension System (Optional PCB is Connected, Excluding when Operating in Standalone)

Target water temperature is calculated as below.

- Heat Mode:
- When buffer tank selection is "YES:"
   Target water temperature = Target buffer tank temperature + [2°C]
- When buffer tank selection is "NO"
  - If both zone 1 and zone 2 is active
     Target Water Temperature = Higher zone target water temperature of Zone 1 and Zone 2.
  - If only one zone is active
     Target Water Temperature = Zone target water temperature of active zone.

- Cool mode:
- When buffer tank selection is "YES"
  - o If both zone 1 and zone 2 active

Target Water Temperature = Lower Zone Target Water Temperature of Zone 1 and Zone 2

o If only one zone is active

Target Water Temperature = Zone Target Water Temperature of active zone

- When buffer tank selection is "NO"
  - If both zone 1 and zone 2 active
    - Target Water Temperature = Lower Zone Target Water Temperature of Zone 1 and Zone 2
  - o If only one zone is active
    - Target Water Temperature = Zone Target Water Temperature of active zone

### 14.1.6 Target Zone Water Temperature Control

Purpose:- To control zone mixing and zone pump according to the zone sensor temperature

### 14.1.6.1 Target Zone 1 Water Temperature Setting Control

- Start condition
  - Heating zone 1 is ON by remote control or Timer or Auto Mode OR
  - o Cooling zone 1 is ON by remote control or Timer or Auto Mode.
- Cancel condition
  - Heating zone 1 is OFF by remote control or Timer or Auto mode AND
  - Cooling zone 1 is OFF by remote control or Timer or Auto mode.
- Target Zone 1 water temperature is calculated as below condition.
  - Target Zone 1 water temperature = A (Base temperature) + B (shift temperature)

A (Page Temperature)	Compensation	Direct
A (Base Temperature)	Value from the curve + User shift value set	Direct value from user setting

- During heat mode and compensation select, if powerful mode is activated, higher value of WLo or WHi will be use as curve value.
  - B (shift temperature) value is depend on the room sensor selection at remote controller as below table:

B (Shift Temp.)	B shift value depend on the room sensor selection at remocon as table below	
Sensor selection		
Water temperature B = 0		
External Room thermostat B = 0		
Internal Room thermostat & Room Thermistor	Cool Mode: B = 0; when Zone OFF or Zone Room Thermo OFF B = B = 1* (room set temp (R/C) – actual room temp) Max/Min Regulation of B: (Max = 5; Min = -5)	
Room memistor	Heat Mode: B = 0; when Zone OFF or Zone Room Thermo OFF B = follow Heating Room Temperature PI control logic	
Pool Function Selected B = Delta value setting from remocon		

<sup>\*</sup> B = 0 regardless of which sensor selection, if SHP control bit is enable except Pool function select (maintain Pool "B" value)

<sup>\*\*</sup> Pool function also can be select at Zone 1 when optional PCB is connected and Zone 1 system is select.

• Maximum/minimum regulation of Target Water Temperature.

	Heating	Cooling
MAX	55°C (Below Ambient -25°C) * 75°C (Above Ambient -15°C) *	20°C
MIN	25°C	5°C

<sup>\*</sup> Between outdoor ambient -15°C and -25°C, max target decreases gradually from 75°C to 55°C.

- Target Zone 1 Water Temperature (Heat mode only) during SG ready control
  - o If buffer tank selection is "NO" then following shift is carried out.
    - While digital input is "10" or "11" then,
       Final Target Zone 1 water temperature
      - = Target Zone 1 water temperature\* (SG ready % setting (remote control menu))%
  - If buffer tank selection is "YES"
    - No shift of Target Zone 1 Water Temperature. Target Buffer Tank Temperature will change accordingly.
       \* Refer to "Buffer tank temperature control"

# 14.1.6.2 Target Zone 2 Water Temperature Setting Control (Excluding when Operating in Standalone)

- Start condition
  - Heating zone 2 is ON by remote control or Timer or Auto Mode OR
  - o Cooling zone 2 is ON by remote control or Timer or Auto Mode.
- Cancel condition
  - Heating zone 2 is OFF by remote control or Timer or Auto mode AND
  - o Cooling zone 2 is OFF by remote control or Timer or Auto mode.
- Target Zone 2 water temperature is calculated as below condition.
  - Target Zone 2 water temperature = A (Base temperature) + B (shift temperature)

A (Base Temperature)	Compensation	Direct
A (Base Temperature)	Value from the curve + User shift value set	Direct value from user setting

<sup>\*</sup> During heat mode and compensation select, if powerful mode is activated, higher value of WLo or WHi will be use as curve value.

B (shift temperature) value is depend on the room sensor selection at remote controller as below table:

B (Shift Temp.)	B shift value depend on the room sensor selection at remocon as table below	
Sensor selection		
Water temperature	B = 0	
External Room thermostat	B = 0	
Internal Room thermostat & Room Thermistor	Cool Mode: B = 0; when Zone OFF or Zone Room Thermo OFF B = B = 1* (room set temp (R/C) – actual room temp) Max/Min Regulation of B: (Max = 5; Min = -5)	
Room memistor	Heat Mode: B = 0; when Zone OFF or Zone Room Thermo OFF B = follow Heating Room Temperature PI control logic	
Pool Function Selected B = Delta value setting from remocon		

<sup>\*</sup> B = 0 regardless of which sensor selection, if SHP control bit is enable except Pool function select (maintain Pool "B" value)

<sup>\*\*</sup> Pool function also can be select at Zone 2 when optional PCB is connected and Zone 2 system is select.

Maximum/minimum regulation of Target Water Temperature.

	Heating	Cooling
MAX	55°C (Below Ambient -25°C) * 75°C (Above Ambient -15°C) *	20°C
MIN	25°C	5°C


- \* Between outdoor ambient -15°C and -25°C, max target decreases gradually from 75°C to 55°C.
- Target Zone 2 Water Temperature (Heat mode only) during SG ready control
  - o If buffer tank selection is "NO" then following shift is carried out.
    - While digital input is "10" or "11" then,
       Final Target Zone 2 water temperature
      - = Target Zone 1 water temperature\* (SG ready % setting (remote control menu))%
  - If buffer tank selection is "YES"
    - No shift of Target Zone 2 Water Temperature. Target Buffer Tank Temperature will change accordingly.
       \* Refer to "Buffer tank temperature control"

### 14.1.6.3 Zone Temperature Control Contents

- During Standard System (Optional PCB not connected)
  - o Only 1 zone temperature control is available
  - This zone room temperature is control by either one of the 4 room sensor (Room Th, Int/Ext Room Thermostat, Water temperature)
  - Target Zone Water Temperature is calculated based on selected temperature control type (Compensation or Direct) and selected room sensor. Target Water Temperature will set same as Target Zone Water Temperature
  - Target Water Temperature is the temperature for heat pump to operate refer to indoor water outlet sensor.
  - Heat pump and water pump OFF when ROOM Thermo OFF (Zone thermo OFF by Room Th or Room Thermostat).
- \* There will be no zone sensor connected to zone 1 (No zone sensor error), mixing valve and zone pump will not operate.
- During Extension System (Optional PCB connected)
- \* There will be no zone sensor connected to zone 1 (No zone sensor error), mixing valve and zone pump will not operate.
- During Extension System (Optional PCB connected)
- Buffer Tank connection select "NO" &
  - o One zone system is select
    - This zone room temperature control by either one of the 4 room sensor (Room Th, Int/Ext Room Thermostat, Water temp.)
    - Target Zone Water Temperature calculate base on selected temperature control type (Compensation or Direct) and selected room sensor.
    - Target Water Temperature will set same as Target Zone Water Temperature
    - Target Water Temperature is a temperature for heat pump to operate refer to indoor water outlet sensor.
    - Heat pump and water pump OFF when ROOM Thermo OFF (Zone thermo OFF by Room Th or Room Thermostat).
- \* There will be no zone sensor connected to zone 1 (No zone sensor error), mixing valve and zone pump will not operate.
  - 2 zone system select
    - Each zone room temperature is control by each sensor which select from either one of the 4 room sensor
    - Target Zone 1 & 2 Water Temperature is calculated based on selected temperature control type (Compensation or Direct) and selected room sensor.
      - \* Zone Mixing Valve & Zone pump will operate to achieve Target Zone Water Temperature which refer to zone sensor.
      - \* Zone Sensor will detect if zone sensor is open or short.
    - Target Water Temperature will set same as the active & higher zone water temperature setting. (When cooling mode, lower zone water temp setting)
    - Target Water Temperature is the temperature for heat pump to operate refer to indoor water outlet sensor.

- Heat pump and water pump OFF when ROOM Thermo OFF (Both Zone thermo OFF by Room Th or Room Thermostat).
- Buffer Tank Connection select "YES" &
  - o 1 zone system or 2 zone system select
    - Each zone control by each sensor which select from either one of the 4 room sensor
    - Target Zone 1 & 2 Water Temperature calculate base on selected temperature control type (Compensation or Direct) and selected room sensor. Each zone have their own Target Zone Water Temperature.
      - \* Zone Mixing Valve & Zone pump will operate to achieve each Target Zone Water Temperature which refer to zone sensor
      - \* Zone Sensor will detect if zone sensor is open or short.
    - Target Buffer Tank Temperature will be set as active & higher zone water temperature setting + Buffer Delta T. (Heating) Target Buffer Tank Temperature will be set as active & lower zone water temperature setting (Cooling).
    - Target Water Temperature will set as Target Buffer Tank Temperature + [2°C] (Heating) Target Water Temperature will set as Lower or Active Target Zone Water Temp. + [-3°C] (Cooling)
    - Target Water Temperature is a temperature for heat pump to operate refer to indoor water outlet sensor.
    - Heat pump and water pump OFF when ROOM thermo OFF
      - Heat mode: ROOM thermo OFF (Buffer Tank Temperature > Target Buffer Tank + [0°C]
      - Cool mode: ROOM Thermo OFF (Both Zone thermo OFF by Room Th or Room Thermostat)

### 14.1.7 Auto Mode Operation

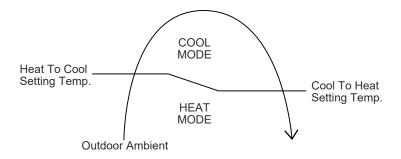


### Control details:

- To enable the unit to operate either heat or cool mode automatically, heat to cool set temperature and cool to heat set temperature can be set by control panel.
- Automatic operation is judged based on control panel setting temperature and outdoor ambient temperature.
- \* Minimum setting of heat to cool set temperature is 1°C higher than cool to heat set temperature.

### Judgement control:

- If outdoor ambient temperature < Heat to Cool Set Temperature, unit will operate in Heat Mode or else the unit will operate in Cool Mode.
- o If current operation is Cool mode, outdoor ambient temperature > Cool to Heat Temperature, unit will maintain Cool mode operation or else the unit will operate Heat mode.
- If current operation is Heat mode, outdoor ambient temperature >Heat to Cool Temperature, unit will maintain Heat mode operation or else the unit will operate Cool mode.
- Every 60 minutes the outdoor ambient temperature is judged.
- When Auto + Tank mode is selected, operation mode switching is judged by both outdoor ambient temperature and indoor air temperature.

### 14.1.8 Auto Cooling Mode Operation Limit

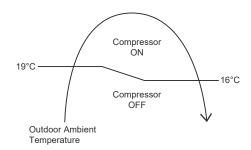

- Auto Mode Cooling Only operation will start once the outdoor ambient temperature reaches 19°C and compressor will continue to run until the outdoor ambient temperature drops to 16°C.
- Due to this limitation,
   If Heat to Cool temperature is set lower than 19°C, the compressor will not operates until the outdoor ambient temperature reaches 19°C or higher.

### 14.1.9 Tank Mode Operation

- 3 ways valve direction
  - 3 ways valve switch to tank side during Tank Thermo ON condition. Switch 3 ways valve to room side when tank achieve Tank Thermo OFF temperature.
- Tank Thermo ON/OFF Characteristic
  - o Tank Thermo OFF

### Case 1: Internal Tank Heater is select and Tank Heater ON

- Tank temperature > Tank Set Temperature continuously for 15 seconds.
- Water outlet >75°C
- Case 2: <u>Tank Heater OFF OR External Heater is select</u>
  - When heat pump OFF due to water thermos & Tank temperature > Tank water set temperature for continuously 20 seconds. OR
  - o Tank temperature > Tank set temperature + 1°C for continuously 20 seconds.
  - o Tank Thermo ON

### Case 1: Tank Heater ON (Internal Tank Heater)

Tank temperature < Tank set temperature + R/C (Tank re-heat temperature)</li>

### Case 2: Tank Heater OFF (Internal Tank Heater)

- Tank temperature < Tank water set temperature + R/C (Tank re-heat temperature)</li>
- \* When tank thermo ON, water pump will ON for 3 minutes then only heat pump turn ON.
- \* Tank water set temperature = tank set temperature or 65°C whichever lower.
- 2 ways valve close
- Heat pump Thermostat Characteristic
  - Heat pump Water Outlet set temperature is set to below table:

Outdoor ambient temperature	Heat pump water outlet temperature
< -20°C	55°C
> -20°C	65°C
> -15°C	75°C

### Characteristic of heat pump thermos ON/OFF under tank mode condition:

### Water Outlet Thermo Condition

- Heat pump thermos OFF temperature:
  - 1 Heat pump thermo OFF temperature = Target Water outlet temperature + (3°C)
  - Water outlet temperature > heat pump thermo OFF temperature for continuously 3 minutes, heat pump OFF but water pump continue ON.

- Heat pump thermo ON temperature
  - 1 Heat pump thermo ON temperature = water inlet during thermo OFF time + [-3°C]
  - When water outlet temperature < heat pump thermo ON temperature, heat pump ON.

### Water inlet thermo protection condition

- Heat pump thermo OFF temperature:
  - 1 Water inlet temperature > [75°C/55°C] for continuously 30 seconds, heat pump OFF, water pump continue ON.
- Heat pump thermo ON temperature:
  - 1 Heat pump thermos ON temp = water inlet temperature < [75°C/55°C].

Outdoor ambient temperature	Water inlet temperature
< -25°C	55°C
> -25°C	75°C

### Thermo ON/OFF for Heat Pump in Tank Operation:

When tank temperature achieve heat pump OFF condition, refer below condition:

### Conditon 1: Tank Heater ON (Internal Tank Heater)

 Heat pump will turn OFF, water pump continue ON and room heater will continue ON if tank temperature below tank heater thermo ON condition. 3 ways valve will only switch to room side after tank temperature reach tank heater thermo OFF condition.

### Conditon 2: Tank Heater OFF (Internal Tank Heater)

• If tank temperature achieve tank thermo OFF, heat pump turn OFF, water pump turn OFF, room heater OFF and 3 ways valve switch to room side.

When tank temperature achieve heat pump ON condition, water pump ON, heat pump ON and room heater turn OFF.

### Heat pump OFF condition at Tank Mode

- Tank temperature > tank water set temperature continuously for 20 seconds after heat pump thermos OFF due to water thermo. (Heat pump turn OFF but water pump continue ON and room heater turn ON to achieve tank set temperature) **OR**
- o Tank temperature > tank set temperature + [1°C] for continuously 20 seconds. (Heat pump OFF, water pump OFF, room heater OFF and 3 ways valve switch to room side)

### Heat pump ON condition at Tank Mode

Tank temperature < tank water set temperature + R/C setting (Tank re-heat temp) (Water pump turn ON OR continue ON, heat pump ON and 3 ways valve switch to tank side or maintain at tank side)

### Tank heater control

• Internal heater only operates to tank side if Tank heater ON and backup heater is enable.

### Internal heater turn ON condition:

- Tank temperature < tank set temperature AND</li>
- Heat pump thermos OFF AND
- 20 minutes from previous heater off AND
- Internal tank heater selects USE from control panel.

### Internal heater turn OFF condition:

- Tank temperature > tank set temperature for continuously 15 seconds OR
- Heat pump thermo ON OR
- Mode change or operation is off by control panel.

### 14.1.10 Heat + Tank Mode Operation

- 1 3 ways valve control:
  - 3 ways valve switch to room side during room heat-up interval and switch to tank side during tank heatup interval. Both modes will switch alternately. Tank mode is the initial running mode of Heat + Tank mode.
- 2 Heat pump operation control:
  - During room heat-up interval
    - Follow normal heating operation.

Switching to tank side depends to below cases:

Case 1:

[Previous switch from tank interval to room interval due to thermo OFF]

 Switch to tank heat-up interval when Tank temp < Tank thermos ON temp (Room heat-up interval ends)

Case 2:

[If heating operation at room side is less than 30 minutes and switch to tank side 3 times consecutively]

 Maintain at room heat-up interval regardless of the tank temperature. Switch to tank heat-up interval only when (Room Interval Timer is complete **OR** Room heat pump thermo OFF) **AND** Tank temperature < Tank thermo ON temperature. Case 3:

[Previous switch from tank interval to room interval due to tank interval timer is complete]

- Maintain at room heat-up interval regardless of the tank temperature. Switch to tank heat-up interval
  only when (Room Interval Timer is complete **OR** Room heat pump thermo OFF) **AND** tank
  temperature < Tank thermo ON temperature.</li>
- During Tank heat-up interval
  - Tank interval is the first mode running when heat + tank mode is select.
  - Switch to room interval only when tank achieve tank thermo OFF OR tank heat-up interval timer is complete.
  - Heat pump operates according to normal tank mode operation.
- 3 Room heater control:
  - During heating heat-up interval
    - Follow normal room heater control operation.
- 4 Tank heater control:
  - o During heating heat-up interval
    - Internal tank heater will not function under heating heat-up interval.
  - During tank heat-up interval
    - Internal tank heater will turn ON after heat pump thermo off to boil tank temperature to tank set temperature.
  - o 2 ways valve control is open
  - Water pump control:
    - Water pump always turn ON if room heat pump thermo ON OR Tank thermo ON.

### 14.1.11 Cool + Tank Mode Operation

- 1 3 ways valve control:
  - 3 ways valve switch to room side during room cooling interval and switch to tank side during tank heatup interval. Both mode will switch alternately. Tank mode is the initial mode of cool + tank mode.
- 2 Heat pump operation control:
  - During room heat-up interval
    - Follow normal cooling operation.

Switching to tank side depends to below cases:

Case 1:

[Previous switch from tank interval to room interval due to thermo OFF]

 Switch to tank heat-up interval when Tank temperature < Tank Thermo ON temperature (Room interval will ends)

Case 2:

[If cooling operation at room side is less than 30 minutes and switch to tank side for 3 times consecutively]

 Maintain at room cooling interval regardless of the tank temperature. Switch to tank heat-up interval only when (Room Interval Timer is complete **OR** Room heat pump thermo OFF) **AND** Tank temperature < Tank thermo ON temperature.</li>
 Case 3:

[Previous switch from tank interval to room interval is due to tank interval timer is complete]

Maintain at room cooling interval regardless of the tank temperature. Switch to tank heat-up interval
only when (Room Interval Timer is complete **OR** Room heat pump thermo OFF) **AND** tank
temperature < Tank thermo ON temperature.</li>


### \*Tank Thermo ON temperature:

Internal Tank Heater select USE	<tank (tank="" +="" c="" r="" re-heat="" set="" setting="" temperature="" temperature)<="" th=""></tank>
Others	<pre><tank (tank="" +="" c="" pre="" r="" re-heat="" set="" setting="" temperature="" temperature)<="" water=""></tank></pre>

- During Tank heat-up interval
  - Tank interval is the first mode running when the cool + tank mode is select.
  - Switch to room interval only when tank achieve tank thermo OFF **OR** tank heat-up interval timer is complete.
  - Heat pump operates according to normal tank mode operation.
- 3 Room heater control:
  - During room cooling interval
    - Room heater is OFF and not operates.
- 4 Tank heater control:
  - During room cooling interval
    - Internal tank heater will not function under room cooling interval.
  - During tank heat-up interval
    - Internal tank heater will turn ON after heat pump thermos off to boil tank temperature to tank set temperature.
- 5 2 ways valve is close.
- 6 Water pump control:
  - Water pump always turn ON if room heat pump thermo ON OR Tank thermo ON.

### 14.1.12 Outdoor Fan Motor Operation

Outdoor fan motor is adjusted according to operation condition. It starts 30 seconds before compressor starts operation and it stops 60 seconds after compressor stops operation.

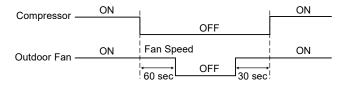

The reason the outdoor fan stops 60 seconds after the compressor stops is to exhaust heat.


The reason why the compressor starts operating 30 seconds before it starts is to accurately detect the outside temperature.

# 14.2 Water Pump

The system will start checking on the water flow level after operation start for 30 seconds. If water pressure level is detected low or high continuously 300 seconds, the water pump and the compressor will be OFF permanently and OFF/ON control panel LED will blink (H21 error occurs).

### 14.2.1 Water Pump Control

- Once the indoor unit is ON, the water pump will be ON immediately and no error judgment for 30 seconds.
   However, during this 30 seconds operation, if there is any abnormality cause at outdoor or malfunction, the compressor should be OFF immediately and restart delay after 3 minutes.
- The system will start checking on the water flow level after operation start for 30 seconds. If water flow level is detected low continuously 140 seconds, the water pump and the compressor will be OFF permanently and OFF/ON control panel LED will blink (H62 error occurs).
- When error happens, the power has to be reset to clear the error.
- If there is no error indication, the water pump shall be continuously running.
- The water pump will remain ON when compressor OFF due to thermostat OFF setting is reached.
- Water pump will OFF when room thermo **OR** tank thermo **OR** buffer tank thermo OFF.
- Water pump will delay 30 seconds to turn OFF when request to OFF except during anti-freeze deice activate or air purge mode.

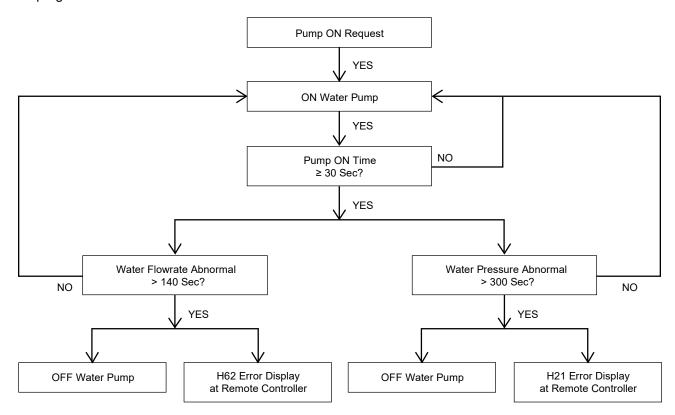

### Maximum pump speed setting on remote control


• Standard pump speed is automatically controlled to get the designed water temperature different between water inlet and outlet (ΔT). Instead of setting the standard pump speed, maximum pump speed is manually adjusted by the installer according to water circuit pressure drop.

However, the following sequences do not follow maximum pump duty setting by remote control.


- Pump down mode
- Air purge mode
- Normal deice

### 1) P-Q graph for different pump HEX duty

Standalone (WH-WXG09ME5, WH-WXG12ME5)

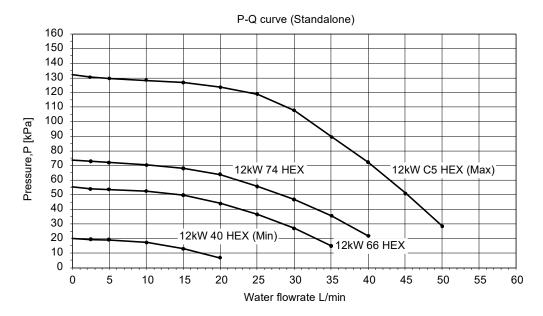

Connection AiO (WH-WXG09ME5, WH-WXG12ME5)

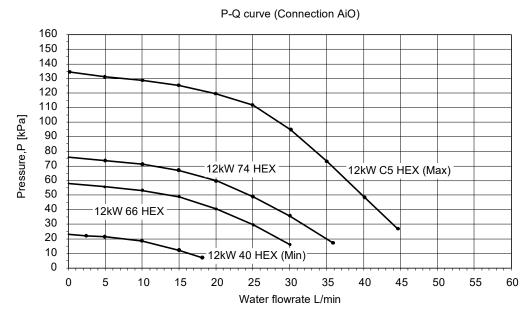


× This condition is under connecting ODU and connecting 5m piping (inner diameter Φ25) between ODU and IDU (AIO).

### 14.2.2 Zone Water Pump Control

### Purpose:

 Water pump install at each zone to circulate the water inside each zone during buffer tank connection selected "YES" or 2 zone systems.

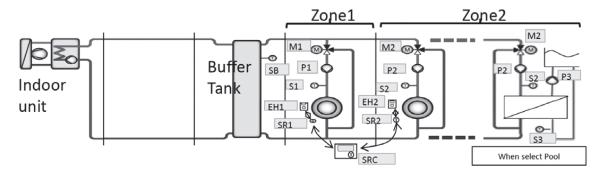

### Content:

- AC type water pump install for this zone water pump control. When optional PCB connected, 230V output will
  drive this zone pump.
- There are three pump can be connected through Optional PCB. (Zone 1 Pump, Zone 2 Pump, & Pool Pump)
  - \* Zone 1 pump [P1] use to circulate zone 1 water circuit & Zone 1 mixing valve [M1] adjust to control the Zone 1 target water temperature.
  - \* Zone 2 pump [P2] use to circulate zone 2 water circuit & Zone 2 mixing valve [M2] adjust to control the Zone 2 target water temperature.
  - \* When Pool Function select as Zone 2 circuit, [P2] use to circulate water to heat exchanger which use to transfer heat to pool water.
  - \* Pool pump [P3] circulates the pool water through the heat exchanger to get warm water.
- Zone 1 and Zone 2 water pump start condition:
  - Zone room request ON (eg. Zone 1 thermo ON, only zone 1 pump will turn ON)
- Zone 1 and Zone 2 water pump stop condition:
  - Zone room request OFF
- Pool water pump start condition:
  - Pool Zone request ON AND
  - o Pool function is selected
- Pool water pump stop condition
  - o Pool zone: Zone room request OFF OR
  - o Pool function is cancel
    - \* Zone 1 & Zone 2 water pump need to turn OFF when antifreeze deice pump stop control activate and turn ON back after the antifreeze deice pump stop control end under setting of "NO" buffer tank connection.

### **Zone Pump Prohibit ON control:**

Start condition:

Zone 1 water temperature ≥ 85°C continuously for 5 minutes \*stop zone water pump operates if the zone water fulfilled.

Cancel condition:

After 30 minutes from start condition fulfilled.

\*zone water pump operates according to normal condition.

### **Zone Pump Control during Anti-Freeze**

Zone pump control during Zone Anti-Freeze Control:

- When Zone Anti-Freeze Flag=1, Zone Pump Turn ON.
- When Zone Anti-Freeze Flag=0, Zone Pump Turn OFF.

Zone pump control during Indoor Anti-Freeze Control:


• Zone pump only ON/OFF if the Extension PCB connected and Buffer Tank select "NO" condition

When Indoor Anti-Freeze flag=1, Zone Pump Turn ON When Indoor Anti-Freeze flag=0, Zone Pump Turn OFF

\* Pool Water Pump will not affected by both Indoor anti-freeze control or zone anti-freeze control.

### 14.2.3 Water Pump Speed Feedback Error

- Basically pump speed feedback is control by micon.
- When pump speed is below low limit or over high limit for a few seconds, micon detect pump error and system is stopped.
- Error detection conditions:
  - o Detect abnormal water pump speed for continuous 10 secs.
  - Current pump speed < 300 rpm or</li>
  - o Current pump speed > 6000 rpm for 10 seconds.
- Control contents:
  - When error occurs, water pump, heating and heater is stopped for 30 seconds then restart again (Retry control).
  - When micon detect error again, system is stopped and error code [H20] is displayed at control panel.

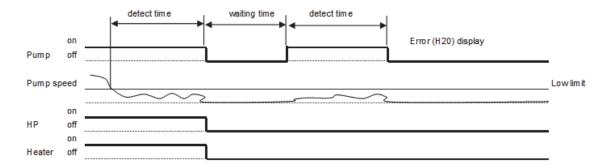

# 14.3 Extra Pump Function (Optional)

There are three different controls for the external pump, Heat (default), DHW or NO.

### Remocon setting: Extra pump = Heat (default)

This is the conventional setting for adding an external water pump when the flow rate is insufficient due to water pressure loss, etc.

### **Start conditions:**

- 1) Outdoor Water Pump Turn ON
- 2) 3 ways valve switch at room side
- 3) External Pump control for Bivalent ON. (Alternative or SG ready mode or Smart mode)
- 4) Heat Pump OFF AND Boiler turn ON under Bivalent control
- 5) When Optional PCB Connectivity select No AND Buffer Tank Connection select Yes
- 6) Not Tank only mode AND Zone room thermo ON When [ (1) AND (2) ] OR [ (3) AND (4) ] OR [ (5) AND (6) ] fulfill, turn ON extra pump. \*Output 230V to the external pump when fulfil start condition.

### **Cancel conditions:**

- 1) Outdoor water pump turn OFF
- 2) 3 ways valve switch to tank side
- 3) Heat pump OFF and Boiler OFF under Bivalent Control
- 4) When Optional PCB Connectivity select No AND Buffer Tank Connection select Yes
- 5) Tank Only mode
- 6) Zone room thermo OFF

When {[ (1) OR (2) ] AND (3) } OR { (4) AND [ (5) AND (6) ]} fulfill, turn OFF extra pump.

### Remocon setting: Extra pump = DHW

This is the setting when using DHW circulation operation.

### **DHW** circulation start conditions

All of the following holds

- 1) Extra pump = "DHW"
- 2) DHW circulation is effective time.
- 3) Tank mode is "ON"

### **DHW** circulation start conditions

Which of the following holds

- 1) Extra pump = "No" or "Heat"
- 2) DHW circulation isn't effective time.
- 3) Tank mode is "OFF"

### **DHW** circulation operation

Operation is 2 type, Confort or Efficiency

### **DHW** circulation operation (Comfort)


Prioritize comfort over power consumption

- 1) When DHW circulation request is received, pump port is supply 230V
- 2) During this operation, 230V is always supply
- 3) When operation is "OFF", 230V is stopped

### **DHW** circulation operation (Efficiency)

Pump operate intermittent (ON/OFF)

- 1) When DHW circulation request is received, pump port is supply 230V.
- 2) Pump operate intermittent (ON/OFF)
  ON time and OFF time is decided by Remocon.
- 3) When operation is "OFF", 230V is stopped

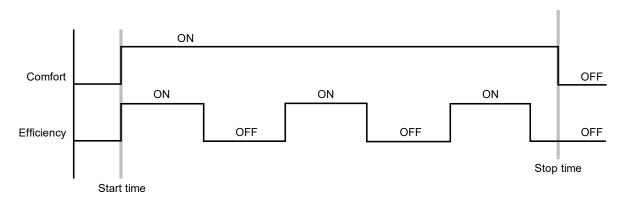


### Remocon setting: Extra pump = No

The extra pump does not work.

# 14.4 Water Circuit Part Safety

# 14.4.1 Water Circuit Part Safety Control

- 1 When water pump is ON, the system will start checking flow switch status (ON/OFF).
- 2 If the flow switch ON for 10 seconds, the system will check on the water inlet temperature for 10 seconds. If the water inlet temperature not exceeds 80°C, the water pump shall be continuously running with normal mode.
  - If the water inlet temperature exceeds 80°C for continuously 10 seconds, the water pump will be OFF immediately.
- 3 After water pump OFF for more than 10 minutes, it will be ON back and the indoor unit safety control checking is restarted.

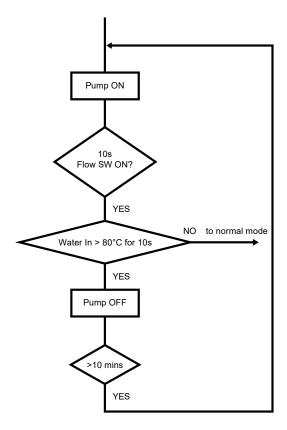

### 14.5 Auto Restart Control

1 When the power supply is cut off during the operation of Air-to-Water Heatpump, the compressor will reoperate after power supply resumes.

### 14.6 Indication Panel

LED	Operation
Color	Green
Light ON	Operation ON
Light OFF	Operation OFF

### Note:

• If Operation LED is blinking, there is an abnormality operation occurs.

# 14.7 Indoor Back-Up Heater Control (Excluding when Operating in Standalone)

### 14.7.1 Indoor Electric Heater Control

- Normal Heating Mode
  - Heater On condition:
    - a. Heater switch is ON
    - b. After Heatpump thermo ON for [30] mins
    - c. After water pump operate [9] mins
    - d. Outdoor air temperature < Outdoor set temperature for heater
    - e. When water outlet temperature < Water set temperature + [-4°C]
    - f. [20] minutes since previous Backup heater Off
      - \* When heatpump cannot operate due to error happens during normal operation, heater will go into force mode automatic
      - \* Heater need to operate during deice operation
    - g. Current water flowrate is higher than min. flowrate
  - Heater Stop Condition:
  - a. When outdoor set temperature > outdoor set temperature + [+2°C] for continuous 15 secs OR
  - b. When water out temp> water set temperature + [-2°C] for continuous 15 secs OR
  - c. Heater switch is Off OR
  - d. Heatpump thermo-off or OFF condition

### 2 Force Heater Mode

- o Heater On condition:
- a. After water pump operate [9] mins
- b. When water outlet temperature < water set temperature + [-4°C]
- c. [20] minutes since previous Backup heater Off
- d. Current water flowrate is higher than min. flowrate
- Heater Stop condition
- a. Force mode off OR
- b. When water outlet temperature > water set temperature + [-2°C] for continuous 15 secs
- \* Do not operate heater at the following situation
- 1 Water outlet temperature sensor, and water inlet sensor abnormal
- 2 Flow switch abnormal
- 3 Circulation pump stop condition

### 14.7.2 Room Heater Operation during Deice

### Purpose:

To protect the indoor Heat Exchanger from ice forming and prevent heat exchanger plate breakage.

### **Control content:**

This Heater protection control will activate only if the backup heater is enable at custom setup by remote
controller. Once fulfil the start condition, room heater will turn ON together (base on max heater capacity
selection) and stop together if stop condition is fulfilled.

\* If the heater is request to turn ON OLP feedback will be detected.

### Starting conditions:


- During normal deice operation 4~9
- Water outlet temperature < 7°C or Water inlet temperature < 7°C</li>

Heater operates when 1~2 fulfilled.

### Stop condition:

- When normal deice end or
- Water outlet temperature > 45°C

However, room heater keeps ON if indoor electric heater control activate.

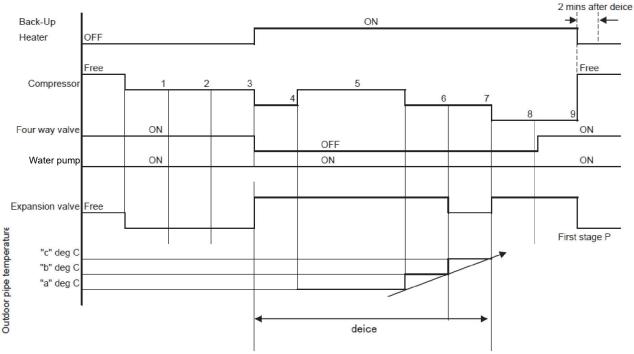

<sup>\*</sup> Backup heater must Turn OFF if the water pump turn OFF.

# 14.8 Tank Heater Control (Excluding when Operating in Standalone)

### 14.8.1 Tank Heater Remote Control Setting

1 Tank heater selection:

External: - Booster Heater use to heat up tank when select external Internal: - Backup Heater use to heat up tank when select internal


- \* When select External Tank Heater, Heater Delay ON Timer need to set. (range 20 min ~ 3 hrs)
- 2 Tank Heater ON/OFF selection by user.

The remote control Tank set Temperature range will change according to the External and Internal Tank Heater use.

Tank Heater Selection	Range
External	40 ~ 75°C
Internal	40 ~ 65°C

### 14.8.2 External Heater Control at Tank Side

Heating operation condition:

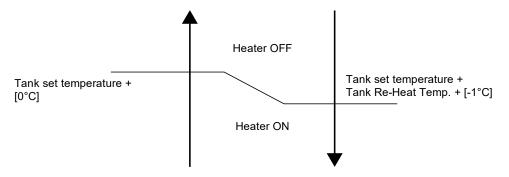


- Tank heater Turn On condition:
  - 1 External Heater selected for Tank heater by remote controller.
  - 2 Tank Heater select ON by user.
  - 3 Tank mode operation ON (Tank mode, Heat + Tank, or Cool + Tank).
  - 4 After TANK HEATER DELAY TIMER fulfill during heat pump startup time in tank mode, or during switching from heating heat-up interval to tank heat + up interval in heat + tank mode.

- 5 Tank temperature < tank set temperature + [Remote controller Set Tank Re-heat Temp] + [-1°C].
- 6 20 minutes since previous heater off.
  - \* TANK HEATER DELAY TIMER is clear when tank heat-up interval end.
- Tank heater Turn Off condition:
  - 1 Tank temperature > tank set temperature + [0°C] for continuous 15 seconds.
  - When BOOSTER HEATER DELAY TIMER start count after switch from heating heat-up interval to tank heat-up interval.
  - 3 Tank Heater select OFF by user.
  - 4 Tank Mode Operation OFF.

### 14.8.3 Internal Heater Control at Tank Mode

- Internal heater turn On condition:
  - 1 Internal Heater select for Tank heater by remote controller.
  - 2 Tank Heater select ON by user.
  - 3 Backup Heater Enable.
  - 4 Tank Temperature < Tank Set Temperature.
  - 5 Heat Pump Thermo OFF.
  - 6 20 minutes from previous heater off.
- Internal heater turn OFF condition:
  - 1 Tank Temperature > Tank Set Temperature + [0°C] for continuous 15 seconds. **OR**
  - 2 Heat Pump Thermo ON OR
  - 3 Mode Change or Operation OFF by remote controller OR
  - 4 Water outlet temperature > 75°C
    - \* Backup Heater Turn ON/OFF all together according to the selected heater capacity.

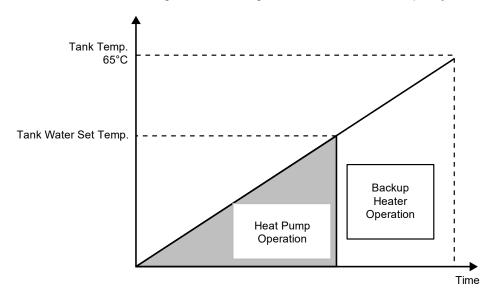

## 14.9 Base Pan Heater Control (Optional)

- To enable the base pan heater function, control panel initial setting has to be manually adjusted by activating Base Pan Heater menu.
- There are 2 optional start condition can be selected, Type A or Type B.
- Control details:
  - 1 Type A: (Default Auto Mode)

#### Start conditions:

When outdoor air temperature ≤ 3°C during heating and deice operation is ON.

#### Control contents:

 Base pan heater is ON during deice operation and continues ON for 10 minutes after deice operation ends.

## Cancel condition:

- When outdoor temperature > 6°C after deice end or
- When operation is not at heating mode or
- Base pan heater ON timer count is completed.

## 2 Type B: (ON Mode)

## Start conditions:

○ When outdoor air temperature is ≤ 5°C and operates in heating mode, base pan heater is ON.

### Cancel conditions:

- When outdoor air temperature is > 7°C or
- When operation is not at heating mode.

## 14.10 Force Heater Mode

Purpose of Force Heater Mode:

As a backup heat source when heat pump error. Force heater Mode only control backup heater to heat up the
room circuit, and turn ON back up heater or booster heater to boil up tank water base on the tank heater
selection (internal or external).

## Force Heater Control start condition:

- Force heater request ON by user during error OR auto turn ON by remote controller during error AND
   (Force Heater mode can be operate regardless of mode selection, remocon will send the latest mode selection
   force bit by bit to indoor. Indoor will judge to turn ON heater to room side if it is heat mode selected, and turn ON
   heater to heat tank water base on tank heater selection)
- During Error Happen (exclude the error list below)

## Error List which not allow Force Heater operation

H12	Capacity Mismatch	H90	Abnormal ID/OD communication
H20	Abnormal Water Pump	H95	Abnormal Voltage Connection
H21	Abnormal Water Pressure	F30	Abnormal water outlet 2 sensor
H62	Abnormal Water Flow	F37	Abnormal Water Inlet sensor
H70	Abnormal Back-up Heater OLP	F45	Abnormal Water Outlet sensor
H74	PCB Communication Error	F50	Abnormal Water Inlet 2 sensor
H76	Indoor-Remote Controller Communication Error		
[ When tank	[ When tank mode operate with external heater selected & tank heater select ON ]		
H22	Abnormal tank 2 sensor	H91	Abnormal tank heater OLP
H72	Abnormal tank 1 sensor		

### Force Heater Control Stop Condition:

- Force Heater request OFF OR
- Operation OFF request OR
- Power reset OR
- Error of above list happens during force heater operation.

#### Control contents:

- After fulfill start condition, indoor will operate the force heater operation according to below mode condition Heat mode Only: Turn ON backup heater to achieve room heat pump target water temperature.
  - Heat + Tank mode: Turn ON backup heater to heat up room **OR** Turn ON Heater to Boil up tank water.
  - Cool mode Only: Water pump and backup heater will OFF in force heater mode.
  - Cool + Tank mode: Operate pump and internal Heater OR External heater to Boil up tank water.
  - Tank mode Only: Operate pump and internal Heater OR External heater to Boil up tank water.
  - \* For heat mode condition, backup heater will only turn ON if the backup heater is enable regardless of Room Heater Selection.
  - \* For tank mode condition. If internal heater selected backup heater will turn ON to boil up tank water.
  - If external heater selected, booster heater will turn ON to boil up tank water regardless of tank heater selection.

### Room Side: (Heat Mode):

- When force heater mode start condition fulfilled, turn ON water pump and turn ON backup heater follow below control.
- Operate the 3 ways valve at room side only and turn ON 2 ways valve as heat mode operation.
- Turn ON the zone pump and mixing valve if system select 2 zone system or Buffer tank connect YES, control according to normal zone pump and mixing valve control.
- When Force heater mode stop condition fulfilled, turn OFF heater as below condition and turn OFF water pump after pump delay time.

### Backup Heater On Condition:

- When Force Heater Control start condition fulfill AND
- After water pump operate 2 minutes AND
- When water outlet temperature < water set temperature + [-4°C] AND</li>
- 20 minutes since previous Backup heater Off AND
- Backup Heater Enable

### Backup Heater Stop condition:

- Force mode off OR
- Operation off OR
- When water outlet temperature > water set temperature + [-2°C] for continuous 15 secs **OR** 
  - \* ON/OFF follow normal heater sequence.

## Tank side (Tank mode):

- When tank mode select and force heater bit received, turn ON backup heater (INTERNAL) or Booster Heater (External) depend on the tank heater selection.
- If tank heater selection is INTERNAL, follow normal thermo judgement to switch 3 ways valve to tank side and room side.
- If tank heater selection is EXTERNAL, only turn ON booster heater according to tank thermo.

## Tank Heater selection is INTERNAL:

#### Backup Heater ON Condition:

- After water pump operate 2 mins AND
- When tank temperature < Tank set temperature [Remocon Set Tank Re-heat Temp] AND
- 20 minutes since previous Backup heater OFF AND
- Backup Heater Enable

### Backup Heater OFF condition:

- Force mode off OR
- When tank temperature > Tank set temperature for continuous 15 secs OR
- Tank Operation OFF

#### Tank Heater selection is EXTERNAL:

Booster Heater ON condition:

- Force Heater mode ON AND
- Tank temperature < tank set temperature + [Remocon Set Tank Re-heat Temp] 1°C, AND</li>
- 20 minutes since previous heater off.

#### Booster Heater OFF condition:

- Tank temperature > tank set temperature for continuous 15 secs.
- Force mode OFF
- Tank Mode Operation OFF

(During tank interval or tank mode condition, water pump and 3 ways valve will OFF)

## 14.11 Powerful Operation

Powerful mode is use to increase the capacity of heat pump to achieve higher target temperature. Powerful mode is applicable when heat mode is operating.

## Remote control setting:

On quick menu of remote control, there is 4 options of powerful mode can be select.

OFF
30 minutes
60 minutes
90 minutes
Cancel powerful mode
Set powerful for 30 minutes
Set powerful for 60 minutes
Set powerful for 90 minutes

#### **Control contents:**

During the time set by remote control, powerful will activate according to 2 shift up controls. However, this function is applicable only for heating. Remote control will transmit the signal to indoor unit once this function is select then transmit OFF signal to indoor when the timer is complete. Indoor will transmit signal to outdoor for frequency control.

Indoor setting temperature shift

- If system is standard system (Optional PCB is not connected)
  - o Target water temperature will shift up to Wlo or Whi whichever higher.
- If system is extension system (Optional PCB is connected)
  - Target water Zone 1 and Zone 2 temperature will shift up to Wlo or Whi whichever higher.
  - \* If "Direct Type" temperature control is select, this powerful shift up setting is not effective.

### Start condition

Powerful function is select by remote control.

#### End Condition

- o OFF/ON button is pressed.
- Powerful function is OFF by remote control.

## 14.12 Quiet Operation

Quiet mode is use to reduce the noise of outdoor unit by reducing the frequency or fan speed.

#### Quiet level

There are 3 level (Level 1, Level 2, Level 3) to set by quick menu function on remote control.

#### **Control content**

Once the quiet function is select, the remote control will transmit the signal to indoor and outdoor unit.

## **Quiet priority**

Set whether to prioritize "Sound" or "Capacity"

# In case of "Sound" is set for "Quiet priority" in the function setup of the remote control Start condition

Quiet mode is set on remote control.

Quiet mode is request ON by weekly timer.

### Stop condition

OFF/ON button is pressed.

Quiet mode is OFF by remote control.

Quiet mode is request OFF by weekly timer.

# In case of "Capacity" is set for "Quiet priority" in the function setup of the remote control Start condition

- 1) Quiet mode is set on remote control.
- 2) Quiet mode is request ON by weekly timer.
- 3) During heating: Water outlet temperature > Target Water Temperature 3°C
- 4) During Cooling: Water outlet temperature < Target Water Temperature + 3°C
- 5) During operation mode when 3 way valve is at tank direction : Tank temperature > Tank set Temperature 3°C

When condition {(1) or (2)} and {(3) or (4) or (5)} is fulfilled, after the quiet mode start by user or timer.

#### Stop condition

- 1) Quiet mode is OFF by remote control.
- 2) OFF/ON button is pressed.
- 3) Quiet mode is request OFF by weekly timer.
- 4) During heating: Water outlet temperature ≤ Target Water Temperature 5°C for continues 30 minutes
- 5) During Cooling: Water outlet temperature ≥ Target Water Temperature + 5°C for continues 30 minutes
- 6) During operation mode when 3 way valve is at tank direction : Tank temperature <= Tank set temperature 5°C for continues 30 minutes

When any of above mentioned condition is achieved, this control is cancelled.

## 14.13 Sterilization Mode

### Purpose:

o To sterilize water tank by setting the required boiling temperature.

### Remote control setting

- Days for sterilization function to start can be select.
- o Time of selected day to start sterilization function.
- Boiling temperature (Internal heater is 55°C ~ 65°C)
- Maximum operation time is 5 minutes to 1 hour.

#### Start condition

- o Tank connection set to "YES" by remote control
- Sterilization function selects "YES".
- Sterilization signal received from remote controller by timer.
- Tank mode request ON.

## • Stop condition

- When boiling timer is completed. Boiling timer (Remote control set maximum operation time) start counting once tank achieve boiling set temperature **OR**
- o After 8 hours of operation since sterilization start.
- Tank mode request OFF.

#### Control content:

- During sterilization function activation time, target tank set temperature will internally change to boiling set temperature.
- During sterilization activates, heat pump and heater (external or internal) will operate as normal tank mode to achieve the boiling set temperature.
- Sterilization operation will end when stop condition is fulfill.
- o After sterilization is complete, tank set temperature will resume to normal operation.

<sup>\*</sup> Tank temperature may not achieve boiling set temperature if tank heater is select OFF **OR** external compressor switch.

## 14.14 DHW Circulation Pipe Sterilization Operation

### Purpose:

This control is designed to prevent legionella for DHW circulation pipe.

## DHW circulation pipe sterilization mode start conditions

All of the following holds

- 1) Remocon setting: Extra pump = DHW
- 2) Tank sterilization operation is finished.
- 3) Tank sterilization is completed within 490 minutes since sterilization function start

### DHW circulation pipe sterilization mode stop conditions

Which of the following holds

- 1) After 490 minutes of operation since DHW circulation pipe sterilization start
- 2) Circulation pump operated 30 minutes
- 3) Tank mode Request OFF
- 4) Remocon setting: Extra pump = Heat or NO

### DHW circulation pipe sterilization mode control contents


It works in the following order.

- 1) Tank sterilization mode is ON
- 2) Tank boiling start Target temp. is RC setting
- 3) Tank sterilization mode finish or stop.
- 4) DHW circulation pump operate during 30 minutes
- 5) Back to normal operation

## 14.15 Outdoor Ambient Thermo OFF Control

#### Purpose:

Stop provides heating to room side during high outdoor ambient condition.

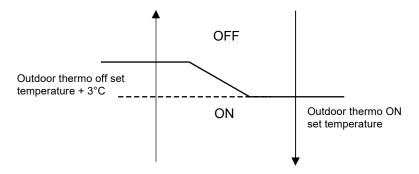

#### **Control content:**

- Heating outdoor ambient thermo OFF control only applicable when heat pump operate in heat mode. (This control will not activate when running in tank side)
- Heat pump and water pump will turn OFF when outdoor ambient is higher than outdoor thermo OFF set temperature.
- Heat pump will thermo ON back when outdoor ambient < Outdoor thermo ON set temperature and RC delay time has passed after Heating thermo-ON temperature is reached.

## 14.16 Alternative Outdoor Ambient Sensor Control

### Purpose of the Alternative Outdoor Ambient Sensor:

• It is some possibility that the air to water heat pump unit will install at a location where the original ambient sensor is expose to direct sunlight. Therefore, another optional ambient sensor can be connect to indoor PCB and locate at new and better reading location to improve the heat pump performance.

## Control Detail:

- Remocon can select either the extra outdoor ambient sensor is connected or not. (YES/NO)
- The alternative outdoor ambient sensor will connect to indoor unit main PCB terminal.

- when alternative sensor select NO
  - Original Outdoor temperature sensor will use for Indoor & Outdoor heat pump operation reference sensor.
  - Data communication direction: OUTDOOR send outdoor temperature reading to INDOOR.
  - Error judge: OUTDOOR will judge the original outdoor sensor error (F36 display if error detect). No judge error on alternative outdoor sensor
- when alternative sensor select YES
  - Alternative Outdoor temperature sensor will use for Indoor & Outdoor heat pump operation reference sensor.
  - Data communication direction: INDOOR send outdoor temperature reading to OUTDOOR.
  - Error judge: INDOOR will judge the Extra outdoor sensor error only after operation ON request received from remocon.

(F36 display if error detect). No judge error on original outdoor sensor.

## 14.17 Force DHW Mode

### Purpose:

When user want to use hot water now, user can press this force DWH mode under the quick menu to operate tank only mode to boil up the tank temperature.

## Remocon setting:

Force DHW function can be activate under quick menu.

#### **Control Content:**

- when press the Force DHW function during operation OFF condition:
  - When receive this Force DHW bit from remocon, indoor will run tank only mode regardless of the mode selection.
  - After tank temperature achieve tank thermo off temperature, turn OFF force DHW bit and return to operation OFF with previous mode selection.
- When press the Force DHW function during operation ON condition:
  - When receive this Force DHW bit from remocon, indoor will memories the running mode and run tank only mode regardless of the mode selection.
  - After tank temperature achieve tank thermo off temperature, turn OFF force DHW bit and return to previous memories running mode.
    - \* when operation OFF or mode change request from remocon during force DHW mode operation, End force DHW mode and follow the new request operation.
    - \* Once receive force DHW mode from remocon, indoor direct start tank mode and consider tank thermo ON. Thermo OFF only when achieve tank thermo OFF depend on the Tank System Setting.

## 14.18 SMART DHW Mode

Panasonic All In One model provide the option to choose STANDARD DHW Mode or SMART DHW Mode for Tank Heat Up according to requirement. SMART DHW mode comparatively consume lower tank heat up power but longer re-heat time than STANDARD DHW Mode.

#### **SMART DHW control**

- During SMART DHW start time 20:00 (Default Setting) to SMART DHW stop time 05:00 (Default setting)
   Heat pump re-heat the tank water only when tank temperature drop below 20°C (Default setting)
- Time between 05:00 to 20:00 Heat pump reheat the tank water when tank temperature as below condition

Condition 1: Tank Heater ON

Reheat when tank temperature below tank set temperature + R/C (Tank re-heat Temperature) - 3°C

Condition 2: Tank Heater OFF


Reheat when tank temperature below Tank set temperature or  $51^{\circ}$ C (Whichever lower) + R/C (Tank re-heat Temperature) - $3^{\circ}$ C

\* SMART DHW start time, stop time and SMART ON Temperature can change in CUSTOM menu.

## 14.19 Anti Freeze Control

- Anti freeze protection control menu can be set YES or NO by control panel.
- Heatpump system there are 2 types of anti freeze control:
  - 1. Models with Back up heater (Excluding in Standalone and connection control module):

Outdoor air temp zone is defined as below:

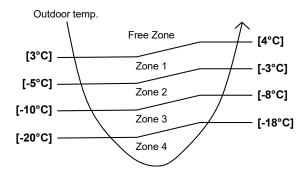


- Water pump circulation anti freeze control
  - Water pump turns ON when **ALL** below conditions are fufilled:
    - Heat pump OFF (Stand by) OR error occurs.
    - Water flowing flag is ON.
    - Water flow sensor is not abnormal.
    - o Outdoor air temp zone is any of Zones 1 to 4 OR outdoor ambient temp. sensor is abnormal.
    - Water inlet/outlet temp. < [A°C]</li>
    - o After 5 minutes from previous water pump OFF.
  - Water pump turns OFF when <u>ANY</u> below conditions is fufilled:
    - Outdoor air temp zone is Free Zone
    - Outdoor air temp zone is any of Zones 1 to 4.
      - After water pump ON for 4 minutes, and water inlet temp. ≥ [B°C]
      - Else, shift to back up heater anti freeze control.
  - However, if flow sensor is abnormal (H62), then water pump circulation anti freeze control will not activate.
- Back up heater anti freeze control
  - Back up heater turns ON when <u>ALL</u> below conditions are fufilled:
    - Water inlet/outlet temp. < [B°C]</li>
    - o Water pump circulation anti freeze control activated and water pump ON for 4 minutes.
  - Back up heater turns OFF when ANY below conditions is fufilled:
    - o Outdoor air temp zone is Free Zone
    - Outdoor air temp zone is any of Zones 1 to 4.
      - Water inlet/outlet temp. ≥ [C°C]
  - However, if back up heater is abnormal (H70), then back up heater anti freeze control will not activate.

	A°C	В°С	C°C
Zone 1	6°C	8°C	13°C
Zone 2	10°C	15°C	20°C
Zone 3	16°C	21°C	28°C
Zone 4	25°C	33°C	33°C

Table: Threshold condition for Water temp when Models with Back up heater

2. Models without Back up heater (Standalone and connection control module):

Outdoor air temp zone is defined as below:

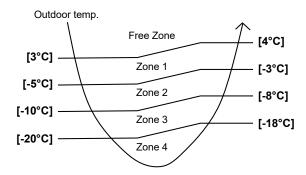

- Water pump circulation anti freeze control
  - Water pump turns ON when ALL below conditions are fufilled:
    - Heat pump OFF (Stand by) OR error occurs.
    - Water flowing flag is ON.
    - o Water flow sensor is not abnormal.
    - o Outdoor air temp zone is any of Zones 1 to 4 OR outdoor ambient temp. sensor is abnormal.
    - Water inlet 2 / outlet 2 temp. < [A°C]
    - o After 5 minutes from previous water pump OFF.
  - Water pump turns OFF when ANY below conditions is fufilled:
    - Outdoor air temp zone is Free Zone
    - Outdoor air temp zone is any of Zones 1 to 4.
      - After water pump ON for 4 minutes, and water inlet temp. ≥ [B°C]
      - Else, shift to Heat pump unit operation anti freeze control.
  - However, if flow sensor is abnormal (H62), then water pump circulation anti freeze control will not activate.
- · Heat pump unit operation anti freeze control
  - Heat pump unit operation turns ON when <u>ALL</u> below conditions are fufilled:
    - o Water pump circulation anti freeze control activated and water pump ON for 4 minutes.
  - Heat pump unit operation turns OFF when ANY below conditions is fufilled:
    - Water inlet / Water inlet 2 temp. > [C°C] for 3 minutes.


	A°C	В°С	C°C
Zone 1	20°C	19°C	24°C
Zone 2	20°C	19°C	24°C
Zone 3	20°C	23°C	28°C
Zone 4	20°C	27°C	33°C

Table: Threshold condition for Water temp when Models without Back up heater

## 14.19.1 Zone Anti-Freeze Control

• If buffer tank selection is "NO" and Anti- Freeze function select "NO" from remote control, this control cannot activate.

Outdoor air temp zone is defined as below:

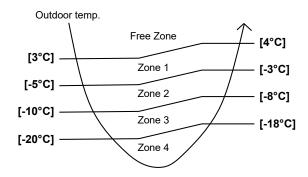

#### Start condition:

- After [5] min from previous Zone pump off. AND
- Outdoor air temp zone is any of Zones 1 to 4 OR outdoor ambient temp. sensor is abnormal. AND
- Zone water temperature < [A°C] OR Zone Sensor Short or Open</li>

#### Cancel condition:

- After water Zone pump ON [4] min AND
- Outdoor air temp zone is Free Zone OR
- Outdoor air temp zone is any of Zones 1 to 4.
   Zone water temperature sensor ≥ [B°C]

\*However, Zone water temperature sensor is Open or Short, cancel zone water temperature condition is ignored.

	A°C	В°С
Zone 1	6°C	8°C
Zone 2	10°C	15°C
Zone 3	16°C	21°C
Zone 4	25°C	33°C

Table: Threshold condition for Water temp when Models with Back up heater

	A°C	В°С
Zone 1	20°C	19°C
Zone 2	20°C	19°C
Zone 3	20°C	23°C
Zone 4	20°C	27°C

Table: Threshold condition for Water temp when Models without Back up heater


## 14.20 Solar Operation (Optional)

## 14.20.1 Solar Operation:

Solar function:

 This function allow user to control the solar pump to operate depend on the solar sensor reading compare to the tank installed. Solar pump will circulate the hot water energy store at solar panel to heat up the DHW Tank or Buffer Tank.

### Solar Connection Diagram:

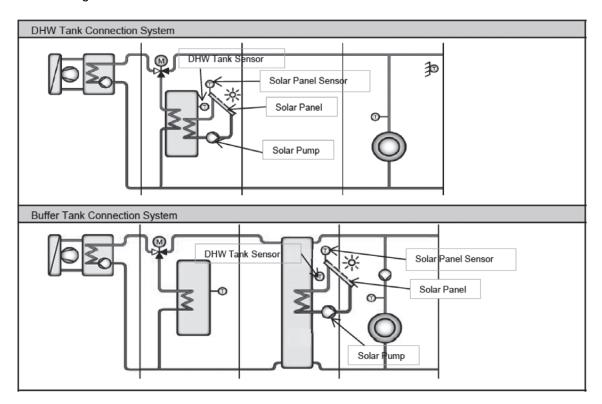

- Solar function can only enable when the Optional PCB is connected.
- Few part as below need to install to control the solar operation:
  - o Solar Panel
  - o Solar Pump
  - o Solar Panel Sensor
  - Tank Sensor (Buffer tank sensor OR DHW Tank sensor depend on the connection direction)
    - \* During Solar Connection to the system, installer need to alert on the high water temperature may flow to the zone circuit or DHW piping circuit. Therefore pipe which withstand higher water temperature need to be installed.
- Solar remote control setting
  - 1 Solar Setting can only be set when the optional PCB connection is select "YES"
  - 2 By remote controller, Setting as below list can be set for solar function operation (Installer Menu)
    - Solar Function ("YES" or "NO)
    - o Tank Connection Direction ("DHW TANK" or "BUFFER TANK")
    - Delta T turns ON: Difference temperature setting between solar panel sensor and Tank to turn on solar pump. (Range :5 ~ 15°C)
    - Delta T turns OFF: Difference temperature setting between solar panel thermistor and Tank to turn off solar pump. (Range :2 ~ 10°C)
    - Outdoor temp for Anti-Freeze : Outdoor temp to start Anti-Freeze control for solar circuit. (Range : -20 ~ 10°C)
    - Tank Temperature HI Limit Set (Range : 70 ~ 90°C)

## 14.20.2 Solar Operation Control

 Solar function can only be activate if the solar function selection "YES" from remote control. To achieve hot water from solar panel, indoor need to control the solar pump and circulate hot water from solar panel.

### **Under normal case:**

- Solar pump start condition:
  - Solar panel temperature > Delta T turn on setting temp (R/C) + Tank temperature (depend on selection, DHW or Buffer) AND
  - Tank temperature (DHW or Buffer) < Solar HI Limit Temp (R/C) AND</li>
  - Operation ON with heat mode (apply to solar connect to "Buffer Tank" case)
  - \* Condition c) ignore if the solar system is connect to DHW tank (control active under operation OFF time for Tank connection case)
- Solar pump stop condition:
  - Solar panel temperature < Delta T turn OFF setting temp (R/C) + Tank temperature (depend on selection, DHW or Buffer) OR
  - Tank hot water temp >= Solar HI Limit Temp (R/C) + [2]°C

## Under solar Anti-freeze protection control:

- Solar pump start condition:
  - Outdoor temp < Outdoor temp setting for Anti-Freeze (R/C)</li>
- Solar pump stop condition:
  - Outdoor temp > Outdoor temp setting for Anti-Freeze + [2]°C

- Solar operation during error:
  - During Tank sensor (DHW or Buffer depend on selection) abnormal, Solar operation will not able to function.
  - o During Solar Panel sensor detect OPEN (not include SHORT), Solar operation will not able to function too.

## 14.21 Boiler Bivalent Control

- Boiler is an additional or alternative heat source to heat up the room when necessary.
- Purpose of this control is to turn ON and turn OFF the Boiler output signal when boiler heating capacity needed in the system.
- Boiler is possible to connect to DHW Tank and Buffer Tank depends on the installer.
- Boiler operation parameter need to be set on Boiler itself, indoor do not control the boiler operation direction and operation.
- There are Alternative mode, Parallel mode, & Advance Parallel mode available to select by installer to fit to the total system.

## Bivalent control selection by remote controller

## Remote control setting value:

1 Outdoor Ambient Set = (Range: -15°C ~ 15°C)

#### Alternative Mode

o Only one heat source operates at one time, either heat pump or boiler depends on condition.

### Control detail:

During Operation ON at Heat mode or Tank mode or Heat + Tank Mode

- Boiler signal turn ON and heat pump and water pump turn OFF when:
  - Outdoor ambient < Outdoor Ambient Set AND</li>
  - Boiler prohibit flag = 0

- Boiler signal turn OFF and heat pump and water pump turn ON when:
  - Outdoor ambient > Outdoor Ambient Set + [2°C] OR
  - Boiler prohibit flag = 1

<sup>\*\*</sup>However, During Cool mode this function cannot activate if Tank selection is "Buffer Tank".

<sup>\*\*</sup>Solar pump can operate even if Heat pump is under error stop.

<sup>\*\*</sup> However water pump can operate when Anti-freeze control condition fulfilled.

#### Parallel Mode

 Parallel mode allows heat pump and boiler ON at the same time. Boiler operates as an additional heating capacity when low heat pump capacity at low ambient condition.

### Control detail:

During operation ON at Heat mode or Tank mode or Heat + Tank mode

- Boiler signal turns ON when:
  - Outdoor ambient < Outdoor Ambient Set AND</li>
  - Boiler prohibit flag = 0
- Boiler signal turns OFF when:
  - Outdoor ambient > Outdoor Ambient Set + [2°C] OR
  - Boiler prohibit flag = 1

#### Advance Parallel Mode

 Advance parallel mode allow heat pump to operate and turn ON boiler only when ambient and temperature condition is fulfilled.

## Remote control setting value:

- 1 Outdoor Ambient Set = (Range : -15°C ~ 15°C)
- 2 Selection of boiler connection direction. (Heat only, DHW only, Heat & DHW)
- 3 Setting data under Heat Direction
  - Start Temperature | START\_TEMP |
     Start Delay Timer | START\_TIMER |
     Stop Temperature | STOP\_TEMP |
     Stop Delay Timer | STOP TIMER |
- 4 Setting data under DHW Direction
  - Delay Timer | DELAY\_TIMER |

#### Control detail:

### **During operation ON at Heat Mode**

- Boiler signal turns ON when
  - Outdoor ambient < Outdoor Ambient Set AND</li>
    - Buffer tank temperature < Target Buffer Tank Temperature + [START\_TEMP] for [START\_TIMER]</li>
  - Heat pump operate at room side AND
  - Connection of Boiler to Heating Select "YES" From installer menu AND
  - Buffer Tank connection select "YES" AND
  - Boiler prohibit flag = 0
- Boiler signal turns OFF when
  - Outdoor ambient > Outdoor Ambient Set + [-2°C] OR
  - Buffer Tank temperature > Target Buffer Tank temperature + [STOP TEMP] for [STOP TIMER] OR
  - Heat pump not at room side. OR]
  - Boiler prohibit flag = 1

#### During operation ON at Tank Mode

- Boiler signal turns ON when
  - Outdoor ambient < Outdoor Ambient Set AND</li>
  - Heat pump operate at tank side for continuous | DELAY TIMER | AND
  - Connection of Boiler to DWH Tank select "YES" from installer menu. AND
  - Boiler prohibit flag = 0
- Boiler signal turns OFF when
  - Outdoor ambient > Outdoor Ambient Set + [2°C] OR
  - Heat pump not operates at tank side. OR
  - Boiler prohibit flag = 1

## **Boiler prohibit flag control**

#### Purpose:

o For product safety. Boiler signal is OFF when water temperature is too high.

## Start condition:

- Water outlet ≥ 85°C continues for 5 minutes.
- o Water inlet ≥ 85°C continues for 5 minutes.
- o Zone1 water temp ≥ 75°C continues for 5 minutes.
- o Zone2 water temp ≥ 75°C continues for 5 minutes.

## Contents:

After start condition fulfilled, set boiler prohibit flag = 1

#### Cancel condition:

After 30 minutes from start condition fulfilled.

#### Contents

Set boiler prohibit flag = 0

## 14.22 External Room Thermostat Control (Optional)

### Purpose:


1 Better room temperature control to fulfill different temperature request by external room thermostat. Recommended external room thermostat:

Maker	Characteristic
Siemen (REV200)	Touch panel
Siemen (RAA20)	Analog

#### Connection of external room thermostat:

Wire Connection and thermo characteristic of Siemen REV200:


Setting	L/L1 (H)	Heat Thermo	L/L2 (C)	Cool Thermo
Set Temp < Actual Temp	Open Circuit	OFF	Short Circuit	ON
Set Temp > Actual Temp	Short Circuit	ON	Open Circuit	OFF

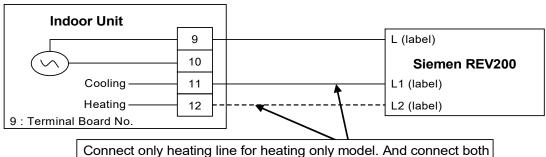

heating and cooling line for heat + cool model. And connect both

Wire Connection and thermo characteristic of Siemen RAA20:

Setting	L/Y1 (H)	Heat Thermo	L/Y2 (C)	Cool Thermo
Set Temp < Actual Temp	Open Circuit	OFF	Short Circuit	ON
Set Temp > Actual Temp	Short Circuit	ON	Open Circuit	OFF

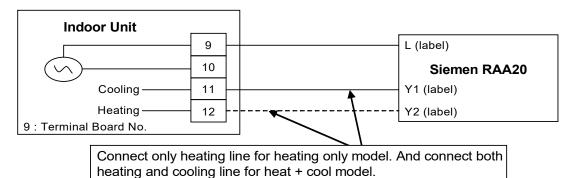

#### **Control Content:**

- External room thermostat control activate only when remote thermostat connection select YES by Indoor control
  panel.
- When indoor running heat mode, refer thermo On/Off from heating line feedback. And when indoor running cool
  mode, refer thermo On/Off from cooling line feedback.
- Heat pump Off immediately when receive thermo off feedback.


## 14.23 Three Ways Valve Control

#### Purpose:

- 3 ways valve is used to change flow direction of hot water from heat pump between heating side and tank side.

#### Control contents:

- 1 3 ways valve switch Off:
  - O During 3 ways valve switch Off time, the hot water will provide heat capacity to heating side.
- 2 3 ways valve switch On:
  - O During 3 ways valve switch On time, the hot water will provide heat capacity to tank side.
- 3 Stop condition:
  - During stop mode, 3 ways valve will be in switch off position.

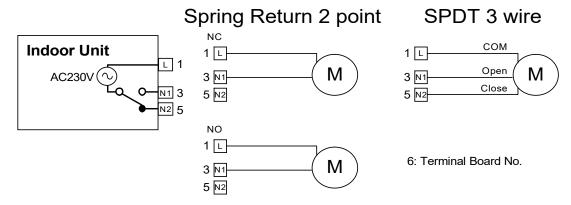

- \* During pump down and force mode, fix 3 ways valve in close condition.
- \* Recommended Parts : SFA 21/18 (Siemens)


## 14.24 Two Ways Valve Control

Functionality of 2 ways valve:

Use to allow hot water to floor heating panel or block cold water to floor heating panel.

#### Control contents:

- 1 When indoor running in heat mode, OPEN the 2 ways valve.
- When indoor running in cool mode, CLOSE the 2 ways valve.
- 3 Stop condition:
  - a. During stop mode, fix 2 ways valve in close condition.

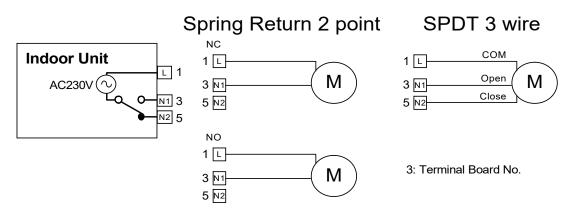

- \* During pump down mode, fix 2 ways valve in close condition.
- \* During force mode, open 2 ways valve.
- \* Recommended Parts : SFA 21/18 (Siemens)

## 14.25 Anti-Stick Mode Operation

This mode is a control to prevent the water circuit actuator from locking up if not used for an extended period of time.

#### Start conditions

- 1) A.M 3:00 o'clock every Monday.
- 2) Anti-stick mode = Enable. (Anti-stick mode is selected in custom menu)

## **Control Contents:**

It works in the following order.

- 1) If any mode operated, all operation is stopped.
- 2) Anti-stick mode operates
- 3) If Anti-stick mode finished, back to the last operation.


#### **Cancel conditions:**

Which of the following holds

- 1) Anti-stick mode is finished.
- When the customer manually starts any mode operation. (include weekly timer, sterilization mode)


## Anti-stick mode

If zone 2 or pool or solar are not connected, they are skipped

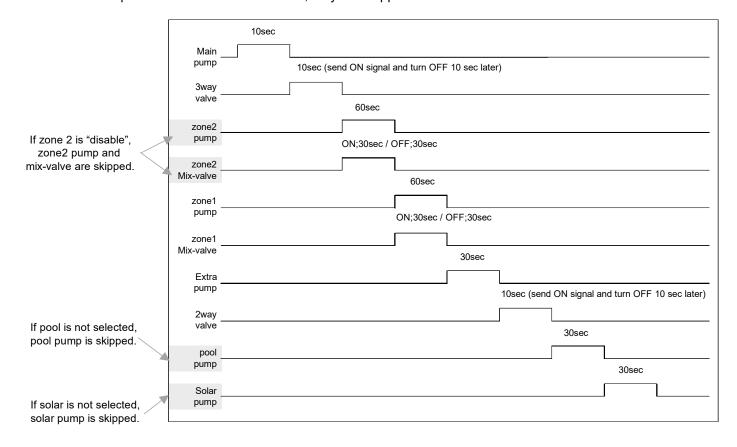

## 14.26 External OFF/ON Control


• Communication circuit between indoor unit and external controller is as per below.

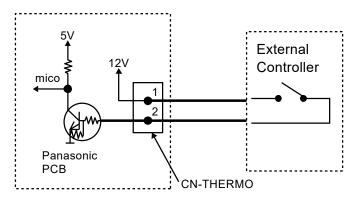

- Maximum length of communication cable is 50 meter.
- Control content:

External Control Switch	External Control Switch Control Panel OFF/ON		System Status
ON	ON	ON	ON
ON	OFF	OFF	OFF
OFF	ON	ON	OFF
OFF	OFF	OFF	OFF

## Remocon Screen Display and Control Detail:

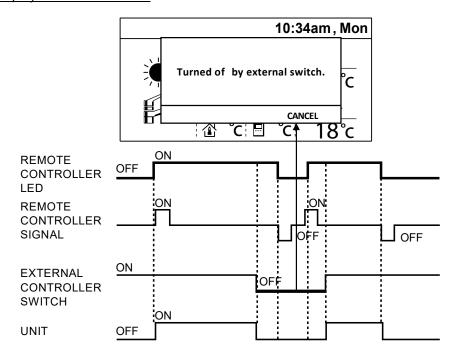

When External SW connection select "YES" from remocon installer menu:

- Heating or Cooling system will operate normally if the External Switch signal is ON.
- Once the External Switch turn OFF, System Turn OFF (Heat pump, water pump, heater etc...)
- Remocon LED remain ON or OFF according to the current operation request.
- Pop up menu at remocon main screen as above screen to inform customer system stop by External Switch.
- It is possible to press cancel and return to main screen to do change of operation setting while waiting the External Switch turn ON back.
- Remocon LED will always follow the latest changes from remocon.
- If no action on remocon for continuous 5 minutes, the pop up screen will show again on the screen.
- But once the External Switch Turn ON back, pop up screen will disappear and system can operate normally
  according to the latest operation setting and request.

## 14.27 External Compressor Switch (Optional PCB)

External compressor switch port can have two purpose of control as below:

- Heat source ON/OFF function (Remocon select "Heat source")
- Heater ON/OFF function (Remocon select "Heater")
- Heat source ON/OFF function

### Purpose:

 Heat pump ON/OFF function is use to turn OFF the high power consumption device (Heat pump, & Heater) when there is energy or electric current limitation. Other optional function still can be operate under heat pump and heater OFF condition.

#### Control Detail:

- This External Compressor Switch is possible to connect to Optional PCB only.
- Once the remocon select External Compressor Switch connection "YES", & select "Heat source"
   This heat pump ON/OFF function will activate
- The ON/OFF signal of this External Compressor Switch is same as External Switch.
- When the External Compressor Switch is ON:
  - Heat pump system operate normally
- When the External Compressor Switch is OFF:
  - Heat pump, Water pump & Heater (Booster heater & Backup Heater) need to turn OFF
  - o Solar, Boiler and zone control can be operate follow normal control condition.
    - \* pump delay OFF also included in this control

(There is NO pop up screen like External Switch when this External Compressor Switch is OFF.)

Heater ON/OFF function

#### Purpose:

Heater ON/OFF function is use to turn OFF the heater (backup heater & booster heater) when there is energy or
electric current limitation. Heat pump and other optional function still can operate.

### Control detail:

- This External Compressor Switch is possible to connect to Optional PCB only.
- Once the remocon select External Compressor Switch connection "YES", & select "Heater" This heater ON/OFF function will activate
- When the External Compressor Switch is ON:
  - Heat pump and heater operate normally
- When the External Compressor Switch is OFF:
  - o Backup heater and booster heater cannot operate even heater request is ON.
  - Heat pump and option function (Solar, Boiler and zone control) can be operate follow normal control condition.

(There is NO pop up screen like External Switch when this External Compressor Switch is OFF.)

## 14.28 Heat/Cool Switch (Optional PCB)

## Purpose:

• User can switch the running mode from heat to cool or cool to heat through external installed Heat/Cool switch. This kind of heat / cool switch may built in inside the field supply room remocon as well.

## Control contents:

- Heat/Cool Switch can only be set when Cool Function is "enable" at custom menu setting, & Extension PCB select "YES" & Zone 1 not set "Pool" condition.
- This heat/cool switch control will be activate only when installer set the Heat/Cool Switch "USE" through remocon.
- Once the Heat/Cool Switch Set "USE", remocon will check indoor send Signal to judge the option of mode select.
  - When Heat/Cool Switch Contact Open : Remocon only can select Heat Mode, or Heat + Tank Mode, or Tank Mode
  - When Heat/Cool Switch Contact Close: Remocon only can select Cool Mode, or Cool + Tank Mode, or Tank Mode


- Operation ON/OFF will depend on remocon request.
- When Heat Mode is running with Contact Open, user change this setting to contact close, indoor will this signal to remocon judge and change mode to cool and send back to indoor. And it is same as from cool mode change to heat mode.
  - \* This switch have higher priority, remocon follow indoor send signal when control activated.
  - \* There is no effect to the operation when the mode running is only Tank Mode.

(Weekly Timer are ignored and cannot be set during Heat / Cool Switch is "Enable" Condition.)

## 14.29 SG Ready Control (Optional PCB)

## Purpose:

To set ON/OFF of heat pump and target temperature by digital input of third party device if necessary in field.

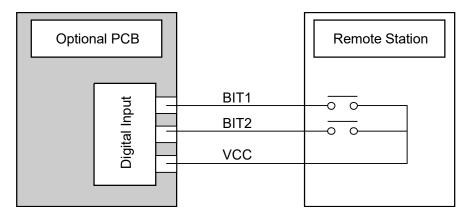

#### Remote control setting

For this function, following items need to be set on R/C (installer menu) –

- SG control = YES or NO
- Capacity up setting 1
  - Heating capacity [50 ~ 150 %]
  - DHW capacity [50 ~ 150 %]
  - Cooling capacity [-15 ~ 0 °C]
- Capacity up setting 2
  - Heating capacity [50 ~ 150 %]
  - DHW capacity [50 ~ 150 %]
  - Cooling capacity [-15 ~ 0 °C]
- HPU stop consumption [0.5 ~ 10.0 kW]
- Power consumption setting 1
  - Heating Power consumption [0.5 ~ 10.0 kW]
  - DHW Power consumption [0.5 ~ 10.0 kW]
  - Cooling Power consumption [0.5 ~ 10.0 kW]
- Power consumption setting 2
  - Heating Power consumption [0.5 ~ 10.0 kW]
  - DHW Power consumption [0.5 ~ 10.0 kW]
  - Cooling Power consumption [0.5 ~ 10.0 kW]

#### Control contents:

If SG control on remote control = "Yes", then following control only activate by digital input.

- While Digital input is "00" (Normal operation)
  - Normal operation. Once detect '00' system will operate back to normal condition.
     (All the target set temperature for heating side and DHW side will return back to previous set temperature when digital signal change from "10' or"11" back to "00".)
- While digital input is detected " 01 " (HP stop)
  - Heat pump & room heater & tank heater cannot operate.
     (Solar control and Boiler back up and 2 Zone control can activate.)

## • While digital input is detected " 10 " (Capacity 1)

- Target temperature for heating and DHW Tank is changed according to the percentage set by Remote control setting. However, which setting temperature is change depend on system setting.
- Target temperature of cooling is change according to the adjustment value set by remocon setting.

### While digital input is detected "11" (Capacity 2)

- Target temperature for heating and DHW Tank is changed according to the percentage set by Remote control setting. However, which setting temperature is change depend on system setting.
- Target temperature of cooling is change according to the adjustment value set by remocon setting.

## While digital input is detected " 10 " (Capacity 1)

Setting temperature for heating and Tank is changed.
 However, which setting temperature is change depend on system setting.

#### If Buffer selection is "YES"

Room side

New Target Buffer tank temperature = Current Target Buffer Tank Temperature \* Remote Control setting (" capacity 1) %

\* Max Min regulation is follow Target Buffer tank temperature control specification

\*\* No change of Target zone water temperature, only set higher buffer tank temperature.

#### DHW Tank side

New Tank Set Temperature = Tank Set Temperature \* Remote Control setting for DHW ("Capacity 1) % \* (Max regulation depend on the tank max setting limit)

#### If Buffer selection is "NO"

#### Room side

New Target Zone Water Temperature = Current Target Zone Water Temperature \* Remote Control Setting (\*Capacity 1) %

(Zone 1 and Zone 2 will change according to its own target zone water temperature.)

(Max regulation depend on the temperature control type select)

## DHW Tank side

New Tank Set Temperature = Tank Set Temperature \* Remote Control setting for DHW ("Capacity 1) % \* (Max regulation depends on the tank max setting limit)

## Setting temperature for cooling is changed

New Target water temperature = target water temperature + R/C setting for cool (\*Capacity 1)

\* (Min/max regulation of cooling water set apply)

## • While digital input is detected "11" (Capacity 2)

Setting temperature for heating and Tank is changed.
 However, which setting temperature is change depend on system setting.

### If Buffer selection is "YES"

#### Room side

New Target Buffer tank temperature = Current Target Buffer Tank Temperature \* Remote Control setting (" capacity 2) %

\* Max Min regulation is follow Target Buffer tank temperature control specification

\*\* No change of Target zone water temperature, only set higher buffer tank temperature.

#### DHW Tank side

New Tank Set Temperature = Tank Set Temperature \* Remote Control setting for DHW ("Capacity 2) % \* (Max regulation depends on the tank max setting limit)

#### If Buffer selection is "NO"

## Room side

New Target Zone Water Temperature = Current Target Zone Water Temperature \* Remote Control Setting (\*Capacity 2) %

(Zone 1 and Zone 2 will change according to it's own target zone water temperature.)

(Max regulation depend on the temperature control type select)

## DHW Tank side

New Tank Set Temperature = Tank Set Temperature \* Remote Control setting for DHW ("Capacity 2) %

- \* (Max regulation depends on the tank max setting limit)
- \*\* This function is not applicable for Cooling mode.

#### Setting temperature for cooling is changed

New Target water temperature = target water temperature + R/C setting for cool (\*Capacity 2)

\* (Min/max regulation of cooling water set apply)

#### **HPU** stop consumption

Operation will stop when the power consumption of the entire system exceeds (HPU stop consumption kW).

## While digital input is detected " 10 " (Power consumption 1)

#### Room side

Operate with the target of reducing power consumption to (Heating Power consumption 1) or less.

#### DHW Tank side

Operate with the target of reducing power consumption to (DHW Power consumption 1) or less.

#### Cool mode

Operate with the target of reducing power consumption to (Cooling Power consumption 1) or less.

### While digital input is detected "11" (Power consumption 2)

#### Room side

Operate with the target of reducing power consumption to (Heating Power consumption 2) or less.

## **DHW Tank side**

Operate with the target of reducing power consumption to (DHW Power consumption 2) or less.

#### Cool mode

Operate with the target of reducing power consumption to (Cooling Power consumption 2) or less.

## 14.30 Demand Control (Optional PCB)

#### Remote control setting:

• When Optional PCB connection select 'YES", Demand Control function can select "YES" or "NO".

#### Purpose:

- After the demand control select YES, below control will activated.
  - 0-10V Demand control

#### 0-10V Demand control

Demand control is use to reduce the current usage of heat pump unit by third party device.

#### Control start condition:

- Select "YES" at Demand control at installer menu.
- 0-10V input for this electrical current control is detected.

## Control content:

- If start condition is fulfilled, indoor will receive the voltage signal from optional PCB. Indoor will send the rate value to outdoor unit.
- Outdoor will change the current limit according to the percentage receive from indoor unit.

## 14.31 Holiday Mode

Purpose:

Promotes energy saving by allowing the user to stop the system during holiday and enables the system to resume at the preset temperature after holiday.

#### Control details:

- Indoor operate the unit according running mode request. Target temperature will follow holiday setting temperature.
  - If heat mode request is receive, Target Water Out Temperature will change according to holiday shift temperature set.
    - [If heat is set OFF at holiday, unit, water pump and zone control will OFF]
  - If tank mode request is receive, Target Tank Set Temperature will change according to the holiday tank shift temperature set.
    - [If tank is set OFF at holiday, heat pump and tank heater will OFF]
- After days of holiday have been set, heat pump will stop and only resume operation at the end of holiday countdown.

### Start condition:

- o Holiday timer set and the holiday timer start
  - \* The day holiday mode was set is counted as day 1.
- Stop condition:
  - o OFF/ON button is pressed.
  - Holiday timer is reached.

## 14.32 Dry Concrete

Purpose

Provide heat to floor heating panel and dry the wet concrete during installation.

- Setting condition:
  - Dry concrete parameter can be set through remote control under system setup.
  - Parameters are possible to set up to 99 days with different target set temperature
- Control details:
  - o Dry concrete mode will be activates when select ON from service setup.
  - o Once start dry concrete function, remote control will send step 1 setting temperature to indoor unit.
    - \* This temperature is set at zone temperature. If system is 2 zones, both zone target temperature is set as same temperature.
  - Heat pump will start heat mode operation to room side with received target water outlet temperature.
    - \* Heat pump will operate according to Heat pump Target Water Temperature.
  - After complete day 1 setup operation, day 2 data will be send to indoor at 12.00am on the second day.
  - Each preset data will be send every day until dry concrete mode is complete, unit will turns OFF and exit dry concrete function.
  - o 3 ways valve and booster heater will turn OFF and 2 ways valve will turns ON.
- Cancel condition:
  - o Dry concrete mode is complete and OFF signal is received.
  - OFF signal is received by pressing OFF/ON button.

## 14.33 Flow Sensor

- The water flow sensor serves as an overload protector that shuts down the unit when the water level is detected to be low.
- Abnormal flow detection:

Sequence	Abnormal flow	Normal flow	
Normal case	Flow rate < 8 l/min or ≧ 69 l/min	≧ 8 l/min	
During status 2~6 on Anti-freeze deice	≧8 l/min	< 8 I/min	

## 15. Protection Control

## 15.1 Protection Control for All Operations

## 15.1.1 Time Delay Safety Control

1 The compressor will not start for three minutes after stop of operation.

## 15.1.2 Total Running Current Control

- 1 When the outdoor running current exceeds X value, the compressor frequency will decrease.
- 2 If the outdoor running current does not exceed X value, the compressor frequency will return to normal operating frequency.
- 3 If the outdoor running current continue to increase till exceed Y value, compressor will stop, and if this occurs 3 times within 20 minutes, system will stop operation and OFF/ON control panel LED will blink (F16 error occurs).


	WH-WXG09ME5		VH-WXG09ME5 WH-WXG12ME5	
Operation Mode	X (A)	Y (A)	X (A)	Y (A)
Heating	28.0	31.0	28.0	31.0
Cooling	20.0	31.0	20.0	31.0

#### A. DC Peak Current Control

- 1 When the current to IPM exceeds set value of 79.5 A, compressor will stop. Compressor will restart after three minutes.
- 2 If the set value exceeds again for more than 30 seconds after the compressor restarts, operation will restart after two minutes.
- 3 If the set value exceeds again for within 30 seconds after the compressor restarts, operation will restart after one minute. If this condition repeats continuously for seven times, system will stop operation and OFF/ON control panel LED will blink (F23 error occurs).

## 15.1.3 Compressor Overheating Prevention Control

 The compressor operating frequency is regulated in accordance to discharge temperature as shown in below figures. When the discharge temperature exceeds 107°C, compressor will stop, and if this occurs 4 times within 30 minutes, system will stop operation and OFF/ON control panel LED will blink (F20 error occurs).

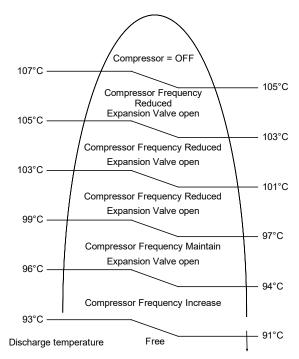


## 15.1.4 High Pressure Sensor Control


- Purpose:
  - To protect the system operation.
- Detection period:
  - After compressor on for 1 minute.
- Detection conditions:
  - When abnormal high voltage detection, 5 V or when open circuit detection 0V for 5 seconds continuously.
- After detection:
  - When abnormality is detected 4 times within 120 minutes, unit stop operation.
  - OFF/ON control panel LED will blink (H64 error occurs).

## 15.1.5 Outside Temperature Current Control

## Heating

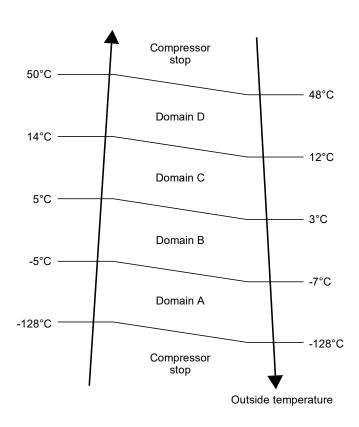

## Cooling

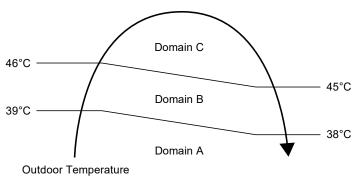

## 15.1.6 Pre-Heat Control

- Purpose:
  - For compressor protection during low outdoor ambient operation (during heating low temperature operation).
- · Control content:
  - a. Trigger Pre-Heat Control condition
    - When the outdoor air temperature is below than -10°C, and discharge temperature is -10°C or below.
  - b. Resetting Pre-Heat Control condition
    - 1. When the outdoor air temperature exceeds entry condition (-7°C)
    - 2. When the discharge temperature exceeds entry condition (-7°C)

## 15.2 Protection Control for Heating Operation

## 15.2.1 Outdoor Air Temperature Control


The maximum current value is regulated when the outdoor air temperature rises above 14°C in order to avoid compressor overloading.

## 15.2.2 Deice Operation


When outdoor pipe temperature and outdoor air temperature is low, deice operation start where outdoor fan motor stop.

• Deice judging condition

#### **Outdoor Unit Deice Control**

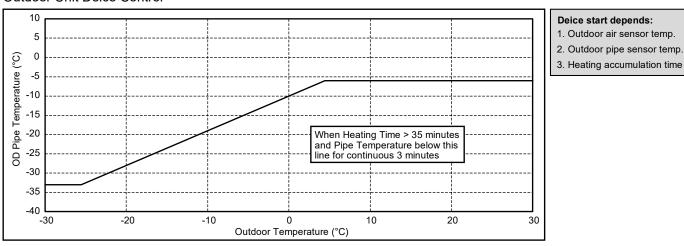

- Deice mode selection condition
  - There are 2 deice modes, according to water inlet temperature and outdoor ambient temperature the deice mode is decided.

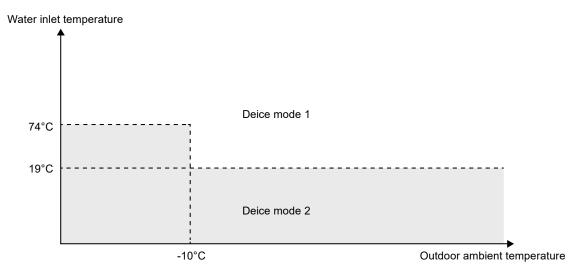


## Judgement details:


- 1 When water inlet temperature is more than 74°C, unit will operate deice mode 1.
- 2 When water inlet temperature is less than 19°C, unit will operate deice mode 2.
- When water inlet temperature is less than 74°C and outdoor ambient temperature is less than -10°C, unit will operate deice mode 2.
- 4 When water outlet temperature sensor 2 detect temperature is less than 14°C, unit will operate deice mode 2.

## • Deice operation time diagram

## a. Deice mode 1 control:

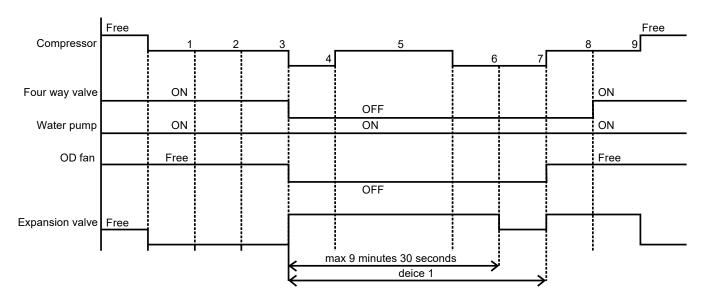

## b. Deice mode 2 control:

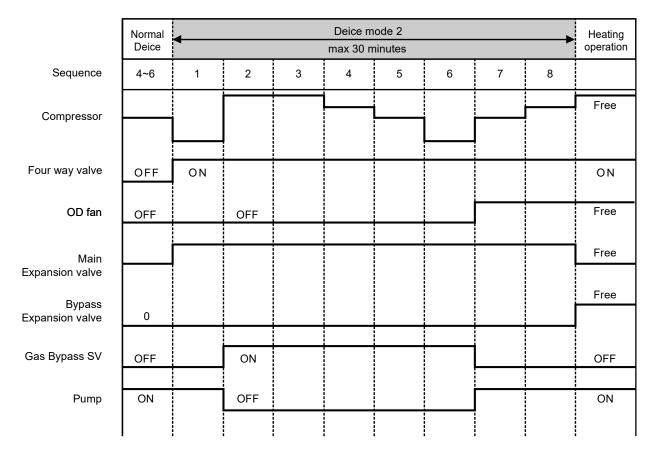

## 15.2.2.1 Ice Choke Detection Control

This control is only available on models equipped with [Deice mode 2].

#### Purpose

Ice choke detection and forced defrosting to melt the ice are performed to prevent abnormal rises in discharge port temperature.

## **Control Content**

1. During heating operation (excluding deice control)

#### Start Conditions

- 1 During heating operation (excluding deice mode 2 control)
- 2 Outdoor temperature < 10°C
- 3 Compressor is ON
- 4 After Conpressor starting control ends
- 5 High-pressure saturation temperature Indoor piping temperature >= 40°C
- 6 EVA outlet temperature Outdoor piping temperature >= 35°C
- 7 Outdoor piping temperature < -35°C
- 8 Outdoor temperature EVA outlet temperature < -4°C

If all the above start conditions 1 to 7 are met continuously for 30 seconds, or if all the above start conditions 1 to 5 and 8 are met continuously for 30 seconds, deice mode 2 control will be executed.

If the conditions are no longer met during the timer 30 seconds, the timer of 30 seconds count will be reset.

2. During normal deice (excluding antifreezing deice control)

#### **Start Conditions**


- 1 During normal deice (including 0Hz instruction sequence)
- 2 Outdoor temperature < 10°C
- 3 High-pressure saturation temperature Indoor piping temperature >= 20°C
- 4 Indoor piping temperature < -25°C

If all the above start conditions 1 to 4 are met continuously for 30 seconds, forced antifreezing deice control will be executed.

## 15.3 Protection Control for Cooling Operation

## 15.3.1 Outdoor Air Temperature Control

- The Compressor operating frequency is regulated in accordance to the outdoor air temperature as shown in the diagram below.
- This control will begin 1 minute after the compressor starts.
- Compressor frequency will adjust base on outdoor air temperature.

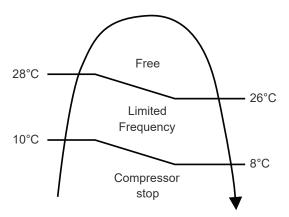

## 15.3.2 Freeze Prevention Control 1


- 1 When refrigerant temperature is lower than 0°C continuously for 10 seconds, compressor will stop operating.
- 2 Compressor will resume its operation three minutes after the refrigerant heat exchanger is higher than 2°C.
- 3 Heat exchanger freeze prevention (H99) will memory in error history.

## 16. Servicing Guide

## 16.1 How to Take Out Front Plate

## Open and Close Front Plate (1) (ID)

- 1 Remove the 2 mounting screws of Front Plate (1) (ID).
- 2 Slide it upwards to unhook the Front Plate ① (ID) hook.
- 3 Reverse above steps 1~2 for close it.

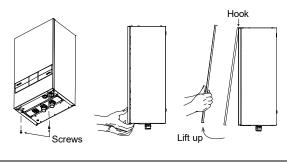

**↑** CAUTION

Open or close the Front Plate carefully. The heavy Front Plate may injures the fingers.

\* The remote control cable is connected to the front panel, so be careful when removing the panel.

## 16.2 Test Run

- 1 Before test run, make sure below items have been checked:
  - a) Pipework are properly done.
  - b) Electric cable connecting work are properly done.
  - c) Tank Unit is filled up with water and trapped air is released.
  - d) Please turn on the power supply after filling the tank until full.
- Switch ON the power supply of the Tank Unit. Set the Tank Unit RCCB/ELCB to "ON" condition. Then, please refer to the Operation Instruction for operation of Remote Controller (3) (ID).

#### Note:

- During winter, turn on the power supply and standby the unit for at least 15 minutes before test run.
   Allow sufficient time to warm up refrigerant and prevent wrong error code judgement.
- 3 For normal operation, Water Pressure reading should be in between 0.5 bar and 4 bar (0.05 MPa and 0.4 MPa) If necessary, adjust the Water Pump ⑦ (OD) SPEED accordingly to obtain normal water pressure operating range. If adjust Water Pump ⑦ (OD) SPEED cannot solve the problem, contact your local authorized dealer.
- 4 After test run, please clean the Magnetic Water Filter Set (8) (OD). Reinstall it after finish cleaning.

If air purging during initial commissioning is insufficient, lead to pump dry running.


- Air purging function can be access from remote control service setup.
- It is highly recommended to use this function before actual A2W startup & commissioning.

# 16.3 Expansion Vessel (10) (ID) Pre Pressure Checking

## For Space Heating / Cooling

- Expansion Vessel (10) (ID) with 12 L air capacity and initial pressure of 1 bar is installed in this Tank Unit.
- Total amount of water in system should be below 200 L. (Inner volume of Tank Unit's piping is about 5 L)
- If total amount of water is over 200 L. please add another expansion vessel. (field supply)
- Please keep the installation height difference of system water circuit within 10 m. (Extra pump may be required)
- Be sure to check the precharge pressure of the expansion vessel when installing. (Air will gradually escape even during storage.)
- It is highly recommended that the expansion vessel precharge pressure be checked once a year.
   (The pressure will be reduced by half in two years.)
- If the static pressure in the expansion vessel falls below 0.5 bar, cavitation may occur and the pump may lock.

## 16.4 How to Adjust Pump Speed

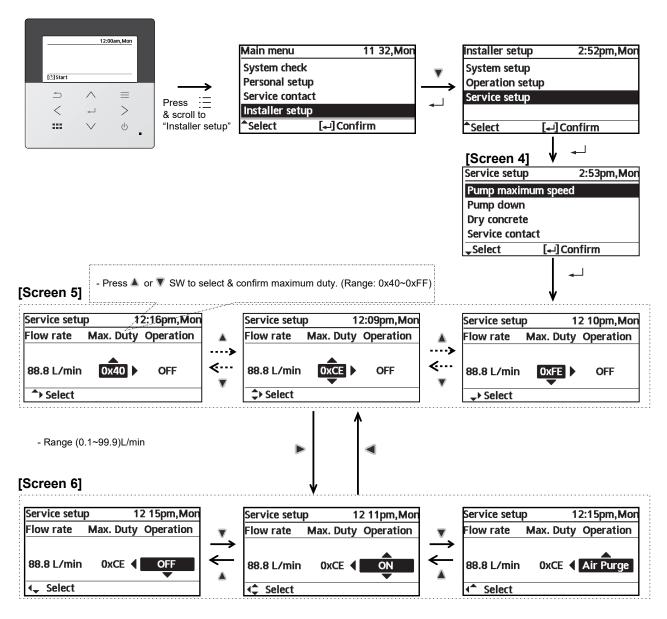


Press ▲ or ▼ SW to select & confirm operation

## **NOTE:**


- 1. Whenever at [Screen 5], if press SW to OFF, pump operation should be turned OFF.
- 2. Whenever at [Screen 6], if press SW to OFF, pump operation should be turned OFF.

## 16.5 How to Unlock Cool Mode

Operation must be OFF

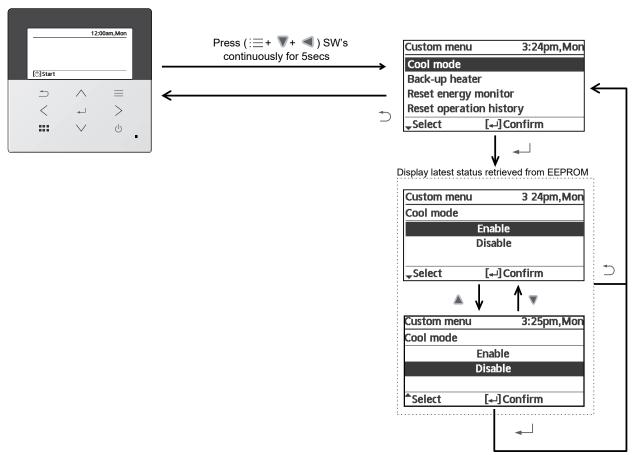


## 16.6 EEPROM Factory Default Data Setup Procedure

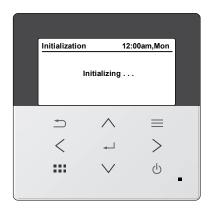


- EEPROM default data setup is only possible during initialization process.
- Press ( ▲, ▼, ◄, ▶ ) simultaneously for 5secs continuously, initialization process will stop & EEPROM default data setup process will start.


During EEPROM default data setup process, display should be as shown below.

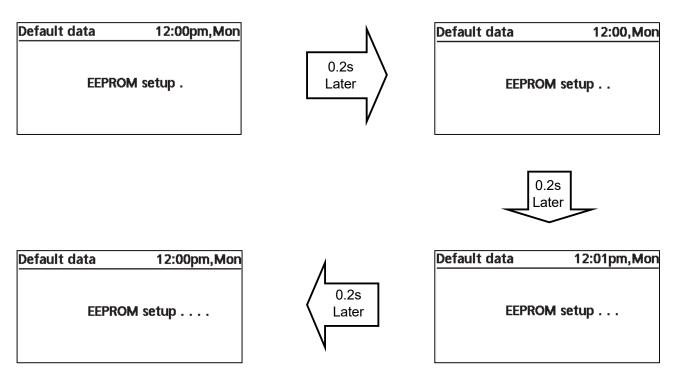


- Once EEPROM default data setup process is complete, initialization process will re-start from beginning.

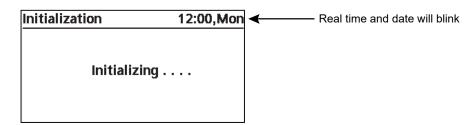

## 16.7 Dry Concrete Setup

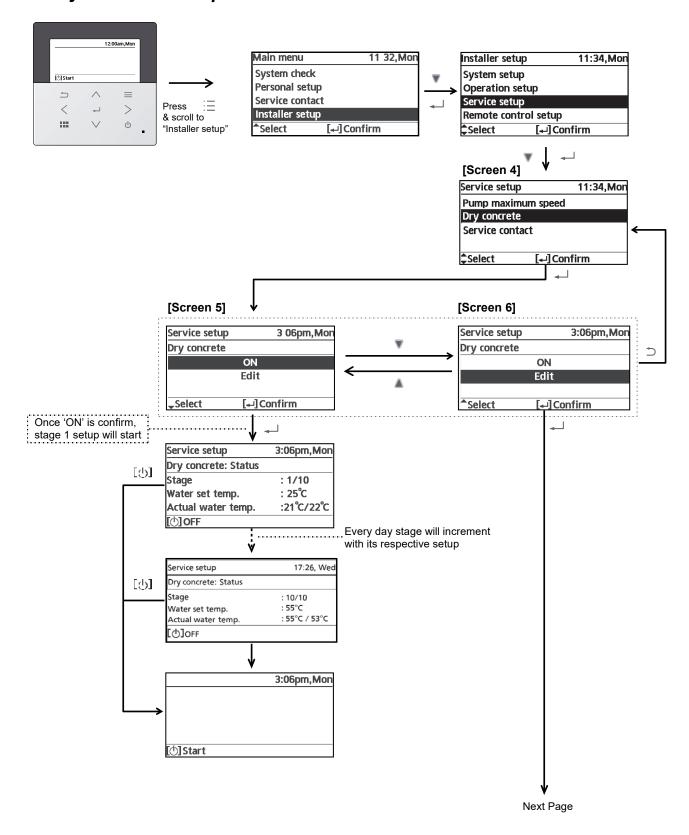


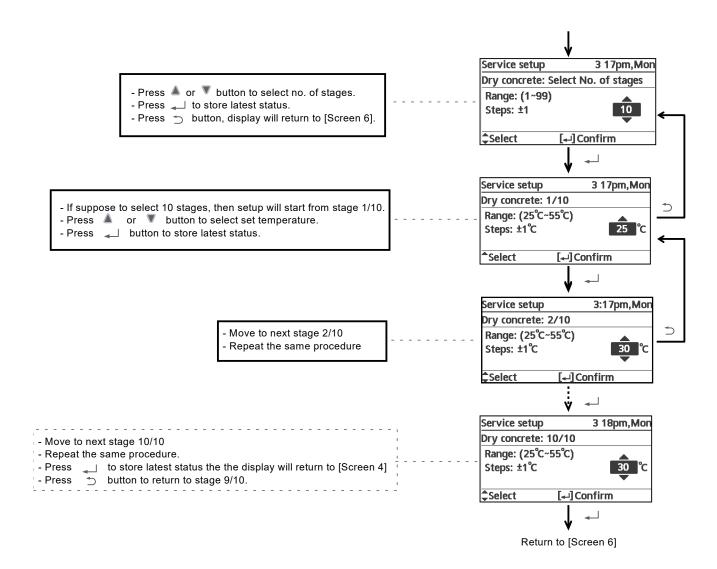

## 17. Maintenance Guide

In order to ensure safety and optimal performance of the Hydro Unit, seasonal inspections on the Tank Unit, functional check of RCCB/ELCB, field wiring and piping have to be carried out at regular intervals. This maintenance should be carried out by authorized dealer. Contact dealer for scheduled inspection.

- 1 Charging and Discharging the Water Make sure all the piping installations are properly done before carry out below steps. Charge the Water
  - For Space Heating / Cooling
    - a. Start filling water (with pressure more than 1 bar (0.1MPa)) to the Space Heating/Cooling circuit via Tube Connector (a).
    - b. Stop filling water if the free water flow through Pressure Relief Valve drain pipe. (Check the Outdoor Unit)
    - c. Turn ON the Tank Unit.
    - d. Remote control menu  $\rightarrow$  Installer setup  $\rightarrow$  Service setup  $\rightarrow$  pump maximum speed  $\rightarrow$  Turn on the pump.
    - e. Make sure Water Pump (7) (OD) is running.
    - f. Check and make sure no water leaking at the tube connecting points.
    - g. Reinstall the Cabinet front plate f by tightening the 2 mounting screws.

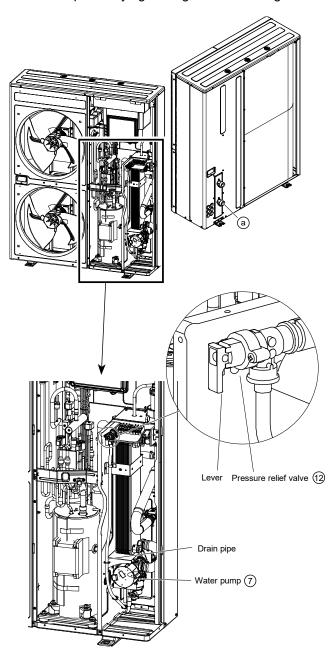


2 Check Water Pressure \*(1 bar = 0.1 MPa)
Water pressure should not lower than 0.5 bar (with inspects the Water Pressure from Remote Controller). If necessary add water into Tank Unit (via Tube Connector ⓐ).

#### 3 Check Pressure Relief Valve

\*Pressure Relief Valve is mounted in the Outdoor Unit.

- Confirm that the pressure relief valve is working properly, Pull the lever horizontal direction.
- Release the lever when water comes out of the drain pipe of the pressure relief valve.
   (While the air continues to come out of the drain pipe, keep raising the lever to completely discharge the air.)
- o Confirm that the water from the drain pipe stops.
- o If water is leaking, pull the lever several times and return it to make sure the water stops.
- o If water keeps coming out of the drain, drain water.
- Turn off the system and contact your local authorized dealer.

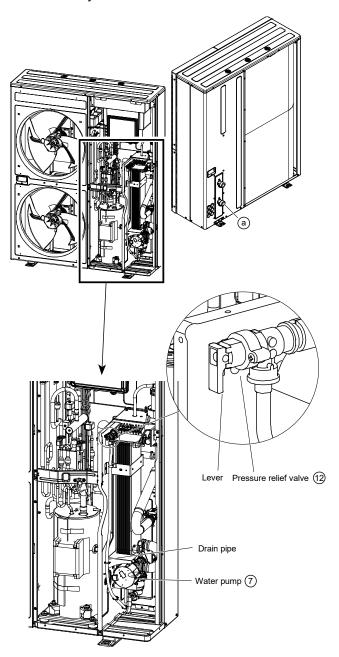

#### 4 Check Air Accumulation

- Open the air vent plugs on the heating panel, fan convector, etc., and remove the air accumulated in the equipment and piping.
- o If the outdoor unit and the indoor unit are installed on different floors, open the air vent plug on the water plug of the outdoor unit and the purge valve on the heater bottle inside the indoor unit to remove the air. (be careful, water will come out)

#### 5 Indoor Unit Control Board Area

Thorough visual inspection of the control board and look for defects, i.e. loose connection, melting of wire insulator and etc.

#### 6 RCCB/ELCB

Ensure the RCCB/ELCB set to "ON" condition before check RCCB/ELCB.

Turn on the power supply to the Tank Unit.

This testing could only be done when power is supplied to the Tank Unit.

## / WARNING

Be careful not to touch parts other than RCCB/ELCB test button when the power is supplied to Tank Unit. Else, electrical shock may happen. Before obtaining access to terminals, all supply circuits must be disconnected.

- Push the "TEST" button on the RCCB/ELCB. The lever would turn down and indicate "0", if it functions normal.
- Contact authorized dealer if the RCCB/ELCB malfunction.
- o Turn off the power supply to the Tank Unit.
- o If RCCB/ELCB functions normal, set the lever to "ON" again after testing finish.


## 7 Reset Overload Protector (9) (ID)

Overload Protector (9) (ID) serves the safety purpose to prevent the water over heating. When the Overload Protector (9) (ID) trip at high water temperature, take below steps to reset it.


- a. Take out the cover.
- b. Use a test pen to push the centre button gently in order to reset the Overload Protector (9) (ID).
- c. Fix the cover to the original fixing condition.



- 8 Maintenance for Magnetic Water Filter Set (8) (OD)
  - a. Turn OFF power supply.
  - b. Place a container below Magnetic Water Filter Set (8) (OD).
  - c. Turn to remove the Magnet Bar at bottom of Magnetic Water Filter Set (8) (OD).
  - d. By using Allen key (8mm), remove the Cap of Discharge Port.
  - e. By using Allen Key (4mm), open the Service Valve to release the dirty water from the Discharge Port into a container. Close the service valve when the container is full to avoid spillage in the tank unit. Dispose the dirty water.
  - f. Reinstall the Cap of Discharge Port and Magnet Bar.
  - g. Re-charging the water to Space Heating / Cooling circuit if necessary (refer Section 5 for details.)
  - h. Turn ON power supply.

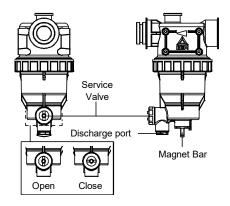


### 17.1 Service and Maintenance

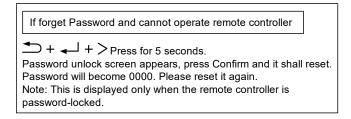

#### 17.1.1 Maintenance Menu

Н	ow to set up the Maintenance menu			
Ma	aintenance menu 12:00 pm, Mon			
Ac	tuator check			
Те	est mode			
Se	ensor setup			
Re	eset password			
→ Select [←] Confirm				
_	) + ←			
Items that can be set				
Actuator check (Manual ON/OFF all functional parts)     Note: As there is no protection action, be careful not to cause any error when operating each part (do not turn ON pump when there is no water etc.)      Test mode (Test run)				
	Normally it is not used.			
3	Sensor setup (offset gap of detected temp of each sensor can be set within -3~3°C range)  Note: Use only when sensor is deviated. It affects temperature control.			
4	Reset password (password reset)			

#### 17.1.2 Custom Menu

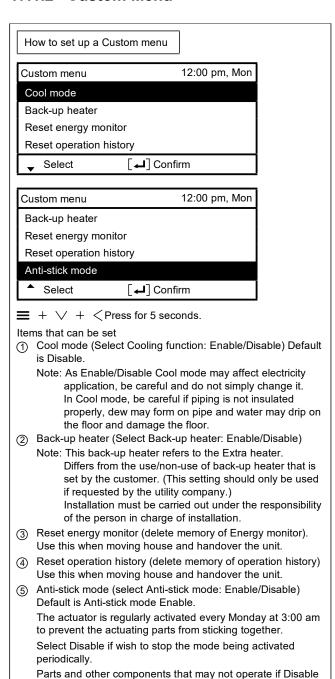

is selected may stick if not operated for a long period of time.

### 17.1.3 Specifications

#### 17.1.3.1 External Filter

Solids in the water must be filtered.


Minimum filter mesh size required for the field supply external filter in the water inlet is 20 mesh.

# 18. Troubleshooting Guide

### 18.1 Refrigeration Cycle System

In order to diagnose malfunctions, make sure that there are no electrical problems before inspecting the refrigeration cycle.

Such problems include insufficient insulation, problem with the power source, malfunction of a compressor and a fan.

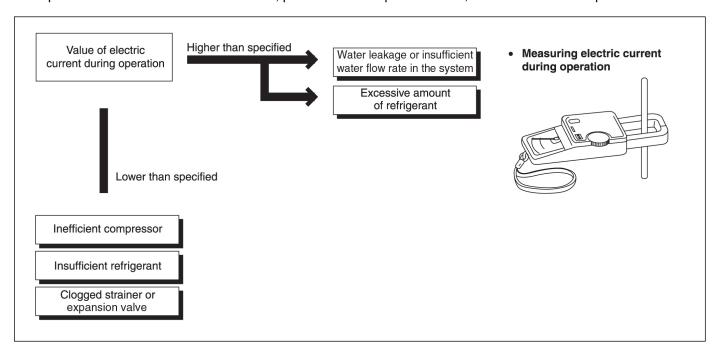

# 18.2 Relationship Between the Condition of the Air-to-Water Heatpump Indoor and Outdoor Units and Electric Current

Condition of the Air-to-Water Heatpump	Heating Mode	Cooling Mode
indoor and outdoor units	Electric current during operation	Electric current during operation
Water leakage or insufficient water flow rate in the system		1
Excessive amount of refrigerant		*
Inefficient compression		1
Insufficient refrigerant (gas leakage)		1
Outdoor heat exchange deficiency		
Clogged expansion valve or Strainer		1

<sup>•</sup> Carry out the measurements of pressure, electric current, and temperature fifteen minutes after an operation is started.

### 18.3 Breakdown Self Diagnosis Function


### 18.3.1 Self Diagnosis Function (Three Digits Alphanumeric Code)

- When abnormality occur during operation, the system will stop operation, and OFF/ON control panel LED will blink and error code will display on the control panel.
- Even error code is reset by turning OFF power supply or by selecting ERROR RESET, if the system abnormality
  is still unrepaired, system will again stop operation, and OFF/ON control panel LED will again blinks and error
  code will be display.
- The error code will store in IC memory.

#### To check the error code

- 1 When an abnormality occurs, system will stop operation and OFF/ON control panel LED will blink.
- 2 Error code of the abnormality will be display on the control panel.
- 3 To determine the abnormality description, the error code table needs to be referred.

eg:

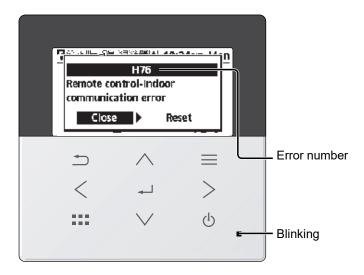


Press < > to select Close / Reset then press <

### To display past/last error code

- 1 Turn ON power supply.
- 2 Refer below procedure to retrieve the error code history.

### To permanently delete error code from IC memory

- 1 Turn ON power supply.
- 2 Refer below procedure to clear error history.

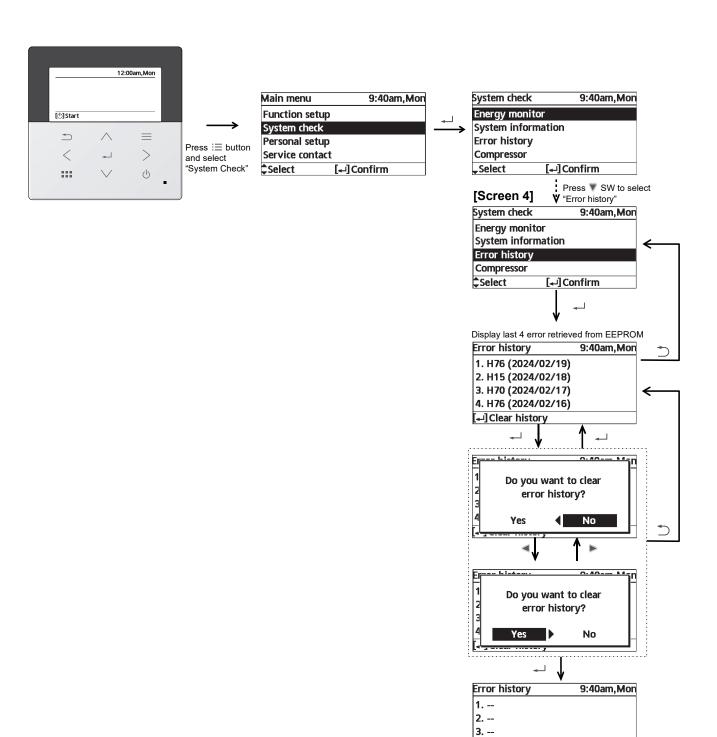

4. --

[4] Clear history

# 18.4 Error Codes Table

Diagnosis display	Abnormality/Protection control	Abnormality judgement	Primary location to verify
H00	No abnormality detected	_	_
H12	Indoor/Outdoor capacity unmatched	10s after power supply	Indoor/outdoor connection wire     Indoor/outdoor PCB     Specification and combination table in catalogue
*H15	Outdoor compressor temperature sensor abnormality	Continue for 5 sec.	Compressor temperature sensor (defective or disconnected)
*H17	Zone 2 water pump abnormality	Continue for 10 sec.	Indoor PCB (main)     Water pump (malfunction)
H20	Water pump abnormality	Continue for 10 sec.	Indoor PCB     Water pump (malfunction)
H21	Abnormal water pressure	Continue for 300 sec.	Water pressure sensor
*H22	Abnormal tank 2 sensor	Continue for 5 sec.	Tank 2 sensor
H23	Indoor refrigerant liquid temperature sensor abnormality	Continue for 5 sec.	Refrigerant liquid temperature sensor (defective or disconnected)
*H27	Service valve error	Continue for 300 sec.	High pressure sensor (defective or disconnected)
H28	Abnormal solar sensor	Continue for 5 sec.	Solar temperature sensor (defective or disconnected)
H31	Abnormal swimming pool sensor	Continue for 5 sec.	Pool temperature sensor (defective or disconnected)
H36	Abnormal buffer tank sensor	Continue for 5 sec.	Buffer tank sensor (defective or disconnected)
H38	Brand code not match	When indoor and outdoor brand code not same	_
H42	Compressor low pressure abnormality	_	Outdoor pipe temperature sensor Clogged expansion valve or strainer Insufficient refrigerant Outdoor PCB (main) Compressor
H43	Abnormal Zone 1 sensor	Continue for 5 sec.	Water temperature Zone 1 sensor
H44	Abnormal Zone 2 sensor	Continue for 5 sec.	Water temperature Zone 2 sensor
H62	Water flow switch abnormality	Continue for 140 sec.	Water flow switch
H64	Refrigerant high pressure abnormality	4 times in 120 minutes	Outdoor high pressure sensor (defective or disconnected)
H65	Abnormal deice water circulation	Water flow > 8 l/min continuously for 10 seconds during anti freeze deice	Water pump
H67	Abnormal External Thermistor 1	Continue for 5 sec.	Room temperature Zone 1 sensor
H68	Abnormal External Thermistor 2	Continue for 5 sec.	Room temperature Zone 2 sensor
H70	Back-up heater OLP abnormality	Continue for 60 sec.	Back-up heater OLP     (Disconnection or activated)
H72	Tank sensor abnormal	Continue for 5 sec.	Tank sensor
H74	PCB communication error	Communication or transfer error	Indoor main PCB and Sub PCB
H75	Low water temperature control	Room heater disable and deice request to operate under low water temperature	Heater operation must enable to increase water temperature
H76	Communication error (RC-1 & Indoor or RC-1 & RC-2)	_	Indoor - control panel     (defective or disconnected)     control panel 1 - control panel 2     (defective or disconnected)
H90	Indoor/outdoor abnormal communication	> 15 sec. after starting operation	Internal/external cable connections     Indoor/Outdoor PCB
	·		· · · · · ·

Diagnosis display	Abnormality/Protection control	Abnormality judgement	Primary location to verify
H91	Tank heater OLP abnormality	Continue for 60 sec.	Tank heater OLP     (Disconnection or activated)
H95	Indoor/Outdoor wrong connection	_	Indoor/Outdoor supply voltage
H98 / F95	Heating high pressure overload protection Cooling high pressure overload protection	_	Outdoor high pressure sensor     Water pump or water leakage     Clogged expansion valve or strainer     Excess refrigerant     Outdoor PCB (main)
H99	Indoor heat exchanger freeze prevention	_	Water heat exchanger     Refrigerant shortage
F12	Pressure switch activate	4 times occurrence within 30 minutes	Pressure switch
F14	Outdoor compressor abnormal revolution	4 times occurrence within 20 minutes	Outdoor compressor
F15	Outdoor fan motor lock abnormality	2 times occurrence within 30 minutes	<ul><li>Outdoor PCB (main)</li><li>Outdoor fan motor</li></ul>
F16	Total running current protection	3 times occurrence within 20 minutes	Excess refrigerant     Outdoor PCB (main)
F20	Outdoor compressor overheating protection	4 times occurrence within 30 minutes	Compressor tank temperature sensor     Clogged expansion valve or strainer     Insufficient refrigerant     Outdoor PCB (main)     Compressor
F22	IPM (power transistor) overheating protection	3 times occurrence within 30 minutes	<ul><li>Improper heat exchange</li><li>IPM (Power transistor)</li></ul>
F23	Outdoor Direct Current (DC) peak detection	7 times occurrence continuously	<ul><li>Outdoor PCB (main)</li><li>Compressor</li></ul>
F24	Refrigeration cycle abnormality	2 times occurrence within 30 minutes	<ul><li>Insufficient refrigerant</li><li>Outdoor PCB (main)</li><li>Compressor low compression</li></ul>
F25	Cooling/Heating cycle changeover abnormality	4 times occurrence within 30 minutes	4-way valve     V-coil
F27	Pressure switch abnormality	Continue for 1 min.	Pressure switch
F30	Water outlet sensor 2 abnormality	Continue for 5 sec.	Water outlet sensor 2 (defective or disconnected)
F32	Abnormal Internal Thermostat	Continue for 5 sec.	Control panel PCB thermostat
F35 (No Self-diagnosis Method)	External meter communication error	Continue for 180 sec.	External meter
F36	Outdoor air temperature sensor abnormality	Continue for 5 sec.	Outdoor air temperature sensor (defective or disconnected)
*F37	Indoor water inlet temperature sensor abnormality	Continue for 5 sec.	Water inlet temperature sensor (defective or disconnected)
F40	Outdoor discharge pipe temperature sensor abnormality	Continue for 5 sec.	Outdoor discharge pipe temperature sensor (defective or disconnected)
F41	PFC control	4 times occurrence within 10 minutes	Voltage at PFC
F42	Outdoor heat exchanger temperature sensor abnormality	Continue for 5 sec.	Outdoor heat exchanger temperature sensor (defective or disconnected)
*F43	Outdoor defrost sensor abnormality	Continue for 5 sec.	Outdoor defrost sensor (defective or disconnected)
F45	Indoor water outlet temperature sensor abnormality	Continue for 5 sec.	Water outlet temperature sensor (defective or disconnected)
*F46	Outdoor Current Transformer open circuit	_	Insufficient refrigerant     Outdoor PCB (main)     Compressor low
F48	Outdoor EVA outlet temperature sensor abnormality	Continue for 5 sec.	Outdoor EVA outlet temperature senso (defective or disconnected)
F49	Outdoor bypass outlet temperature sensor abnormality	Continue for 5 sec.	Outdoor bypass outlet temperature sensor (defective or disconnected)
F50	Water inlet 2 sensor error	Continue for 5 sec.	Water inlet 2 sensor

Diagnosis display	Abnormality/Protection control	Abnormality judgement	Primary location to verify
F51	Economizer outlet sensor abnormality	Continue for 5 sec.	Economizer outlet sensor (defective or disconnected)
F52	Bypass inlet sensor abnormality	Continue for 5 sec.	Bypass inlet sensor (defective or disconnected)
F53	Main expansion valve overcurrent protection	4 times occurrence within 40 minutes	Main expansion valve
F54	Bypass expansion valve overcurrent protection	4 times occurrence within 40 minutes	Bypass expansion valve
F55	Electrical anode error	Continue for 60 sec.	<ul><li>Electric anode</li><li>Electric anode PCB</li><li>Indoor PCB (main)</li></ul>
F56	Outdoor heat exchanger middle sensor abnormality	Continue for 5 sec.	Outdoor heat exchanger middle sensor (defective or disconnected)

**Note:** \* This error code is not applicable for this system.

### 18.5 Self-Diagnosis Method

### 18.5.1 Connection Capability Rank Abnormality (H12)

### **Malfunction Decision Conditions:**

During startup operation of cooling and heating, the capability rank of indoor checked by the outdoor is used to determine connection capability rank abnormality.


#### **Malfunction Caused:**

- 1 Wrong model interconnected.
- 2 Wrong indoor unit or outdoor unit PCB (main) used.
- 3 Faulty indoor unit or outdoor unit PCB (main).

### **Abnormality Judgment:**

Continue for 90 seconds.

### **Troubleshooting:**

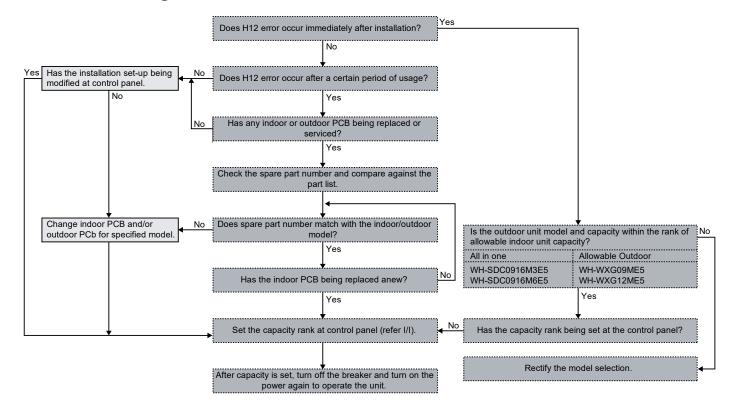

### 18.5.2 Compressor Tank Temperature Sensor Abnormality (H15)

#### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by the compressor tank temperature sensor are used to determine sensor error.


### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

#### **Abnormality Judgment:**

Continue for 5 seconds.

### **Troubleshooting:**

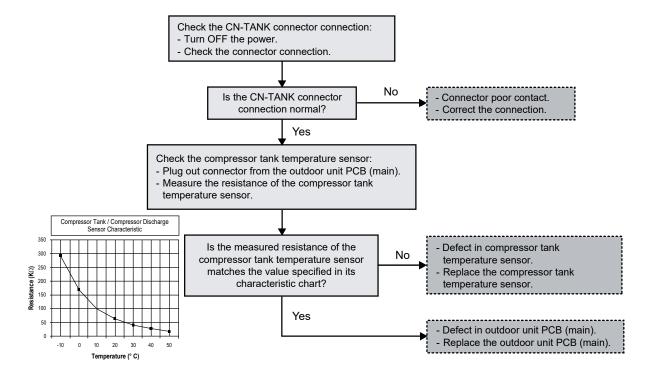

### 18.5.3 Zone 2 Water Pump Abnormality (H17)


#### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the rotation speed detected by the IPM of water pump motor during water pump operation is used to determine abnormal water pump (feedback of rotation > 6,000rpm or < 300rpm).

#### **Malfunction Caused:**

- 1 Operation stop due to short circuit inside the water pump motor winding.
- 2 Operation stop due to breaking of wire inside the water pump motor.
- 3 Operation stop due to breaking of water pump lead wires.
- 4 Operation stop due to water pump motor IPM malfunction.
- 5 Operation error due to faulty indoor unit PCB (main).

#### **Abnormality Judgment:**

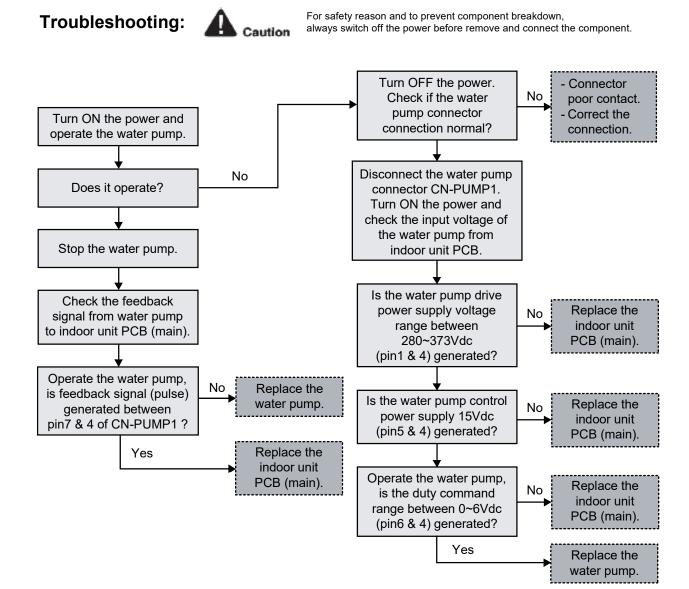

### 18.5.4 Water Pump Abnormality (H20)

#### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the rotation speed detected by the IPM of water pump motor during water pump operation is used to determine abnormal water pump (feedback of rotation > 6,000rpm or < 1,000rpm).

#### **Malfunction Caused:**


- 1 Operation stop due to short circuit inside the water pump motor winding.
- 2 Operation stop due to breaking of wire inside the water pump motor.
- 3 Operation stop due to breaking of water pump lead wires.
- 4 Operation stop due to water pump motor IPM malfunction.
- 5 Operation error due to faulty outdoor unit PCB.

#### **Abnormality Judgment:**

Continue for 5 seconds.

# Troubleshooting:



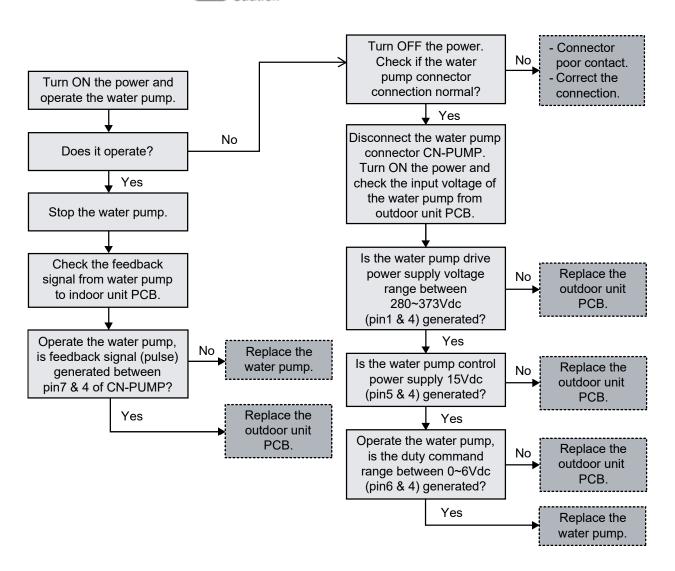

### 18.5.5 Water Pressure Abnormality (H21)

### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the pressure detected by the water pressure sensor while the water pump is running is used to determine abnormalities in the water circuit (water pressure feedback > 5.0 bar or < 0.2 bar).

#### **Malfunction Caused:**

- 1 Water leak in system.
- 2 Faulty connector connection.
- 3 Faulty water Pressure sensor.
- 4 Faulty outdoor unit PCB (main).

### **Abnormality Judgment:**

Continue for 300 seconds.

#### For safety reason and to prevent component breakdown, **Troubleshooting:** Caution always switch off the power before remove and connect the component. Check the water system passage Is there any water leakage Is there any water leakage No Check the CN-DPS connector connection: **CN-DPS** WATER PRESSURE Turn OFF the power. (WHITE) SENSOR - Check the connector connection Figure 1 No Is the CN-DPS connector Poor contact connection normal? Correct connection Yes Check the Vdc from the outdoor unit PCB (main): Defective outdoor unit PCB - Disconnect Water pressure sensor Nο (main) from the outdoor unit PCB (main) Replace outdoor unit PCB terminal CN-DPS Turn ON the power. (main) Measure the Vdc as shown in Figure 1 (pin 1 and 2) Is the Vdc measurement 5Vdc? Yes - Defect in water pressure Replace the water pressure sensor.

### 18.5.6 Tank 2 Temperature Sensor Abnormality (H22)

#### **Malfunction Decision Conditions:**

When tank connection is set to ON, the temperatures detected by the tank temperature sensor are used to determine sensor error.

#### **Malfunction Caused:**


- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty indoor unit PCB (main).

#### **Abnormality Judgment:**

Continue for 5 seconds.

### **Troubleshooting:**



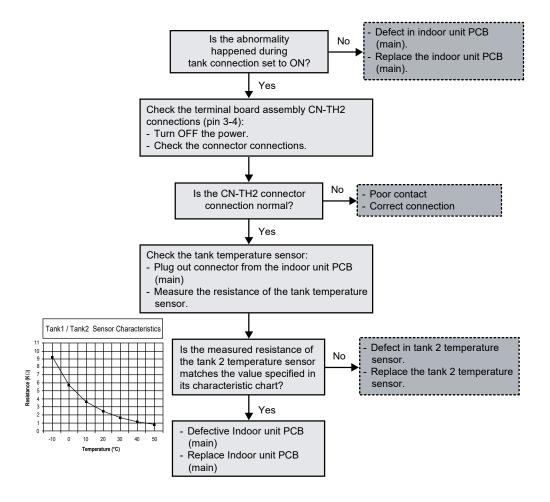

### 18.5.7 Refrigerant Liquid Temperature Sensor Abnormality (H23)

### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by the refrigerant liquid temperature sensor are used to determine sensor error.

#### **Malfunction Caused:**


- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

### **Abnormality Judgment:**

Continue for 5 seconds.

### **Troubleshooting:**



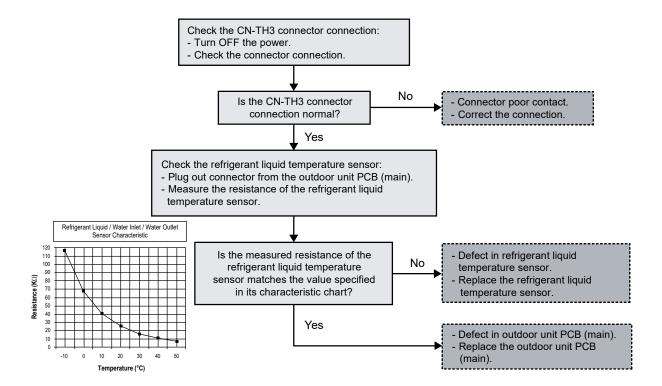

### 18.5.8 Service Valve Error (H27)

#### **Malfunction Decision Conditions:**

During cooling operation, when:-

- [a] Indoor refrigerant pipe temperature at compressor startup present indoor refrigerant pipe temperature < 2°C
- [b] Present high pressure high pressure at compressor startup < 5kg/cm<sup>2</sup>
- \*\*Judgment only for first time cooling operation and not during pump down operation.

#### **Malfunction Caused:**


- 1 3 way valves closed.
- 2 Faulty high pressure sensor.
- 3 Faulty indoor refrigerant pipe temperature sensor
- 4 Faulty outdoor unit PCB (main).

### **Abnormality Judgment:**

Continue for 300 seconds.

### **Troubleshooting:**



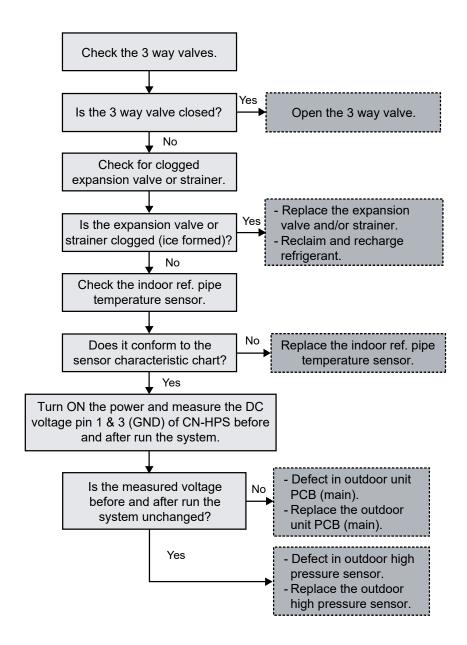


## 18.5.9 Abnormal Solar Sensor (H28)

### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty solar sensor.
- 3 Faulty indoor sub PCB.

### **Abnormality Judgment:**

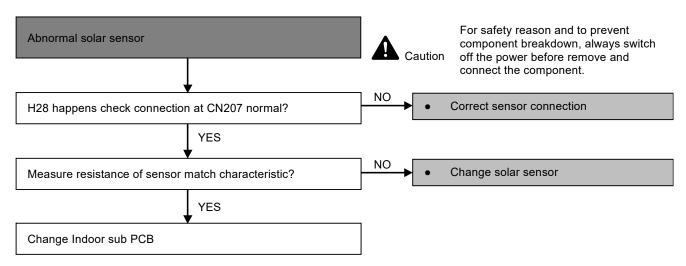


### 18.5.10 Abnormal Swimming Pool Sensor (H31)

### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty swimming pool sensor.
- 3 Faulty indoor sub PCB.

### **Abnormality Judgment:**

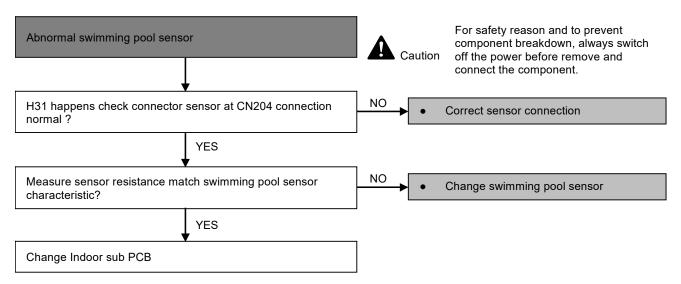


### 18.5.11 Abnormal Buffer Tank Sensor (H36)

#### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty buffer tank sensor.
- 3 Faulty indoor sub PCB.


### **Abnormality Judgment:**

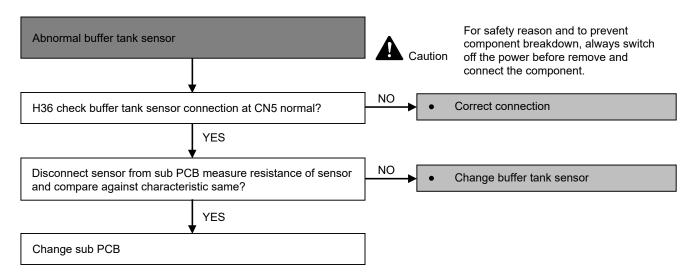

### 18.5.12 Brand Code Not Matching (H38)

### **Malfunction Caused:**

1 Indoor and outdoor brand code not match.

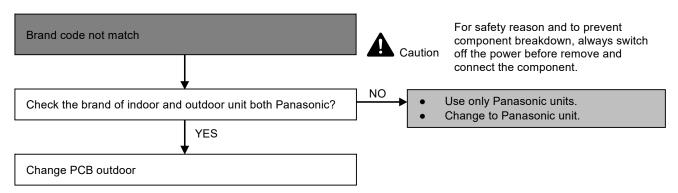

### 18.5.13 Compressor Low Pressure Protection (H42)

#### **Malfunction Decision Conditions:**


During operation of heating and after 5 minutes compressor ON, when outdoor pipe temperature below -29°C or above 26°C is detected by the outdoor pipe temperature sensor.

#### **Malfunction Caused:**

- 1 Dust accumulation on the outdoor unit heat exchanger.
- 2 Air short circuit at outdoor unit.
- 3 2 way valve partially closed.
- 4 Faulty outdoor unit fan motor.
- 5 Refrigerant shortage (refrigerant leakage).
- 6 Clogged expansion valve or strainer.
- 7 Faulty outdoor pipe temperature sensor.
- 8 Faulty outdoor unit main PCB (main).

### **Troubleshooting:**



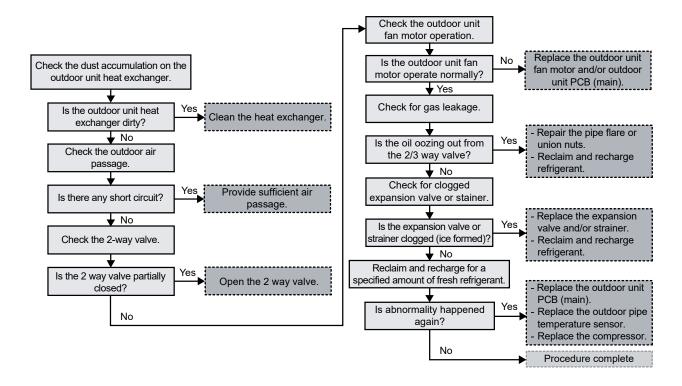


### 18.5.14 Abnormal Zone 1 Sensor (H43)

#### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty buffer tank sensor.
- 3 Faulty indoor sub PCB.

### **Abnormality Judgment:**

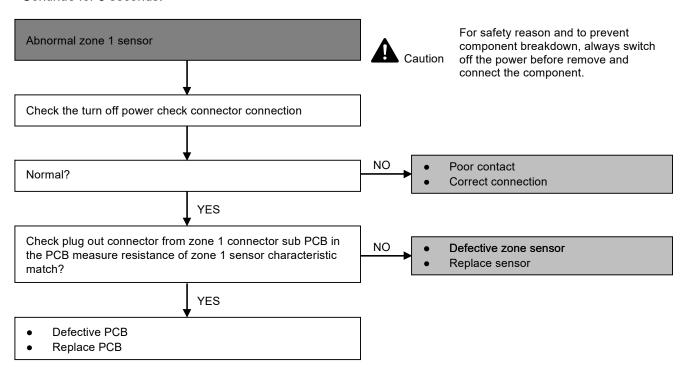


### 18.5.15 Abnormal Zone 2 Sensor (H44)

### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty buffer tank sensor.
- 3 Faulty indoor sub PCB.

### **Abnormality Judgment:**

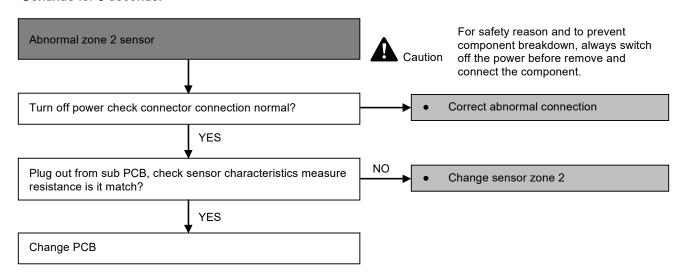

### 18.5.16 Water Flow Switch Abnormality (H62)

#### **Malfunction Decision Conditions:**

During operation of cooling and heating, the water flow detected by the outdoor water flow switch is used to determine water flow error.

#### **Malfunction Caused:**


- 1 Faulty water pump.
- 2 Water leak in system.
- 3 Faulty connector connection.
- 4 Faulty water flow switch.
- 5 Faulty outdoor unit PCB (sub).

#### **Abnormality Judgment:**

Continue for 140 seconds (but no judgment for 30 seconds after water pump startup/restart).

# Troubleshooting:



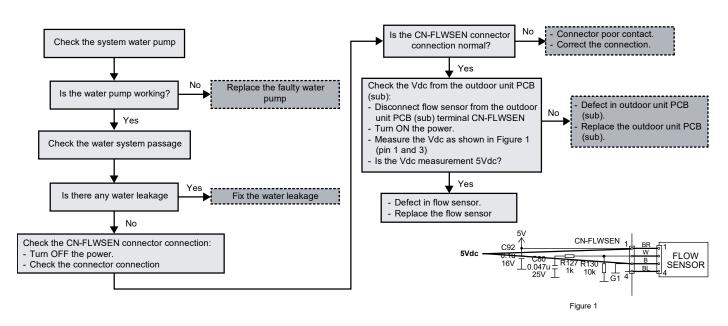

### 18.5.17 Outdoor High Pressure Abnormality (H64)

#### **Malfunction Decision Conditions:**

During operation of cooling and heating, when the outdoor high pressure sensor output signal is 0 Vdc or 5 Vdc.

#### **Malfunction Caused:**


- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

#### **Abnormality Judgment:**

Continue 4 times in 120 minutes.

### **Troubleshooting:**



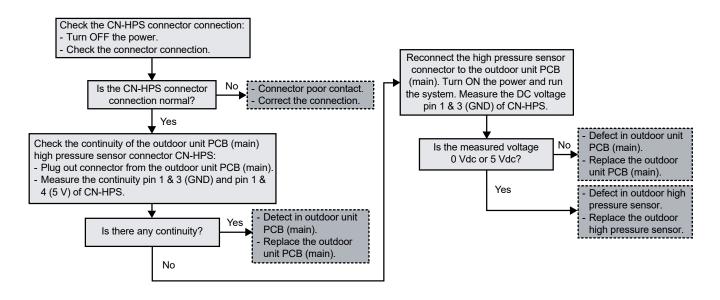

### 18.5.18 Deice Circulation Error (H65)

#### **Malfunction Decision Conditions:**

During startup and operation of deice (mode 2), the water flow (> 8 l/min) detected by the water flow switch is used to determine deice circulation error.

#### **Malfunction Caused:**


- 1 Water flow in air-to-water heatpump unit circuitry.
- 2 Faulty outdoor unit water flow switch.
- 3 Faulty outdoor unit water pump.
- 4 Faulty outdoor unit PCB (sub).
- 5 Faulty outdoor unit PCB (main).

#### **Abnormality Judgment:**

Continue for 10 seconds.

### **Troubleshooting:**



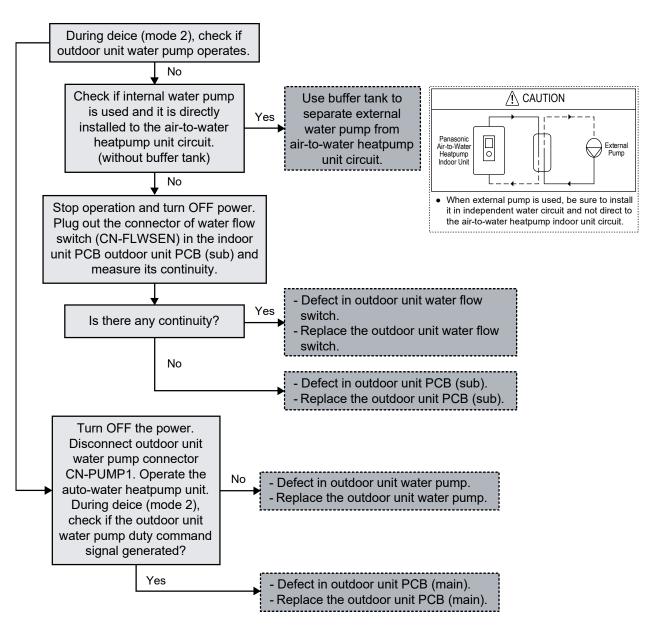


### 18.5.19 Abnormal External Thermistor 1 (H67)

#### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty room temperature zone 1 sensor.
- 3 Faulty indoor sub PCB.

### **Abnormality Judgment:**

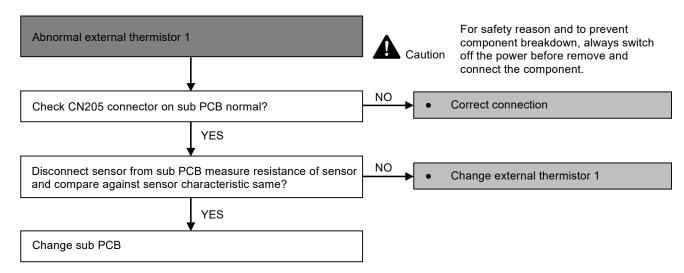


### 18.5.20 Abnormal External Thermistor 2 (H68)

#### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty room temperature zone 2 sensor.
- 3 Faulty indoor sub PCB.

### **Abnormality Judgment:**

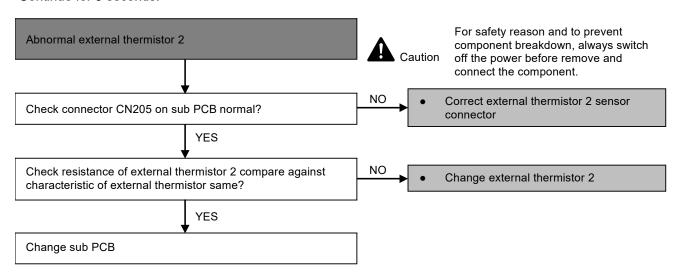

### 18.5.21 Indoor Backup Heater OLP Abnormality (H70)

#### **Malfunction Decision Conditions:**

During operation of indoor backup heater, when no power supplies to indoor backup heater or OLP open circuit.

### **Malfunction Caused:**


- 1 Faulty power supply connector connection.
- 2 Faulty connector connection.
- 3 Faulty indoor backup heater overload protector (OLP).
- 4 Faulty indoor unit PCB (main).

#### **Abnormality Judgment:**

Continue for 60 seconds.

### **Troubleshooting:**



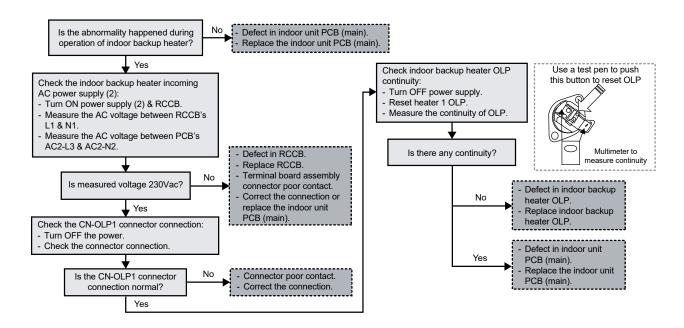

### 18.5.22 Tank Temperature Sensor Abnormality (H72)

#### **Malfunction Decision Conditions:**

When tank connection is set to ON, the temperatures detected by the tank temperature sensor are used to determine sensor error.

#### **Malfunction Caused:**


- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty indoor unit PCB (main).
- 4 Faulty outdoor unit PCB (sub).

#### **Abnormality Judgment:**

Continue for 5 seconds.

# Troubleshooting:



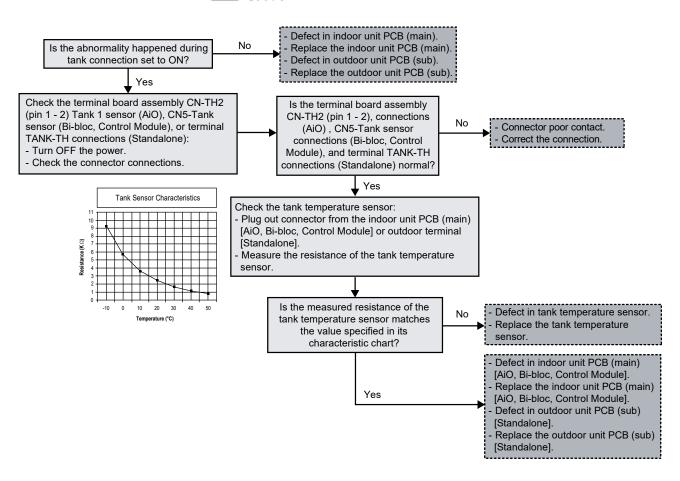

### 18.5.23 PCB Communication Error (H74)

#### **Malfunction Decision Conditions:**


When External PCB connection is select "YES" and no communication with External PCB micon for 10 seconds and above.

### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty indoor PCB.
- 3 Faulty indoor sub PCB.

### **Abnormality Judgment:**

After 1 minute operation started.

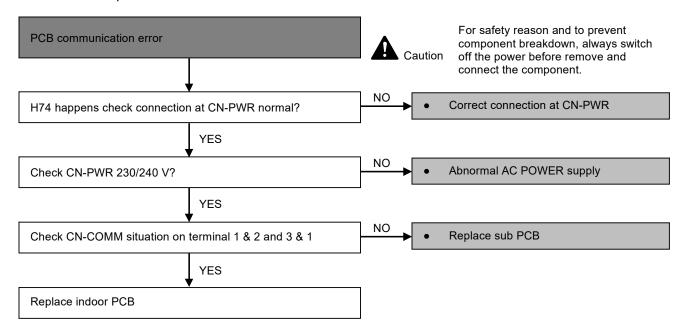

### 18.5.24 Low Water Temperature Control (H75)

#### **Malfunction Decision Conditions:**

If defrosting is performed when the heater cannot be used and the water temperature is low, a warning will be issued as there is a risk of the water circuit freezing.

#### **Malfunction Caused:**

- The heater setting is disabled.
- Low water flow rate.
- Target  $\Delta T$  is large and the heating target temperature setting is low.

### **Abnormality Judgment:**

Room heater disable and deice request to operate under low water temperature.

### Troubleshooting:



For safety reason and to prevent component breakdown, Caution Caution

If the model you are using is equipped with a heater [AiO, Bi-bloc], enable the heater setting if it is disabled.

If the system stops frequently, the issue may be due to insufficient circulation flow or a heating set temperature that is too low.

### 18.5.25 Indoor-Control Panel Communication Abnormality (H76)

#### **Malfunction Decision Conditions:**


During standby and operation of cooling and heating, indoor-control panel error occur.

#### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty control panel.
- 3 Faulty indoor unit PCB (main).
- 4 Faulty outdoor unit PCB (sub).

### **Troubleshooting:**



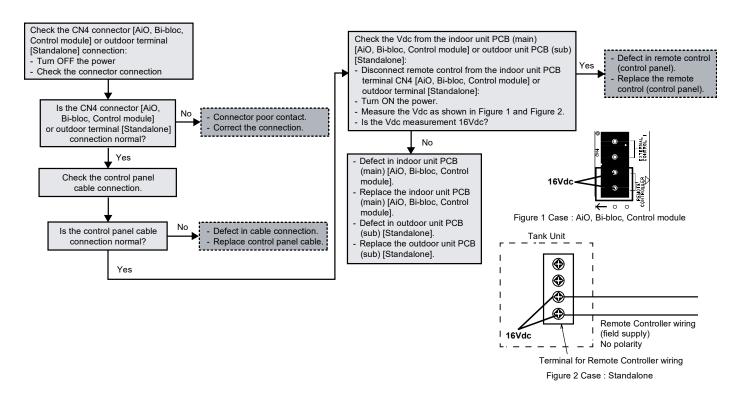

### 18.5.26 Indoor/Outdoor Abnormal Communication (H90)

#### **Malfunction Decision Conditions:**

During operation of cooling and heating, the data received from outdoor unit in indoor unit signal transmission is checked whether it is normal.

#### **Malfunction Caused:**


- 1 Faulty outdoor unit PCB (main).
- 2 Faulty outdoor unit PCB (sub).
- 3 Faulty indoor unit PCB (main).
- 4 Indoor-outdoor signal transmission error due to wrong wiring.
- Indoor-outdoor signal transmission error due to breaking of wire in the connection wires between the indoor and outdoor units.
- 6 Indoor-outdoor signal transmission error due to disturbed power supply waveform.

### **Abnormality Judgment:**

Continue for 15 seconds after operation.

### **Troubleshooting:**



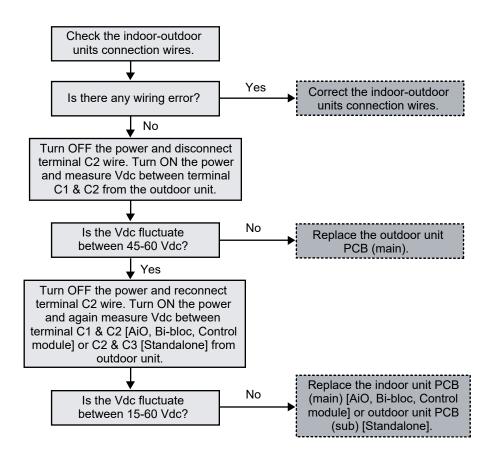

### 18.5.27 Tank Booster Heater OLP Abnormality (H91)

#### **Malfunction Decision Conditions:**

During operation of tank booster heater, and tank booster heater OLP open circuit.

#### **Malfunction Caused:**

- Faulty connector connection.
- Faulty tank booster heater overload protector (OLP).
- Faulty indoor unit PCB (main).

### **Abnormality Judgment:**

Continue for 60 seconds.

#### **Troubleshooting:** always switch off the power before remove and connect the component. Caution Yes Does the abnormality happen during - Defect in indoor unit PCB (main). operation of tank booster heater? - Replace the indoor unit PCB (main). No Check the CN6 connector connection: No - Turn OFF the power. - Connector poor contact. - Check the connector connection. Is the - Correct the connection. CN6 connector connection normal? Yes Turn OFF the power and disconnect OLP lead wire. Yes Turn ON the power Replace the tank heater booster heater OLP and measure Vdc between CN6 connector. Is there 12Vdc? See Fig 1 CN<sub>6</sub> **OLP BOOSTER** No **HEATER** Replace the indoor unit main PCB ROOM TEMP. ZONE 1

For safety reason and to prevent component breakdown,

Fig 1

### 18.5.28 Unspecified Voltage between Indoor and Outdoor (H95)

### **Malfunction Decision Conditions:**


The supply power is detected for its requirement by the indoor/outdoor transmission.

#### **Malfunction Caused:**

- 1 Insufficient power supply.
- 2 Faulty outdoor unit PCB (noise filter/main).

### **Troubleshooting:**



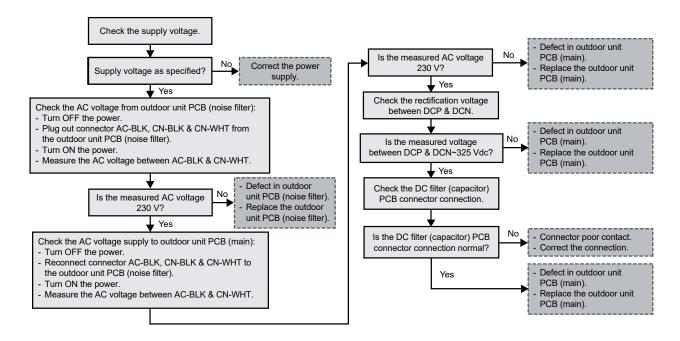

## 18.5.29 Outdoor High Pressure Protection (H98 / F95)

#### **Malfunction Decision Conditions:**


During operation of cooling / heating, when pressure 3.2 MPa and above is detected by outdoor high pressure sensor.

#### **Malfunction Caused:**

- 1 Faulty water pump.
- 2 Insufficient water flow rate in system.
- 3 Water leak in system.
- 4 Dust accumulation in the outdoor unit heat exchanger.
- 5 Air short circuit at outdoor.
- 6 Faulty outdoor unit fan motor.
- 7 Clogged expansion valve or strainer.
- 8 Excessive refrigerant.
- 9 Faulty outdoor high pressure sensor.
- 10 Faulty outdoor unit PCB (main).


# **Troubleshooting:**



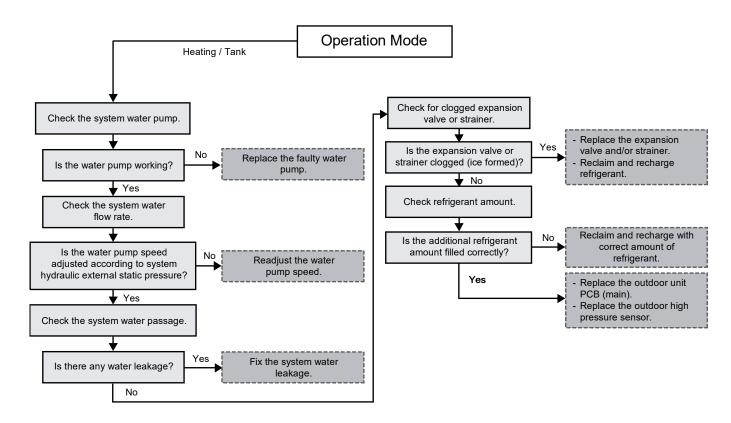

**Troubleshooting:** 



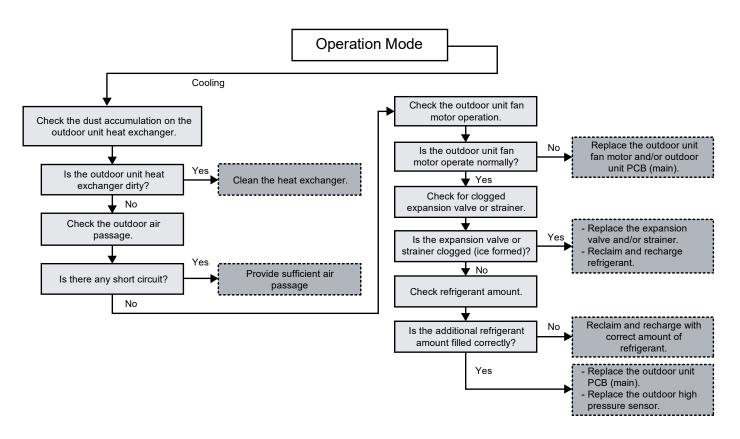

## 18.5.30 Indoor Freeze-up Protection (H99)

#### **Malfunction Decision Conditions:**


During anti-freezing control in cooling operation, when the refrigerant liquid temperature < 0°C.

#### **Malfunction Caused:**

- 1 Faulty water pump.
- 2 Insufficient water flow rate in system.
- 3 Water leak in system.
- 4 Clogged expansion valve or strainer.
- 5 Refrigerant shortage (refrigerant leakage).
- 6 Faulty indoor refrigerant liquid temperature sensor.
- 7 Faulty outdoor unit PCB (main).

# **Troubleshooting:**



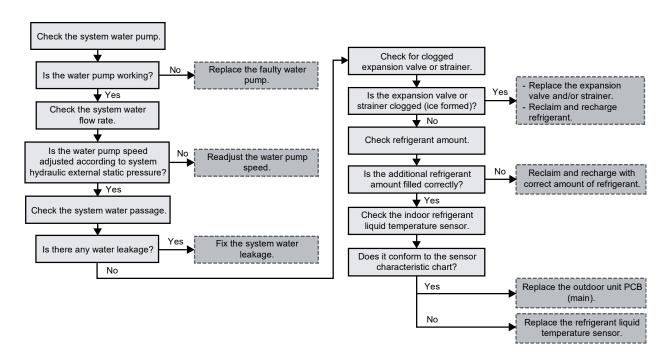

## 18.5.31 Outdoor High Pressure Switch Activate (F12)

#### **Malfunction Decision Conditions:**

During operation of cooling and heating, when pressure 3.9 MPa and above is detected by outdoor high pressure switch.

#### **Malfunction Caused:**


- 1 Dust accumulation on the outdoor unit heat exchanger.
- 2 Air short circuit at outdoor unit.
- 3 Faulty water pump.
- 4 Insufficient water flow rate in system.
- 5 Water leak in system.
- 6 Clogged expansion valve or strainer.
- 7 Excessive refrigerant.
- 8 Faulty outdoor high pressure sensor and switch.
- 9 Faulty outdoor unit PCB (main).

#### **Abnormality Judgment:**

Continue 4 times in 30 minutes.

# **Troubleshooting:**



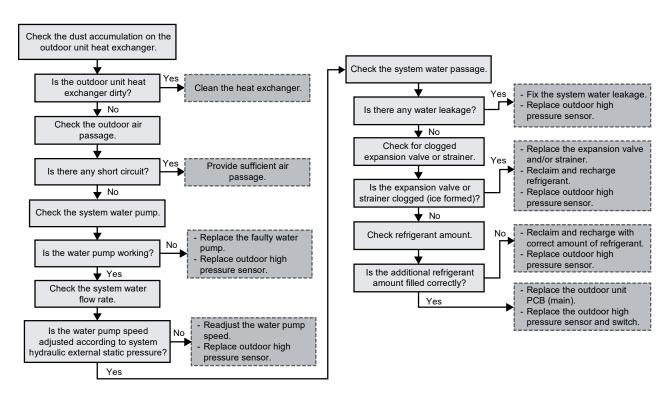

# 18.5.32 Compressor Rotation Failure (F14)

#### **Malfunction Decision Conditions:**

A compressor rotation failure is detected by checking the compressor running condition through the position detection circuit.

#### **Malfunction Caused:**


- 1 Compressor terminal disconnect.
- 2 Faulty outdoor unit PCB (main).
- 3 Faulty compressor.

#### **Abnormality Judgment:**

Continue 4 times in 20 minutes.

# **Troubleshooting:**



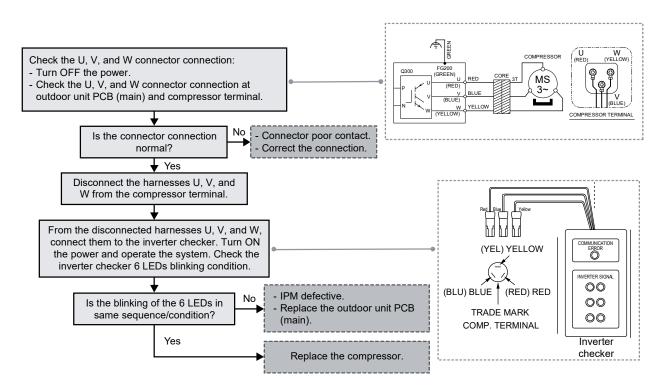

# 18.5.33 Outdoor Fan Motor (DC Motor) Mechanism Locked (F15)

#### **Malfunction Decision Conditions:**

The rotation speed detected by the Hall IC of the fan motor during fan motor operation is used to determine abnormal fan motor (feedback of rotation > 2550 rpm or < 20 rpm).

#### **Malfunction Caused:**

- 1 Operation stop due to short circuit inside the fan motor winding.
- 2 Operation stop due to breaking of wire inside the fan motor.
- 3 Operation stop due to breaking of fan motor lead wires.
- 4 Operation stop due to fan motor Hall IC malfunction.
- 5 Operation error due to faulty outdoor unit PCB (main).

#### **Abnormality Judgment:**

Continue 2 times in 20 minutes.


Check the rotation feedback

output from the fan motor.

Rotate the fan motor by hand, is the

rotation feedback voltage 15 Vdc

(pin 6 & 4) generated?

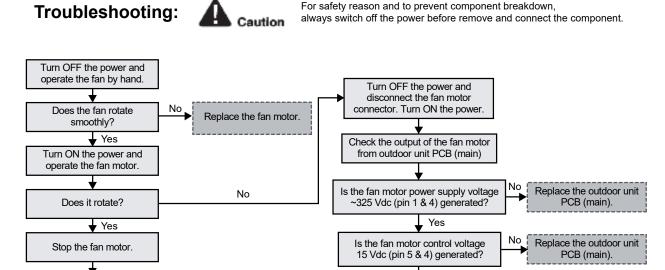

Replace the fan motor.

Replace the outdoor unit PCB (main).

Yes

Yes

Replace the outdoor unit

PCB (main).

Replace the fan motor.

Operate the fan motor, is the

rotation command voltage 1-5 Vdc

(pin 7 & 4) generated?

# 18.5.34 Input Over Current Detection (F16)

#### **Malfunction Decision Conditions:**

During operation of cooling and heating, when outdoor current above WH-WXG09ME5 31.0A & WH-WXG12ME5 31.0A is detected by the current transformer (CT) in the outdoor unit PCB.

#### **Malfunction Caused:**


- Excessive refrigerant.
- 2 Faulty outdoor unit PCB (main).

#### **Abnormality Judgment:**

Continue 3 times in 20 minutes.

# **Troubleshooting:**



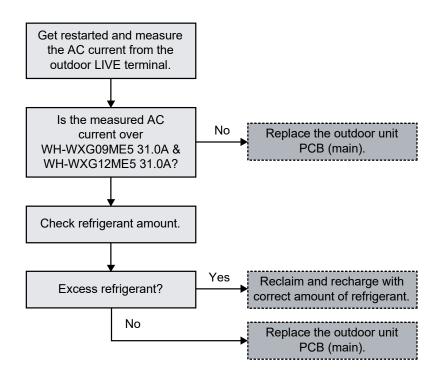

### 18.5.35 Compressor Overheating (F20)

#### **Malfunction Decision Conditions:**

During operation of cooling and heating, when temperature above 112°C is detected by the outdoor discharge pipe temperature sensor.

#### **Malfunction Caused:**


- 1 Faulty outdoor discharge pipe temperature sensor.
- 2 Refrigerant shortage (refrigerant leakage).
- 3 Clogged expansion valve or strainer.
- 4 Faulty outdoor unit PCB (main).
- 5 Faulty compressor.

#### **Abnormality Judgment:**

Continue 4 times in 30 minutes.

# **Troubleshooting:**



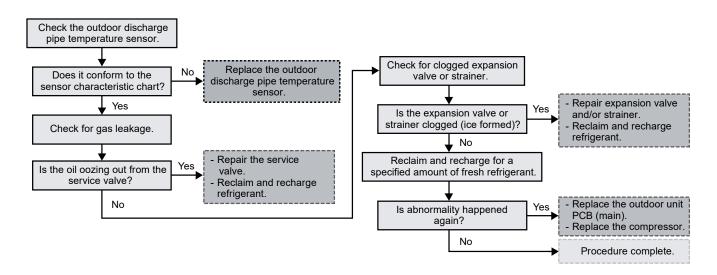

# 18.5.36 IPM Overheating (F22)

# **Malfunction Decision Conditions:**

During operation of cooling and heating, when temperature 95°C is detected by the outdoor IPM temperature sensor.

#### **Malfunction Caused:**


- 1 Faulty outdoor unit fan motor.
- 2 Faulty outdoor unit PCB (main).

#### **Abnormality Judgment:**

Continue 3 times in 30 minutes.

# **Troubleshooting:**



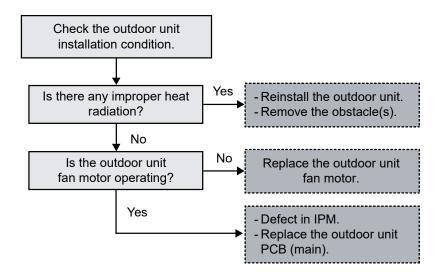

## 18.5.37 Output Over Current Detection (F23)

#### **Malfunction Decision Conditions:**

During operation of cooling and heating, when outdoor DC current is above set value is detected by the IPM DC Peak sensing circuitry in the outdoor unit PCB (main).

#### **Malfunction Caused:**


- 1 Faulty outdoor unit PCB (main).
- 2 Faulty compressor.

#### **Abnormality Judgment:**

Continue for 7 times.





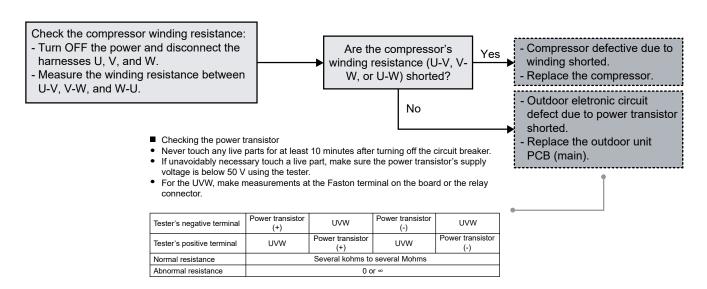

## 18.5.38 Refrigeration Cycle Abnormality (F24)

#### **Malfunction Decision Conditions:**


- 1 During compressor running (heating / cooling) for more than 10 minutes except deice and test mode.
- 2 During heating, water outlet and water inlet difference is less than 3°C.
- 3 During cooling, water outlet and water inlet difference is less than 2°C.
- 4 During heating, high pressure < 0.16 MPa (23 Psi) for more than 10 minutes or during cooling, high pressure < 0.04 MPa (6 Psi) for more than 10 minutes or high pressure < 0.01 MPa (1 Psi) for more than 5 minutes.
- 5 During heating, discharge temperature saturation temperature of high pressure ≥ 65°C.
- 6 During cooling, discharge temperature saturation temperature of high pressure ≥ 70°C.

#### **Malfunction Caused:**

- 1 Refrigerant shortage (refrigerant leakage).
- 2 Faulty indoor water inlet, indoor water outlet, compressor discharge temp sensor or high pressure sensor.
- 3 Clogged expansion valve or strainer.
- 4 Faulty indoor or outdoor PCB (main).

#### **Abnormality Judgment:**

Continue 2 times in 30 minutes.

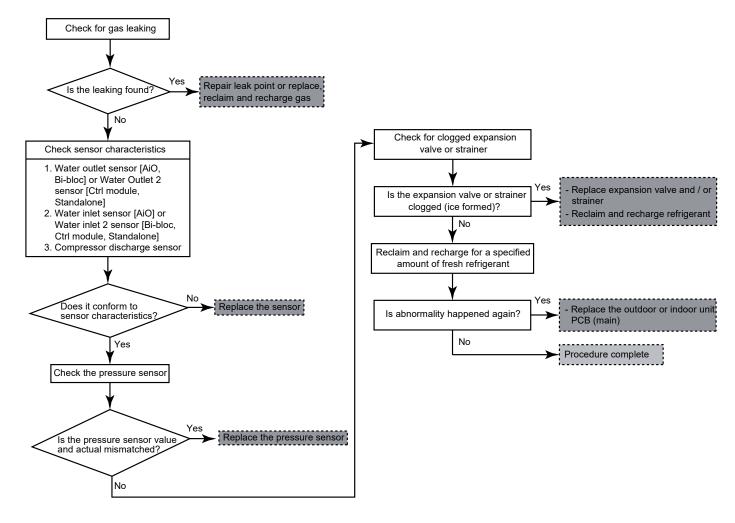

### 18.5.39 Four Way Valve Abnormality (F25)

#### **Malfunction Decision Conditions:**

- 1 During heating operation, when the refrigerant liquid temperature of thermostat ON indoor unit < 0°C.
- 2 During cooling operation, when the refrigerant liquid temperature of thermostat ON indoor unit > 45°C.

#### **Malfunction Caused:**


- 1 Faulty sensor.
- 2 Faulty connector connection.
- 3 Faulty outdoor unit PCB (noise filter/main).
- 4 Faulty four way valve.

#### **Abnormality Judgment:**

Continue 3 times in 40 minutes.

# **Troubleshooting:**



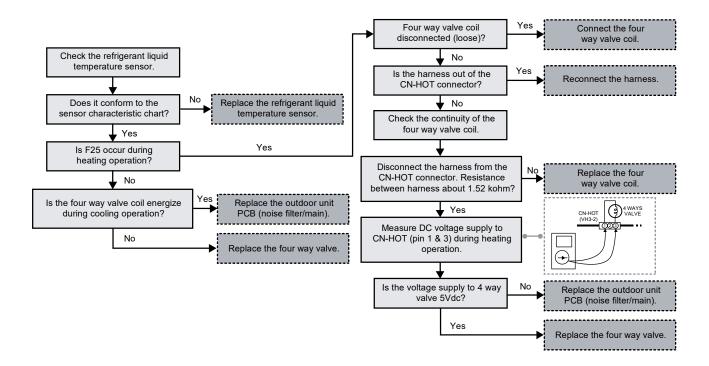

## 18.5.40 Outdoor High Pressure Switch Abnormal (F27)

#### **Malfunction Decision Conditions:**

During compressor stop, and outdoor high pressure switch is remain opened.

#### **Malfunction Caused:**


- 1 Faulty connector connection.
- 2 Faulty switch.
- 3 Faulty outdoor unit PCB (main).

#### **Abnormality Judgment:**

Continue for 1 minute.

# **Troubleshooting:**



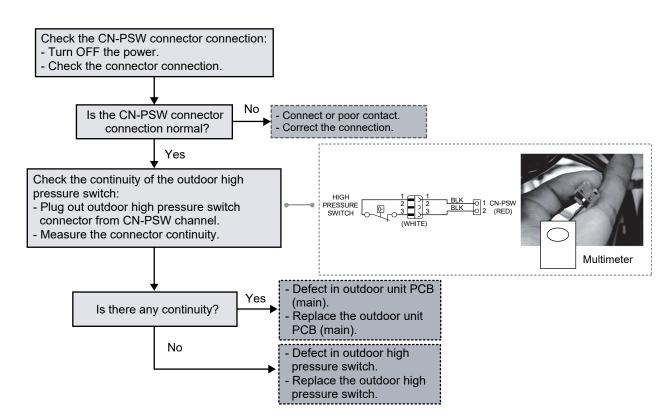

## 18.5.41 Outdoor Water Outlet Temperature Sensor 2 Abnormality (F30)

#### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by the water outlet temperature sensor 2 are used to determine sensor error.

#### **Malfunction Caused:**


- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

#### **Abnormality Judgment:**

Continue for 5 seconds.

# **Troubleshooting:**



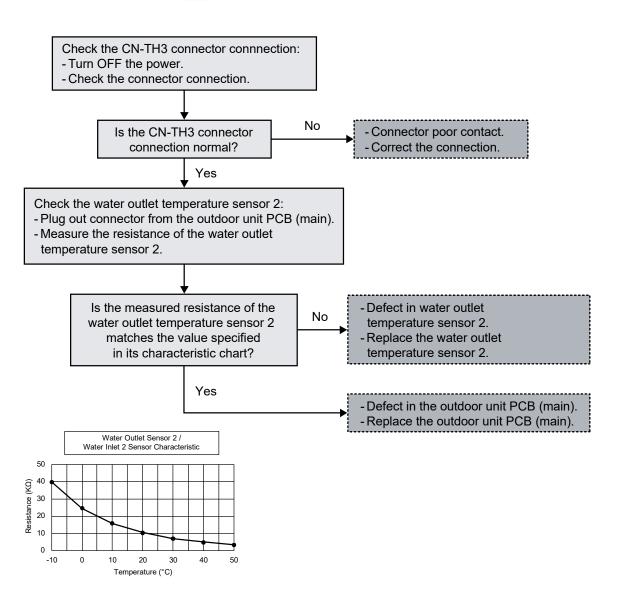

## 18.5.42 Internal Thermostat Error [RC-1 or RC-2] (F32)

#### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by Internal thermostat in control panel are used to determine sensor error.

#### **Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty control panel.
- 3 Faulty Indoor unit PCB (main).
- 4 Faulty Outdoor unit PCB (sub).

#### **Abnormality Judgment:**

Continue for 5 seconds.

#### For safety reason and to prevent component breakdown, **Troubleshooting:** Caution always switch off the power before remove and connect the component. Check the CN4 connector [Control module] or outdoor terminal [Standalone] connection: - Turn OFF the power - Check the connector connection Is the CN4 connector [Control No Poor contact module] or outdoor terminal Correct connection [Standalone] connection normal? Check the control panel cable connection. No Is the control panel cable - Defect in cable connection. connection normal? - Replace control panel cable. Yes - Defect in remote control 1 or 2 Check the Vdc from the indoor unit PCB (main) [Control module] or outdoor unit PCB (sub) (control panel). - Replace the remote control 1 or 2 [Standalone]: Yes - Disconnect remote control from the indoor unit PCB (control panel). \*If the abnormality is displayed as terminal CN4 [Control module] or outdoor terminal "RC-1 internal thermostat error", it [Standalone]: will be 1, and if it is displayed as - Turn ON the power. "RC-2 internal thermostat error", - Measure the Vdc as shown in Figure 1 and Figure 2. it will be 2. - Is the Vdc measurement 16Vdc? No - Defect in indoor unit PCB (main) [Control module]. - Replace the indoor unit PCB (main) [Control module]. - Defect in outdoor unit PCB (sub) [Standalone]. - Replace the outdoor unit PCB (sub) [Standalone].

## 18.5.43 Outdoor Air Temperature Sensor Abnormality (F36)

#### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by the outdoor air temperature sensor are used to determine sensor error.

#### **Malfunction Caused:**


- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

#### **Abnormality Judgment:**

Continue for 5 seconds.

# **Troubleshooting:**



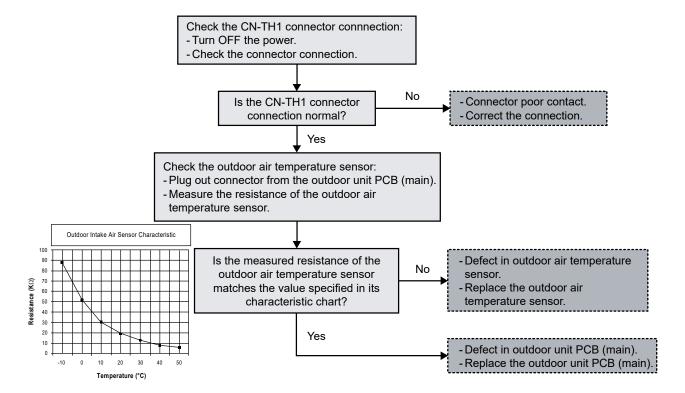

## 18.5.44 Indoor Water Inlet Temperature Sensor Abnormality (F37)

#### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by the indoor water inlet temperature sensor are used to determine sensor error.

#### **Malfunction Caused:**


- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty indoor unit PCB (main).

#### **Abnormality Judgment:**

Continue for 5 seconds.

# **Troubleshooting:**



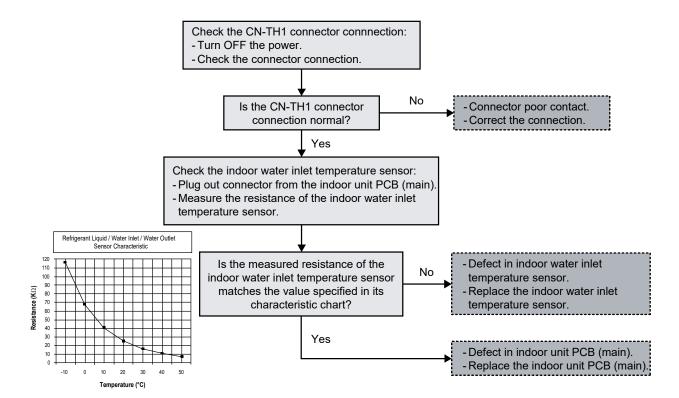

## 18.5.45 Outdoor Discharge Pipe Temperature Sensor Abnormality (F40)

#### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by the outdoor discharge pipe temperature sensor are used to determine sensor error.

#### **Malfunction Caused:**


- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

#### **Abnormality Judgment:**

Continue for 5 seconds.

# **Troubleshooting:**



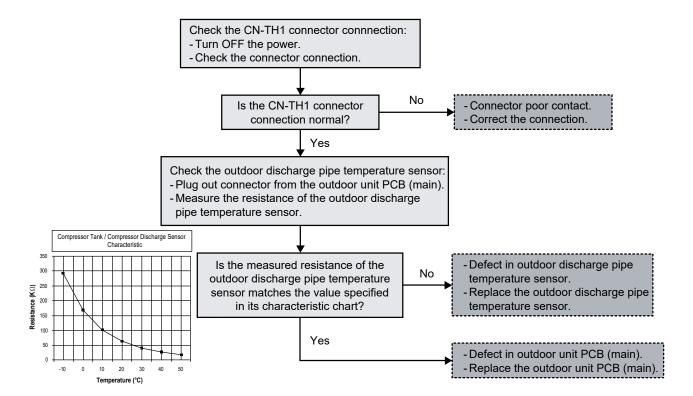

# 18.5.46 Power Factor Correction (PFC) Abnormality (F41)

#### **Malfunction Decision Conditions:**

During operation of cooling and heating, when the PFC protection circuitry in the outdoor unit PCB (main) senses abnormal high DC voltage level.

#### **Malfunction Caused:**


- 1 Power supply surge.
- 2 Compressor windings not uniform.
- 3 Faulty outdoor unit PCB (main).

#### **Abnormality Judgment:**

Continue 4 times in 10 minutes.

# **Troubleshooting:**



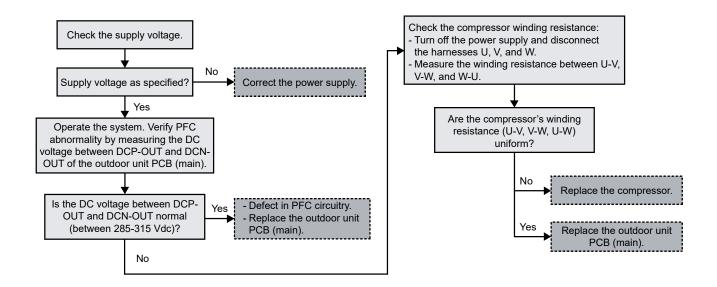

## 18.5.47 Outdoor Pipe Temperature Sensor Abnormality (F42)

#### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by the outdoor pipe temperature sensor are used to determine sensor error.

#### **Malfunction Caused:**


- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).


#### **Abnormality Judgment:**

Continue for 5 seconds.

# **Troubleshooting:**



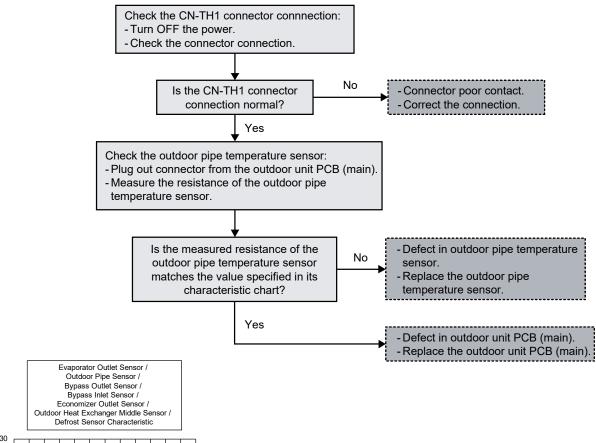

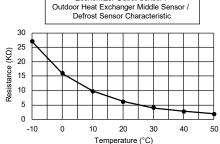

## 18.5.48 Outdoor Defrost Temperature Sensor Abnormality (F43)

#### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by the outdoor defrost temperature sensor are used to determine sensor error.

#### **Malfunction Caused:**


- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

#### **Abnormality Judgment:**

Continue for 5 seconds.

# **Troubleshooting:**



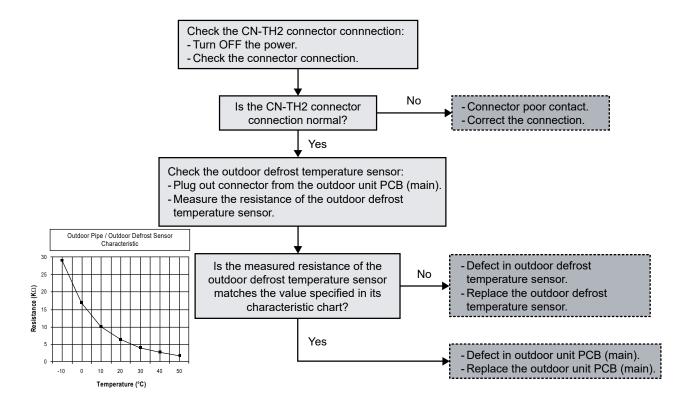

## 18.5.49 Indoor Water Outlet Temperature Sensor Abnormality (F45)

#### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by the indoor water outlet temperature sensor are used to determine sensor errors.

#### **Malfunction Caused:**


- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty indoor unit PCB (main).

#### **Abnormality Judgment:**

Continue for 5 seconds.

# **Troubleshooting:**



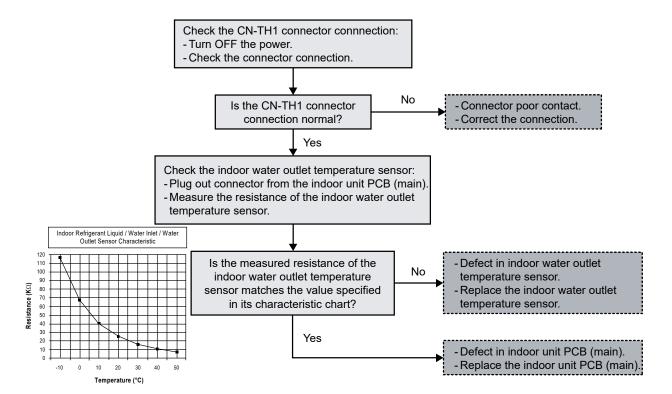

## 18.5.50 Outdoor Current Transformer Open Circuit (F46)

#### **Malfunction Decision Conditions:**

A current transformer (CT) open circuit is detected by checking the compressor running frequency (≥ rated frequency) and CT detected input current (< 0.65 A) for continuously 20 seconds.

#### **Malfunction Caused:**


- 1 CT defective.
- 2 Faulty outdoor unit PCB (main).
- 3 Compressor defective (low compression).

#### **Abnormality Judgment:**

Continue 3 times in 20 minutes.

# **Troubleshooting:**



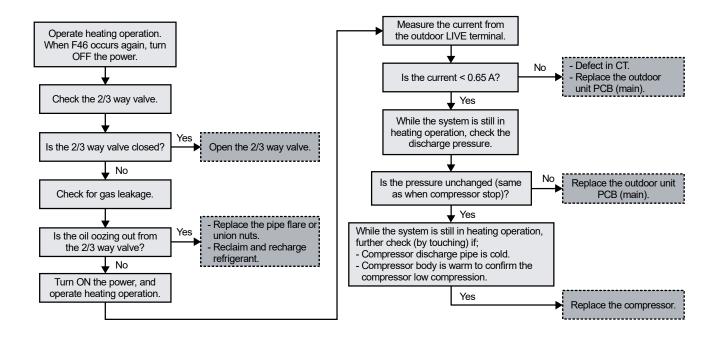

## 18.5.51 Outdoor Evaporator Outlet Temperature Sensor Abnormality (F48)

#### **Malfunction Decision Conditions:**

During start up and operation of cooling and heating, the temperature detected by outdoor evaporator outlet sensor is used to determine sensor error.

#### **Malfunction Caused:**


- 1 Faulty connector connection
- 2 Faulty sensor
- 3 Faulty outdoor unit PCB (main)


#### **Abnormality Judgment:**

Continuous for 5 seconds

# **Troubleshooting:**



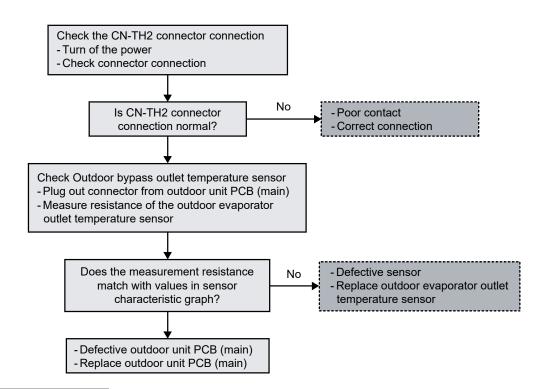

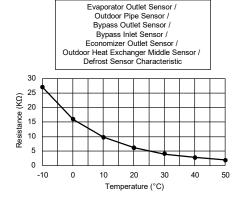

## 18.5.52 Outdoor Bypass Outlet Temperature Sensor Abnormality (F49)

#### **Malfunction Decision Conditions:**

During start up and operation of cooling and heating, the temperature detected by outdoor bypass outlet sensor is used to determine sensor error.

#### **Malfunction Caused:**


- 1 Faulty connector connection
- 2 Faulty sensor
- 3 Faulty outdoor unit PCB (main)


#### **Abnormality Judgment:**

Continuous for 5 seconds

# **Troubleshooting:**



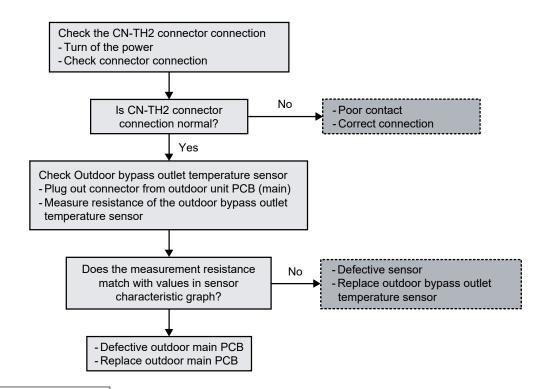

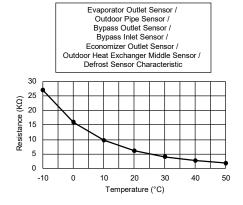

## 18.5.53 Outdoor Water Inlet 2 Temperature Sensor Abnormality (F50)

#### **Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by the indoor water inlet 2 temperature sensor are used to determine sensor error.

#### **Malfunction Caused:**


- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

#### **Abnormality Judgment:**

Continue for 10 seconds.

# **Troubleshooting:**



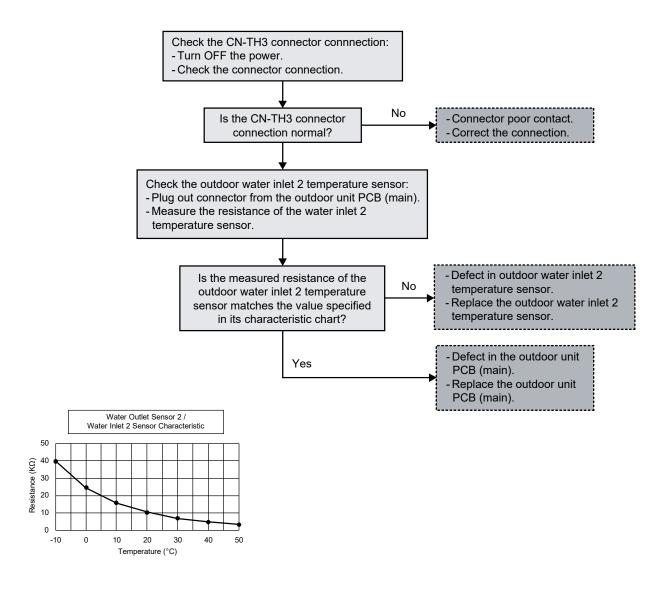

## 18.5.54 Outdoor Economizer Outlet Temperature Sensor Abnormality (F51)

#### **Malfunction Decision Conditions:**

During start up and operation of cooling and heating, the temperature detected by outdoor economizer outlet sensor is used to determine sensor error.

#### **Malfunction Caused:**


- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).


#### **Abnormality Judgment:**

Continuous for 5 seconds.

# **Troubleshooting:**



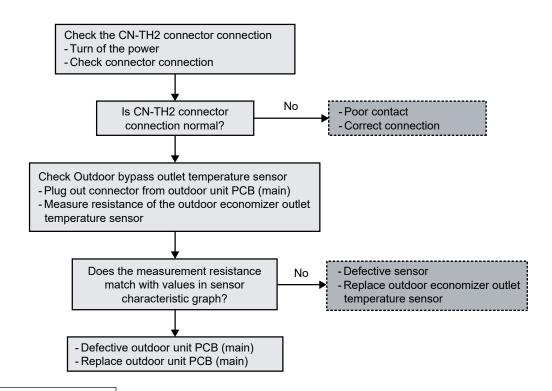

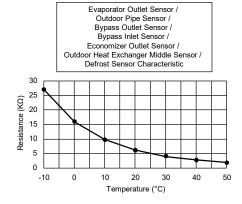

## 18.5.55 Outdoor Bypass Inlet Temperature Sensor Abnormality (F52)

#### **Malfunction Decision Conditions:**

During start up and operation of cooling and heating, the temperature detected by outdoor bypass inlet sensor is used to determine sensor error.

#### **Malfunction Caused:**


- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).


#### **Abnormality Judgment:**

Continuous for 5 seconds.

# **Troubleshooting:**



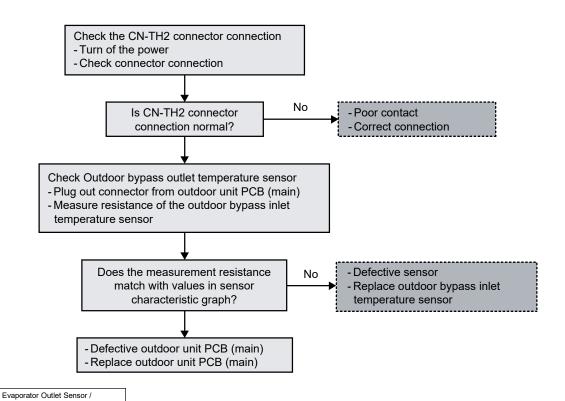

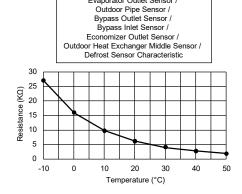

# 18.5.56 Main Expansion Valve Overcurrent Protection (F53)

#### **Malfunction Decision Conditions:**

During start up and operation of cooling and heating, the determination is made based on whether or not an overcurrent flows through the main expansion valve coil.

#### **Malfunction Caused:**


- 1 Faulty connector connection
- 2 Faulty main expansion valve coil
- 3 Faulty outdoor unit PCB (main)

#### **Abnormality Judgment:**

4 times occurrence in 40 minutes

# **Troubleshooting:**



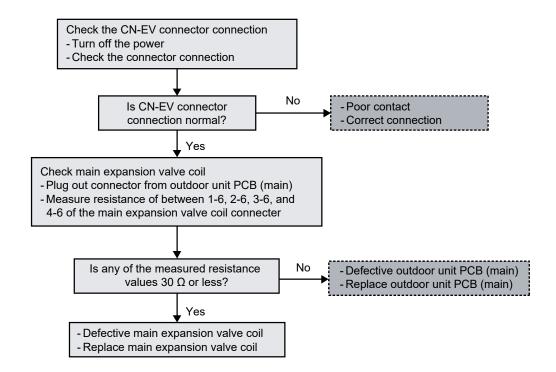

## 18.5.57 Bypass Expansion Valve Overcurrent Protection (F54)

#### **Malfunction Decision Conditions:**

During start up and operation of cooling and heating, the determination is made based on whether or not an overcurrent flows through the bypass expansion valve coil.

#### **Malfunction Caused:**


- 1 Faulty connector connection
- 2 Faulty bypass expansion valve coil
- 3 Faulty outdoor unit PCB (main)

#### **Abnormality Judgment:**

4 times occurrence in 40 minutes

# **Troubleshooting:**



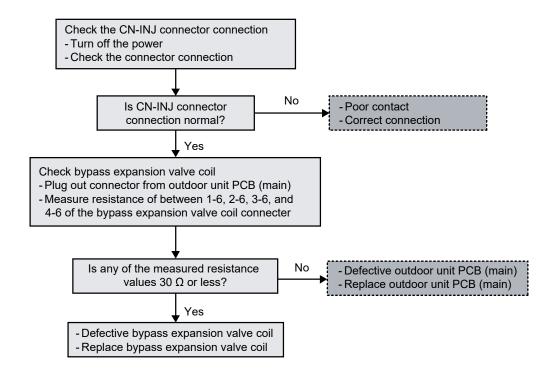

# 18.5.58 Electrical Anode Error (F55)

#### **Malfunction Decision Conditions:**

If the indoor unit type is not AiO, an error will occur due to a mismatch in settings.

#### **Malfunction Caused:**

1 The settings are incorrect.

### **Abnormality Judgment:**

Continuous for 60 seconds

**Troubleshooting:** 



For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

Check the [Electrical anode] menu.

- -Turn on the power
- Check [Installer setup System setup Electrical anode] menu.
- Change setting to [No] from [Yes]

## 18.5.59 Outdoor Heat Exchanger Middle Temperature Sensor Abnormality (F56)

#### **Malfunction Decision Conditions:**

During start up and operation of cooling and heating, the temperature detected by outdoor heat exchanger middle sensor is used to determine sensor error.

#### **Malfunction Caused:**


- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

#### **Abnormality Judgment:**

Continuous for 5 seconds.

# **Troubleshooting:**



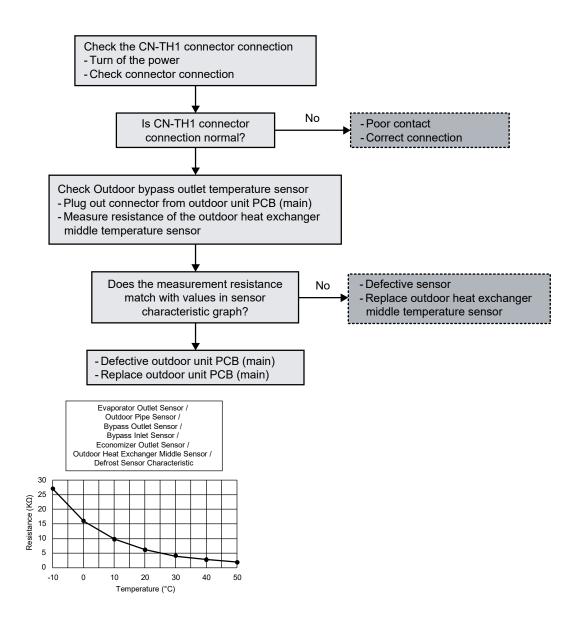


# 19. Disassembly and Assembly Instructions

# MARNING

High Voltage are generated in the electrical parts area by the capacitor. Ensure that the capacitor has discharged sufficiently before proceeding with repair work. Failure to heed this caution may result in electric shocks.


### 19.1 Indoor Unit

#### 19.1.1 To Remove Front Plate

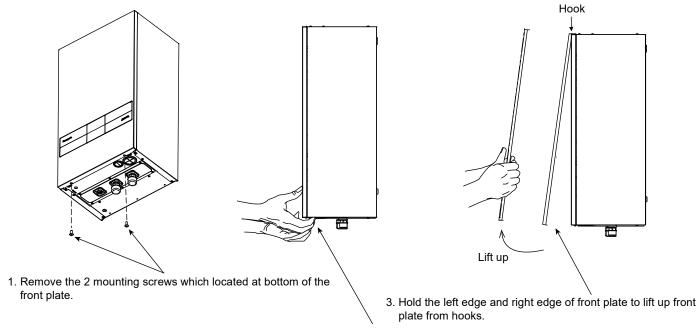


2. Gently pull the lower section of the front plate towards you to remove the front plate from left and right hooks.

# 19.1.2 To Open Control Board Cover

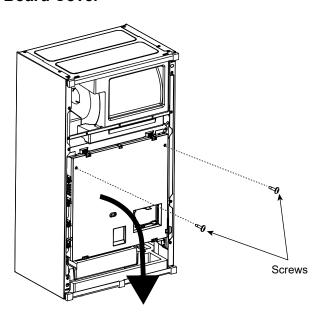


1. Remove 2 screws from the Control Board Cover.

### 19.1.3 To Remove Control Panel

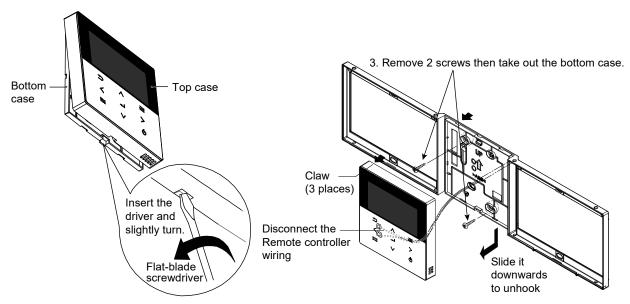


- 1. Remove the top case from the bottom case.
- 2. Disconnect the Remote Controller wiring.

### 19.1.4 To Remove RCCB

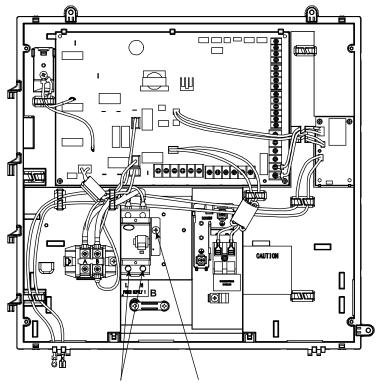


1. Disconnect lead wires. 2. Remove Screws to remove RCCB.

# 19.1.5 To Remove Electronic Controller Board

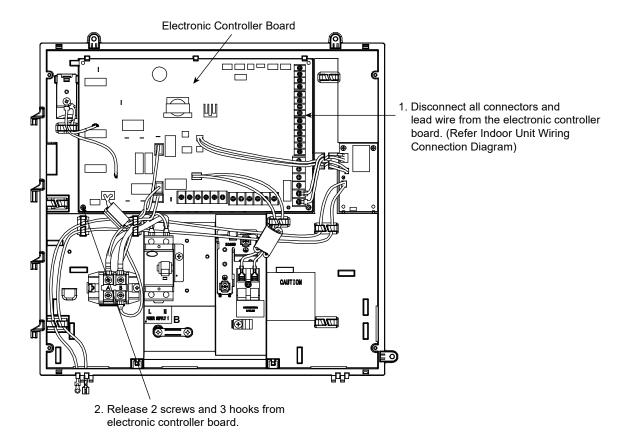

# 19.1.6 To Open Control Board (C-BOX)

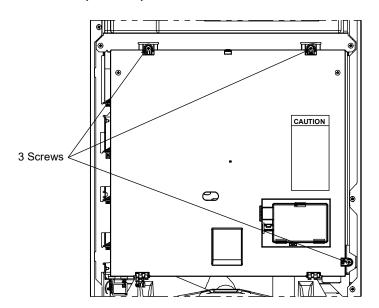





This symbol shows that this equipment uses a flammable refrigerant with safety A3 group per ISO 817. If the refrigerant is leaked, together with an external ignition source, there is a possibility of fire / explosion.


- If you are working on the R290 product, before starting work and when entering the service area, always turn ON
  the combustible gas leak detector to ensure there is no leakage.
- Keep all ignition sources away from the product. In particular, open flames, hot surfaces, electrical devices that are not free from electrical sources, static discharges.
- Ensure the servicing area is well ventilated.
- Ensure all the serving tools and equipment complied with ATEX (Atmosphere Explosible) standard.
- Ensure the product is service by certified and authorized serviceman.
- Ensure to always have the approved fire extinguisher during servicing.
- Use a warning placard to ensure that unauthorized personnel cannot enter the protective zone.


# 19.2 Outdoor Unit

# 19.2.1 Electronic Controller Removal Procedures

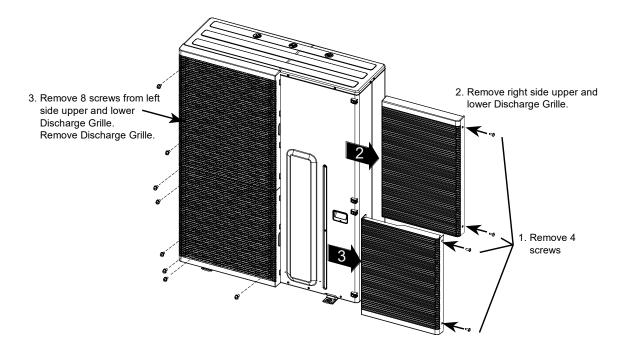

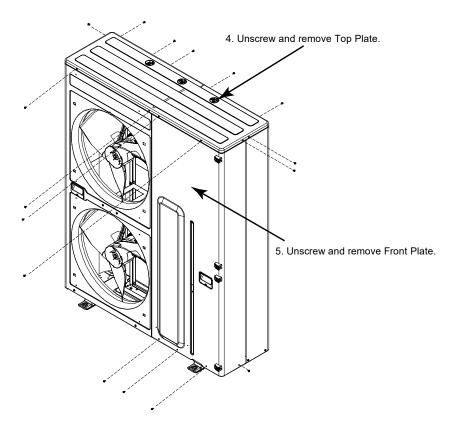

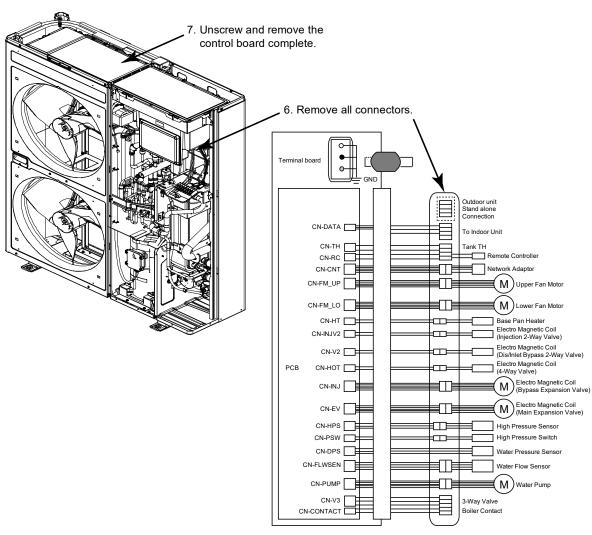

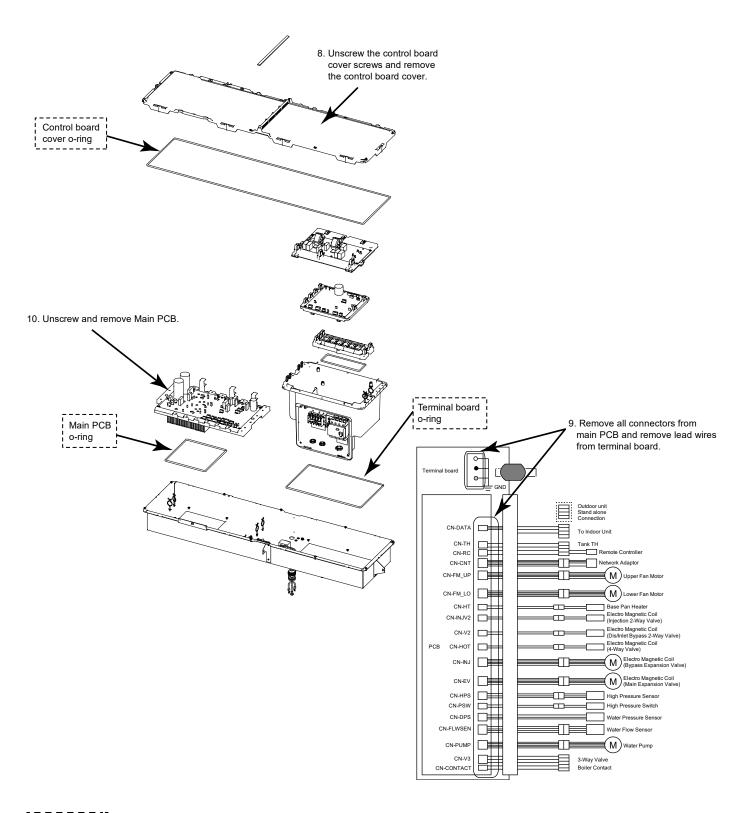

Note: During re-assemble the Main PCB, ensure to attach the O-ring properly to avoid gas leakage into the control board complete.

## 20. Technical Data

## 20.1 Operation Characteristics


#### 20.1.1 WH-WXG09ME5


### **Heating Characteristics at Different Outdoor Air Temperature**


Condition

Outdoor air temperature: 7°C (DBT), 6°C (WBT)

Indoor water inlet temperature: 30°C Indoor water outlet temperature: 35°C

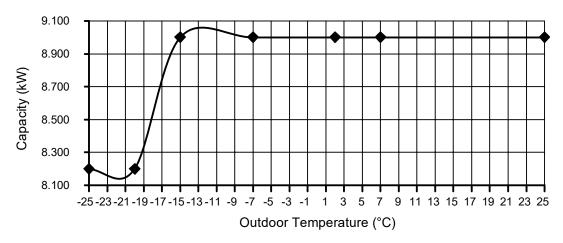

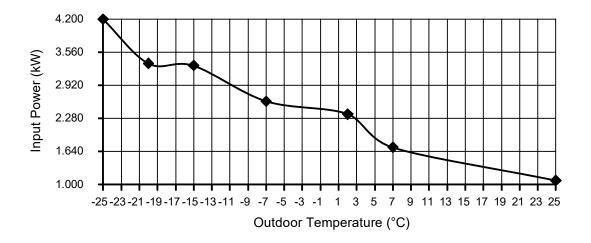


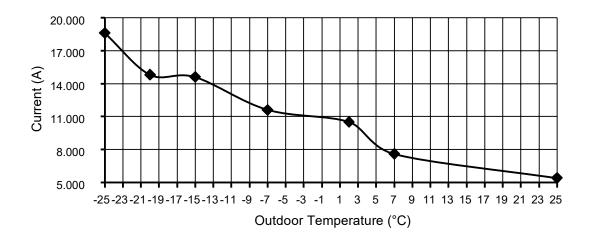



Condition

Outdoor air temperature : 35°C (DBT), -°C (WBT)

Indoor water inlet temperature : 12°C Indoor water outlet temperature : 7°C

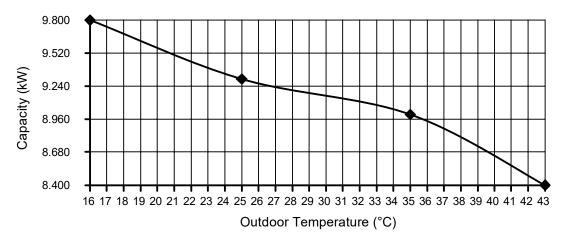

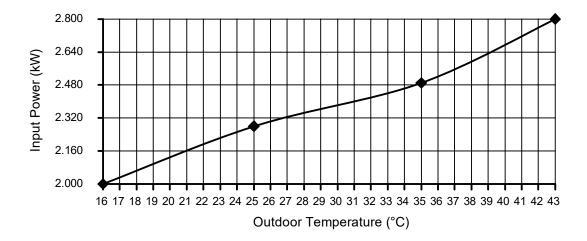


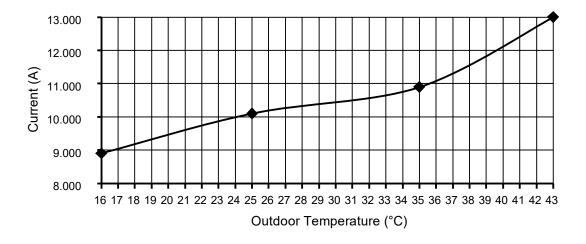



Condition

Outdoor air temperature : 35°C (DBT), -°C (WBT)

Indoor water inlet temperature : 19°C Indoor water outlet temperature : 14°C

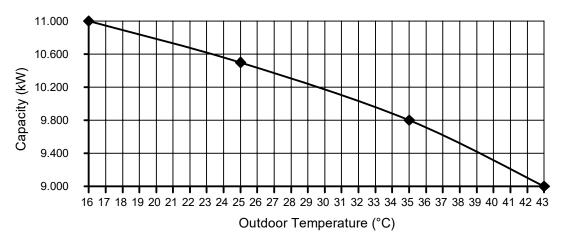

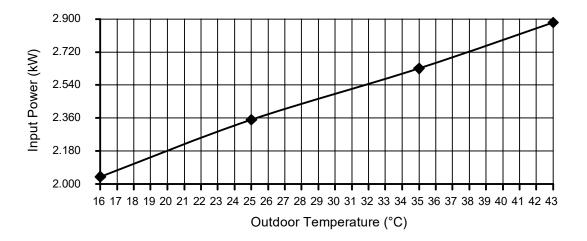


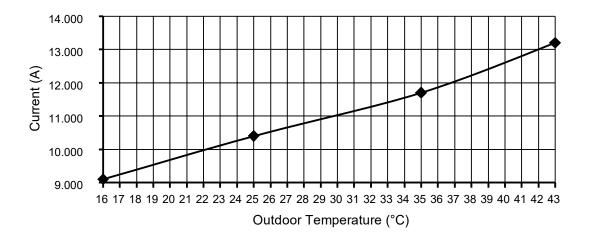



Condition

Outdoor air temperature : 35°C (DBT), -°C (WBT)

Indoor water inlet temperature : 23°C Indoor water outlet temperature : 18°C

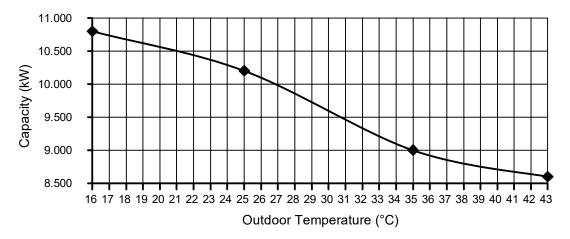

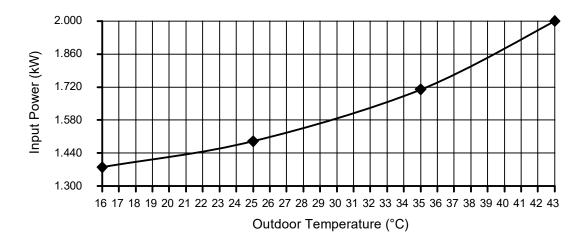

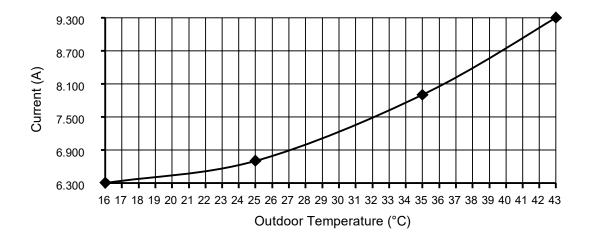


#### 20.1.2 WH-WXG12ME5


#### **Heating Characteristics at Different Outdoor Air Temperature**


Condition

Outdoor air temperature : 7°C (DBT), 6°C (WBT)

Indoor water inlet temperature : 30°C Indoor water outlet temperature : 35°C

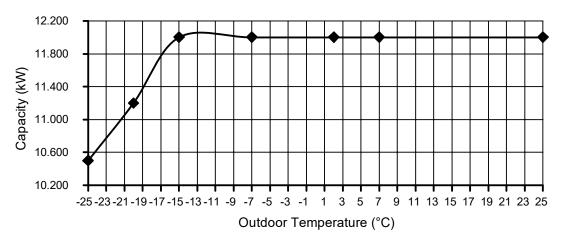

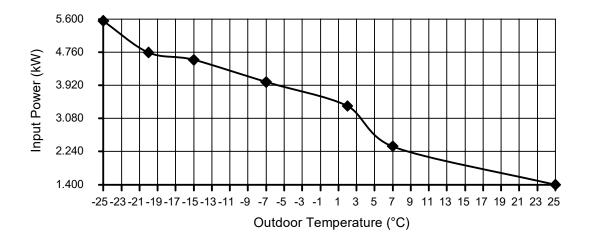


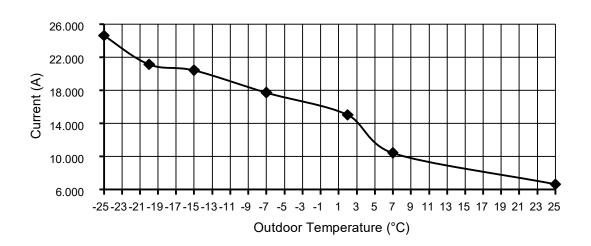



Condition

Outdoor air temperature : 35°C (DBT), -°C (WBT)

Indoor water inlet temperature : 12°C Indoor water outlet temperature : 7°C

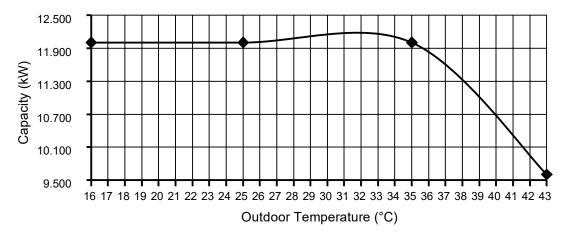

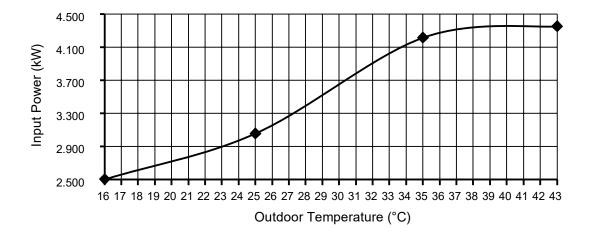


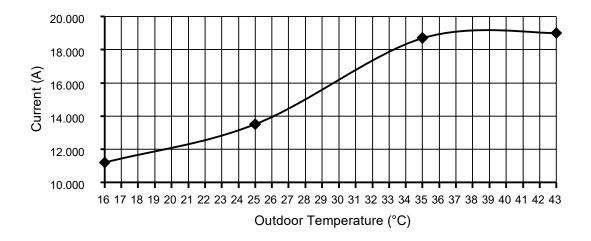



Condition

Outdoor air temperature : 35°C (DBT), -°C (WBT)

Indoor water inlet temperature : 19°C Indoor water outlet temperature : 14°C

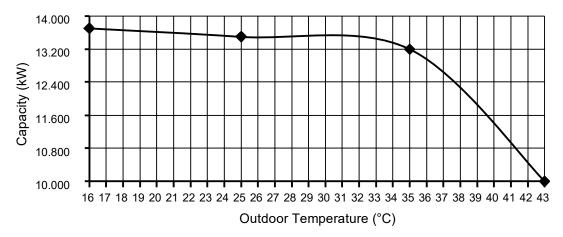

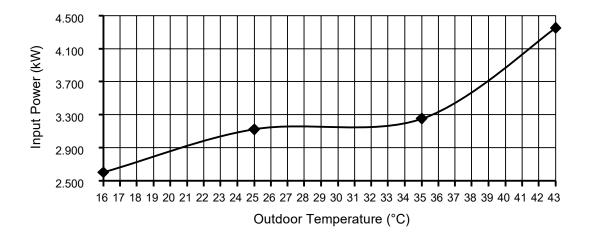


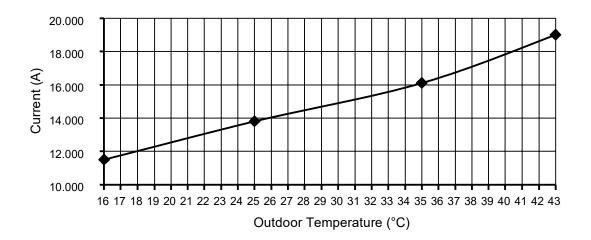



Condition

Outdoor air temperature : 35°C (DBT), -°C (WBT)

Indoor water inlet temperature : 23°C Indoor water outlet temperature : 18°C

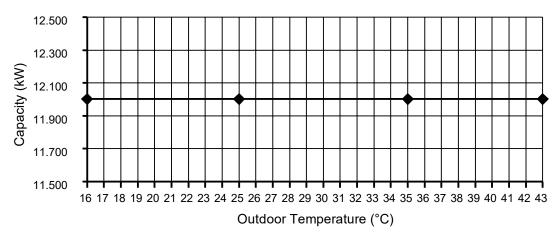

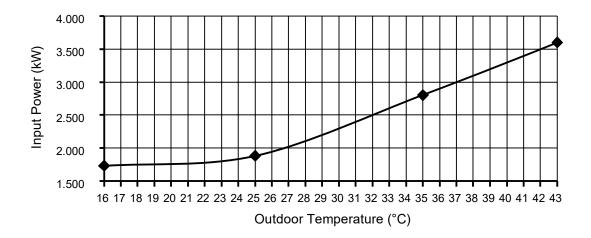

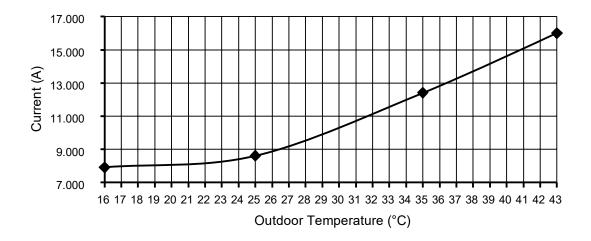

# 20.2 Heating Capacity Table

## 20.2.1 WH-WXG09ME5

Rating Frequency

Water Out (°C)		25			35			45		
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	
-25	7900	3500	15.5	8200	4200	18.6	7900	4800	21.3	
-20	7900	2940	13.0	8200	3340	14.8	7900	3990	17.7	
-15	9000	2740	12.2	9000	3300	14.6	9000	3970	17.6	
-7	9000	2260	10.0	9000	2610	11.6	9000	3350	14.9	
2	8800	1950	8.9	9000	2360	10.5	9000	2910	12.9	
7	9000	1240	6.1	9000	1720	7.6	9000	2300	10.2	
25	7200	860	4.6	9000	1080	5.4	9000	1550	7.0	

Water Out (°C)		55			65			75		
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	
-25	7600	5700	25.3	-	-	-	-	-	-	
-20	7600	4760	21.1	7100	5300	23.5	-	-	-	
-15	9000	4480	20.0	9000	5270	23.4	8200	6500	28.8	
-7	9000	3830	17.0	9000	4680	20.8	9000	5900	26.2	
2	9000	3540	15.7	9000	4290	19.0	9000	5500	24.4	
7	9000	2780	12.3	9000	3460	16.1	8900	4980	22.1	
25	9000	2050	9.3	9000	2680	11.9	8400	3450	15.3	

## Minimum Frequency

Water Out (°C)		25			35			45		
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	
-25	5400	1980	9.2	5700	2490	11.2	5900	3060	13.7	
-20	6300	2000	9.3	6300	2690	12.0	6700	3270	13.9	
-15	5500	1560	7.2	5500	1900	8.8	5800	2350	10.5	
-7	4900	1160	5.5	4500	1400	6.6	4200	1690	7.7	
2	4500	920	4.5	4300	1080	5.2	4100	1310	7.1	
7	5200	780	4.1	5000	980	4.8	4700	1250	6.0	
25	5600	660	3.6	7300	810	4.2	7200	1170	5.8	

Water Out (°C)		55			65			75		
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	
-25	6000	3600	16.1	-	-	-	-	-	-	
-20	7100	3850	17.1	7000	4660	20.7	-	-	-	
-15	6200	3100	13.8	7400	4100	18.1	7800	5100	22.6	
-7	4100	2170	9.6	6100	3080	13.6	5900	3810	17.0	
2	3800	1630	7.5	6800	2950	13.1	6700	3750	16.6	
7	4400	1520	7.1	7800	2900	12.9	7400	3700	16.4	
25	7000	1460	6.9	8900	2660	11.8	8300	3430	15.2	

## 20.2.2 WH-WXG12ME5

## Rating Frequency

Water Out (°C)		25			35			45		
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	
-25	10200	4900	21.7	10500	5550	24.6	9500	5750	25.5	
-20	11000	4250	18.9	11200	4750	21.1	10000	5000	22.2	
-15	12000	4270	18.9	12000	4560	20.4	11500	5420	24.0	
-7	11500	3680	16.3	12000	4000	17.7	12000	5020	22.3	
2	11500	2920	13.0	12000	3390	15.0	12000	4200	18.6	
7	12000	1930	8.7	12000	2370	10.4	12000	3130	13.9	
25	9800	1100	5.4	12000	1400	6.6	12000	2000	9.2	

Water Out (°C)		55			65			75		
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	
-25	8650	5900	26.2	-	-	-	-	-	-	
-20	10000	5700	25.3	9100	5800	25.7	-	-	-	
-15	11000	5500	24.4	10000	5880	26.1	9000	6100	27.1	
-7	12000	5530	24.5	11000	6010	26.7	10000	6200	27.5	
2	12000	4950	22.0	12000	5940	26.4	10500	6200	27.5	
7	12000	3710	16.6	12000	4620	20.7	12000	6100	27.1	
25	12000	2600	11.5	12000	3260	14.5	12000	3920	17.5	

## Minimum Frequency

Water Out (°C)		25			35			45		
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	
-25	5400	1980	9.2	5700	2490	11.2	5900	3060	13.7	
-20	6300	2000	9.3	6300	2690	12.0	6700	3270	14.5	
-15	5500	1560	7.2	5500	1900	8.8	5800	2350	10.5	
-7	4900	1160	5.5	4500	1400	6.6	4200	1690	7.7	
2	4500	920	4.5	4300	1080	5.2	4100	1310	6.2	
7	5200	780	4.1	5000	980	4.8	4700	1250	6.0	
25	5600	660	3.6	7300	810	4.2	7200	1170	5.8	

Water Out (°C)		55			65			75		
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	
-25	6000	3600	16.1	-	-	-	-	-	-	
-20	7100	3850	17.1	7000	4660	20.7	-	-	-	
-15	6200	3100	13.8	7400	4100	18.1	7800	5100	22.6	
-7	4100	2170	9.6	6100	3080	13.6	5900	3810	17.0	
2	3800	1630	7.5	6800	2950	13.1	6700	3750	16.6	
7	4400	1520	7.1	7800	2900	12.9	7400	3700	16.4	
25	7000	1460	6.9	8900	2660	11.8	8300	3430	15.2	

# 20.3 Cooling Capacity Table

## 20.3.1 WH-WXG09ME5

Water Out (°C)	7			14			18		
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)
16	9800	2000	8.9	11000	2040	9.1	10800	1380	6.3
25	9300	2280	10.1	10500	2350	10.4	10200	1490	6.7
35	9000	2490	10.9	9800	2630	11.7	9000	1710	7.9
43	8400	2800	13.0	9000	2880	13.2	8600	2000	9.3


## 20.3.2 WH-WXG12ME5

Water Out (°C)	7			14			18		
Outdoor Air (°C)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)	Capacity (W)	Input Power (W)	Current (A)
16	12000	2500	11.2	13700	2600	11.5	12000	1730	7.9
25	12000	3050	13.5	13500	3120	13.8	12000	1880	8.6
35	12000	4210	18.7	13200	3250	16.1	12000	2800	12.4
43	9600	4350	19.0	10000	4350	19.0	12000	3600	16.0


## 21. Exploded View and Replacement Parts List


### 21.1 Indoor Unit

#### 21.1.1 WH-SDC0916M3E5

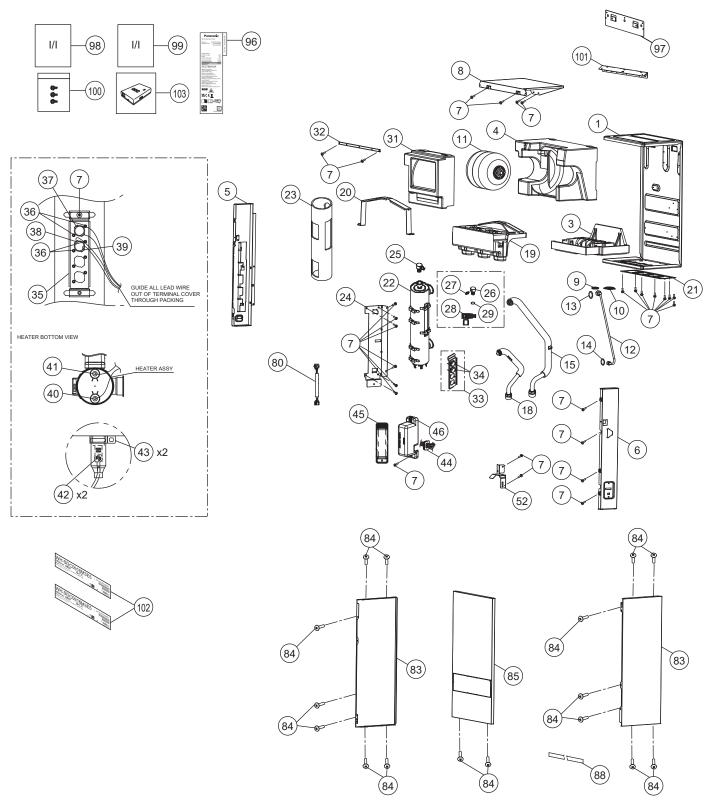


#### Note:

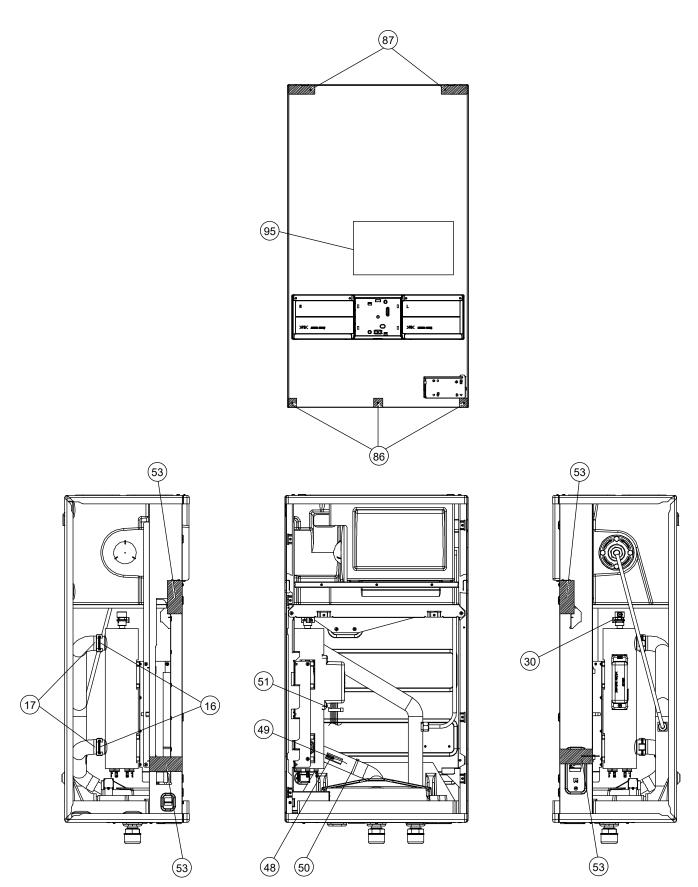

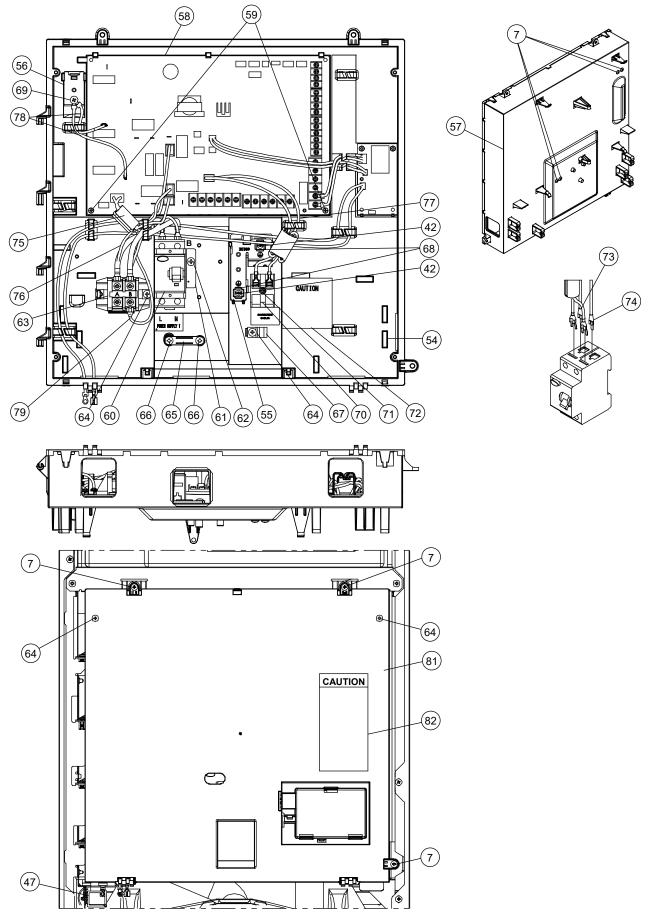

Note:

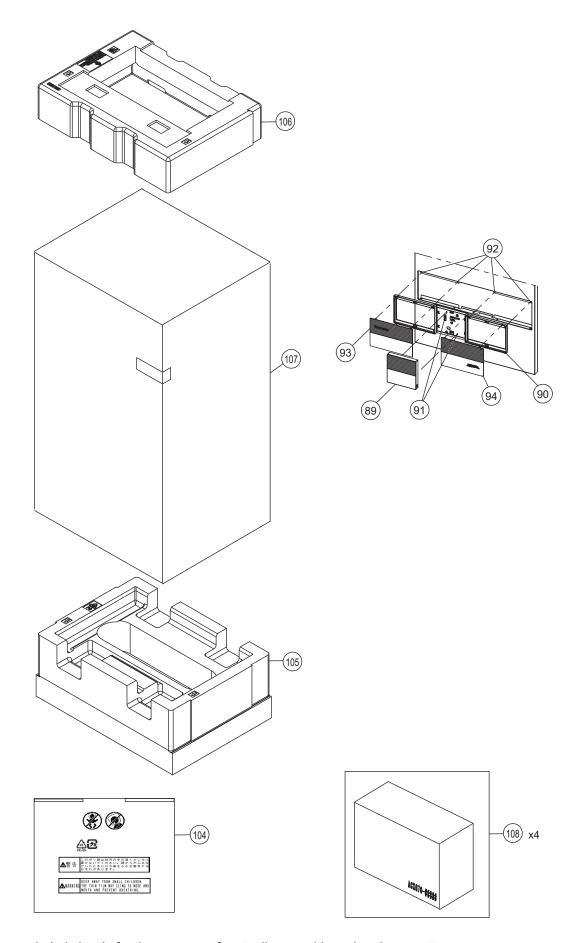

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-SDC0916M3E5	REMARK
	1	BASE PAN	1	ACXD52-06920	
	3	FOAMED POLYSTYRENE	1	ACXG07-08900	
	4	FOAMED POLYSTYRENE	1	ACXG07-08910	
	5	CONNECTING BAR	1	ACXE26-03281	
	6	CONNECTING BAR	1	ACXE26-03291	
	7	SCREW	4	H551217	
	8	BOX SHAPED PLATE	1	ACXD66-04461	
	7	SCREW	4	H551217	
	9	PACKING	1	ACXB81-00030	
	10	PACKING	1	ACXB81-00040	
	11	RECEIVER	1	ACXB14-00840	0
	12	TUBE ASSY	1	ACXT00-87280	
	13	PACKING	1	ACXB81-07700	
	14	PACKING	1	B811179	
	15	TUBE ASSY - COMPLETE	1	ACXT00C49211	
$\triangle$	16	PACKING	1	ACXB81-06910	
	17	RETAINING RING	1	ACXH58-00370	
	18	TUBE ASSY - COMPLETE	1	ACXT00C49230	
$\triangle$	16	PACKING	1	ACXB81-06910	
	17	RETAINING RING	1	ACXH58-00370	
	19	FOAMED POLYSTYRENE	1	ACXG07-08920	
	20	U-SHAPED PLATE	1	ACXD62-03020	
	21	FLAT PLATE	1	ACXD64-01780	
	7	SCREW	8	H551217	
$\triangle$	22	HEATER ASSY	1	ACXA34K00480	0
	23	SOUND PROOF MATERIAL	1	ACXG30-10530CZ	
	24	L-SHAPED PLATE	1	ACXD60-05150	
	7	SCREW	6	H551217	
	25	VALVE BODY - COMPLETE	1	ACXB62C01130	0
	26	VALVE BODY	1	ACXB62-01220	
	27	PLUG	1	ACXB82-00860	
$\triangle$	28	PACKING	1	ACXB81-00020	
$\triangle$	29	PACKING	1	ACXB81-06810	
	30	RETAINING RING	1	H581038	
	31	FOAMED POLYSTYRENE	1	ACXG07-08930	
	32	PARTICULAR PLATE	1	D912684	
	7	SCREW	2	H551217	
$\triangle$	33	SENSOR ASSY	1	ACXA50K00140	
$\wedge$	34	THERMOSTAT	2	ACXA15-00260	


SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-SDC0916M3E5	REMARK
	35	U-SHAPED PIECE	1	D721031	
	36	MACHINE SCREW & WASHER ASSY	4	XYN3+C5FJ	
	7	SCREW	1	H551217	
	37	LEAD WIRE - COMPLETE (CN-OLP1)	1	ACXA61C00990	0
<u> </u>	38	LEAD WIRE - COMPLETE (AC-L1)	1	ACXA61C01000	0
$\triangle$	39	LEAD WIRE - COMPLETE (HEATER1-B)	1	ACXA61C01010	0
$\triangle$	40	LEAD WIRE - COMPLETE (HEATER1-A)	1	ACXA61C01200	0
$\triangle$	41	LEAD WIRE - COMPLETE (HEAT-HT-L1)	1	ACXA61C01230	0
	42	MACHINE SCREW & WASHER ASSY	2	XYN4DC8FJ	
	43	BAND	2	H881137	
	44	PACKING	1	B811177	
	45	POLY - E. FOAM (FLAME PROOF)	1	EN5A15-40	
	46	TERMINAL COVER	1	H171051	
	7	SCREW	1	H551217	
	47	BAND	1	ACXH88-00270	
	48	PLATE SPRING	1	H711019	
	49	SENSOR - COMPLETE	1	ACXA50C21791	0
	50	HOSE BAND	1	4090023	
	51	BAND	1	H88000	
	52	PARTICULAR PLATE	1	ACXD90-31970	
	7	SCREW	2	H551217	
	53	PACKING	4	ACXB81-08020	
	54	CONTROL BOARD	1	ACXH10-10391	
	55	PARTICULAR PLATE	1	ACXD90-30350	
	56	U-SHAPED PLATE	1	ACXD62-02950	
	57	BOX SHAPED PLATE	1	ACXD66-04341	
	7	SCREW	4	H551217	
$\triangle$	58	ELECTRONIC CONTROLLER	1	ACXA74C13410	0
	59	MACHINE SCREW & WASHER ASSY	2	XTB3+8CFJ	
$\triangle$	60	CIRCUIT BREAKER	1	ACXA18-00011	0
	61	U-SHAPED PIECE	1	D721014	
	62	SELF TAPPING SCREW	1	XTT4+8CFJ	
$\triangle$	63	TERMINAL BOARD ASSY	1	A28K1238	
	64	SELF TAPPING SCREW	1	XTT4+12CFJ	
	65	HOLDER - P.S. CORD	1	H31103	
	66	SELF TAPPING SCREW	2	XTT4+16GFJ	
	67	HOLDER - P.S. CORD	1	H31042	
	64	SELF TAPPING SCREW	1	XTT4+12CFJ	
	68	WASHER	2	H57094	
	42	MACHINE SCREW & WASHER ASSY	2	XYN4DC8FJ	

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-SDC0916M3E5	REMARK
	69	SELF TAPPING SCREW	1	XTT4+8FFJ	
$\triangle$	70	TERMINAL BOARD ASSY	1	A28K1064J	
	71	SELF TAPPING SCREW	1	XTN4+20CFJ	
$\triangle$	72	CAUTION LABEL	1	ACXF75-14410	
<u> </u>	73	LEAD WIRE - COMPLETE (WIRE1)	1	ACXA61C01090	0
<u> </u>	74	LEAD WIRE - COMPLETE (AC-N)	1	ACXA61C01120	0
$\triangle$	75	LEAD WIRE - COMPLETE (CN-AC)	1	ACXA61C03550	0
$\triangle$	76	LEAD WIRE - COMPLETE (AC-N2)	1	ACXA61C01130	0
$\triangle$	77	LEAD WIRE - COMPLETE (CN-DATA)	1	ACXA61C01140	0
$\triangle$	78	LEAD WIRE - COMPLETE (G01)	2	ACXA61C01150	0
	79	LEAD WIRE - COMPLETE (WIRE3)	1	ACXA61C07750	
	7	SCREW	3	H551217	
$\triangle$	80	LEAD WIRE - COMPLETE	1	ACXA61C01190	0
	81	CONTROL BOARD COVER	1	ACXH13-09660	
	64	SELF TAPPING SCREW	2	XTT4+12CFJ	
$\triangle$	82	CAUTION LABEL	1	ACXF75-15040	
	83	CABINET SIDE PLATE	2	ACXE04-14280A	
	84	SCREW	14	H551198	
	85	CABINET FRONT PLATE	1	ACXE06-05290A	
	86	POLY - E. FOAM	3	ACXE12A25-25	
	87	PACKING	2	ACXB81-08030	
	84	SCREW	2	H551198	
	88	PACKING	1	ACXB81-07400	
Ŵ	89	REMOTE CONTROL SWITCH - COMPLETE	1	ACXA75C26382	0
	90	BOX SHAPED PLATE	1	ACXD66-03970	
	91	SELF TAPPING SCREW	2	XTB4+8CFJ	
	92	SELF TAPPING SCREW	4	XTB4+8FFJ	
	93	DECORATION BASE ASSY	1	ACXE35K03630	
	94	DECORATION BASE ASSY	1	ACXE35K03640	
Ņ	95	WIRING DIAGRAM	1	ACXF29-01220	
$\overline{\mathbb{A}}$	96	NAME PLATE	1	ACXF09-10680	
	97	INSTALLING HOLDER	1	ACXH36-01290	
$\triangle$	98	INSTALLATION INSTRUCTION COMPLETE	1	ACXF60C21421	
$\overline{\mathbb{A}}$	99	INSTALLATION INSTRUCTION	1	ACXF60-57071	
	100	ACCESSORY - COMPLETE	1	ACXH82C03490	
	101	INSTALLING HOLDER	1	H361119	
Ţ	102	MODEL LABEL	2	ACXF87-52550	
$\overline{\mathbb{A}}$	103	REMOTE CONTROL SWITCH - COMPLETE	1	CZ-TAW1C	0
$\overline{\mathbb{A}}$	104	BAG	1	ACXG86-04152	
	105	BASE BOARD - COMPLETE	1	ACXG62C02920	

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-SDC0916M3E5	REMARK
	106	SHOCK ABSORBER	1	ACXG70-15470	
À	107	C.C. CASE	1	ACXG50-47956	
	108	SHOCK ABSORBER	4	ACXG70-17380	

- All parts are supplied from PHVACCZ, Czech (Vendor Code: 00029407). "O" marked parts are recommended to be kept in stock.


#### 21.1.2 WH-SDC0916M6E5

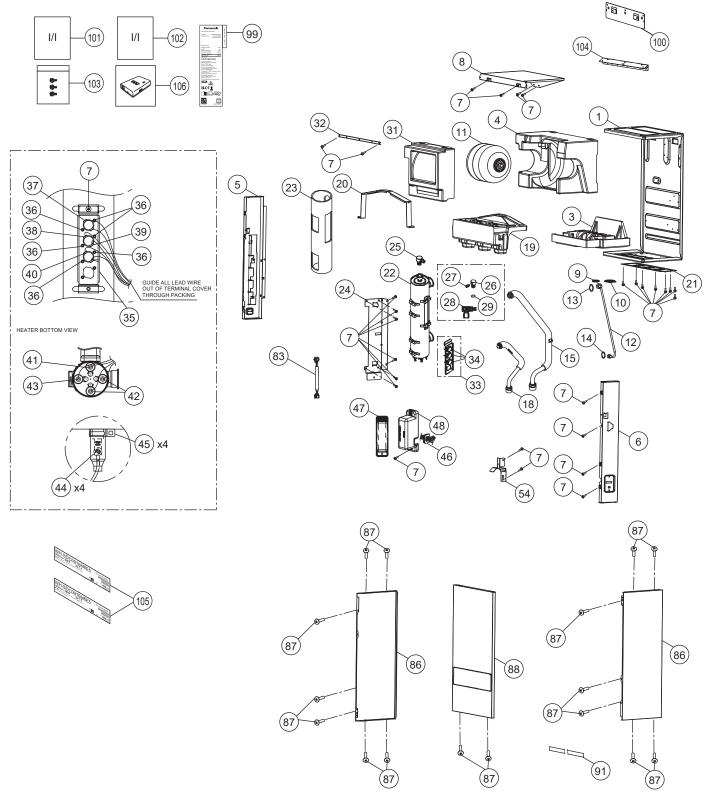



#### Note:

The above exploded view is for the purpose of parts disassembly and replacement.

The non-numbered parts are not kept as standard service parts.

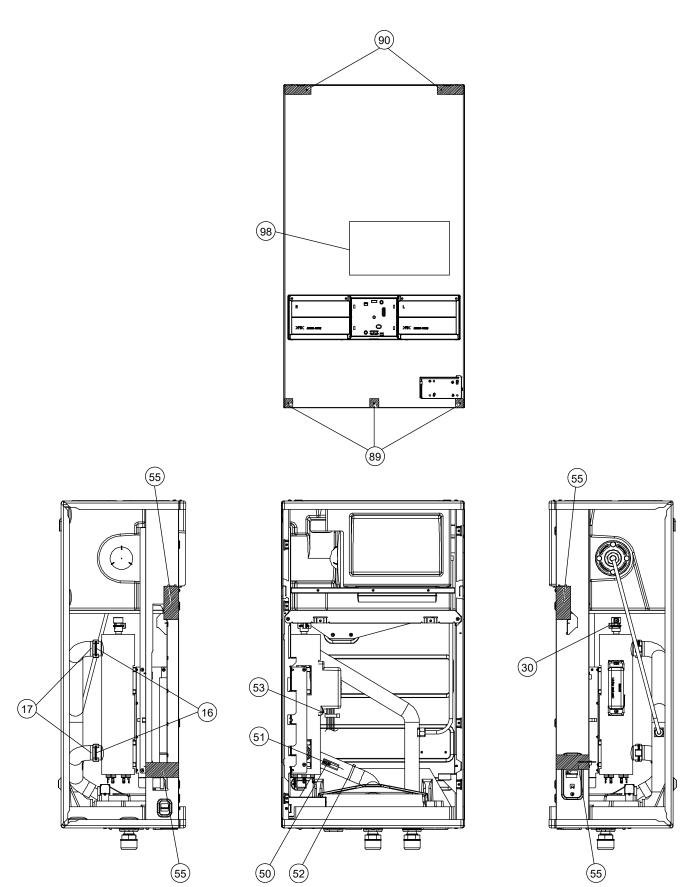

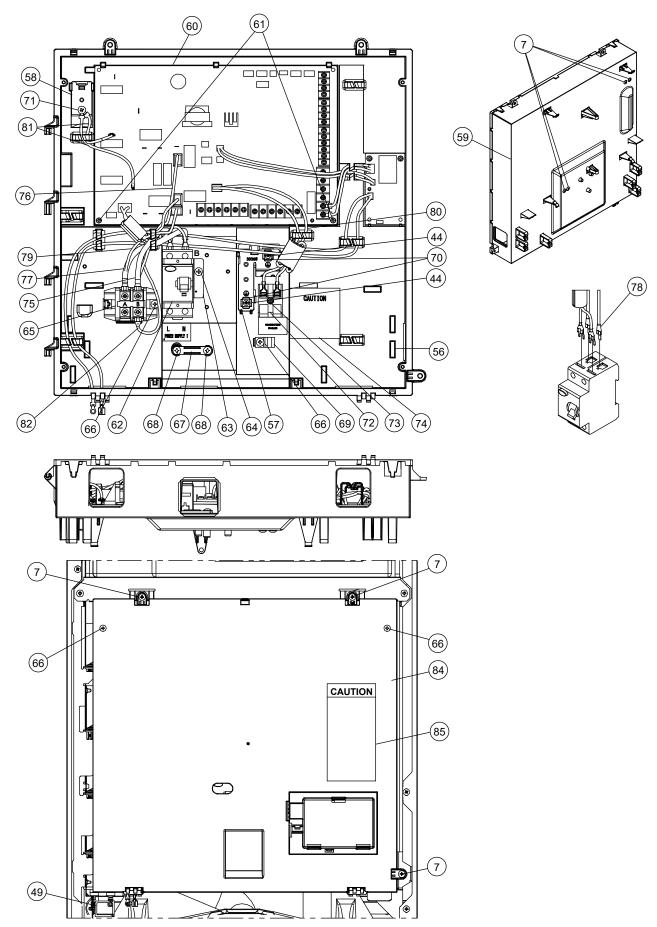

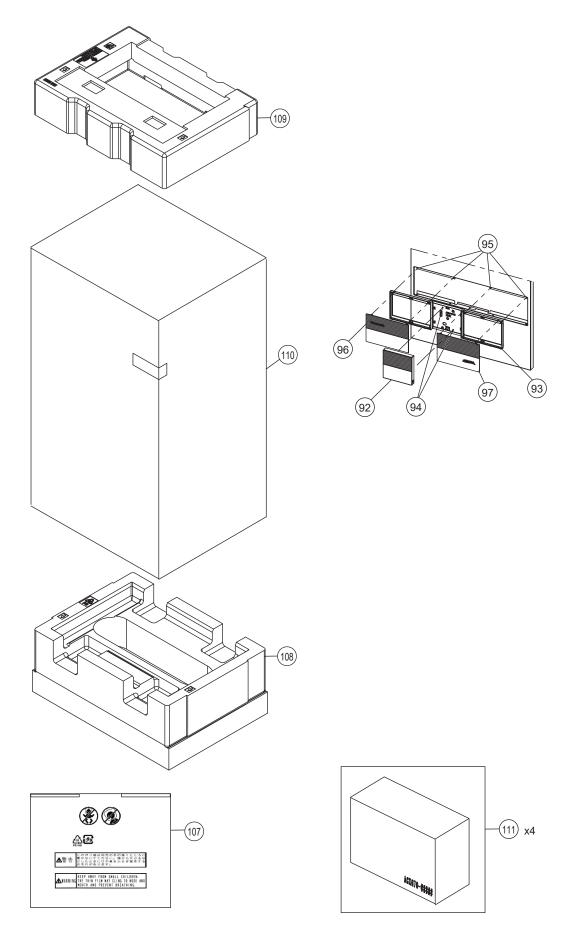

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-SDC0916M6E5	REMARK
	1	BASE PAN	1	ACXD52-06920	
	3	FOAMED POLYSTYRENE	1	ACXG07-08900	
	4	FOAMED POLYSTYRENE	1	ACXG07-08910	
	5	CONNECTING BAR	1	ACXE26-03281	
	6	CONNECTING BAR	1	ACXE26-03291	
	7	SCREW	4	H551217	
	8	BOX SHAPED PLATE	1	ACXD66-04461	
	7	SCREW	4	H551217	
	9	PACKING	1	ACXB81-00030	
	10	PACKING	1	ACXB81-00040	
	11	RECEIVER	1	ACXB14-00840	0
	12	TUBE ASSY	1	ACXT00-87280	
	13	PACKING	1	ACXB81-07700	
	14	PACKING	1	B811179	
	15	TUBE ASSY - COMPLETE	1	ACXT00C49211	
$\wedge$	16	PACKING	1	ACXB81-06910	
	17	RETAINING RING	1	ACXH58-00370	
	18	TUBE ASSY - COMPLETE	1	ACXT00C49230	
$\triangle$	16	PACKING	1	ACXB81-06910	
	17	RETAINING RING	1	ACXH58-00370	
	19	FOAMED POLYSTYRENE	1	ACXG07-08920	
	20	U-SHAPED PLATE	1	ACXD62-03020	
	21	FLAT PLATE	1	ACXD64-01780	
	7	SCREW	8	H551217	
$\triangle$	22	HEATER ASSY	1	ACXA34K00530	0
	23	SOUND PROOF MATERIAL	1	ACXG30-10530CZ	
	24	L-SHAPED PLATE	1	ACXD60-05150	
	7	SCREW	6	H551217	
	25	VALVE BODY - COMPLETE	1	ACXB62C01130	0
	26	VALVE BODY	1	ACXB62-01220	
	27	PLUG	1	ACXB82-00860	
$\wedge$	28	PACKING	1	ACXB81-00020	
$\overline{\wedge}$	29	PACKING	1	ACXB81-06810	
	30	RETAINING RING	1	H581038	
	31	FOAMED POLYSTYRENE	1	ACXG07-08930	
	32	PARTICULAR PLATE	1	D912684	
	7	SCREW	2	H551217	
$\triangle$	33	SENSOR ASSY	1	ACXA50K00150	
$\overline{\wedge}$	34	THERMOSTAT	3	ACXA15-00260	


SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-SDC0916M6E5	REMARK
	35	U-SHAPED PIECE	1	D721031	
	36	MACHINE SCREW & WASHER ASSY	6	XYN3+C5FJ	
	7	SCREW	1	H551217	
	37	LEAD WIRE - COMPLETE (CN-OLP1)	1	ACXA61C00990	0
<u> </u>	38	LEAD WIRE - COMPLETE (AC-L1)	1	ACXA61C01000	0
$\triangle$	39	LEAD WIRE - COMPLETE (HEATER1-B)	1	ACXA61C01010	0
$\triangle$	40	LEAD WIRE - COMPLETE (HT-L2)	1	ACXA61C01020	
$\triangle$	41	LEAD WIRE - COMPLETE (HEATER-HEAT3)	1	A68C1437	
<u> </u>	42	LEAD WIRE - COMPLETE (HEATER1-A)	2	ACXA61C01200	0
$\triangle$	43	LEAD WIRE - COMPLETE (HT-L1)	1	ACXA61C01230	0
	44	MACHINE SCREW & WASHER ASSY	4	XYN4DC8FJ	
	45	BAND	4	H881137	
	46	PACKING	1	B811177	
	47	POLY - E. FOAM (FLAME PROOF)	1	EN5A15-40	
	48	TERMINAL COVER	1	H171051	
	7	SCREW	1	H551217	
	49	BAND	1	ACXH88-00270	
	50	PLATE SPRING	1	H711019	
	51	SENSOR - COMPLETE	1	ACXA50C21791	0
	52	HOSE BAND	1	4090023	
	53	BAND	1	H88000	
	54	PARTICULAR PLATE	1	ACXD90-31970	
	7	SCREW	2	H551217	
	55	PACKING	4	ACXB81-08020	
	56	CONTROL BOARD	1	ACXH10-10391	
	57	PARTICULAR PLATE	1	ACXD90-30350	
	58	U-SHAPED PLATE	1	ACXD62-02950	
	59	BOX SHAPED PLATE	1	ACXD66-04341	
	7	SCREW	4	H551217	
A	60	ELECTRONIC CONTROLLER	1	ACXA74C13420	0
	61	MACHINE SCREW & WASHER ASSY	2	XTB3+8CFJ	
$\triangle$	62	CIRCUIT BREAKER	1	ACXA18-00011	0
	63	U-SHAPED PIECE	1	D721014	
	64	SELF TAPPING SCREW	1	XTT4+8CFJ	
$\triangle$	65	TERMINAL BOARD ASSY	1	A28K1238	
	66	SELF TAPPING SCREW	1	XTT4+12CFJ	
	67	HOLDER - P.S. CORD	1	H31103	
	68	SELF TAPPING SCREW	2	XTT4+16GFJ	
	69	HOLDER - P.S. CORD	1	H31042	
	66	SELF TAPPING SCREW	1	XTT4+12CFJ	

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-SDC0916M6E5	REMARK
	70	WASHER	2	H57094	
	44	MACHINE SCREW & WASHER ASSY	2	XYN4DC8FJ	
	71	SELF TAPPING SCREW	1	XTT4+8FFJ	
$\triangle$	72	TERMINAL BOARD ASSY	1	A28K1064J	
	73	SELF TAPPING SCREW	1	XTN4+20CFJ	
$\triangle$	74	CAUTION LABEL	1	ACXF75-14410	
	75	LEAD WIRE - COMPLETE (WIRE1)	1	ACXA61C07730	
	76	LEAD WIRE - COMPLETE (AC-L2)	1	ACXA61C06390	
	77	LEAD WIRE - COMPLETE (WIRE2)	1	ACXA61C07740	
$\triangle$	78	LEAD WIRE - COMPLETE (CN-AC)	1	ACXA61C03550	0
$\triangle$	79	LEAD WIRE - COMPLETE (AC-N2)	1	ACXA61C01130	0
A	80	LEAD WIRE - COMPLETE (CN-DATA)	1	ACXA61C01140	0
$\triangle$	81	LEAD WIRE - COMPLETE (G01)	2	ACXA61C01150	0
	82	LEAD WIRE - COMPLETE (WIRE3)	1	ACXA61C07750	
	7	SCREW	3	H551217	
$\triangle$	83	LEAD WIRE - COMPLETE	1	ACXA61C01190	0
	84	CONTROL BOARD COVER	1	ACXH13-09660	
	66	SELF TAPPING SCREW	2	XTT4+12CFJ	
$\triangle$	85	CAUTION LABEL	1	ACXF75-15040	
	86	CABINET SIDE PLATE	2	ACXE04-14280A	
	87	SCREW	14	H551198	
	88	CABINET FRONT PLATE	1	ACXE06-05290A	
	89	POLY - E. FOAM	3	ACXE12A25-25	
	90	PACKING	2	ACXB81-08030	
	87	SCREW	2	H551198	
	91	PACKING	1	ACXB81-07400	
<u> </u>	92	REMOTE CONTROL SWITCH - COMPLETE	1	ACXA75C26382	0
	93	BOX SHAPED PLATE	1	ACXD66-03970	
	94	SELF TAPPING SCREW	2	XTB4+8CFJ	
	95	SELF TAPPING SCREW	4	XTB4+8FFJ	
	96	DECORATION BASE ASSY	1	ACXE35K03630	
	97	DECORATION BASE ASSY	1	ACXE35K03640	
$\triangle$	98	WIRING DIAGRAM	1	ACXF29-01230	
Ŵ	99	NAME PLATE	1	ACXF09-10690	
	100	INSTALLING HOLDER	1	ACXH36-01290	
$\triangle$	101	INSTALLATION INSTRUCTION COMPLETE	1	ACXF60C21431	
Ŵ	102	INSTALLATION INSTRUCTION	1	ACXF60-57071	
	103	ACCESSORY - COMPLETE	1	ACXH82C03490	
	104	INSTALLING HOLDER	1	H361119	
$\triangle$	105	MODEL LABEL	2	ACXF87-52560	


SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-SDC0916M6E5	REMARK
$\triangle$	106	REMOTE CONTROL SWITCH - COMPLETE	1	ACXA75C26830	0
À	107	BAG	1	ACXG86-04152	
	108	BASE BOARD - COMPLETE	1	ACXG62C02920	
	109	SHOCK ABSORBER	1	ACXG70-15470	
<u> </u>	110	C.C. CASE	1	ACXG50-47956	
	111	SHOCK ABSORBER	4	ACXG70-17380	


- All parts are supplied from PHVACCZ, Czech (Vendor Code: 00029407).
- "O" marked parts are recommended to be kept in stock.


## 21.2 Outdoor Unit

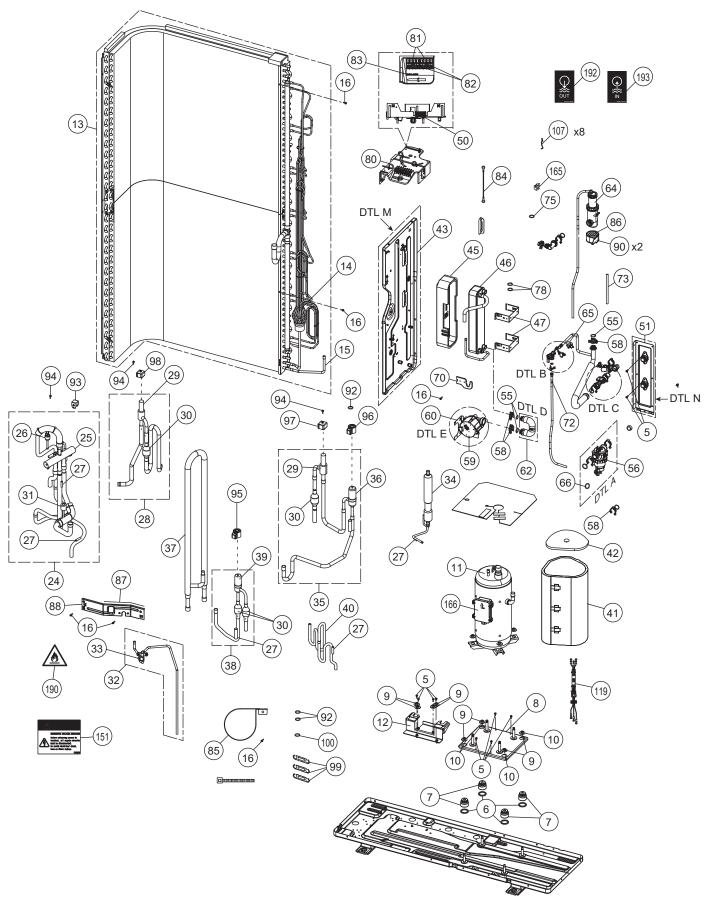



#### Note:

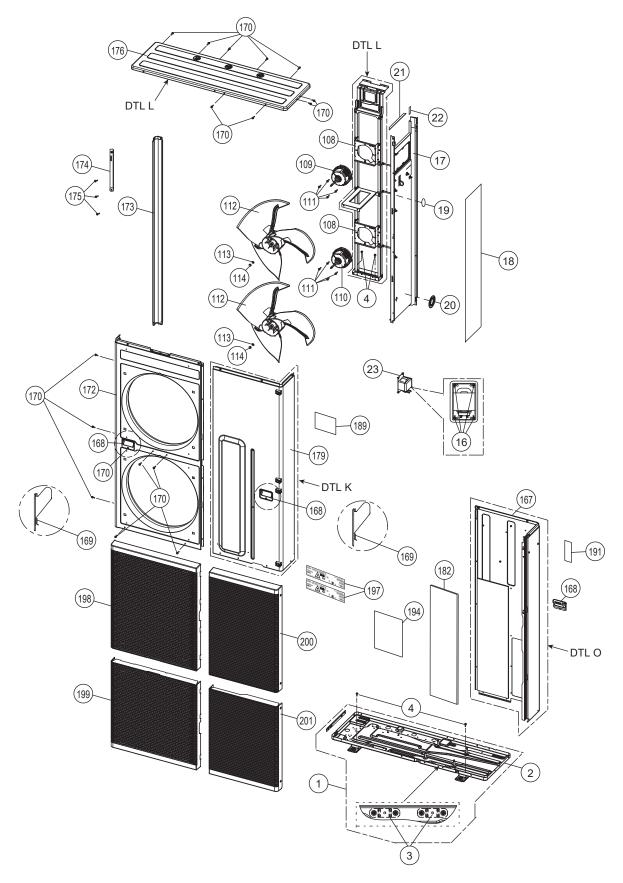


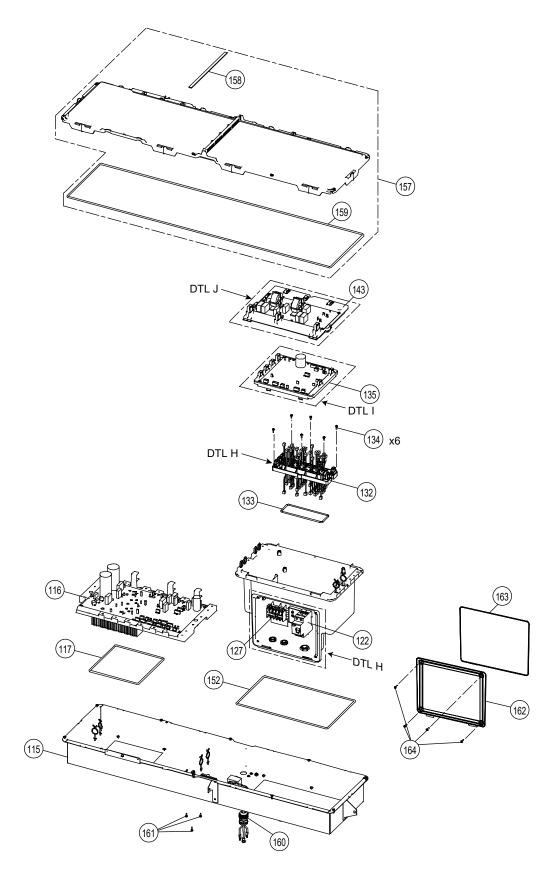


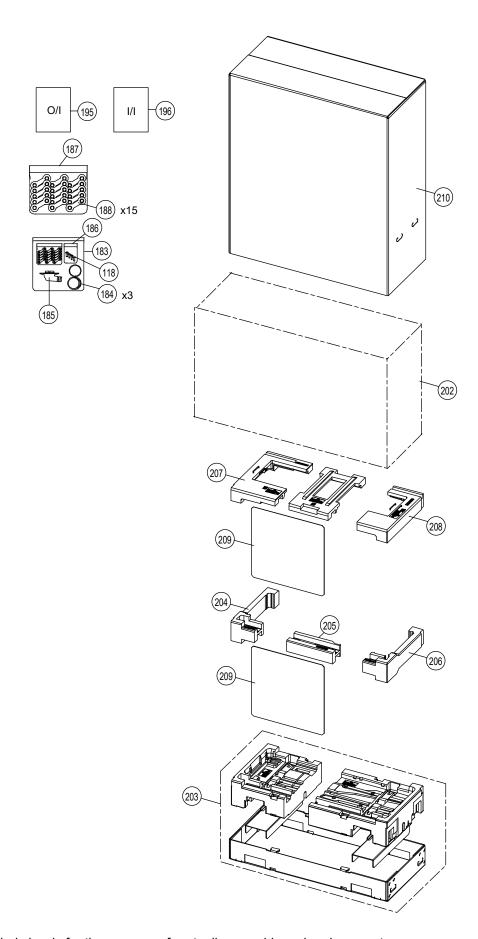

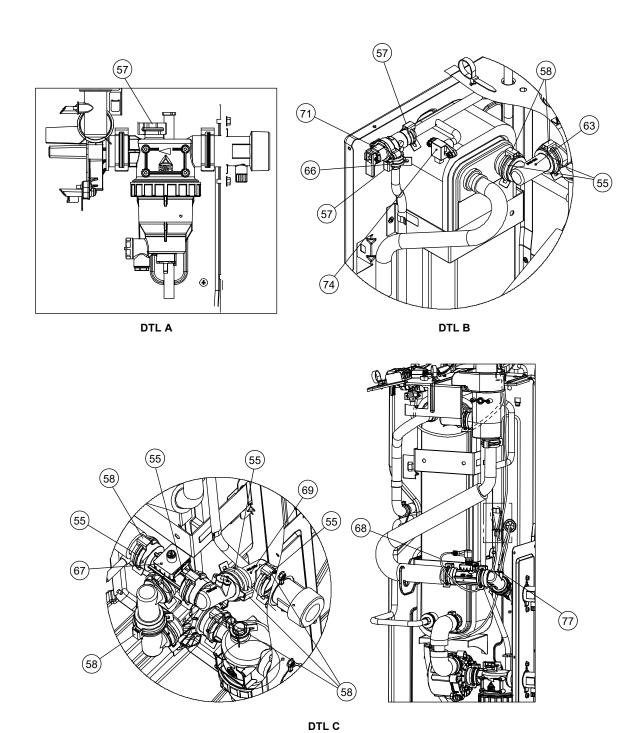


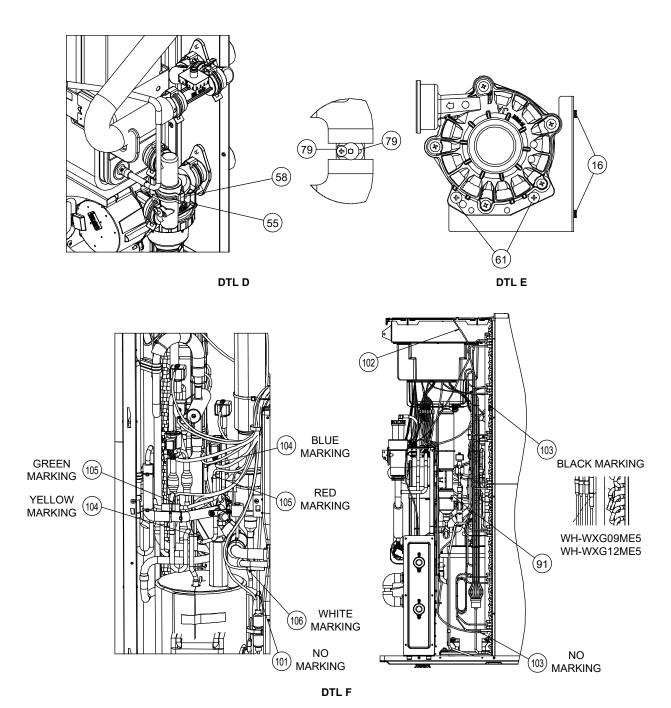

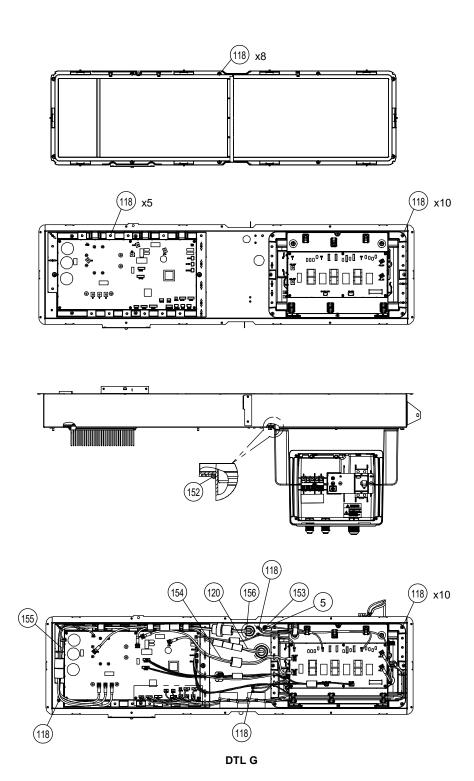

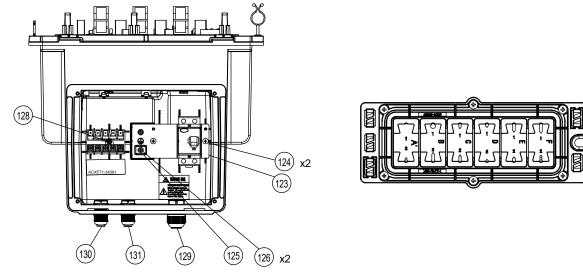


DTL H

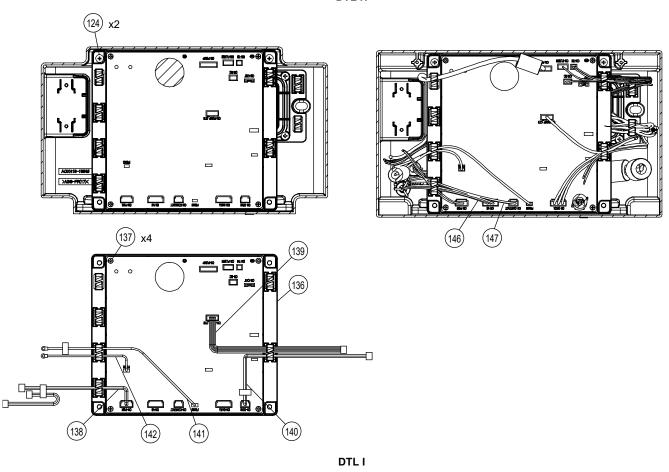

# Note:


The above exploded view is for the purpose of parts disassembly and replacement.

The non-numbered parts are not kept as standard service parts.

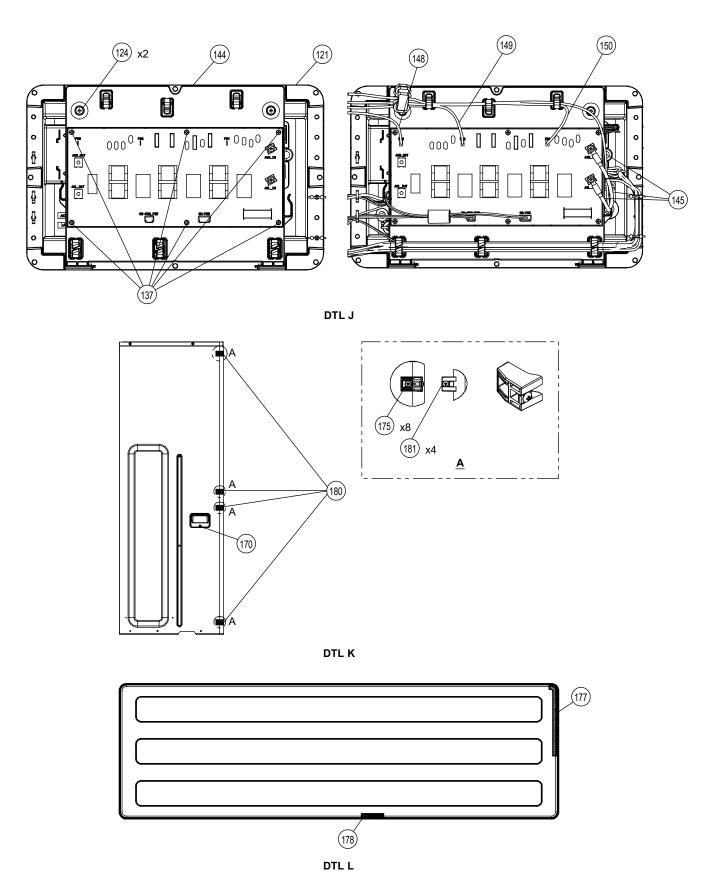


The above exploded view is for the purpose of parts disassembly and replacement.

The non-numbered parts are not kept as standard service parts.

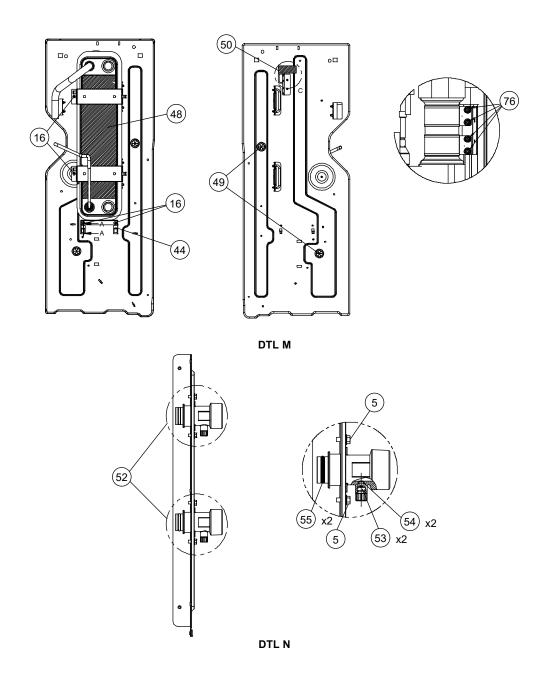


The above exploded view is for the purpose of parts disassembly and replacement. The non-numbered parts are not kept as standard service parts.

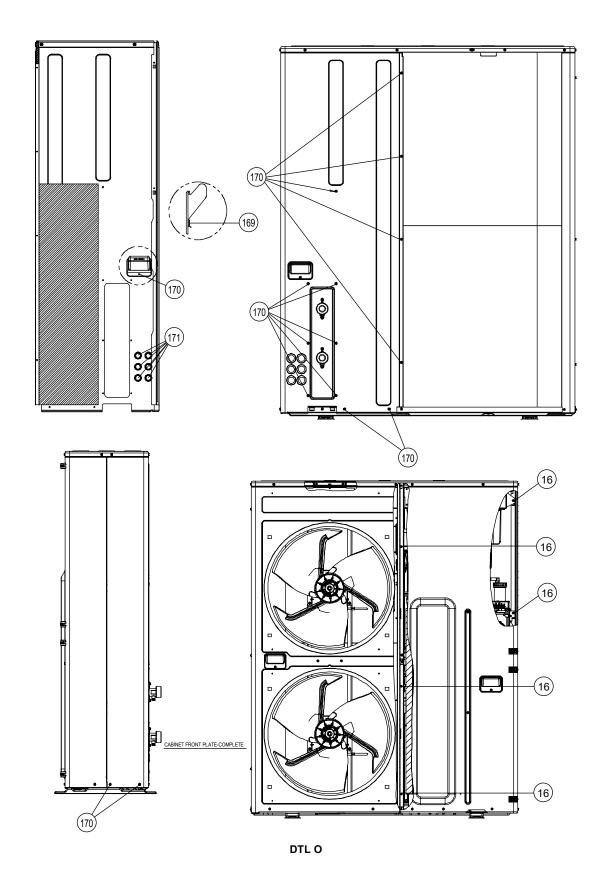

Note:

The above exploded view is for the purpose of parts disassembly and replacement. The non-numbered parts are not kept as standard service parts.

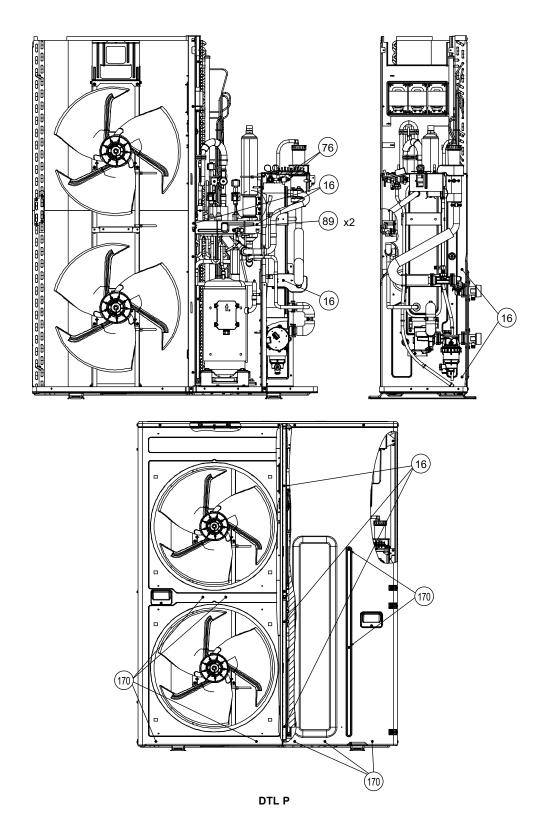

The above exploded view is for the purpose of parts disassembly and replacement. The non-numbered parts are not kept as standard service parts.

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WXG09ME5	WH-WXG12ME5	REMARK
	1	BASE PAN - COMPLETE	1	ACXD52C01871	<b>←</b>	
	2	BASE PAN ASSY	1	ACXD52K05580	<b>←</b>	
	3	CONVEX PIECE	2	ACXD75-00710	<b>←</b>	
	4	SCREW	2	H551040J	<b>←</b>	
	5	SCREW	4	H551049J	<b>←</b>	
	6	PACKING	4	B811017	<b>←</b>	
	7	ANTI - VIBRATION BUSHING	4	ACXH50-00480	<b>←</b>	
	8	FLAT PLATE ASSY	1	ACXD64K00080	<b>←</b>	
	9	NUT	4	H561049	←	
	10	PACKING	4	ACXB81-07660	<b>←</b>	
$\triangle$	11	COMPRESSOR	1	ACXB09-10080	←	0
	12	CONNECTING BAR ASSY	1	ACXE26K00011A	<b>←</b>	
	5	SCREW	4	H551049J	<b>←</b>	
	9	NUT	4	H561049	<b>←</b>	
$\triangle$	13	FIN & TUBE CONDENSER COMPLETE (U&L)	1	ACXB32C29732X	<b>←</b>	0
	14	MANIFOLD TUBE ASSY	1	ACXT07K11430	<b>←</b>	
	15	MULTIBENT TUBE	1	ACXT32-07000	←	
	16	SCREW	2	ACXH55-07140	<b>←</b>	
	17	SOUND - PROOF BOARD	1	ACXH15-04440	<b>←</b>	
	18	SOUND PROOF MATERIAL	1	ACXG30-14870	<b>←</b>	
	19	PACKING	1	ACXB81-00030	<b>←</b>	
	20	CAP	1	H521180	<b>←</b>	
	21	EPT SEAL	1	ACXD3A15-440	<b>←</b>	
	22	POLY - E. FOAM	1	ACXE5A45-80	←	
Ŵ	23	FIXED INDUCTORS	1	G0C202K00003	←	
	16	SCREW	4	ACXH55-07140	←	
	24	4-WAYS VALVE COMPLETE	1	ACXB00C03632	<b>←</b>	0
	25	4-WAYS VALVE	1	ACXB00-01530	←	0
Ņ	26	PRESSURE SWITCH	1	ACXA10-00710	←	0
	27	STRAIGHT TUBE THERMISTOR HOLDER	1	T102044	<b>←</b>	
	28	TUBE ASSY Electromagnetic 2-way valve	1	ACXT00-87560	<b>←</b>	
	29	2-WAYS VALVE	1	ACXB02-04110	←	0
	30	STRAINER	1	B111032	←	
	27	STRAIGHT TUBE THERMISTOR HOLDER	1	T102044	<b>←</b>	
$\triangle$	31	HIGH PRESSURE SENSOR	1	ACXA50-06870	<b>←</b>	0
	32	TUBE ASSY [2-WAY VALVE BL]	1	ACXT00-87530CZ	<b>←</b>	
	33	2-WAYS VALVE	1	ACXB02-03960	<b>←</b>	0
	34	RECEIVER	1	ACXB14-00880	←	
	27	STRAIGHT TUBE THERMISTOR HOLDER	1	T102044	<b>←</b>	
	35	TUBE ASSY [SUB EXPANSION]	1	ACXT00-87590	<b>←</b>	
	36	EXPANSION VALVE [SUB]	1	ACXB05-01580	<b>←</b>	0

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WXG09ME5	WH-WXG12ME5	REMARK
	29	2-WAYS VALVE	1	ACXB02-04110	<b>←</b>	0
	30	STRAINER	1	B111032	<b>←</b>	
	37	TUBE HEAT EXCHANGER	1	ACXB36-00130	<b>←</b>	
	38	TUBE ASSY [MAIN EXPANSION]	1	ACXT00-87600	<b>←</b>	
	39	EXPANSION VALVE [MAIN]	1	ACXB05-01570	<b>←</b>	0
	30	STRAINER	2	B111032	<b>←</b>	
	27	STRAIGHT TUBE THERMISTOR HOLDER	1	T102044	<b>←</b>	
	40	TUBE ASSY	1	ACXT00-87610	<b>←</b>	
	27	STRAIGHT TUBE THERMISTOR HOLDER	1	T102044	<b>←</b>	
	41	SOUND PROOF MATERIAL - COMP. BODY	1	ACXG30-14830	<b>←</b>	
	42	SOUND PROOF MATERIAL - COMP. TOP	1	ACXG30-14840	<b>←</b>	
	43	SOUND - PROOF BOARD	1	ACXH15K01171	<b>←</b>	
	44	PARTICULAR PLATE	1	ACXD90-30940	←	
	45	FOAMED POLYSTYRENE	1	ACXG07-08650	←	
	46	HOT WATER COIL - COMPLETE [SWEP]	1	ACXB90C02141	←	
	47	PARTICULAR PLATE	2	ACXD90-30950	←	
	48	ADH. POLY - E. FOAM	1	ACXG12-42390	←	
	49	BUSHING	2	ACXH51-01760	←	
	16	SCREW	4	ACXH55-07140	←	
	50	POLY - E. FOAM	1	ACXE15A25-60	←	
	51	HOLDER - COUPLING	1	ACXH35-02360	←	
	52	TUBE CONNECTER	2	ACXT29-01030	<b>←</b>	
	5	SCREW	4	H551049J	<b>←</b>	
	53	PLUG	2	B821027	←	0
$\triangle$	54	PACKING	2	ACXB81-06770	<b>←</b>	
A	55	PACKING	2	ACXB81-06910	←	
	16	SCREW	2	ACXH55-07140	←	
	56	FILTER COMPLETE	1	ACXB51C00170	<b>←</b>	
	57	RETAINING RING (14-23)	1	H581038	←	
$\triangle$	55	PACKING	1	ACXB81-06910	<b>←</b>	
	58	RETAINING RING (25.4)	1	ACXH58-00370	<b>←</b>	
A	59	PUMP	1	ACXB53-01000	←	0
	60	PARTICULAR PLATE	1	ACXD90-30970	←	
	61	SELF TAPPING SCREW	2	XTT4+16CFJ	<b>←</b>	
	16	SCREW	2	ACXH55-07140	←	
	62	U-SHAPED TUBE - COMPLETE	1	ACXT23C00180	←	
$\triangle$	55	PACKING	1	ACXB81-06910	<b>←</b>	
	58	RETAINING RING (25.4)	1	ACXH58-00370	←	
$\triangle$	55	PACKING	2	ACXB81-06910	<b>←</b>	
	58	RETAINING RING (25.4)	2	ACXH58-00370	←	
	63	L-SHAPED TUBE	1	ACXT20-15030	<b>←</b>	
$\wedge$	55	PACKING	2	ACXB81-06910	<b>←</b>	

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WXG09ME5	WH-WXG12ME5	REMARK
	58	RETAINING RING (25.4)	2	ACXH58-00370	<b>←</b>	
$\triangle$	64	FILTER COMPLETE	1	ACXB51C00160	<b>←</b>	
	65	TUBE ASSY COMPLETE INHOUSE	1	ACXT00C49260	<b>←</b>	
$\triangle$	55	PACKING	2	ACXB81-06910	<b>←</b>	
$\triangle$	66	PACKING	1	ACXB81-06820	<b>←</b>	
	58	RETAINING RING (25.4)	2	ACXH58-00370	<b>←</b>	
$\triangle$	67	FLOW SENSOR	1	ACXB62-00912	<b>←</b>	0
	68	LEAD WIRE - COMPLETE (FLOW SENSOR)	1	ACXA61C04000	<b>←</b>	
	69	U-SHAPED TUBE - COMPLETE	1	ACXT23C00170	←	
$\overline{\mathbb{A}}$	55	PACKING	1	ACXB81-06910	<b>←</b>	
	58	RETAINING RING (25.4)	1	ACXH58-00370	<b>←</b>	
Ŵ	55	PACKING	1	ACXB81-06910	<b>←</b>	
	58	RETAINING RING (25.4)	3	ACXH58-00370	<b>←</b>	
	70	PARTICULAR PLATE	1	ACXD90-31030	<b>←</b>	
	16	SCREW	1	ACXH55-07140	<b>←</b>	
$\triangle$	71	VALVE BODY Pressure relief valve	1	ACXB62-01320	<b>←</b>	0
	57	RETAINING RING (14-23)	1	H581038	←	
	72	TUBE ASSY	1	ACXT00-85820	<b>←</b>	
	73	STRAIGHT TUBE	1	ACXT10-21230	←	
A	66	PACKING	1	ACXB81-06820	←	
	57	RETAINING RING (14-23)	1	H581038	←	
$\triangle$	74	SENSOR - COMPLETE (CN-DPS)	1	ACXA50C20090	←	0
$\triangle$	75	PACKING	1	ACXB81-06790	←	
	76	SCREW	2	H55406J	←	
$\triangle$	77	SENSOR - COMPLETE (WATER OUTLET SENSOR2 & WATER INLET TEMP - CN-TH3)	1	ACXA50C20630	<b>←</b>	0
$\triangle$	78	PACKING	2	ACXB81-06780	<b>←</b>	
	79	SELF TAPPING SCREW	2	XTT4+8CFJ	<b>←</b>	
	16	SCREW	2	ACXH55-07140	<b>←</b>	
	80	PARTICULAR PLATE	1	ACXD90-30930	<b>←</b>	
$\triangle$	81	TERMINAL BOARD ASSY	2	ACXA28K02540	<b>←</b>	0
	82	SELF TAPPING SCREW	2	XTN4+16CFJ	<b>←</b>	
	50	POLY - E. FOAM	1	ACXE15A25-60	←	
	83	INDICATION LABEL	1	ACXF71-34381	<b>←</b>	
	84	LEAD WIRE - COMPLETE_SIGNAL	1	ACXA61C00650	<b>←</b>	
	16	SCREW	2	ACXH55-07140	<b>←</b>	
	85	PARTICULAR PLATE	1	ACXD90-30960	<b>←</b>	
	16	SCREW	1	ACXH55-07140	<b>←</b>	
	86	EPT SEAL	1	ACXD3A35-250	←	
	87	ADH. POLY - E. FOAM	1	ACXG12-42490	←	
	88	PARTICULAR PLATE	1	ACXD90-30980	<b>←</b>	
	16	SCREW	2	ACXH55-07140	<b>←</b>	

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WXG09ME5	WH-WXG12ME5	REMARK
	89	SCREW	2	H55440J	<b>←</b>	
	90	C-PIECE	2	ACXD79-00390	<b>←</b>	
	76	SCREW	4	H55406J	<b>←</b>	
	91	POLY - E. FOAM	1	ACXE25A25-55	<b>←</b>	
	92	RUBBER	1	G251015	<b>←</b>	
$\triangle$	93	V-COIL COMPLETE - 4-WAY VALVE	1	ACXA43C08090	<b>←</b>	0
	94	SCREW	1	H55082J	<b>←</b>	
$\triangle$	95	V-COIL COMPLETE [MAIN EXP. VALVE - CN-EV]	1	ACXA43C08100	<b>←</b>	0
$\triangle$	96	V-COIL COMPLETE [BYPASS EXP. VALVE - CN-INJ]	1	ACXA43C08110	<b>←</b>	0
Ŵ	97	V-COIL COMPLETE [DIS/INLET BYPASS 2WAY - VALVE CN-V2]	1	ACXA43C08120	<b>←</b>	0
$\triangle$	98	V-COIL COMPLETE [CN-INJV2]	1	ACXA43C08130	<b>←</b>	0
	94	SCREW	2	H55082J	<b>←</b>	
	99	RUBBER	3	ACXG25-02300	<b>←</b>	
	92	RUBBER	2	G251015	<b>←</b>	
	100	RUBBER	1	G251021	<b>←</b>	
A	101	SENSOR - COMPLETE_TH1_WHITE1	1	ACXA50C20620	<b>←</b>	0
$\overline{\mathbb{A}}$	102	SENSOR - COMPLETE_TH1-RED	1	ACXA50C19550	<b>←</b>	0
$\triangle$	103	SENSOR - COMPLETE_TH1_WHITE2	1	ACXA50C19710	<b>←</b>	0
$\triangle$	104	SENSOR - COMPLETE_TH2/SENSOR_YEL	1	ACXA50C19570	<b>←</b>	0
$\triangle$	105	SENSOR - COMPLETE_TH2/SENSOR_RED	1	ACXA50C19560	<b>←</b>	0
$\triangle$	106	SENSOR - COMPLETE_TH3/SENSOR_YEL	1	ACXA50C19720	<b>←</b>	0
	107	PLATE SPRING	8	H711010	<b>←</b>	
	108	FAN MOTOR BRACKET	2	ACXD54-05180	<b>←</b>	
	4	SCREW M5	2	H551040J	<b>←</b>	
À	109	FAN MOTOR_1	1	L6CBYYYL0475	<b>←</b>	0
$\overline{\mathbb{A}}$	110	FAN MOTOR_2	1	L6CBYYYL0476	<b>←</b>	0
	111	SCREW	8	H551455	<b>←</b>	
	112	FAN ASSY	2	ACXH03K01200	←	0
	113	WASHER	2	H571075A	<b>←</b>	
	114	NUT	2	H561112A	<b>←</b>	
	115	CONTROL BOARD ASSY	1	ACXH10K03460A	←	
Ŵ	116	ELECTRONIC CONTROLLER - COMPLETE	1	ACXA74C13130	ACXA74C13140	0
	117	PACKING	1	ACXB81-07211	<b>←</b>	
	118	SCREW	7	H551198	<b>←</b>	
$\triangle$	119	LEAD WIRE - COMPLETE [COMPRESSOR U/V/W]	1	ACXA61C03870	<b>←</b>	
Ŵ	120	LEAD WIRE - COMPLETE_RE1/2	1	ACXA61C03880	<b>←</b>	
	121	CONTROL BOARD	1	ACXH10-10540	<b>←</b>	
$\triangle$	122	CIRCUIT BREAKER	1	ACXA18-00011	<b>←</b>	
	123	U-SHAPED PIECE	1	ACXD90-32060	<b>←</b>	
	124	SELF TAPPING SCREW	2	XTT4+10CFJ	<b>←</b>	

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WXG09ME5	WH-WXG12ME5	REMARK
	125	WASHER	1	H571044	<b>←</b>	
	126	MACHINE SCREW & WASHER ASS'Y	2	XYN5DC10FJ	<b>←</b>	
Δ	127	TERMINAL BOARD ASSY	1	A28K1294	<b>←</b>	0
	128	SELF TAPPING SCREW	1	XTN4+20CFJ	<b>←</b>	
	129	HOLDER - P.S. CORD	1	ACXH31-01480	<b>←</b>	
	130	HOLDER - P.S. CORD	1	ACXH31-01620	<b>←</b>	
	131	HOLDER - P.S. CORD	1	ACXH31-01630	<b>←</b>	
	132	BOX SHAPED PLATE - COMPLETE	1	ACXD66C00760	<b>←</b>	
	133	PACKING	1	ACXB81-07670	<b>←</b>	
	134	SELF TAPPING SCREW	6	XTT4+12CFJ	<b>←</b>	
$\triangle$	135	ELECTRONIC CONTROLLER (SUB)	1	ACXA74C07640	<b>←</b>	0
	136	CONTROL BOARD	1	ACXH10-10570	<b>←</b>	
	137	SCREW	4	XTB3+8CFJ	<b>←</b>	
$\triangle$	138	LEAD WIRE - COMPLETE_CN-PWR	1	ACXA61C07530	<b>←</b>	
	139	LEAD WIRE - COMPLETE_CN-PUMP_CTR	1	ACXA61C00950	<b>←</b>	
	140	LEAD WIRE - COMPLETE_CN-COM	1	ACXA61C06400	<b>←</b>	
$\triangle$	141	LEAD WIRE - COMPLETE_FG103	1	ACXA61C04260	<b>←</b>	
$\triangle$	142	LEAD WIRE - COMPLETE_FG101	1	ACXA61C04270	<b>←</b>	
<del></del>	124	SELF TAPPING SCREW	2	XTT4+10CFJ	<b>←</b>	
A	143	ELECTRONIC CONTROLLER (NF)	1	ACXA74C15130	<b>←</b>	0
	144	CONTROL BOARD	1	ACXH10-10560	<b>←</b>	
	137	SCREW	6	XTB3+8CFJ	<b>←</b>	
	124	SELF TAPPING SCREW	2	XTT4+10CFJ	<b>←</b>	
<u> </u>	145	LEAD WIRE - COMPLETE_ACN/ACL-IN	1	ACXA61C03830	<b>←</b>	
	146	LEAD WIRE - COMPLETE_CN-V3	1	ACXA61C06430	<b>←</b>	
<u> </u>	147	LEAD WIRE - COMPLETE_CN-CONTACT	1	ACXA61C00940	<b>←</b>	
$\triangle$	148	LEAD WIRE - COMPLETE_NF PCB_Earth L/W (left)	1	ACXA61C07460	<b>←</b>	
$\triangle$	149	LEAD WIRE - COMPLETE_NF PCB_Earth L/W (center)	1	ACXA61C04300	←	
$\triangle$	150	LEAD WIRE - COMPLETE_NF PCB_Earth L/W (right)	1	ACXA61C04310	<b>←</b>	
$\triangle$	151	CAUTION LABEL (WARNING)	1	F762691	←	
	152	PACKING	1	ACXB81-07680	←	
	118	SCREW	8	H551198	<b>←</b>	
	153	TOOTHED LOCK WASHER	1	XWC5BV	<b>←</b>	
	5	SCREW	1	H551049J	<b>←</b>	
	118	SCREW	4	H551198	<b>←</b>	
$\triangle$	154	LEAD WIRE - COMPLETE_ACN/ACL - IN/OUT	1	ACXA61C03860	←	
$\triangle$	155	LEAD WIRE - COMPLETE_	1	ACXA61C04290	←	
$\triangle$	156	LEAD WIRE - COMPLETE_	1	ACXA61C06750	←	
	157	CONTROL BOARD COVER - COMPLETE	1	ACXH13C06720	←	
	158	EPT SEAL	1	ACXD3A10-265	←	
	159	PACKING	1	ACXB81-07690	<b>←</b>	

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WXG09ME5	WH-WXG12ME5	REMARK
	118	SCREW	10	H551198	<b>←</b>	
	160	HOLDER - P.S. CORD	1	ACXH31-01680	<b>←</b>	
	161	SCREW	3	ACXH55-00120	<b>←</b>	
	162	CONTROL BOARD COVER - COMPLETE	1	ACXH13C06650	<b>←</b>	
	163	PACKING	1	ACXB81-07650	<b>←</b>	
	164	SCREW PEDESTAL	4	XYN4+F10FJ	←	
	165	HOLDER - SENSOR	1	ACXH32-01480	←	
	166	SOUND PROOF MATERIAL	1	ACXG30-14880	<b>←</b>	
	167	CABINET SIDE PLATE - COMPLETE (R)	1	ACXE04C09050	←	0
	168	HANDLE	1	ACXE16-00230G	←	
	169	EPT SEAL	1	ACXD3A10-92	<b>←</b>	
	170	SCREW	1	ACXH55-07980	←	
	171	CAP	6	ACXH52-04230G	←	
	170	SCREW	15	ACXH55-07980	←	
	16	SCREW	2	ACXH55-07140	<b>←</b>	
	172	CABINET FRONT PLATE (L)	1	ACXE06-05620	<b>←</b>	0
	168	HANDLE	1	ACXE16-00230G	<b>←</b>	
	169	EPT SEAL	1	ACXD3A10-92	<b>←</b>	
	170	SCREW	1	ACXH55-07980	<b>←</b>	
	170	SCREW	7	ACXH55-07980	<b>←</b>	
	16	SCREW	5	ACXH55-07140	<b>←</b>	
	173	CABINET SIDE PLATE (L)	1	ACXE04-13910	<b>←</b>	0
	174	PARTICULAR PLATE	1	ACXD90-29140	<b>←</b>	
	175	SCREW	3	ACXH55-07740	<b>←</b>	
	176	CABINET TOP PLATE COMPLETE	1	ACXE03C02510	<b>←</b>	0
	177	EPT SEAL	1	ACXD5A15-200	<b>←</b>	
	178	EPT SEAL	1	ACXD5A30-60	<b>←</b>	
	170	SCREW	9	ACXH55-07980	←	
	179	CABINET FRONT PLATE (R)	1	ACXE06-05630	<b>←</b>	0
	180	PARTICULAR PIECE	4	ACXD93-25230	←	
	181	NUT	4	ACXH56-00120	←	
	168	HANDLE	1	ACXE16-00230G	←	
	169	EPT SEAL	1	ACXD3A10-92	←	
	170	SCREW	1	ACXH55-07980	←	
	175	SCREW	8	ACXH55-07740	←	
	182	SOUND PROOF MATERIAL	1	ACXG30-14860	<b>←</b>	
	170	SCREW	9	ACXH55-07980	<b>←</b>	
	183	ACCESSORY - COMPLETE	1	ACXH82C29860	←	
	184	CAP (OR PART ACXH52-01980)	3	ACXH52-04310	←	
	185	DRAIN NOZZLE	1	ACXH41-00700	<b>←</b>	0
	186	ACCESSORY - COMPLETE (SCREW)	1	ACXH82C29870	<b>←</b>	

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WXG09ME5	WH-WXG12ME5	REMARK
	118	SCREW	8	H551198	<b>←</b>	
	187	ACCESSORY - COMPLETE	1	ACXH82C29920	<b>←</b>	
	188	CAP	15	ACXH52-04470	<b>←</b>	
$\triangle$	189	WIRING DIAGRAM (CU)	1	ACXF22-12110	<b>←</b>	
$\triangle$	190	INDICATION LABEL (FLAME)	1	F746943	<b>←</b>	
$\triangle$	191	NAME PLATE (CU)	1	ACXF02-99470	ACXF02-99480	
	192	INDICATION LABEL [WATER OUTLET]	1	ACXF71-25701	<b>←</b>	
	193	INDICATION LABEL [WATER INLET]	1	ACXF71-25711	<b>←</b>	
	194	INDICATION LABEL	1	ACXF71-34832	<b>←</b>	
$\triangle$	195	OPERATING INSTRUCTION - COMPLETE	1	ACXF55C31810	<b>←</b>	
$\triangle$	196	INSTALLATION INSTRUCTION COMPLETE	1	ACXF60C20621	<b>←</b>	
$\triangle$	197	MODEL LABEL	2	ACXF87-47260	ACXF87-47270	
$\triangle$	198	DISCHARGE GRILLE - COMPLETE L [TOP]	1	ACXE20C09371	<b>←</b>	0
$\triangle$	199	DISCHARGE GRILLE COMPLETE L [BOTTOM]	1	ACXE20C09380	<b>←</b>	0
$\triangle$	200	DISCHARGE GRILLE COMPLETE R [TOP]	1	ACXE20C09390	←	0
$\triangle$	201	DISCHARGE GRILLE COMPLETE R [BOTTOM]	1	ACXE20C09400	←	0
$\triangle$	202	BAG	1	ACXG86-06800	←	
	203	BASE BOARD - COMPLETE	1	ACXG62C03020	←	
	204	SHOCK ABSORBER [MIDDLE LEFT]	1	ACXG70-16301	<b>←</b>	
	205	SHOCK ABSORBER [MIDDLE]	1	ACXG70-16310	<b>←</b>	
	206	SHOCK ABSORBER [MIDDLE RIGHT]	1	ACXG70-16321	<b>←</b>	
	207	SHOCK ABSORBER [UPPER LEFT]	1	ACXG70-15320	<b>←</b>	
	208	SHOCK ABSORBER [UPPER RIGHT]	1	ACXG70-15330	<b>←</b>	
	209	CORRUGATED CARDBOARD	2	ACXG57-13711	<b>←</b>	
$\triangle$	210	C.C. CASE	1	ACXG50-64401	<b>←</b>	

- All parts are supplied from PHVACCZ, Czech (Vendor Code: 00029407).
- "O" marked parts are recommended to be kept in stock.